

XAS 97 Dd(G) - XAS 185 DD7

Engine D2011L03

**Parts List for Portable Compressors
English**

XAS 97 Dd(G) - XAS 185 DD7

Engine D2011L03

Parts Index	5
Warranty and Liability	9
Safety Precautions for Portable Compressors	11
Ordering Spare Parts.....	15
Parts Lists	19

PARTS INDEX

PART	PAGE	PART	PAGE
A			
A.C. EYE.....	96	CONDUIT FITTING.....	181, 182, 183, 184, 185, 186, 187, 188
ABSORBER.....	197	CONNECTION.....	44, 175
ACTUATING UNIT ASSEMBLY.....	38, 89	CONNECTION ELBOW.....	175
ADAPTER.....	44, 75, 89, 132	CONTACTOR.....	181, 182, 183, 184, 185, 186, 187, 188
ADDITIONAL FUELFILTER.....	94	CONTROL PANEL ASSEMBLY.....	51, 52, 78, 85
AFTERCOOLER... 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147		COOLER.....	40
AIR FILTER ELEMENT.....	44	COOLER AND FAN.....	40, 41
AIR INLET.....	44, 45	COOLER PLATE.....	40
AIR OUTLET.....	50	COSMOS.....	108, 109
AIRDUCT.....	44	COSMOS MODULE.....	108, 109
AIRFILTER.....	44	COUPLING.....	36, 37, 136, 138, 140, 142, 144, 146
ALTERNATOR.....	181, 182, 183, 184, 185, 186, 187, 188	COVER.....	30, 78, 85, 86, 90, 91, 115, 189
ANTENNA.....	108, 109	CUBICLE.....	181, 182, 183, 184, 185, 186, 187, 188
ANTIVIBRATION PAD.....	30	D	
APPLIANCE INLET.....	128, 130	DAMPER.....	156, 158, 160, 162, 164, 166, 168, 170
AXLE.....	100, 102, 104, 156, 158, 162, 164, 166, 176, 177	DECAL.....	54, 56, 58, 60, 62, 66
B			
BAFFLE.....	46, 48, 80, 81, 87	DIN EYE.....	96
BAFFLE ASSEMBLY.....	46, 48, 80, 81, 87	DIODE.....	183, 184, 185, 187, 188
BALL BEARING.....	156, 158, 160, 162, 164, 166, 168, 170	DISC.....	30
BALL COUPLING.....	96, 98, 155	DISC WHEEL.....	100, 102, 104
BALL VALVE.....	148	DOOR.....	46, 181, 182, 183, 184, 185, 186, 187, 188
BALL VALVE ASSEMBLY.....	50, 92	DRUM.....	177
BATTERY.....	69, 70, 172	E	
BATTERY AND VESSEL.....	69, 70, 172	EARTH PIN.....	173, 158, 166
BATTERY CABLE.....	53, 68, 95, 111, 135, 136, 138, 140, 142, 144	EARTH RELAY.....	181, 182
.....	146, 149, 156, 158, 160, 162, 164, 166, 168, 170	EARTHING STRAP.....	53
BATTERY COVER.....	69, 70, 172	ELBOW.....	66, 127, 142, 144, 146, 148, 150, 172
BEARING.....	176, 177	ELBOW PIPE COUPLING.....	115, 156, 158, 160, 162, 164, 166, 168, 170
BELLOWS.....	197	ELECTRICAL SYSTEM.....	53
BELT.....	156, 158, 160, 162, 164, 166, 168, 170	ENGINE ACCESSORIES.....	152
BELT GUARD.....	156, 158, 160, 162, 164, 166, 168, 170	ENGINE AND ACCESSORIES.....	32, 33
BODYWORK.....	48, 49	ENGINE COOLANT.....	25
BODYWORK AND MOUNTS.....	46, 47	ENGINE.....	34, 174
BRAKE CABLE.....	102, 104, 179, 180	ENGINE OIL.....	20, 21
BRAKE SHOE.....	27, 177	EPA ENGINE.....	174
BREMSE.....	175	EQUALIZER.....	179, 180
BUFFER.....	79, 86	EXHAUST.....	116
BULB.....	78, 85	EYE.....	30
BUMPER.....	129, 131, 190	EYE HOUSING.....	197
BUMPER ASSEMBLY.....	130, 190	F	
BUSH.....	36, 38, 96, 98, 175, 197	FAN.....	40
BUSHING 88, 142, 144, 146, 156, 158, 160, 162, 164, 166, 168, 170, 172, 177		FAN ADAPTOR.....	73, 74, 156, 158, 160, 162, 164, 166, 168, 170
BUTTON.....	78, 85	FAN ADAPTOR AND PULLEY.....	73
C			
CABLE.....	98, 128, 130, 197	FAN ADAPTOR AND SIDE PANEL.....	74
CABLE STRIP.....	53, 126, 128, 130, 156, 158, 160	FAN COWL.....	40
.....	162, 164, 166, 168, 170, 190, 197	FASTENER.....	126
CAP.....	75, 176, 177	FILTER.....	116, 138, 140, 144, 146
CARTRIDGE.....	138, 140, 144, 146	FILTER ELEMENT.....	94
CATCH.....	46, 48	FLANGE.....	115
CHAIN ASSEMBLY.....	98	FOOT.....	99
CIRCLIP.....	156, 158, 160, 162, 164, 166, 168, 170, 176, 177	FRAME.....	63, 84, 112, 189
CIRCUIT BREAKER.....	78, 85, 181, 182, 183, 184, 185, 186, 187, 188	FRAME AND MOUNTS.....	30, 31
CLAMP.....	44, 53, 127, 178, 179, 180	FUEL FILTER.....	29, 94
CLAMP ASSEMBLY.....	99	FUEL HOSE.....	29, 94
CLAMPING RING.....	40	FUEL TANK.....	75
CLASP.....	177, 197	FUEL TANK ASSEMBLY.....	29, 75
CLIP.....	178, 179, 180	FUELFILTER ASSEMBLY.....	29
COLD WEATHER EQUIPMENT.....	172, 195	FUELFILTER HOUSING.....	29
COMPRESSOR ELEMENT.....	35	FUELSYSTEM.....	29
COMPRESSOR SPRING.....	89	FUSE.....	175
COMPRESSOR OIL.....	22, 23, 24		

PARTS INDEX

PART	PAGE
G	
GASSPRING	46, 48
GENERATOR.....	156, 158, 160, 162, 164, 166, 168, 170, 181, 182, 183, 184, 185, 186, 187, 188
GENERATOR KIT	156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171
GRATING.....	40
GROMMET.....	32, 46, 48, 75, 127, 128, 130
GUIDE.....	53, 128, 130

H	
HAND PRIMER PUMP	29
HANDGRIP.....	79
HANDLE.....	175
HEATER PLUG.....	195
HEXAGON PLUG	38, 50, 76, 77, 112, 160, 168, 170
HOLDER	79, 86
HOOD.....	79, 86
HOOD ASSEMBLY	46, 48, 79, 86
HOOK.....	86
HOSE.....	42, 50, 44, 127, 136, 138, 140, 142, 144, 146, 148, 152, 150, 172
HOSE ASSEMBLY	42, 63, 112
HOSE CLAMP	44
HOSE COUPLING.....	136, 138, 140, 142, 144, 146
HOSE REEL.....	127, 175
HOSE+COUPLING	175
HOURLY METER	78, 85
HOUSE MARK	54, 56, 58, 60
HOUSING	36, 93, 178, 180, 197

I	
INDICATOR.....	44
INFORMATION LABEL.....	54, 56, 58, 60, 100, 102, 104, 172, 195
INLET SHUTDOWN VALVE	115
INSTRUCTION LABEL.....	54, 56, 58, 60
INSULATION MONITORING RELAY	183, 184, 185, 186, 187, 188

K	
KNOB.....	181, 182, 183, 184, 185, 186, 187, 188

L	
LABEL	54, 56, 78, 85, 100, 102, 104, 153
LABEL NOISE.....	58, 60
LAMP HOLDER	78, 85
LATCH	46, 48
LEVEL GAUGE.....	76, 77
LEVER	32, 156, 158, 160, 162, 164, 166, 168, 170, 197
LIFTING EYE.....	48, 72, 100, 102, 104
LIFTING EYE AND PLUGS.....	72
LIGHT	128, 190
LOCK	46
LOCKING PIN.....	98
LUBRICATING OIL.....	142, 144, 146
LUBRICATOR	135, 149
LUBRICATOR ASSEMBLY	135, 142, 144, 146, 149

M	
MANIFOLD	50
MANIFOLD ASSEMBLY	50
MARKINGS	54, 55, 62, 56, 57, 58, 59, 60, 61
METAL FILLERNECK-FUELTANK.....	113
MINIMUM PRESSURE VALVE.....	118, 119, 120
MUDGUARD.....	107

PART	PAGE
N	
NATO EYE	97
NO EPA ENGINE.....	34
NON RETURN VALVE	117
NYLON BAND	110, 111

O	
OIL FILTER.....	42
OIL SEPARATOR.....	28, 77, 90
OIL SYSTEM	42, 43

P	
PANEL	48, 52, 64, 65, 74, 78, 82, 83, 85, 181 182, 183, 184, 185, 186, 187, 188, 191
PARALLEL KEY	36
PARALLEL PIN	36
PARCOOL EG.....	25
PAROIL.....	20, 21, 22, 23, 24
PART OF BRAKE	177
PARTICLE FILTER	116
PIN	175
PIPE	67, 118, 119, 120, 124, 127, 136, 138, 140, 142, 144, 146, 148
PIPE CAP.....	118, 119, 120
PIPE CLAMP.....	32, 50, 114, 116, 152
PIPE COUPLING	66, 67, 117, 175
PIPE WITH FLEXIBLE	32
PIPES AND FITTINGS.....	148, 150, 151
PISTON.....	88, 89
PISTON ROD	88
PLAIN BEARING	156, 158, 160, 162, 164, 166, 168, 170
PLASTIC TUBE.....	38, 75, 115, 136, 138, 140, 142, 144, 146, 160, 168, 170
PLATE.....	42, 81, 116, 127, 128, 133, 177, 181, 182 183, 184, 185, 186, 187, 188, 193, 196, 197
PLUG	30, 46, 48, 71, 72, 75, 129, 133, 182, 183, 184, 186, 187, 189
POSITIONING GUIDE HOOD	46
PRESSURE GAUGE.....	78, 85
PROTECTION.....	40, 46, 110, 111, 115, 129, 130
PROTECTION CAP.....	53
PROTECTION PLUG	78, 85
PULLEY	156, 158, 160, 162, 164, 166, 168, 170
PUSH BUTTON	78, 85, 115, 195

Q	
QUICK COUPLING.....	98, 106

R	
RAIL	181, 182, 183, 184, 185, 186, 187, 188
REAR BAFFLE	80
REAR BAFFLE ASSEMBLY	46, 80
REFLECTOR	128, 129, 130, 133, 192, 193
REFLECTOR ASSEMBLY	129, 130, 192, 193
REGULATING SYSTEM.....	38, 39
REGULATING VALVE ASSEMBLY	76, 77, 93
REHEATER	152
RELAY.....	78, 85, 115, 181, 185, 188, 196
RELAY ASSEMBLY.....	195, 196
RESTRICTOR	68, 123, 136, 138, 140, 142, 144, 146, 148
RESTRICTOR AND BATTERY CABLE.....	68
RETAINER	76, 77, 88, 177
RING.....	178, 179, 180, 197
ROAD LIGHT SYSTEM.....	128, 130
ROD	46, 48, 180

PARTS INDEX

PART	PAGE	PART	PAGE
S		W	
SAFETY AND CONTROL.....	51, 52	WARNING LABEL.....	54, 56, 58, 60, 66, 100, 102, 104
SAFETY CARTRIDGE	125	WARNING MARK.....	181, 182, 183, 184, 185, 186, 187, 188
SAFETY CHAIN	98, 106, 126	WARRANTY LABEL.....	54, 56, 58, 60
SAFETY VALVE	66, 67	WATERSEPARATOR.....	136, 138, 140, 142, 144, 146
SCREEN	32	WHEELCHOCK.....	153, 154
SEMI ROAD LIGHT SYSTEM.....	129, 133	WIPER	89
SERVICE KIT	26, 27, 28	WIRE HARNESS	53, 78, 85, 115, 128, 160, 168, 170, 190
SERVICE PAK	19	WIRING.....	195
SERVICE STAGE	35	WIRING COSMOS	108, 109
SHACKLE.....	177		
SHUNT TRIP COIL.....	183, 184, 185, 186, 187, 188		
SIDE PANEL.....	48, 194	Z	
SIDE PANEL AND SILENCER.....	64, 65	Z PLATE	86
SIDE PANEL ASSEMBLY ...	156, 158, 160, 162, 164, 166, 168, 170, 191, 194		
SILENCER	64, 65, 136, 138, 140, 142, 144, 146, 160, 168, 170		
SIMPLIFIED BUMPER.....	131		
SLEEVE	136, 138, 140, 142, 144, 146, 148, 152		
SOCKET.....	160, 168, 170		
SOCKET OUTLET.....	181, 182, 183, 184, 185, 186, 187, 188		
SOLENOID VALVE.....	115, 160, 168, 170, 181, 182, 183, 184, 185, 186, 187, 188		
SPACER	30, 100, 102, 104		
SPARK ARRESTOR.....	114		
SPEED SWITCH.....	115		
SPHERICAL PLAIN BEARING	89		
SPRING	88, 89, 177		
SPRING PIN.....	36		
STEERING ROD	176		
STOP VALVE.....	150		
STRAIGHT PIPE COUPLING	38, 42, 78, 85, 115, 156, 158		
.....	160, 162, 164, 166, 168, 170		
STRAINER.....	75		
SUPPORT	30, 94, 98, 134, 156, 158, 160, 162, 164, 166, 168, 170		
SUPPORT LEG	99		
SUPPORT MOUNTED.....	134		
SWITCH	78, 85		
SWIVEL WHEEL	98		
T			
TEE.....	150, 172		
TEE PIPE COUPLING	160, 168, 170		
TEMPERATURE SWITCH	51, 52		
TERMINAL.....	181, 182, 183, 184, 185, 186, 187, 188		
THERMOSTATIC VALVE	172		
TIME RELAY	181, 185, 188		
TOOLBOX	110, 111		
TORUS	181, 182		
TOWBAR.....	100, 102, 104, 178, 179, 180, 197		
TOWING EYE	96, 97, 98		
TUBE.....	76, 77		
TYRE.....	100, 102, 104		
TYRE ASSEMBLY.....	100, 102, 104		
U			
UNDERCARRIAGE.....	100, 101, 102, 103, 104, 105		
UNLOADING VALVE.....	26		
UNLOADING VALVE ASSEMBLY.....	38, 88		
V			
VALVE.....	88, 115		
VALVE HOUSING.....	92		
VALVES ON VESSEL.....	66, 67		
VENTIL.....	100, 102, 104		
VESSEL.....	76, 90, 91		
VESSEL ASSEMBLY.....	69, 70, 76, 77, 172		

Warranty and Liability Limitation

Use only authorized parts.
Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.
The manufacturer does not accept any liability for any damage arising from modifications, additions or conversions made without the manufacturer's approval in writing.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.
Any unauthorized use or copying of the contents or any part thereof is prohibited.
This applies in particular to trademarks, model denominations, part numbers and drawings.

Garantie- en aansprakelijkheidsbepalingen

Gebruik alleen originele onderdelen.
Beschadiging of defecten die het gevolg zijn van het gebruik van niet originele onderdelen vallen niet onder garantie of productaansprakelijkheid.
De producent is niet aansprakelijk voor enige schade veroorzaakt door modificatie, toevoeging of ombouw, gemaakt zonder de schriftelijke toestemming van de fabrikant.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, België.
Het is niet toegestaan om zonder toestemming de inhoud geheel of gedeeltelijk te kopiëren of anderszins te gebruiken.
Dit betreft vooral trademarks, modelbenamingen, onderdeelnummers en tekeningen.

Limitation de garantie et de responsabilité

Utiliser uniquement les pièces homologuées.
Tout dommage ou mauvais fonctionnement dû à l'utilisation de pièces non homologuées n'est pas couvert par la garantie ou la responsabilité des produits défectueux.
Le fabricant décline toute responsabilité en cas de dommage faisant suite à des modifications, des ajouts ou des conversions effectués sans l'accord écrit du fabricant.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgique.
Toute utilisation ou copie du contenu, ou d'une partie de celui-ci, non autorisée est interdite.
Cette interdiction s'applique en particulier aux marques de commerce, aux dénominations des modèles, aux numéros des pièces et aux schémas.

Garantie- und Haftungseinschränkungen

Nur zugelassene Teile verwenden.
Jede Beschädigung oder Fehlfunktion, die durch die Verwendung von nicht zugelassenen Teilen verursacht wurde, ist nicht durch die Garantie oder Produkthaftung abgedeckt.
Der Hersteller übernimmt keine Haftung für Schäden, die durch Modifizierungen, Ergänzungen oder Funktionsänderungen entstehen, die ohne schriftliche Zustimmung des Herstellers erfolgt sind.

Urheberrecht 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.
Jede nicht genehmigte Verwendung oder Kopie des Inhaltes oder von Teilen ist untersagt.
Das bezieht sich im Einzelnen auf Warenzeichen, Modellbezeichnungen, Teilenummern und Zeichnungen.

Limitación de garantía y responsabilidad

Use sólo piezas autorizadas.
La garantía o responsabilidad del producto no cubre ningún daño o funcionamiento defectuoso provocado por el uso de piezas no autorizadas.
El fabricante no acepta ninguna responsabilidad por los daños provocados por modificaciones, adiciones o conversiones realizadas sin la aprobación por escrito del fabricante.

Derechos de reproducción 2004, Atlas Copco Airpower n.v., Amberes, Bélgica.
Está prohibida toda utilización o reproducción total o parcial no autorizada de estos contenidos, en especial de las marcas registradas, denominaciones de modelos, números de piezas y planos.

Begränsningar av garanti och ansvarsskyldighet

Använd endast godkända delar.
Den skada eller funktionsoduglighet som förorsakats av att ej godkända delar har använts, täcks inte av garantin eller produktansvaret.
Tillverkaren accepterar ingen ansvarsskyldighet för skador som uppstår efter att ändringar, tillägg eller ombyggnader gjorts utan skriftligt tillstånd från tillverkaren.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.
Ej auktoriserad användning eller kopiering av innehållet, eller delar av det, är förbjuden.
Detta gäller speciellt varumärken, modellbeteckningar, reservdelsnummer och ritningar.

Limitazione di Garanzia e di Responsabilità

Usare solo componenti autorizzati.
Qualsiasi danno o malfunzione causati dall'uso di componenti non autorizzati non è coperto dalla Garanzia o dalla Responsabilità sul Prodotto.
Il fabbricante non accetta alcuna responsabilità per danni derivanti da modifiche, aggiunte o trasformazioni effettuate senza l'approvazione scritta del fabbricante.

Copyright 2004, Atlas Copco Airpower n.v., Anversa, Belgio.
Sono vietati ogni uso o copia non autorizzati del contenuto o di qualsiasi parte dello stesso.
Ciò si applica in particolare ai marchi, alle denominazioni dei modelli, ai numeri dei componenti ed ai disegni.

Garanti- og ansvarsbegrænsning

Brug kun tilladte reservedele.
Enhver skade eller fejlfunktion, forårsaget af brug af ikke tilladte reservedele, omfattes ikke af garantien eller produktansvaret.
Fabrikanten kan ikke drages til ansvar for nogen skade som følge af ændringer, udvidelser eller ombygninger, der er blevet udført uden fabrikantens skriftlige samtykke.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.
Enhver uautoriseret brug eller kopiering af indholdet eller dele deraf er forbudt.
Dette gælder især varemærker, modelbenævnelser, delnumre og tegninger.

Εγγύηση και Περιορισμός Ευθύνης

Χρησιμοποιήστε μόνο εγκεκριμένα εξαρτήματα.
Οποιαδήποτε ζημιά ή δυσλειτουργία προκληθεί από τη χρήση μη εγκεκριμένων εξαρτημάτων δεν καλύπτεται από την εγγύηση και την ευθύνη για το προϊόν.
Ο κατασκευαστής δεν αποδέχεται καμία ευθύνη για ζημιές που προκύπτουν από τροποποιήσεις, προσθήκες ή μετατροπές που έγιναν χωρίς τη γραπτή έγκριση του κατασκευαστή.

Copyright 2004, Atlas Copco Airpower n.v., Αμβέρσα, Βέλγιο.
Απαγορεύεται οποιαδήποτε χρήση ή αντιγραφή του περιεχόμενου ή οποιουδήποτε τμήματος του παρόντος χωρίς εξουσιοδότηση.
Αυτό ισχύει συγκεκριμένα για εμπορικά σήματα, ονομασίες μοντέλων, κωδικούς εξαρτημάτων και σχέδια.

Garanti og ansvarsbegrensning

Bruk kun autoriserte deler.
Enhver skade eller funksjonsfeil som skyldes bruk av uautoriserte deler dekkes ikke av garanti eller produktansvar.
Fabrikanten aksepterer intet ansvar for noen skade som oppstår på grunn av modifikasjoner, tilføyelser eller forandringer som er gjort uten fabrikantens skriftlige tillatelse.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgia.
All uautorisert bruk eller kopiering av innholdet eller en del av det er forbudt.
Dette gjelder særlig varemerker, modellbenevnelser, delenumre og tegninger.

Takuun ja vastuuvollisuuden rajoitus

Käytä vain valmistajan hyväksymiä varaosia.
Takuu ja tuotevastuu eivät kata vahinkoja tai toimintahäiriöitä, joiden syynä on muiden kuin hyväksytyjen varaosien käyttö.
Valmistaja ei vastaa vahingoista, jotka aiheutuvat ilman valmistajan kirjallista lupaa tehdystä muutoksista tai lisäyksistä.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgia.
Sisällön osittainenkin käyttö tai kopiointi ilman lupaa on kielletty.
Tämä koskee erityisesti tavaramerkkejä, mallien nimiä, osanumeroita ja piirustuksia.

Garantijas un atbildības ierobežojumi

Izmantot tikai ieteiktās rezerves daļas.
Īdā garantija nesedz bojājumus vai disfunkciju, kuri ir radušies neatļautu rezerves daļu izmantošanas rezultātā.
Ražotājs nepieņem pretenzijas par bojājumiem, kas izriet no modifikācijām, papildinājumiem vai pārveidojumiem bez ražotāja rakstiskas piekrišanas.

Autortiesības 2004, Atlas Copco Airpower n.v., Antverpene, Beļģija.
Jebkura neatļautā īdā saturas izmantošana vai kopēšana ir aizliegta. Tas konkrēti attiecas uz tirdzniecības zīmēm, modeļu denominācijām, daļu numuriem un rācjumiem.

Limites de Garantia e Responsabilidade

Utilize apenas peças autorizadas.

Avárias ou defeitos de funcionamento que sejam causados pelo uso de sobresselentes ou componentes não autorizados não serão cobertos pela Garantia ou pela Responsabilidade de Produto.

O fabricante não aceita qualquer responsabilidade por quaisquer danos resultantes de modificações, adições ou conversões efectuadas sem a aprovação escrita do fabricante.

Copyright 2004, Atlas Copco Airpower n.v., Antuérpia, Bélgica.

Qualquer uso não autorizado ou cópia do conteúdo ou de qualquer parte dele é proibida.

Isto aplica-se em particular a marcas registadas, denominações de modelos, números de peças e desenhos.

有限担保和责任

只允许使用经认可的零件。

因使用未经认可的零件而导致的任何损坏或故障不在本担保或产品责任所保障的范围之内。

未经制造商书面许可，制造商概不负责因擅自对设备进行改动、添加附件或改型而导致的设备损坏。

版权 2004，比利时安特卫普 Atlas Copco Airpower n.v.。

未经许可，禁止使用或复制本手册中所含的全部或任何一部分内容。

本公告特别适用于本手册所含的商标、型号名称、零件代号和图纸。

A garancia és felelősség korlátozása

Csak jóváhagyott alkatrészeket használjon!

A nem jóváhagyott alkatrészek használatából adódó sérülésekre és üzemzavarra nem terjed ki a garancia és a termékfelelősség. A gyártó semminemű felelősséget nem vállal a gyártó írásos jóváhagyása nélkül végzett bármilyen módosításokból, kiegészítésekéből vagy átalakításokból adódó sérülésekért.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

A kézikönyv tartalma vagy annak egy részének engedély nélküli felhasználása vagy másolása tilos.

Ez vonatkozik különösen a védjegyekre, a típusjelölésekre, cikkszámokra és rajzokra.

Zárka a obmedzenia zodpovednosti výrobcu

Používajte len schválené súčiastky.

Akákolvek škoda alebo porucha spôsobená použitím neschválených súčiastok nie je zahrnutá v záruke ani zodpovednosti výrobcu za škodu. Výrobca nepripúšťa žiadnu zodpovednosť za akékoľvek škody vznikajúce úpravou, pridaním alebo prerobením, ktoré boli vykonané bez predchádzajúceho písomného súhlasu výrobcu.

Autorské práva 2004, Atlas Copco Airpower n.v., Antverpy, Belgicko.

Akékoľvek neoprávnené použitie alebo kopírovanie obsahu, alebo jeho časti je zakázané. Toto sa vzťahuje najmä na obchodné značky, modelové označenia, čísla súčiastok a nákresy.

Garantii ja piiratud vastutus

Kasutage ainult valmistaja poolt aktsepteeritud varuosi.

Mis tahes vigastus või rike, mille on põhjustanud valmistaja poolt aktsepteerimata varuosa kasutamise, ei kuulu toote garantii või tootja vastutuse alla. Valmistaja ei aktsepteeri ühtegi riket, mis on tekkinud toote modifitseerimisest, lisandustest või ümberehitamisest, mida valmistaja ei ole kirjalikult heaks kiitnud.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

Käesoleva juhendi mistahes loata kasutamise või kopeerimise on keelatud.

See kehtib nii kaubamärkide, mudeli nimetuste, varuosade numbritel kui ka joonistel koht.

Ограничение гарантии и ответственности

Используйте компоненты только авторизованных поставщиков.

Не распространяется гарантия и ответственность за продукцию при любых повреждениях или неисправностях в результате использования неавторизованных компонентов.

Производитель не несет никакой ответственности за любые повреждения, возникшие в результате модификации, дополнения или изменения, выполненные без письменного утверждения производителя.

Copyright 2004, Atlas Copco Airpower n.v., Антверпен, Бельгия.

Запрещается любое несанкционированное использование или копирование содержания этих материалов или их части.

В особенности это относится к торговым маркам, обозначениям моделей, номерам деталей и чертежам.

Gwarancja i ograniczenie odpowiedzialności

Stosować jedynie oryginalne części zamienne.

Jakiegokolwiek uszkodzenia lub niesprawności spowodowane stosowaniem niezaaprobowanych części zamiennych nie są objęte gwarancją lub odpowiedzialnością za produkt.

Producent nie będzie ponosił żadnej odpowiedzialności za jakiegokolwiek szkody spowodowane modyfikacjami, dodatkami lub zmianami wykonanymi bez pisemnej zgody producenta.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpia, Belgia.

Wszelkie stosowanie lub kopiowanie zawartości lub jakiegokolwiek części publikacji bez zezwolenia jest zabronione.

Dotyczy to szczególnie znaków handlowych, oznaczeń modeli, numerów części oraz rysunków.

Omezení záruky a odpovědnosti

Používejte pouze takové součásti, které jsou schválené výrobcem zařízení. Jakékoliv poškození nebo závady způsobené použitím součástí, které nebyly schválené výrobcem zařízení, nejsou kryty zárukou, nebo odpovědností za výrobek.

Výrobce nepřijímá žádnou odpovědnost za jakékoliv škody, způsobené modifikacemi, doplňky nebo přestavbami zařízení provedenými bez předchozího písemného svolení.

Copyright 2004, Atlas Copco Airpower n.v., Antverpy, Belgie.

Jakékoliv neoprávněné použití nebo kopírování obsahu tohoto dokumentu nebo kterékoliv jeho části je zakázáno.

Toto platí obzvláště pro obchodní známky, označení modelů, čísla součástí a výkresovou dokumentaci.

Garancijski pogoji in omejitve

Uporabljajte samo odobrene dele.

Garancija proizvajalca ni veljavna pri poškodbah ali motnjah v delovanju, ki so posledica uporabe neodobrenih delov.

Proizvajalec ne prevzema nikakršne odgovornosti za poškodbe, ki so nastale zaradi sprememb, dodatkov ali prilagoditev na izdelku, ki so bile izvedene brez pisne odobritve proizvajalca.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

Brez pisnega dovoljenja ni dovoljeno uporabljati ali razmnoževati nobenega dela dokumenta.

To velja še posebej za blagovne znamke, označbe modelov, številke izdelkov in risbe.

Garantijos ir atsakomybės galiojimas

Naudokite tik originalias dalis.

Garantija nebus taikoma tuo atveju, jeigu pala ar sutrikimas atsiranda naudojant neoriginalias dalis.

Gamintojas neprisiima jokios atsakomybės dėl žalos, susijusios su modifikacija, papildymu ar perdirbimu, atliktu be raštiško gamintojo sutikimo.

Autorstės teisė 2004, "Atlas Copco Airpower n.v.", Antverpenas, Belgija.

Neteisėtas viso teksto ar kurios nors jo dalies panaudojimas ar kopijavimas yra draudžiamas.

Visø pirma õi sàlyga taikoma prekiniams þenkams, modeliø pavadinimams, daliø numeriams ir brþþiniams.

1. SAFETY PRECAUTIONS FOR PORTABLE COMPRESSORS

To be read attentively and acted accordingly before towing, lifting, operating, performing maintenance or repairing the compressor

1.1 INTRODUCTION

The policy of Atlas Copco is to provide the users of their equipment with safe, reliable and efficient products. Factors taken into account are among others:

- the intended and predictable future use of the products, and the environments in which they are expected to operate,
- applicable rules, codes and regulations,
- the expected useful product life, assuming proper service and maintenance,
- providing the manual with up-to-date information.

Before handling any product, take time to read the relevant instruction manual. Besides giving detailed operating instructions, it also gives specific information about safety, preventive maintenance, etc.

Keep the manual always at the unit location, easy accessible to the operating personnel.

See also the safety precautions of the engine and possible other equipment, which are separately sent along or are mentioned on the equipment or parts of the unit.

These safety precautions are general and some statements will therefore not always apply to a particular unit.

Only people that have the right skills should be allowed to operate, adjust, perform maintenance or repair on Atlas Copco equipment. It is the responsibility of management to appoint operators with the appropriate training and skill for each category of job.

Skill level 1: Operator

An operator is trained in all aspects of operating the unit with the push-buttons, and is trained to know the safety aspects.

Skill level 2: Mechanical technician

A mechanical technician is trained to operate the unit the same as the operator. In addition, the mechanical technician is also trained to perform maintenance and repair, as described in the instruction manual, and is allowed to change settings of the control and safety system. A mechanical technician does not work on live electrical components.

Skill level 3: Electrical technician

An electrical technician is trained and has the same qualifications as both the operator and the mechanical technician. In addition, the electrical technician may carry out electrical repairs within the various enclosures of the unit. This includes work on live electrical components.

Skill level 4: Specialist from the manufacturer

This is a skilled specialist sent by the manufacturer or its agent to perform complex repairs or modifications to the equipment.

In general it is recommended that not more than two people operate the unit, more operators could lead to unsafe operating conditions. Take necessary steps to keep unauthorized persons away from the unit and eliminate all possible sources of danger at the unit.

When handling, operating, overhauling and/or performing maintenance or repair on Atlas Copco equipment, the mechanics are expected to use safe engineering practices and to observe all relevant local safety requirements and ordinances. The following list is a reminder of special safety directives and precautions mainly applicable to Atlas Copco equipment.

These safety precautions apply to machinery processing or consuming air. Processing of any other gas requires additional safety precautions typical to the application and are not included herein.

Neglecting the safety precautions may endanger people as well as environment and machinery:

- endanger people due to electrical, mechanical or chemical influences,
- endanger the environment due to leakage of oil, solvents or other substances,
- endanger the machinery due to function failures.

All responsibility for any damage or injury resulting from neglecting these precautions or by non-observance of ordinary caution and due care required in handling, operating, maintenance or repair, also if not expressly mentioned in this instruction manual, is disclaimed by Atlas Copco.

The manufacturer does not accept any liability for any damage arising from the use of non-original parts and for modifications, additions or conversions made without the manufacturer's approval in writing.

If any statement in this manual does not comply with local legislation, the stricter of the two shall be applied.

Statements in these safety precautions should not be interpreted as suggestions, recommendations or inducements that it should be used in violation of any applicable laws or regulations.

1.2 GENERAL SAFETY PRECAUTIONS

- 1 The owner is responsible for maintaining the unit in a safe operating condition. Unit parts and accessories must be replaced if missing or unsuitable for safe operation.
- 2 The supervisor, or the responsible person, shall at all times make sure that all instructions regarding machinery and equipment operation and maintenance are strictly followed and that the machines with all accessories and safety devices, as well as the consuming devices, are in good repair, free of abnormal wear or abuse, and are not tampered with.
- 3 Whenever there is an indication or any suspicion that an internal part of a machine is overheated, the machine shall be stopped but no inspection covers shall be opened before sufficient cooling time has elapsed; this to avoid the risk of spontaneous ignition of oil vapour when air is admitted.
- 4 Normal ratings (pressures, temperatures, speeds, etc.) shall be durably marked.
- 5 Operate the unit only for the intended purpose and within its rated limits (pressure, temperature, speeds, etc.).
- 6 The machinery and equipment shall be kept clean, i.e. as free as possible from oil, dust or other deposits.
- 7 To prevent an increase in working temperature, inspect and clean heat transfer surfaces (cooler fins, intercoolers, water jackets, etc.) regularly. See the maintenance schedule.
- 8 All regulating and safety devices shall be maintained with due care to ensure that they function properly. They may not be put out of action.
- 9 Care shall be taken to avoid damage to safety valves and other pressure-relief devices, especially to avoid plugging by paint, oil coke or dirt accumulation, which could interfere with the functioning of the device.
- 10 Pressure and temperature gauges shall be checked regularly with regard to their accuracy. They shall be replaced whenever outside acceptable tolerances.
- 11 Safety devices shall be tested as described in the maintenance schedule of the instruction manual to determine that they are in good operating condition.
- 12 Mind the markings and information labels on the unit.
- 13 In the event the safety labels are damaged or destroyed, they must be replaced to ensure operator safety.
- 14 Keep the work area neat. Lack of order will increase the risk of accidents.
- 15 When working on the unit, wear safety clothing. Depending on the kind of activities these are: safety glasses, ear protection, safety helmet (including visor), safety gloves, protective clothing, safety shoes. Do not wear the hair long and loose (protect long hair with a hairnet), or wear loose clothing or jewelry.
- 16 Take precautions against fire. Handle fuel, oil and anti-freeze with care because they are inflammable substances. Do not smoke or approach with naked flame when handling such substances. Keep a fire-extinguisher in the vicinity.

1.3 SAFETY DURING TRANSPORT AND INSTALLATION

To lift a unit, all loose or pivoting parts, e.g. doors and towbar, shall first be securely fastened.

Do not attach cables, chains or ropes directly to the lifting eye; apply a crane hook or lifting shackle meeting local safety regulations. Never allow sharp bends in lifting cables, chains or ropes.

Helicopter lifting is not allowed.

It is strictly forbidden to dwell or stay in the risk zone under a lifted load. Never lift the unit over people or residential areas. Lifting acceleration and retardation shall be kept within safe limits.

- 1 Before towing the unit:
 - ascertain that the pressure vessel(s) is (are) depressurized,
 - check the towbar, the brake system and the towing eye. Also check the coupling of the towing vehicle,
 - check the towing and brake capability of the towing vehicle,
 - check that the towbar, jockey wheel or stand leg is safely locked in the raised position,
 - ascertain that the towing eye can swivel freely on the hook,
 - check that the wheels are secure and that the tyres are in good condition and inflated correctly,
 - connect the signalisation cable, check all lights and connect the pneumatic brake couplers,
 - attach the safety break-away cable or safety chain to the towing vehicle,
 - remove wheel chocks, if applied, and disengage the parking brake.
- 2 To tow a unit use a towing vehicle of ample capacity. Refer to the documentation of the towing vehicle.
- 3 If the unit is to be backed up by the towing vehicle, disengage the overrun brake mechanism (if it is not an automatic mechanism).
- 4 Never exceed the maximum towing speed of the unit (mind the local regulations).
- 5 Place the unit on level ground and apply the parking brake before disconnecting the unit from the towing vehicle. Unclip the safety break-away cable or safety chain. If the unit has no parking brake or jockey wheel, immobilize the unit by placing chocks in front of and/or behind the wheels. When the towbar can be positioned vertically, the locking device must be applied and kept in good order.
- 6 To lift heavy parts, a hoist of ample capacity, tested and approved according to local safety regulations, shall be used.
- 7 Lifting hooks, eyes, shackles, etc., shall never be bent and shall only have stress in line with their design load axis. The capacity of a lifting device diminishes when the lifting force is applied at an angle to its load axis.
- 8 For maximum safety and efficiency of the lifting apparatus all lifting members shall be applied as near to perpendicular as possible. If required, a lifting beam shall be applied between hoist and load.
- 9 Never leave a load hanging on a hoist.
- 10 A hoist has to be installed in such a way that the object will be lifted perpendicular. If that is not possible, the necessary precautions must be taken to prevent load-swinging, e.g. by using two hoists, each at approximately the same angle not exceeding 30° from the vertical.
- 11 Locate the unit away from walls. Take all precautions to ensure that hot air exhausted from the engine and driven machine cooling systems cannot be recirculated. If such hot air is taken in by the engine or driven machine cooling fan, this may cause overheating of the unit; if taken in for combustion, the engine power will be reduced.

1.4 SAFETY DURING USE AND OPERATION

- 1 When the unit has to operate in a fire-hazardous environment, each engine exhaust has to be provided with a spark arrester to trap incendiary sparks.
- 2 The exhaust contains carbon monoxide which is a lethal gas. When the unit is used in a confined space, conduct the engine exhaust to the outside atmosphere by a pipe of sufficient diameter; do this in such a way that no extra back pressure is created for the engine. If necessary, install an extractor. Observe any existing local regulations. Make sure that the unit has sufficient air intake for operation. If necessary, install extra air intake ducts.
- 3 When operating in a dust-laden atmosphere, place the unit so that dust is not carried towards it by the wind. Operation in clean surroundings considerably extends the intervals for cleaning the air intake filters and the cores of the coolers.
- 4 Close the compressor air outlet valve before connecting or disconnecting a hose. Ascertain that a hose is fully depressurized before disconnecting it. Before blowing compressed air through a hose or air line, ensure that the open end is held securely, so that it cannot whip and cause injury.
- 5 The air line end connected to the outlet valve must be safeguarded with a safety cable, attached next to the valve.
- 6 No external force may be exerted on the air outlet valves, e.g. by pulling on hoses or by installing auxiliary equipment directly to a valve, e.g. a water separator, a lubricator, etc. Do not step on the air outlet valves.
- 7 Never move a unit when external lines or hoses are connected to the outlet valves, to avoid damage to valves, manifold and hoses.
- 8 Do not use compressed air from any type of compressor, without taking extra measures, for breathing purposes as this may result in injury or death. For breathing air quality, the compressed air must be adequately purified according to local legislation and standards. Breathing air must always be supplied at stable, suitable pressure.
- 9 Distribution pipework and air hoses must be of correct diameter and suitable for the working pressure. Never use frayed, damaged or deteriorated hoses. Replace hoses and flexibles before the lifetime expires. Use only the correct type and size of hose end fittings and connections.
- 10 If the compressor is to be used for sand-blasting or will be connected to a common compressed-air system, fit an appropriate non-return valve (check valve) between compressor outlet and the connected sand-blasting or compressed-air system. Observe the right mounting position/direction.
- 11 Before removing the oil filler plug, ensure that the pressure is released by opening an air outlet valve.
- 12 Never remove a filler cap of the cooling water system of a hot engine. Wait until the engine has sufficiently cooled down.
- 13 Never refill fuel while the unit is running, unless otherwise stated in the Atlas Copco Instruction Book (AIB). Keep fuel away from hot parts such as air outlet pipes or the engine exhaust. Do not smoke when fuelling. When fuelling from an automatic pump, an earthing cable should be connected to the unit to discharge static electricity. Never spill nor leave oil, fuel, coolant or cleansing agent in or around the unit.

- 14 All doors shall be shut during operation so as not to disturb the cooling air flow inside the bodywork and/or render the silencing less effective. A door should be kept open for a short period only e.g. for inspection or adjustment.
- 15 Periodically carry out maintenance works according to the maintenance schedule.
- 16 Stationary housing guards are provided on all rotating or reciprocating parts not otherwise protected and which may be hazardous to personnel. Machinery shall never be put into operation, when such guards have been removed, before the guards are securely reinstalled.
- 17 Noise, even at reasonable levels, can cause irritation and disturbance which, over a long period of time, may cause severe injuries to the nervous system of human beings.
When the sound pressure level, at any point where personnel normally has to attend, is:
below 70 dB(A): no action needs to be taken,
above 70 dB(A): noise-protective devices should be provided for people continuously being present in the room,
below 85 dB(A): no action needs to be taken for occasional visitors staying a limited time only,
above 85 dB(A): room to be classified as a noise-hazardous area and an obvious warning shall be placed permanently at each entrance to alert people entering the room, for even relatively short times, about the need to wear ear protectors,
above 95 dB(A): the warning(s) at the entrance(s) shall be completed with the recommendation that also occasional visitors shall wear ear protectors,
above 105 dB(A): special ear protectors that are adequate for this noise level and the spectral composition of the noise shall be provided and a special warning to that effect shall be placed at each entrance.
- 18 Insulation or safety guards of parts the temperature of which can be in excess of 80 °C (175 °F) and which may be accidentally touched by personnel shall not be removed before the parts have cooled to room temperature.
- 19 Never operate the unit in surroundings where there is a possibility of taking in flammable or toxic fumes.
- 20 If the working process produces fumes, dust or vibration hazards, etc., take the necessary steps to eliminate the risk of personnel injury.
- 21 When using compressed air or inert gas to clean down equipment, do so with caution and use the appropriate protection, at least safety glasses, for the operator as well as for any bystander. Do not apply compressed air or inert gas to your skin or direct an air or gas stream at people. Never use it to clean dirt from your clothes.
- 22 When washing parts in or with a cleaning solvent, provide the required ventilation and use appropriate protection such as a breathing filter, safety glasses, rubber apron and gloves, etc.
- 23 Safety shoes should be compulsory in any workshop and if there is a risk, however small, of falling objects, wearing of a safety helmet should be included.
- 24 If there is a risk of inhaling hazardous gases, fumes or dust, the respiratory organs must be protected and depending on the nature of the hazard, so must the eyes and skin.
- 25 Remember that where there is visible dust, the finer, invisible particles will almost certainly be present too; but the fact that no dust can be seen is not a reliable indication that dangerous, invisible dust is not present in the air.
- 26 Never operate the unit at pressures or speeds below or in excess of its limits as indicated in the technical specifications.

1.5 SAFETY DURING MAINTENANCE AND REPAIR

Maintenance, overhaul and repair work shall only be carried out by adequately trained personnel; if required, under supervision of someone qualified for the job.

- 1 Use only the correct tools for maintenance and repair work, and only tools which are in good condition.
- 2 Parts shall only be replaced by genuine Atlas Copco replacement parts.
- 3 All maintenance work, other than routine attention, shall only be undertaken when the unit is stopped. Steps shall be taken to prevent inadvertent starting. In addition, a warning sign bearing a legend such as "work in progress; do not start" shall be attached to the starting equipment.
On engine-driven units the battery shall be disconnected and removed or the terminals covered by insulating caps.
On electrically driven units the main switch shall be locked in open position and the fuses shall be taken out. A warning sign bearing a legend such as "work in progress; do not supply voltage" shall be attached to the fuse box or main switch.
- 4 Before dismantling any pressurized component, the compressor or equipment shall be effectively isolated from all sources of pressure and the entire system shall be relieved of pressure. Do not rely on non-return valves (check valves) to isolate pressure systems. In addition, a warning sign bearing a legend such as "work in progress; do not open" shall be attached to each of the outlet valves.
- 5 Prior to stripping an engine or other machine or undertaking major overhaul on it, prevent all movable parts from rolling over or moving.
- 6 Make sure that no tools, loose parts or rags are left in or on the machine. Never leave rags or loose clothing near the engine air intake.
- 7 Never use flammable solvents for cleaning (fire-risk).
- 8 Take safety precautions against toxic vapours of cleaning liquids.
- 9 Never use machine parts as a climbing aid.
- 10 Observe scrupulous cleanliness during maintenance and repair. Keep away dirt, cover the parts and exposed openings with a clean cloth, paper or tape.
- 11 Never weld on or perform any operation involving heat near the fuel or oil systems. Fuel and oil tanks must be completely purged, e.g. by steam-cleaning, before carrying out such operations. Never weld on, or in any way modify, pressure vessels. Disconnect the alternator cables during arc welding on the unit.
- 12 Support the towbar and the axle(s) securely if working underneath the unit or when removing a wheel. Do not rely on jacks.
- 13 Do not remove any of, or tamper with, the sound-damping material. Keep the material free of dirt and liquids such as fuel, oil and cleansing agents. If any sound-damping material is damaged, replace it to prevent the sound pressure level from increasing.
- 14 Use only lubricating oils and greases recommended or approved by Atlas Copco or the machine manufacturer. Ascertain that the selected lubricants comply with all applicable safety regulations, especially with regard to explosion or fire-risk and the possibility of decomposition or generation of hazardous gases. Never mix synthetic with mineral oil.
- 15 Protect the engine, alternator, air intake filter, electrical and regulating components, etc., to prevent moisture ingress, e.g. when steam-cleaning.
- 16 When performing any operation involving heat, flames or sparks on a machine, the surrounding components shall first be screened with non-flammable material.
- 17 Never use a light source with open flame for inspecting the interior of a machine.

- 18 When repair has been completed, the machine shall be barred over at least one revolution for reciprocating machines, several revolutions for rotary ones to ensure that there is no mechanical interference within the machine or driver. Check the direction of rotation of electric motors when starting up the machine initially and after any alteration to the electrical connection(s) or switch gear, to check that the oil pump and the fan function properly.
- 19 Maintenance and repair work should be recorded in an operator's logbook for all machinery. Frequency and nature of repairs can reveal unsafe conditions.
- 20 When hot parts have to be handled, e.g. shrink fitting, special heat-resistant gloves shall be used and, if required, other body protection shall be applied.
- 21 When using cartridge type breathing filter equipment, ascertain that the correct type of cartridge is used and that its useful service life is not surpassed.
- 22 Make sure that oil, solvents and other substances likely to pollute the environment are properly disposed of.
- 23 Before clearing the unit for use after maintenance or overhaul, check that operating pressures, temperatures and speeds are correct and that the control and shutdown devices function correctly.

1.6 TOOL APPLICATIONS SAFETY

Apply the proper tool for each job. With the knowledge of correct tool use and knowing the limitations of tools, along with some common sense, many accidents can be prevented.

Special service tools are available for specific jobs and should be used when recommended. The use of these tools will save time and prevent damage to parts.

1.7 SPECIFIC SAFETY PRECAUTIONS

Batteries

When servicing batteries, always wear protecting clothing and glasses.

- 1 The electrolyte in batteries is a sulphuric acid solution which is fatal if it hits your eyes, and which can cause burns if it contacts your skin. Therefore, be careful when handling batteries, e.g. when checking the charge condition.
- 2 Install a sign prohibiting fire, open flame and smoking at the post where batteries are being charged.
- 3 When batteries are being charged, an explosive gas mixture forms in the cells and might escape through the vent holes in the plugs. Thus an explosive atmosphere may form around the battery if ventilation is poor, and can remain in and around the battery for several hours after it has been charged. Therefore:
 - never smoke near batteries being, or having recently been, charged,
 - never break live circuits at battery terminals, because a spark usually occurs.
- 4 When connecting an auxiliary battery (AB) in parallel to the unit battery (CB) with booster cables: connect the + pole of AB to the + pole of CB, then connect the - pole of CB to the mass of the unit. Disconnect in the reverse order.

Pressure vessels

(according to directive 87/404/EEC annex II § 2)

Maintenance/installation requirements:

- 1 The vessel can be used as pressure vessel or as separator and is designed to hold compressed air for the following application:
 - pressure vessel for compressor,
 - medium AIR/OIL,
 and operates as detailed on the data plate of the vessel:
 - the maximum working pressure ps in bar,
 - the maximum working temperature Tmax in °C,
 - the minimum working temperature Tmin in °C,
 - the capacity of the vessel V in l.
- 2 The pressure vessel is only to be used for the applications as specified above and in accordance with the technical specifications. Safety reasons prohibit any other applications.
- 3 National legislation requirements with respect to re-inspection must be complied with.
- 4 No welding or heat treatment of any kind is permitted to those vessel walls which are exposed to pressure.
- 5 The vessel is provided and may only be used with the required safety equipment such as manometer, overpressure control devices, safety valve, etc.
- 6 Draining of condensate shall be performed regularly when vessel is in use.
- 7 Installation, design and connections should not be changed.
- 8 Bolts of cover and flanges may not be used for extra fixation.

Safety valves

All adjustments or repairs are to be done by an authorized representative of the valve supplier (see maintenance schedule).

ORDERING SPARE PARTS

ORDERING SPARE PARTS

Always quote the part number, the designation and the quantity of the parts required, as well as the type and the serial number of the machine.

EXPLANATION OF THE COLUMNS

REF : REFERENCE CODE

Establishes the connection between a part in the list and a part in the illustration.

"-" means that the part is not shown in the illustration.

PART NUMBER

If no part number is given, the part cannot be obtained as a spare part. Parts marked with a dot are part of the assembly listed right above them.

DESIGNATION

Usually this is the name of the part. For standard parts, in addition to the name, a number of characteristics are given.

QTY : QUANTITY

Indicates the quantity of the part concerned. "AR" stands for "As Required".

BESTELLEN VAN ONDERDELEN

Vermeld steeds het onderdeelnummer, de benaming en het aantal van de gewenste stukken, evenals het type en het serienummer van de machine.

TOELICHTING BIJ DE KOLOMMEN

REF : REFERENTIECODE

Legt het verband tussen een onderdeel uit de lijst en een onderdeel op de tekening. "-" betekent dat het onderdeel niet is getekend.

PART NUMBER : ONDERDEELNUMMER

Indien niet opgegeven is het onderdeel niet als wisselstuk beschikbaar. Onderdelen aangeduid met een stip maken deel uit van het geheel dat boven de betreffende onderdelen staat.

DESIGNATION : BENAMING

Meestal de benaming van het onderdeel. In het geval van standaard onderdelen worden naast de benaming een aantal karakteristieken opgegeven.

QTY : AANTAL

Geeft de hoeveelheid van het betreffende onderdeel weer. De aanduiding "AR" betekent "As Required" (zoals vereist).

COMMANDE DE PIÈCES DETACHEES

Toujours indiquer le numéro de pièce, la désignation, la quantité désirée ainsi que le type et le numéro de série du groupe.

EXPLICATION DES INTITULES DES COLONNES

REF : CODE DE REFERENCE

Réfère à la pièce détachée spécifiée dans la liste et sur l'illustration. "-" implique que la pièce n'est pas indiquée sur l'illustration.

PART NUMBER : NUMERO DE PIECE DETACHEE

Si le numéro n'est pas indiqué, la pièce n'est pas disponible en tant que pièce de rechange.

Les pièces indiquées par un point gras font partie de l'ensemble se trouvant au-dessus des pièces détachées correspondantes.

DESIGNATION

En général, le nom de la pièce. S'il s'agit de pièces standard, outre la désignation, un certain nombre de caractéristiques sont indiquées.

QTY : QUANTITE

Indique la quantité de la pièce détachée. "AR" indique "As required", c'est-à-dire la quantité à déterminer selon le cas.

BESTELLUNG VON ERSATZTEILEN

Stets die Teilenummer, die Bezeichnung, und die Anzahl der gewünschten Teile sowie den Typ und die Seriennummer der Maschine angeben.

INFORMATION ZU DEN SPALTEN

REF : REFERENZCODE

Stellt die Verbindung zwischen einem Teil in der Liste und einem Teil auf der Zeichnung her. "-" bedeutet, daß das Teil nicht in der Zeichnung dargestellt ist.

PART NUMBER : TEILENUMMER

Wenn keine Teilenummer angegeben ist, ist das Teil nicht als Ersatzteil erhältlich.

Mit einem Punkt markierte Teile gehören zu der Einheit, die über den jeweiligen Teilen aufgeführt ist.

DESIGNATION : BEZEICHNUNG

Meistens die Bezeichnung des Teils. Bei Standardteilen werden neben der Bezeichnung einige technische Daten angegeben.

QTY : ANZAHL

Gibt die Anzahl des betreffenden Teils an. Die Angabe "AR" steht für "As Required" (wie erforderlich).

PEDIDO DE PARTES

Siempre comunicar el número de parte, la designación y la cantidad deseada así como el tipo y el número de serie de la máquina.

INFORMACIONES SOBRE LAS COLUMNAS

REF : CODIGO DE REFERENCIA

Establece la conexión entre una parte en la lista y una parte en la ilustración.

"-" quiere decir que la parte no está ilustrada.

PART NUMBER : NUMERO DE PARTE

Si no se da ningún número, quiere decir que la parte no está disponible como parte de recambio.

Partes marcadas con un punto son partes del conjunto indicado más arriba.

DESIGNATION : DESIGNACION

Principalmente el nombre de la parte. En caso de partes estándares, el nombre es seguido por especificaciones.

QTY : CANTIDAD

Indica la cantidad de la parte correspondiente. La indicación "AR" significa "As Required" (como sea requerido).

BESTÄLLNING AV RESERVDLAR

Ange alltid reservdelsnummer, benämning och kvantitet för varje önskad detalj samt maskinens typ och tillverkningsnummer.

TÖRKLARING AV SPALTER

REF : REFERENSNUMMER

Identifierar motsvarande detaljer i listan och illustrationen. "-" betyder att detaljen inte visas i illustrationen.

PART NUMBER : RESERVDLSNUMMER

Om inget reservdelsnummer anges, kan detaljen inte erhållas som reservdel. Detaljer som anges med en punkt ingår i den monteringsatts som listas ovanför dessa.

DESIGNATION : BENÄMNING

Detta är vanligen namnet på detaljen. För standarddetaljer anges förutom namnet ett antal specifikationer.

QTY : KVANTITET

Anger den ifrågavarande detaljens kvantitet. "AR" (As Required) betyder enligt behov.

ORDERING SPARE PARTS

ORDINAZIONE DI PARTI DI RICAMBIO

Menzionare sempre il numero della parte, la denominazione e il numero de pezzi desiderati, nonché il tipo e il numero di serie della macchina.

SPIEGAZIONE DELLE COLONNE

REF : CODICE DI RIFERIMENTO

Stabilisce il nesso tra un pezzo nell'elenco e un pezzo nell'illustrazione. "-" significa che il pezzo non è presente nell'illustrazione.

PART NUMBER : NUMERO DELLA PARTE

Nel caso non sia fornito il numerom di parte, il pezzo non può essere ordinato come parte di ricambio.

Il componenti indicati con un puntino fanno parte del gruppo elencato immediatamente sopra di essi.

DESIGNATION : DENOMINAZIONE

Generalmente si tratta della denominazione della parte. Per i pezzi standard oltre alla denominazione sono fornite alcune caratteristiche.

QTY : QUANTITA'

Indica la quantità dei pezzi in questione. "AR" significa "As Required" (Come richiesto).

ΠΑΡΑΓΓΕΛΙΑ ΑΝΤΑΛΛΑΚΤΙΚΩΝ

Πάντοτε σημειώνετε τον κωδικό, τον προσδιορισμό και την ποσότητα των απαιτούμενων ανταλλακτικών, καθώς επίσης τον τύπο και τον αύξοντα κωδικό αριθμό παραγωγής του μηχανήματος.

ΕΞΗΓΗΣΗ ΤΩΝ ΣΤΗΛΩΝ

REF : ΚΩΔΙΚΟΣ ΑΝΑΦΟΡΑΣ

Παρουσιάζει τη σχέση μεταξύ ενός εξαρτήματος στη λίστα και ενός εξαρτήματος στη φωτογραφία. Το "-" σημαίνει ότι το εξάρτημα δεν εμφανίζεται στη φωτογραφία.

PART NUMBER : ΚΩΔΙΚΟΣ ΑΡΙΘΜΟΣ

Αν δεν δίνεται κάποιος κωδικός αριθμός, τότε το εξάρτημα δεν μπορεί να ληφθεί ως ανταλλακτικό.

Τα εξαρτήματα που έχουν μαρκαρισθεί με μία τελεία είναι τμήματα του συγκροτήματος που παρουσιάζεται ακριβώς πάνω από αυτά.

DESIGNATION : ΠΡΟΣΔΙΟΡΙΣΜΟΣ

Συνήθως αυτό είναι το όνομα του εξαρτήματος. Για τα βασικά εξαρτήματα, επιπροσθέτα στην ονομασία, δίνεται και ένας αριθμός χαρακτηριστικών.

QTY : ΠΟΣΟΤΗΤΑ

Δηλώνει την ποσότητα του υπόψη εξαρτήματος. "AR" σημαίνει "Ως απαιτείται". Για τα βασικά εξαρτήματα, η ποσότητα δίνεται στη φωτογραφία παρά στη λίστα.

BESTÄLLNING AV RESERVDLAR

Ange alltid reservdelsnummer, benämning och kvantitet för varje önskad detalj samt maskinens typ och tillverkningsnummer.

TÖRKLARING AV SPALTER

REF : REFERENSNUMMER

Identifierar motsvarande detaljer i listan och illustrationen. "-" betyder att detaljen inte visas i illustrationen.

PART NUMBER : RESERVDLSNUMMER

Om inget reservdelsnummer anges, kan detaljen inte erhållas som reservdel. Detaljer som anges med en punkt ingår i den monteringsatts som listas ovanför dessa.

DESIGNATION : BENÄMNING

Detta är vanligen namnet på detaljen. För standarddetaljer anges förutom namnet ett antal specifikationer.

QTY : KVANTITET

Anger den ifrågavarande detaljens kvantitet. "AR" (As Required) betyder enligt behov.

ONCOMENDAS DE PEÇAS

Refira sempre o número da peça, a designação e a quantidade das peças que pretende encomendar, assim como o tipo e o número de série do aparelho.

EXPLICAÇÃO DAS COLUNAS

REF : CÓDIGO DE REFERÊNCIA

Estabeleça a ligação entre a peça na lista e a peça no desenho. "-" significa que a peça não vem no desenho.

PART NUMBER : NÚMERO DA PEÇA

Se não vier referido o número da peça, a peça não pode ser adquirida como peça sobressalente.

As peças marcadas com pontos são peças de um conjunto listado acima dessa peça.

DESIGNATION : DESIGNAÇÃO

Geralmente é o nome da peça. Para peças normalizadas, além do nome da peça, vem também referido um número.

QTY : QUANTIDADE

Indica a quantidade da peça em questão. "AR" (As Required) quer dizer "Como solicitado".

BESTILLING AV RESERVEDELER

Opggi alltid delenummer, betegnelse og antall på de delene du trenger, samt maskintype og serienummer.

FORKLARING TIL SPALTENE

REF: REFERANSEKODE

Viser hvor en del i listen er vist på illustrasjonen. "-" betyr at delen ikke er vist på illustrasjonen.

DELENUMMER

Hvis delenummer ikke er oppgitt, kan delen ikke bestilles som reservedel. Deler merket med en prikk er del av enheten som er oppgitt like ovenfor de aktuelle delene.

BETEGNELSE

Dette er vanligvis delens navn. Ved standarddeler blir enkelte karakteristika oppgitt i tillegg til navnet.

QTY: ANTALL

Opggir antallet av den aktuelle delen. "EB" betyr "Etter behov".

VARAOSIEN TILAAMINEN

Tilauksessa tulee aina mainita osanumero, nimike ja määrä sekä kompressorin tyyppi ja sarjanumero.

SARAKKEIDEN SELITYKSET

REF: VIITE: VIITEKOODI

Viitekoodi yhdistää luettelossa mainitun osan kuvassa olevaan. "-" tarkoittaa, että osaa ei ole merkitty kuvaan.

PART NUMBER: OSANUMERO

Ellei osanumeroa ole mainittu, osaa ei ole saatavana varaosana. Pisteellä merkityt osat kuuluvat niiden edellä mainittuun asennelmaan.

DESIGNATION: NIMIKE

Nimikkeenä käytetään tavallisesti osan nimeä. Vakio-osien ollessa kyseessä mainitaan nimen lisäksi osan joitakin ominaisuuksia.

QTY: MÄÄRÄ

Tarkoittaa kyseisten osien lukumäärää. "AR" tarkoittaa "tarpeen mukaan".

ORDERING SPARE PARTS

ZAMAWIANIE CZĘŚCI ZAMIENNYCH

Należy zawsze podawać numery, nazwy i ilości potrzebnych części, a także typ i numer seryjny maszyny.

WYJAŚNIENIE PRZEZNACZENIA KOLUMN

REF: KOD REFERENCYJNY

Kojarzy część na liście z częścią na ilustracji. Symbol “-” oznacza, że część nie jest przedstawiona na ilustracji.

PART NUMBER (NUMER CZĘŚCI)

Brak numeru oznacza, że dana część nie jest dostępna jako część zamienna.

Części oznaczone kropką należą do zespołu wymienionego bezpośrednio nad nimi.

DESIGNATION (NAZWA)

Zwykle jest to nazwa części. W przypadku części standardowych oprócz nazwy podano szereg właściwości.

QTY (IL.): ILOŚĆ

Pość części danego rodzaju. “AR” (“OP”) oznacza “odpowiednio do potrzeb”.

Заказ запасных частей

Необходимо всегда указывать номер детали, наименование и количество заказываемых запчастей, а также тип и серийный номер устройства.

Расшифровка столбцов

ИЛЛ. : код сноски

Показывает ссылку детали в списке на ее соответствующую иллюстрацию.

“-” означает, что к данной детали нет иллюстраций.

НОМЕР ДЕТАЛИ

Отсутствие номера детали означает, что данная деталь как запчасть не поставляется.

Детали, помеченные точкой, являются частями сборного механизма, который указан над этими деталями.

НАИМЕНОВАНИЕ

Обычно, название детали. К стандартным деталям, кроме названия, могут быть даны некоторые их характеристики.

КОЛ-ВО: Количество

Показывает количество деталей. «По тр.» означает «по требованию».

OBJEDNÁVÁNÍ NÁHRADNÍCH DÍLŮ

V objednávce vždy uveďte číslo dílu, jeho označení a požadované množství. Rovněž tak udejte typ a výrobní číslo zařízení.

VYSVĚTLIVKY K JEDNOTLIVÝM SLOUPCŮM

REF : REFERENČNÍ KÓD

Udává spojitost mezi dílem v seznamu a dílem na obrázku. “-” znamená, že díl není na obrázku uveden.

ČÍSLO DÍLU

Pokud není číslo dílu uvedeno, nelze tuto součást objednat jako náhradní díl.

Díly označené tečkami jsou součástí konstrukčního celku, který je uveden přímo nad nimi.

OZNAČENÍ

Ve sloupci označení bývá obvykle uveden název dílu. U standardních součástí je vedle názvu uváděna též řada dalších charakteristik.

POĚT : MNOŽSTVÍ

Označuje množství uvedených dílů. Zkratka “PP” znamená “Podle požadavku”.

PÓTALKATRÉSZ-RENDELÉS

Mindig jelezze a szükséges alkatrész számát, megnevezését és mennyiségét, valamint a gép típusát és sorozatszámát.

AZ OSZLOPOK MAGYARÁZATA

REF: REFERENCIAKÓD

Ez teremt kapcsolatot a listán szereplő alkatrész és az ábrán látható alkatrész között.

“-”: azt jelenti, hogy az adott alkatrész nem szerepel az ábrán.

ALKATRÉSZ-SZÁM

Ha nincsen megadva alkatrész-szám, akkor az adott alkatrész nem rendelhető meg pótalkatrészként.

A ponttal jelölt alkatrészek a közvetlenül fölöttük felsorolt szerelvény részét képezik.

MEGNEVEZÉS

Rendszerint ez az alkatrész neve. Az alapfelszereltséghez tartozó alkatrészek esetében a név mellett néhány jellemző adat is szerepel.

QTY: MENNYISÉG

Az adott alkatrész mennyiségét jelzi. “SZ” jelentése “Szükség szerint”

订购备件

请务必提供所需部件的部件号、名称和数量，以及设备型号和序列号。

表格各列说明

REF: 参考代码

确立列表内部件与插图内部件间的联系。

“-”表示插图内未显示此部件。

部件号

如果未给出部件号，则表明无法通过备件方式购买此部件。标有圆点的部件是其上一行所列配件的一部分。

名称

通常为部件的名称。对于标准件，除了名称外，还会列出它的一些特性。

QTY: 数量

表明可供部件的数量。“AR”代表“根据需要”

OBJEDNÁVANIE NÁHRADNÝCH SÚČIASTOK

Uvádajte vždy číslo súčiastky, označenie a množstvo požadovaných súčiastok, ako aj typ a výrobné číslo stroja.

VYSVETLENIE STŮPCOV

REF : REFERENČNÝ KÓD

Stanovuje spojitost medzi súčiastkou v zozname a súčiastkou na obrázku. “-” znamená, že súčiastka nie je zobrazená na obrázku.

ČÍSLO SÚČIASTKY

Ak nie je uvedené žiadne číslo súčiastky, táto súčiastka nie je k dispozícii ako náhradná.

Súčiastky označené bodkou sú časťou zostavy uvedenej hneď nad nimi.

OZNAČENIE

Obyčajne je to názov súčiastky. U normalizovaných súčiastok sa okrem názvu uvádza aj niekoľko charakteristík

QTY : MNOŽSTVO

Označuje množstvo danej súčiastky. “AR” je skratka pre “Podľa potreby”.

ORDERING SPARE PARTS

NAROČEVANJE NADOMESTNIH DELOV

Zmeraj navedite številko nadomestnega dela, označbo in količino potrebnih delov ter tip in serijsko številko stroja.

RAZLAGA STOLPCEV

REF : REFERENČNA ŠIFRA

Predstavlja povezavo med delom na seznamu in delom na ilustraciji. "-" predstavlja del, ki ni prikazan na ilustraciji.

ŠTEVILKA DELA

Če številka dela ni podana potem je ne morete dobiti kot nadomestni del. Deli označeni s piko so sestavni del montaže, navedene nad njimi.

OZNAČBA

Običajno je to ime nadomestnega dela. Pri standardnih delih je poleg imena podano še število značilnosti.

QTY : KOLIČINA

Označuje količino nadomestnih delov. "AR" pomeni "kot je bilo zahtevano".

ATSARGINIŲ DALIŲ UBSAKYMAS

Visuomet nurodykite dalies numerą, pavadinimą ir reikiamą dalių kieką, taip pat ir mašinos tipą bei serijinį numerą.

STULPELIŲ PAAIKINIMAI

NRD.: NUORODOS KODAS

Susieja sąraše nurodytą dalį su jos atvaizdu iliustracijoje. "-" reiškia, jog dalis iliustracijoje nepavaizduota.

DALIES NUMERIS

Jei numerio nurodyta, detalės negalima įsigyti kaip atsarginės dalies. Tađku paþymėtos dalys yra prieš jas sąraše nurodyto mazgo sudėtinė dalis.

PAVADINIMAS

Paprastai tai dalies pavadinimas. Standartinėms dalims kartu su pavadinimu nurodomos ir kelios charakteristikos.

KIEK.: KIEKIS

Nurodo susijusių dalių kieką. "AR" reiškia "As required" (pagal poreiką).

VARUOSADE TELLIMINE

Alati viidake osa numbrile, tähisele ja vajalikule osade kogusele, samuti masina tüübile ja seerianumbrile.

SELGITUS VEERGUDE KOHTA

REF : VIITENUMBER

Loob seose nimekirjas toodud osa ja illustratsioonil esitatud osa vahel. "-" tähendab, et illustratsioonil ei ole seda osa kujutatud.

OSA NUMBER

Kui osa numbrit ei ole toodud, pole seda osa võimalik varuosana soetada. Punktiga tähistatud osad on nende kohal toodud koostu osaks.

TÄHIS

Tavaliselt on see osa nimetus. Standardosadel on lisaks nimetusele toodud ka tunnusnumber.

QTY : KOGUS

Osutab vastava osa kogusele. "AR" tähendab vajadusel ("As Required").

REZERVES DAĪŲ PASŪTĪĀNA

Vienmēr miniet daļas numuru, apzīmējumu un nepieciešamo detaļu daudzumu, kā arī mašinas tipu un sērijas numuru.

AIĻŪ IZSKAIDROJUMS

REF : ATSAUKSMES KODS

Izveido saikni starp detaļu sarakstā un detaļu uz attēla. "-" nozīmē, ka detaļa nav attēlota ilustrācijā.

DETAĪĀS NUMURS

Ja detaļas numurs nav minēts, tad detaļu nevar iegūt kā rezerves daļu. Ar punktu apzīmētās detaļas ir mezgla sastāvdaļas, kurās ir attēlots tieši virs tām.

 
APZĪMĶJUMS

Parasti tas ir detaļas nosaukums. Standarta detaļām, papildus nosaukumam, tiek minēta virkne raksturojumu \ specifikāciju.

QTY : DAUDZUMS

Norāda domātās detaļas daudzumu. "AR" nozīmē "As Required" – "kā nepieciešams".


SERVICE PAK

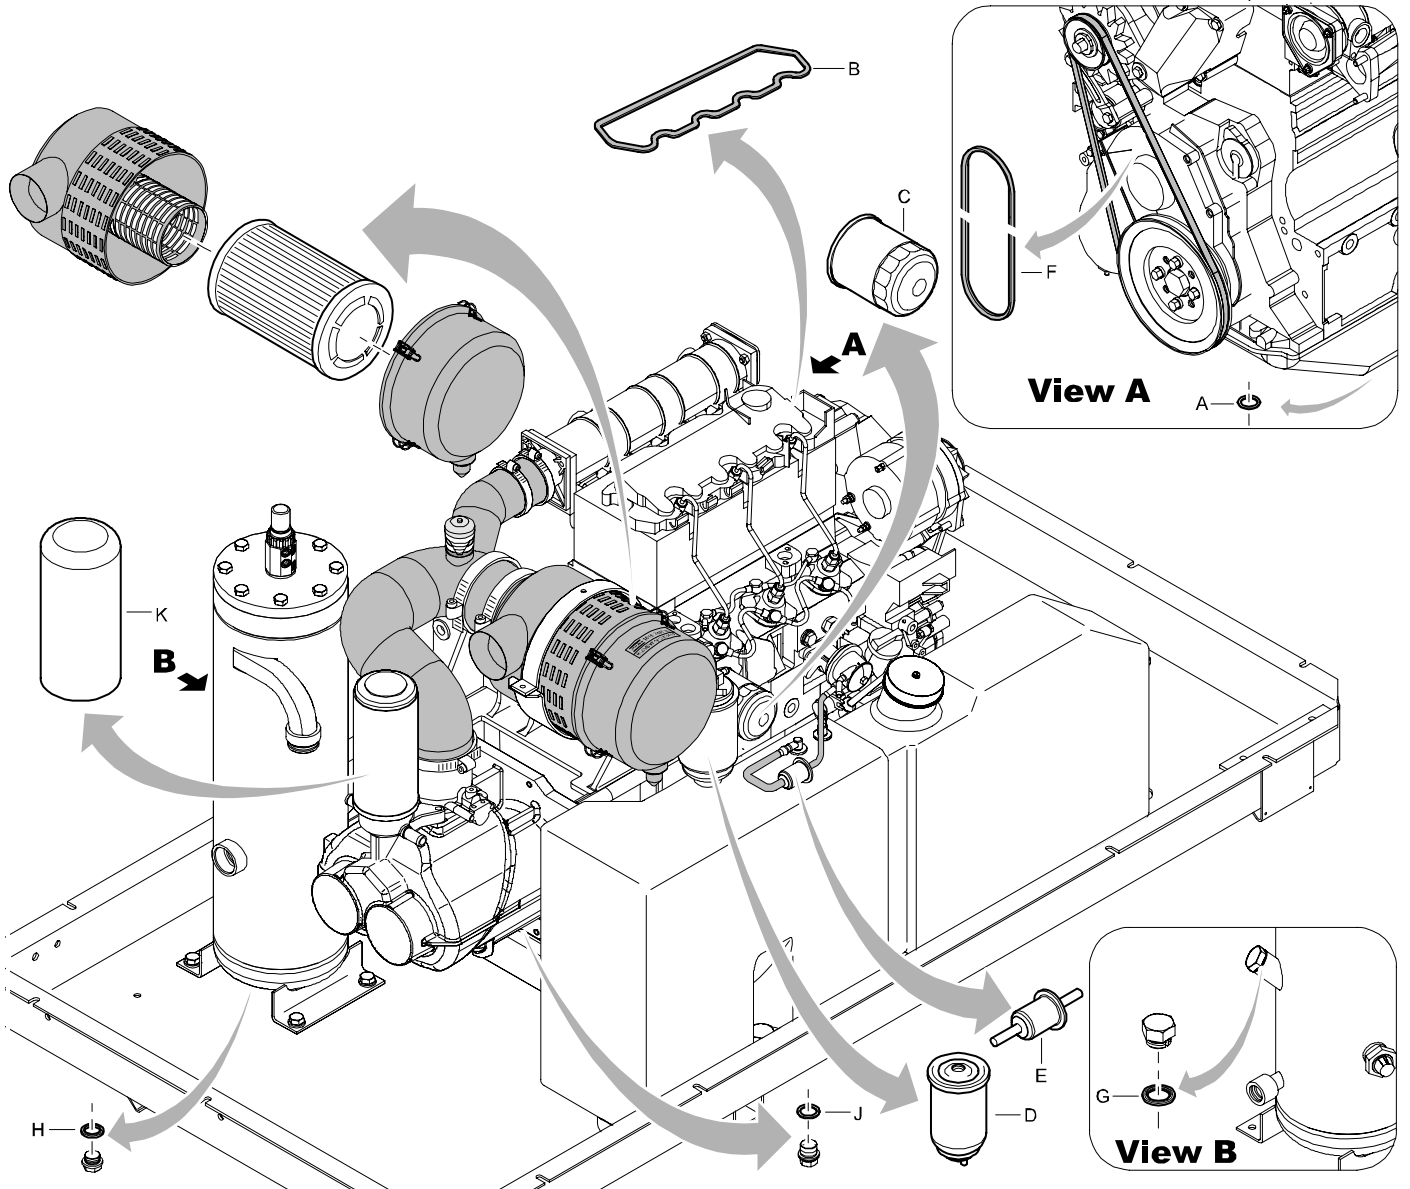

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	2912 4393 06	SERVICE PAK YEARLY					
•A	-	FLAT GASKET (For details see page 198)	1				
•B	-	ROCKER COVER	1				
•C	-	OIL FILTER ELEMENT	1				
•D	-	FILTER ELEMENT	1				
•E	-	PREFILTER	1				
•F	-	V-BELT	1				
•G	-	SEALING WASHER (For details see page 198)	1				
•H	-	SEALING WASHER (For details see page 198)	1				
•J	-	FLAT GASKET (For details see page 198)	1				
•K	-	FILTER ELEMENT	1				
•L	-	AIR FILTER ELEMENT	1				

ENGINE OIL

 
PAROIL 5W40

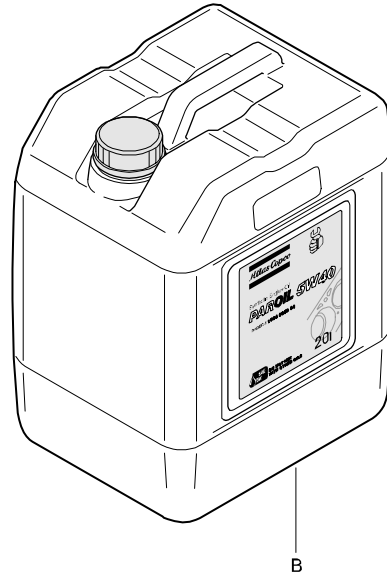

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
A	1604 6060 01	PAROIL 5W40 5 LITER CAN	1				
B	1604 6059 01	PAROIL 5W40 20 LITER CAN	1				

ENGINE OIL

 
PAROIL 15W40

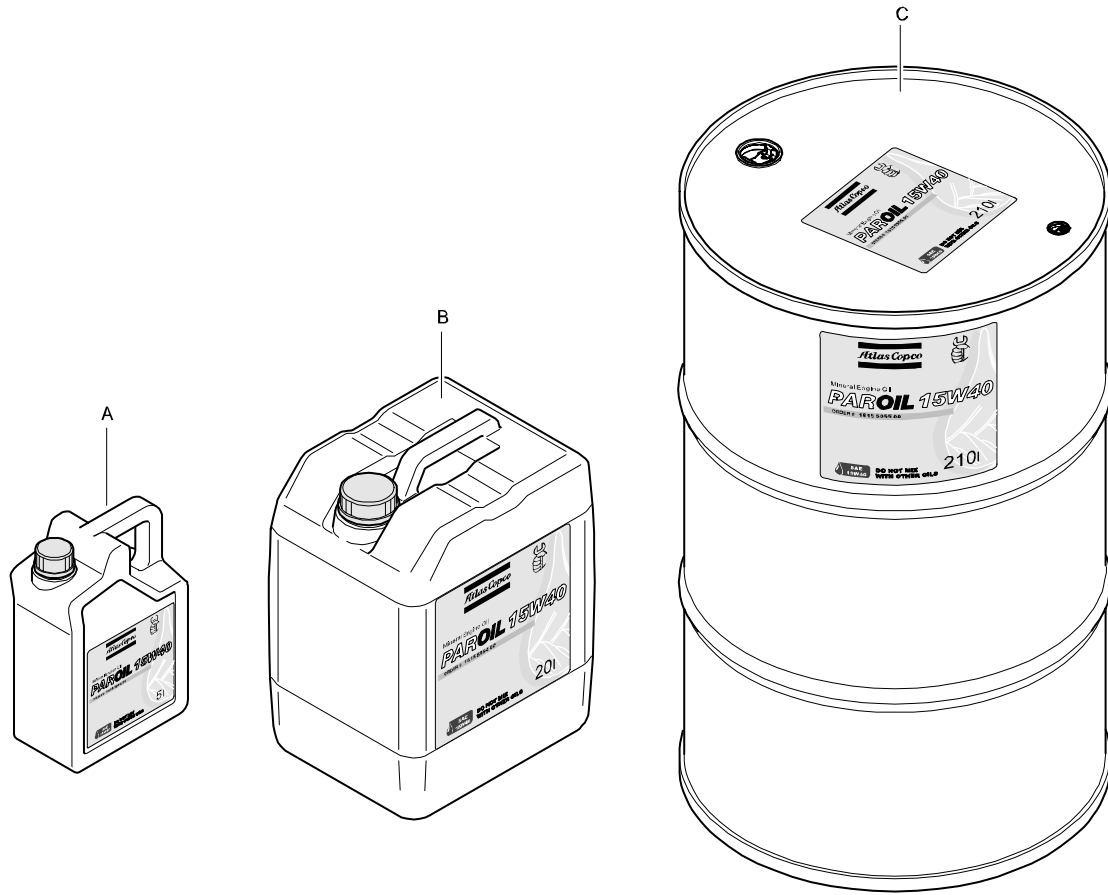

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
A	1615 5953 00	PAROIL 15W40 5 LITER CAN	1				
B	1615 5954 00	PAROIL 15W40 20 LITER CAN	1				
C	1615 5955 00	PAROIL 15W40 210 LITER BARREL	1				

COMPRESSOR OIL

 
PAROIL M

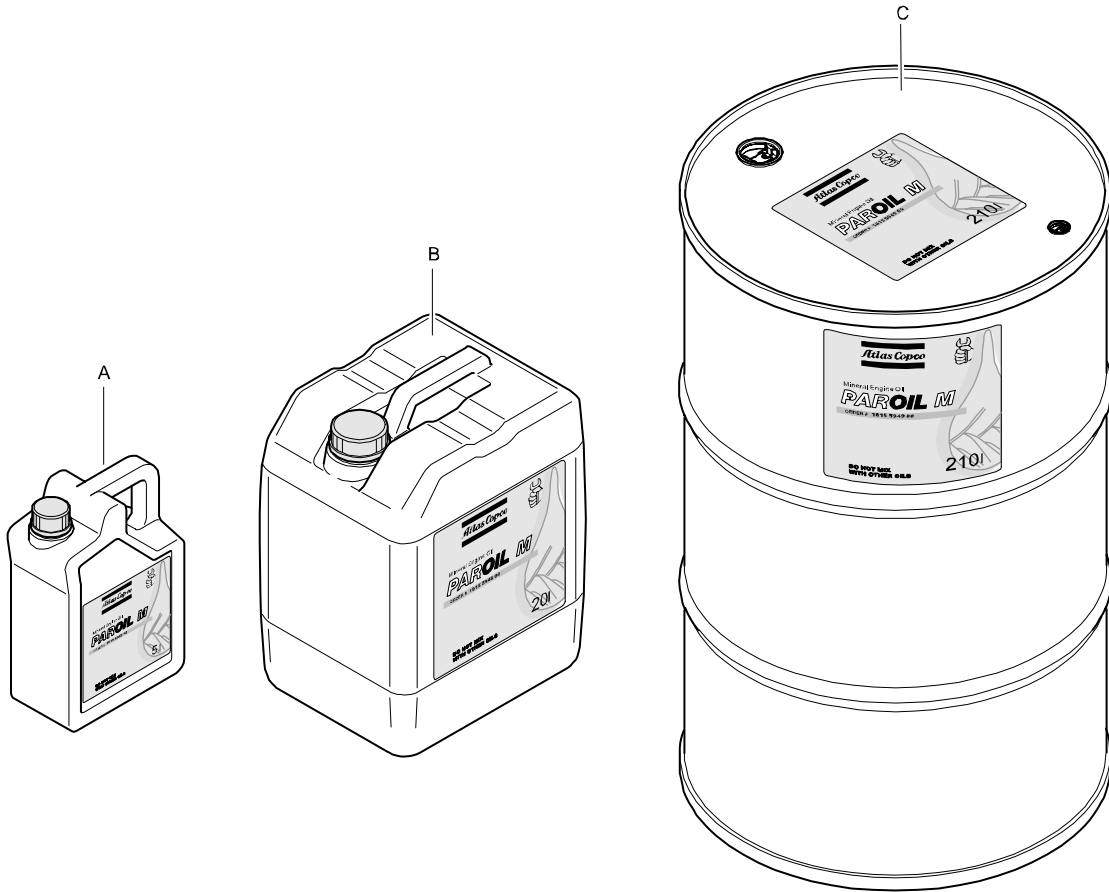

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
		<i>PAROIL M</i>					
A	1615 5947 00	OIL CAN 5 L	1				
B	1615 5948 00	OIL CAN 20 L	1				
C	1615 5949 00	STEEL DRUM 210 L	1				

COMPRESSOR OIL

 
PAROIL S

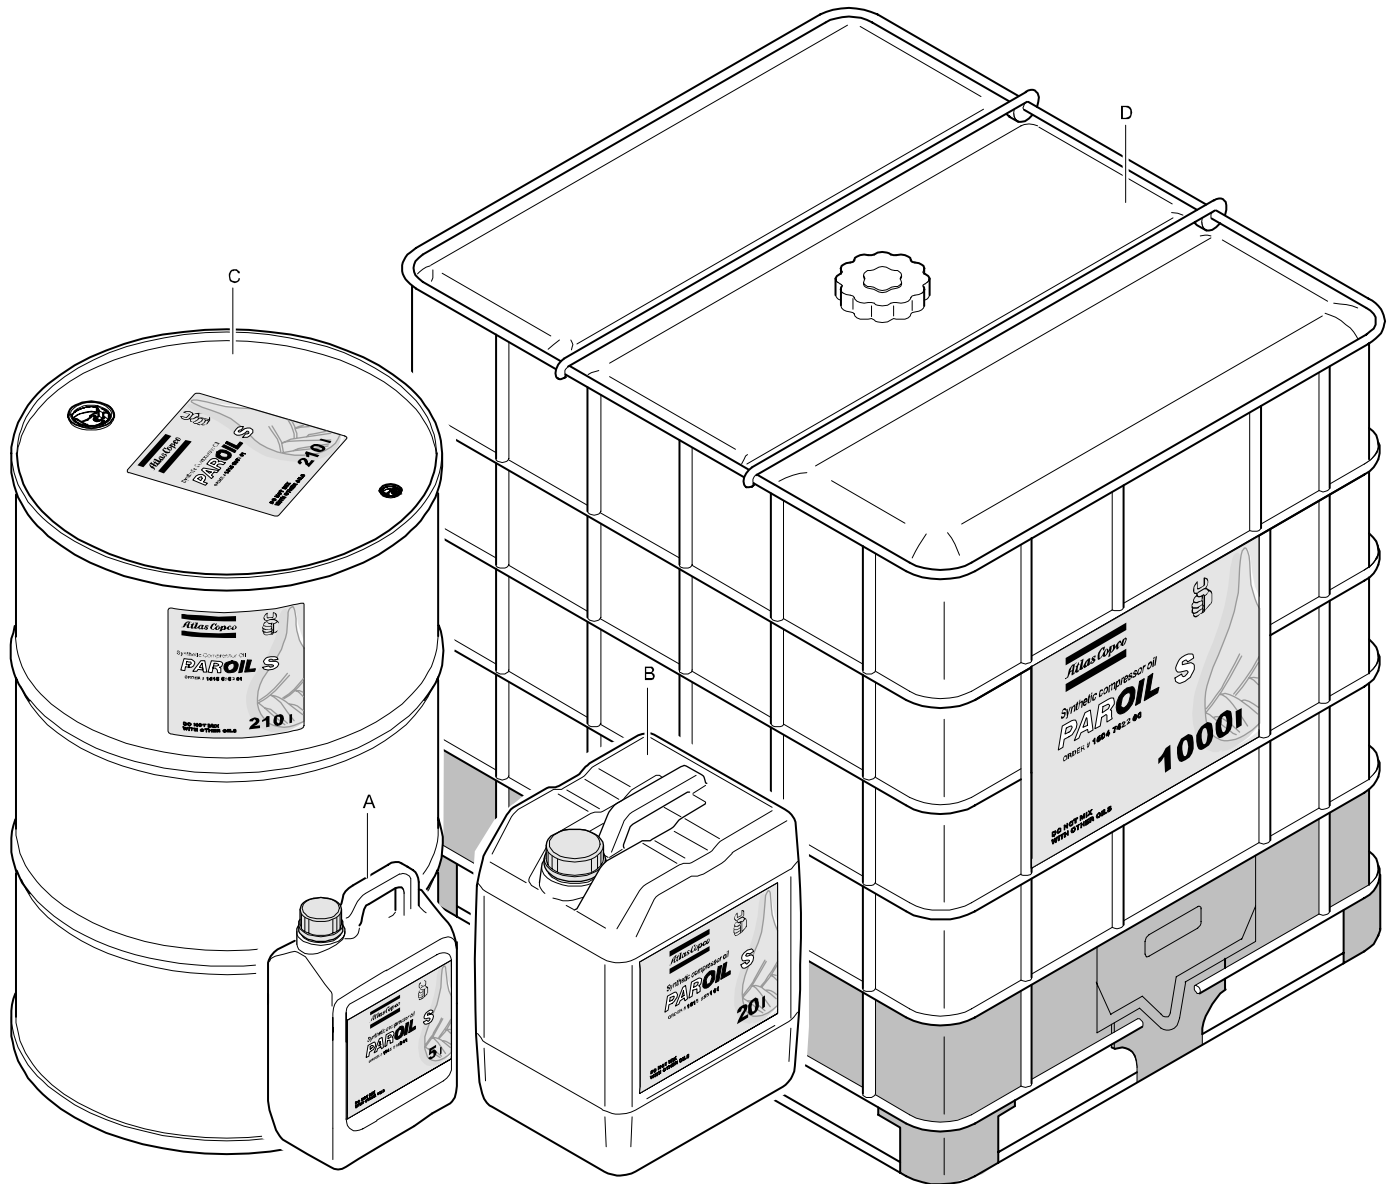

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
		<i>PAROIL S</i>					
A	1615 5950 01	OIL CAN 5 L	1				
B	1615 5951 01	OIL CAN 20 L	1				
C	1615 5952 01	STEEL DRUM 210 L	1				
D	1604 7422 00	CONTAINER 1000 L	1				

COMPRESSOR OIL

 
PAROIL S 68

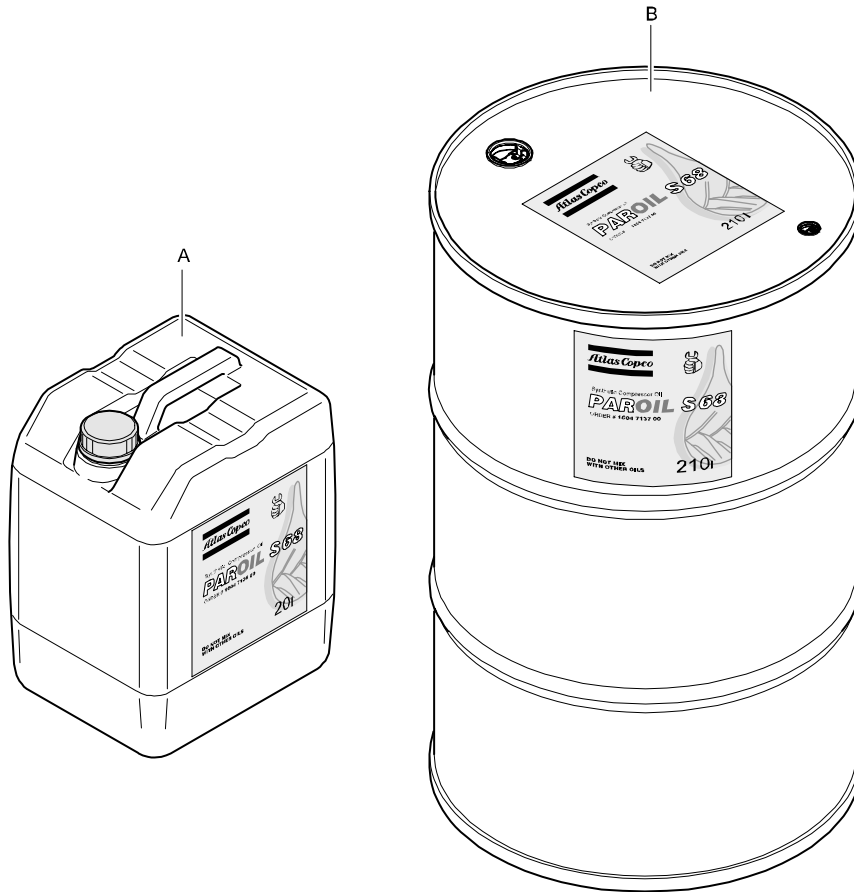

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
		<i>PAROIL S 68</i>					
A	1604 7136 00	OIL CAN 20 L	1				
B	1604 7137 00	STEEL DRUM 210 L	1				

ENGINE COOLANT

 
PARCOOL EG

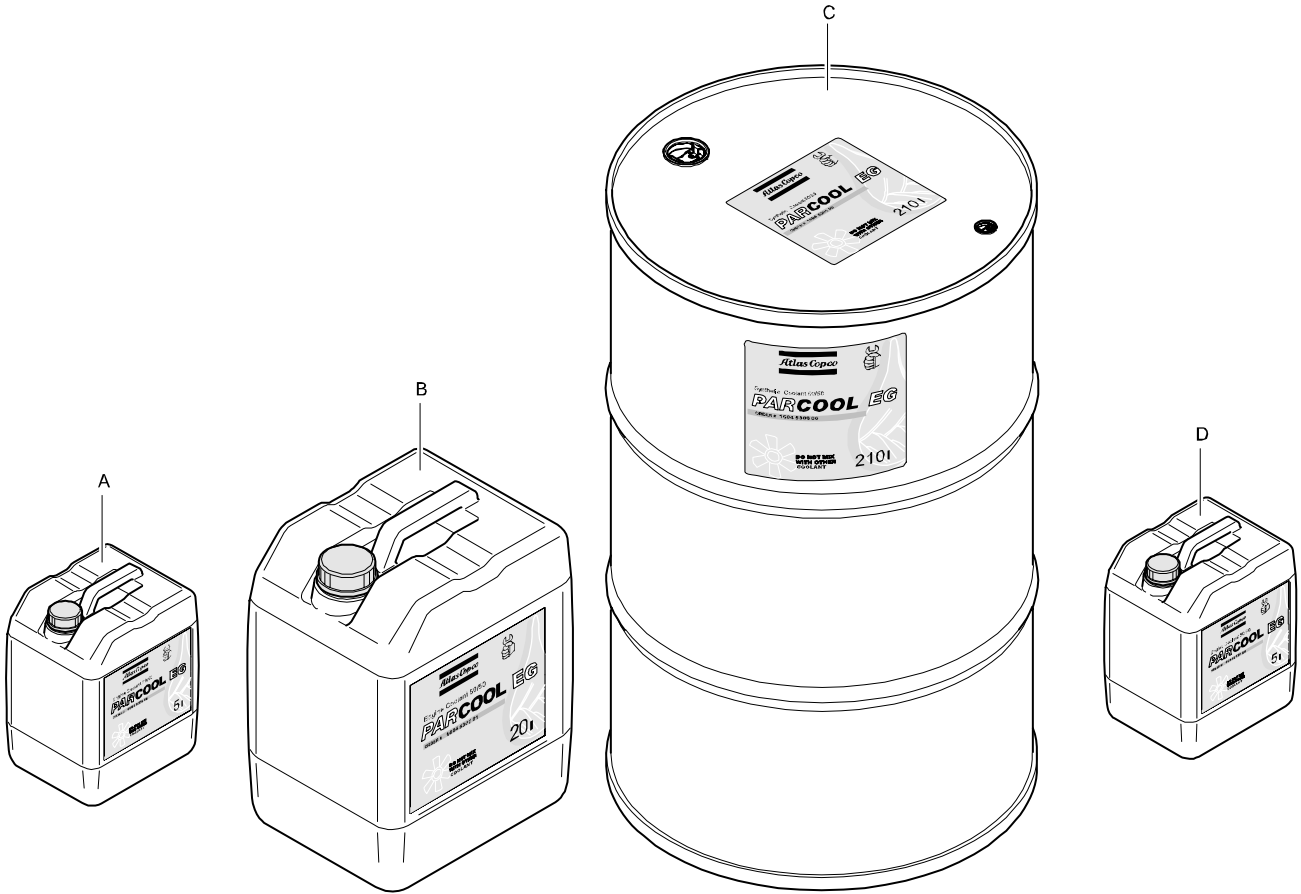

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
A	1604 5308 00	PARCOOL EG 5 LITER CAN	1				
B	1604 5307 01	PARCOOL EG 20 LITER CAN	1				
C	1604 5306 00	PARCOOL EG 210 LITER BARREL	1				
D	1604 8159 00	PARCOOL EG CONCENTRATE 5 LITER CAN	1				

SERVICE KIT

 
UNLOADING VALVE

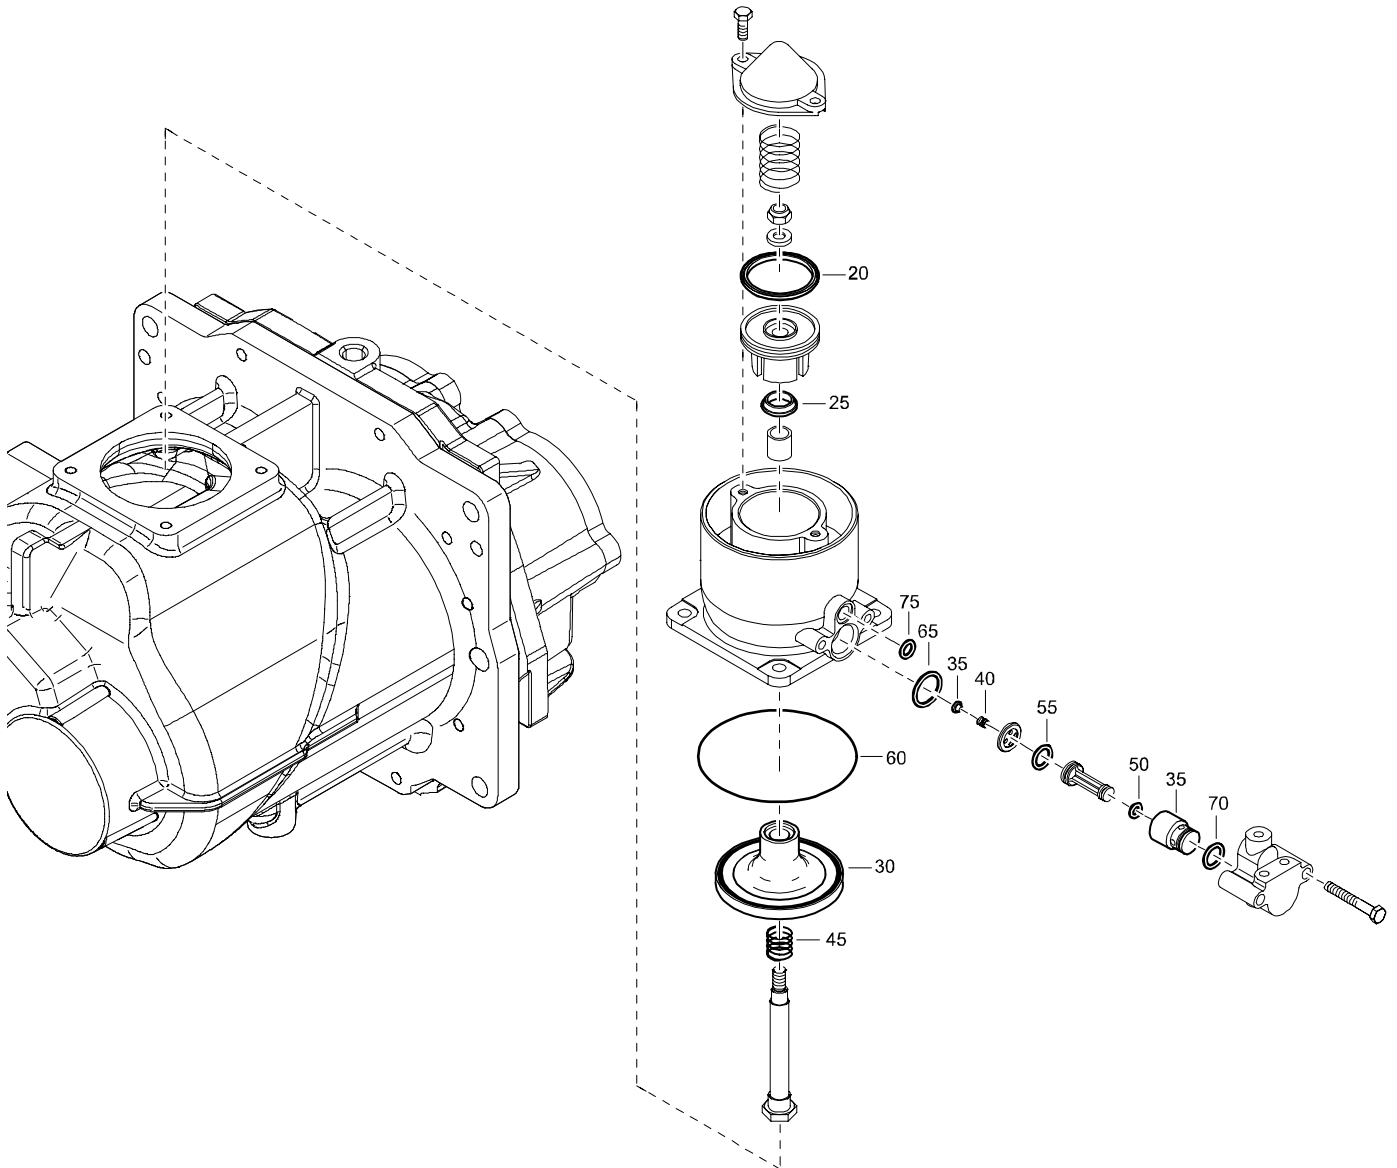

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	2911 0051 00	SERVICE KIT UNLOADING VALVE					
•	20	PISTON SEAL	1				
•	25	WIPER	1				
•	30	VALVE	1				
•	35	VALVE	1				
•	40	SPRING	1				
•	45	SPRING	1				
•	50	O-RING	1				
•	55	O-RING	1				
•	60	O-RING	1				
•	65	O-RING	1				
•	70	O-RING	1				
•	75	O-RING	1				

SERVICE KIT

 
BRAKE SHOES

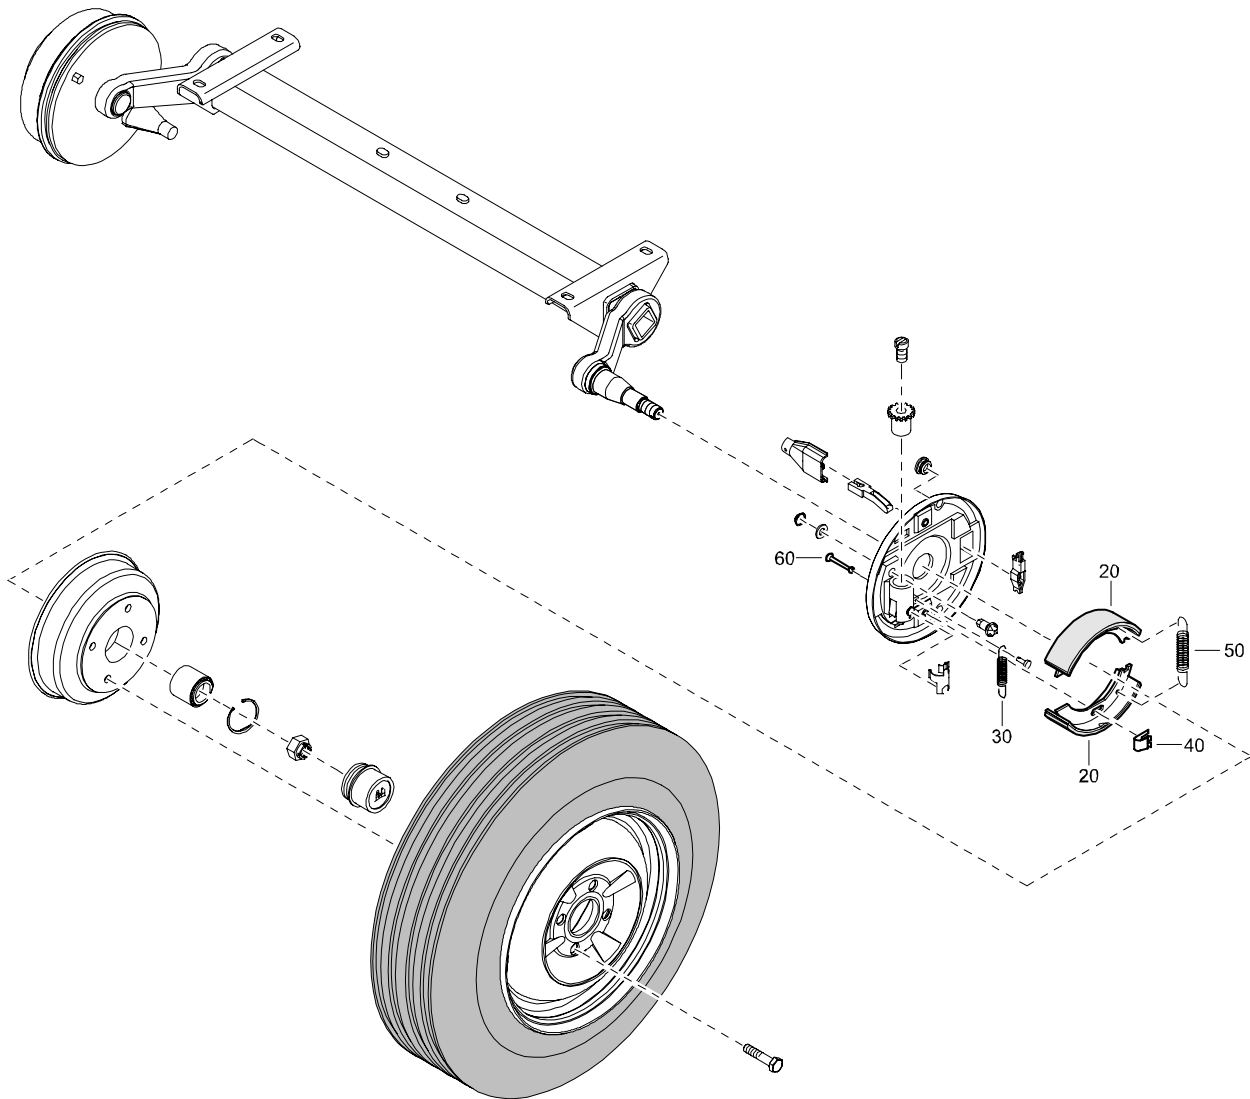

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	2911 0067 00	SERVICE KIT BRAKE SHOES					
•	20	BRAKE SHOE	4				
•	30	SPRING	2				
•	40	SPRING	4				
•	50	SPRING	2				
•	60	PIN	4				

SERVICE KIT

 
OIL SEPARATOR

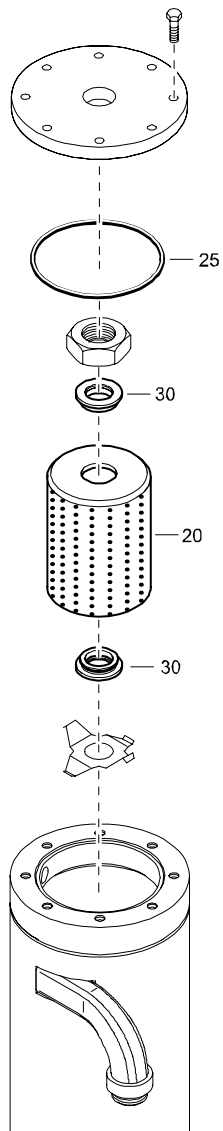

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	2911 0068 00	SERVICE KIT OIL SEPARATOR					
•20	-	OIL.SEP.ELEMENT	1				
•25	-	O-RING	1				
•30	-	SEAL	2				

STANDARD

 
FUELSYSTEM

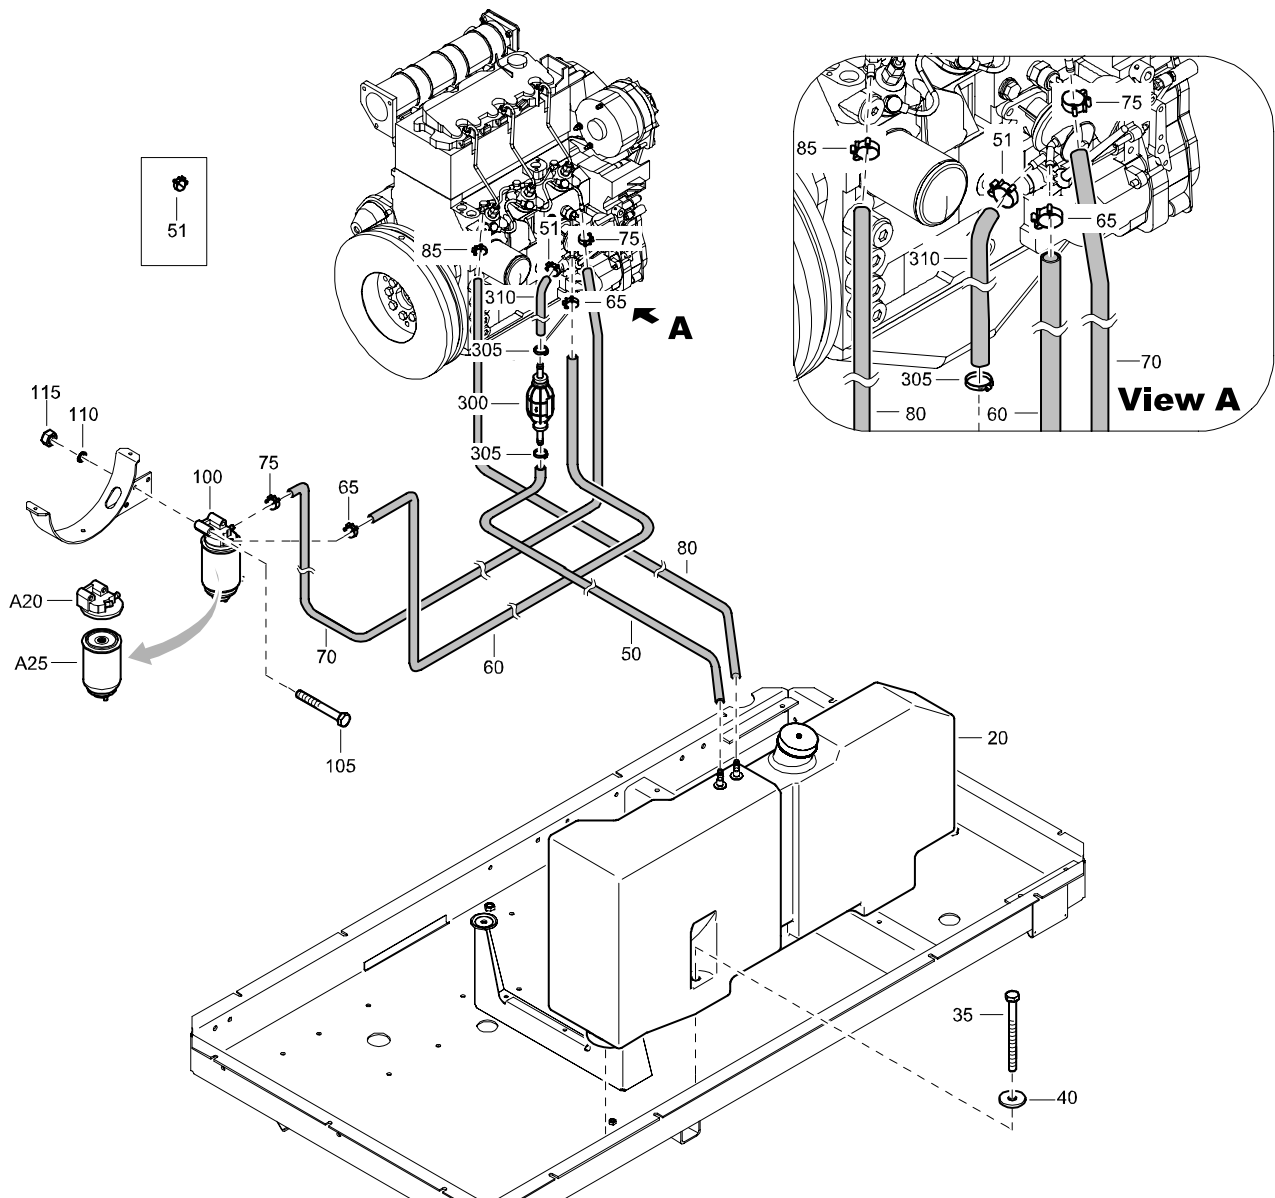

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 3964 81	FUELTANK ASSY (For details see page 75)	1	310	0071 8402 48	FUEL HOSE	AR
35	0147 1338 03	HEX. HEAD SCREW	2				
40	0300 0276 21	PLAIN WASHER	2				
50	0071 8402 48	FUEL HOSE	AR				
51	1604 4137 00	HOSE CLIP	2				
60	0071 8402 48	FUEL HOSE	AR				
65	1604 4137 00	HOSE CLIP	2				
70	0071 8402 48	FUEL HOSE	AR				
75	1604 4137 00	HOSE CLIP	2				
80	0071 8402 48	FUEL HOSE	AR				
85	1604 4137 00	HOSE CLIP	1				
100	1615 8818 80	FUELFILTER ASSY	1				
•A20	1615 8818 00	FUELFILTER HOUSING	1				
•A25	1615 8875 00	FUEL FILTER	1				
105	0147 1331 03	HEX. HEAD SCREW	2				
110	0333 3227 00	LOCK WASHER	2				
115	0266 2110 00	HEXAGON NUT	2				
300	1604 7639 00	HAND PRIMER PUMP	1				
305	1604 4137 00	HOSE CLIP	2				

STANDARD

 FRAME AND MOUNTS

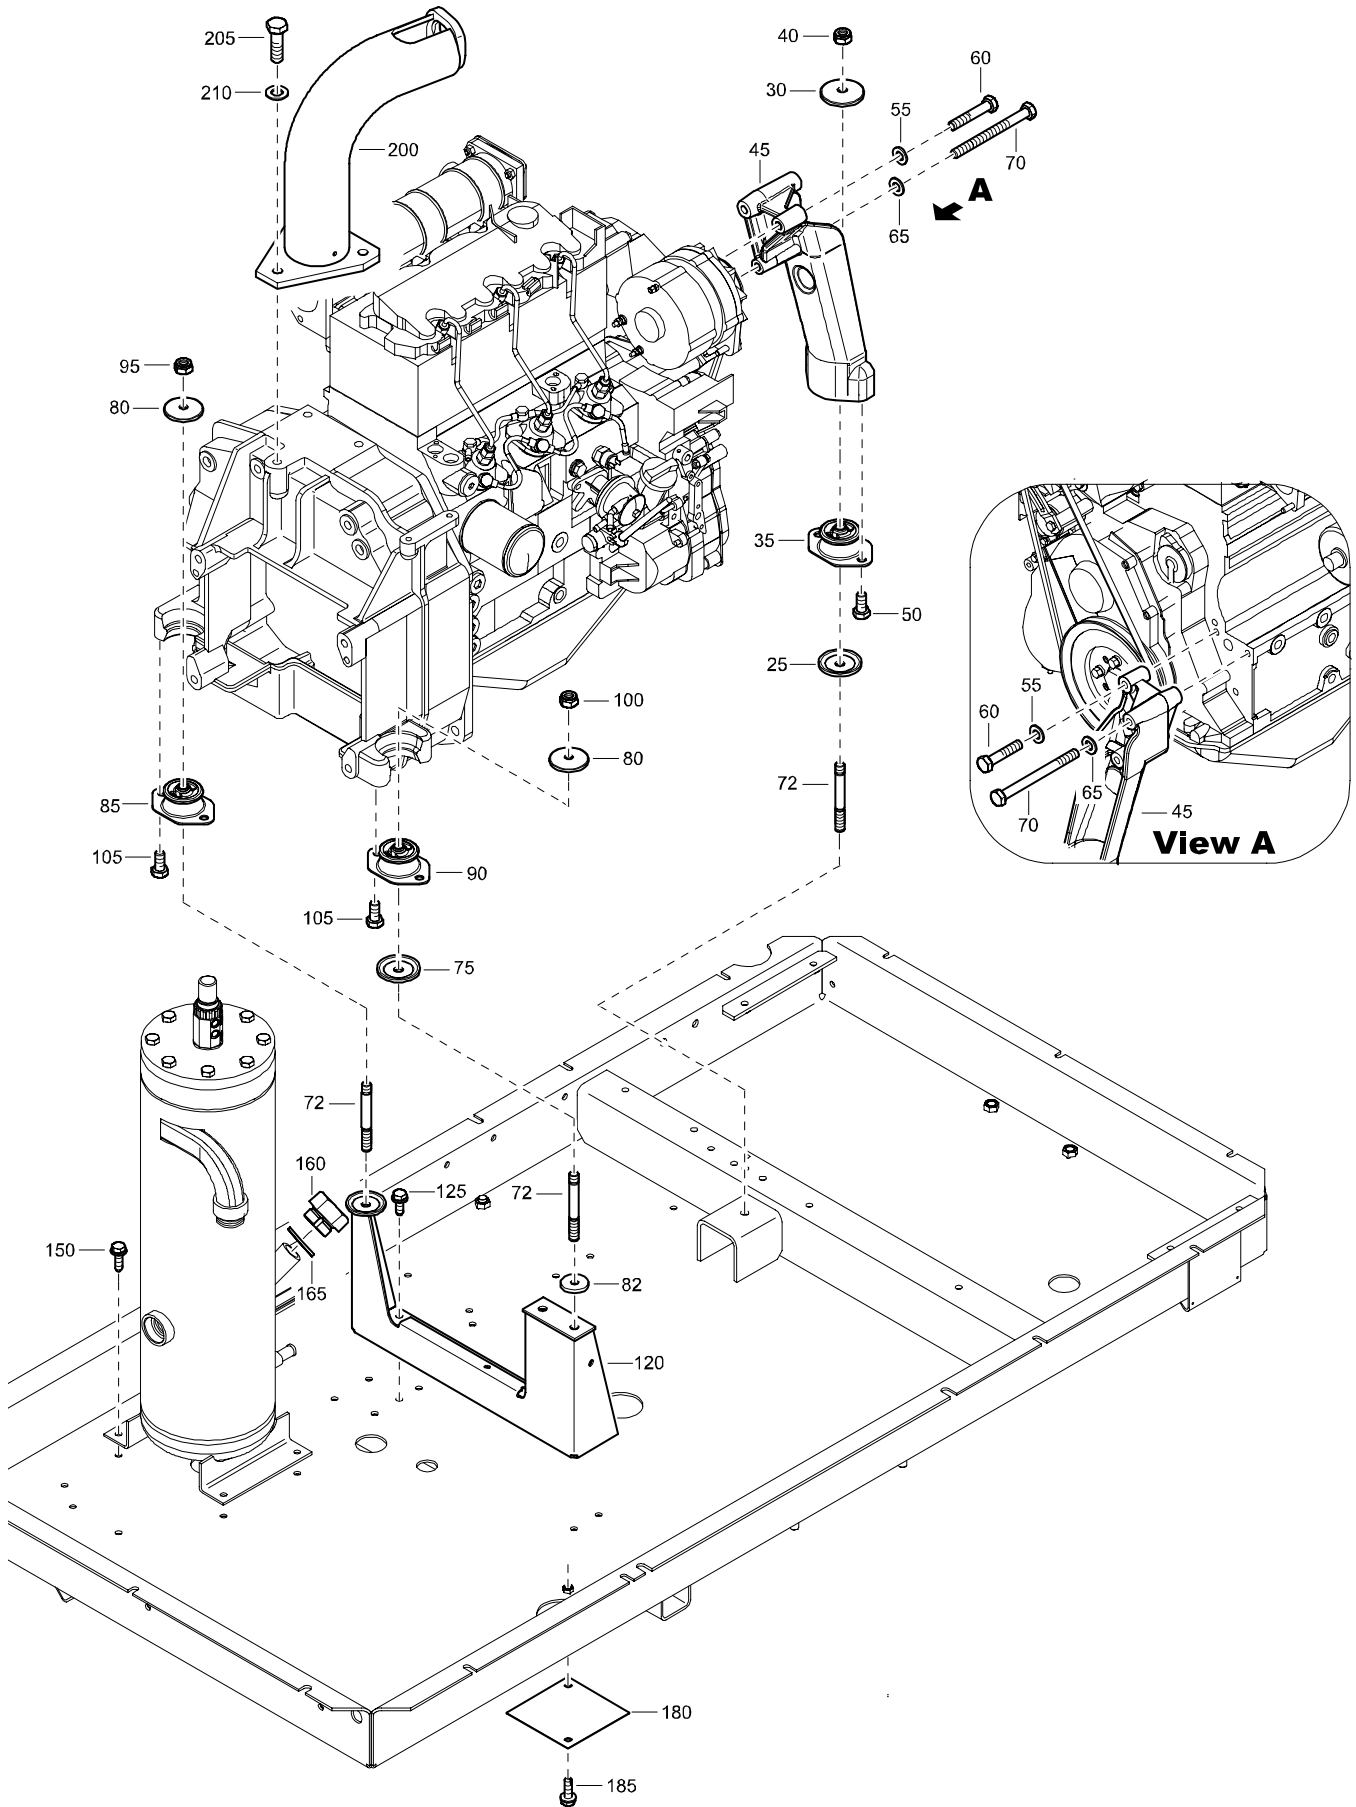


STANDARD

FRAME AND MOUNTS

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
25	1202 8719 00	DISK	1				
30	1604 4220 01	DISC	1				
35	1615 8309 00	ANTIVIBRATION PAD	1				
40	0291 1111 00	LOCKNUT	1				
45	1604 3991 00	SUPPORT	1				
50	0147 1958 74	HEX. HEAD SCREW	2				
55	0301 2344 00	PLAIN WASHER	1				
60	0147 1368 03	HEX. HEAD SCREW	1				
65	0301 2344 00	PLAIN WASHER	2				
70	0147 1379 03	HEX. HEAD SCREW	2				
72	0246 1956 55	STUD	3				
75	1202 8719 00	DISK	1				
80	1604 4220 01	DISC	2				
82	1604 3906 00	SPACER	1				
85	1202 9006 02	ANTIVIBRATION PAD	1				
90	1202 9006 03	ANTIVIBRATION PAD	1				
95	0291 1111 00	LOCKNUT	1				
100	0291 1111 00	LOCKNUT	1				
105	0147 1958 74	HEX. HEAD SCREW	4				
120	1604 4013 00	BRACKET	1				
125	1619 2766 00	HEX. HEAD SCREW	4				
150	1615 5664 00	HEX. HEAD SCREW	4				
160	1615 5080 00	PLUG	1				
165	0661 1038 00	SEALING WASHER	1				
180	1604 5419 02	COVER	1				
185	1615 5664 00	HEX. HEAD SCREW	2				
200	1604 4099 31	EYE	1				
205	0147 1402 15	HEX. HEAD SCREW	3				
210	0301 2358 00	PLAIN WASHER	3				

STANDARD

 ENGINE AND ACCESSORIES

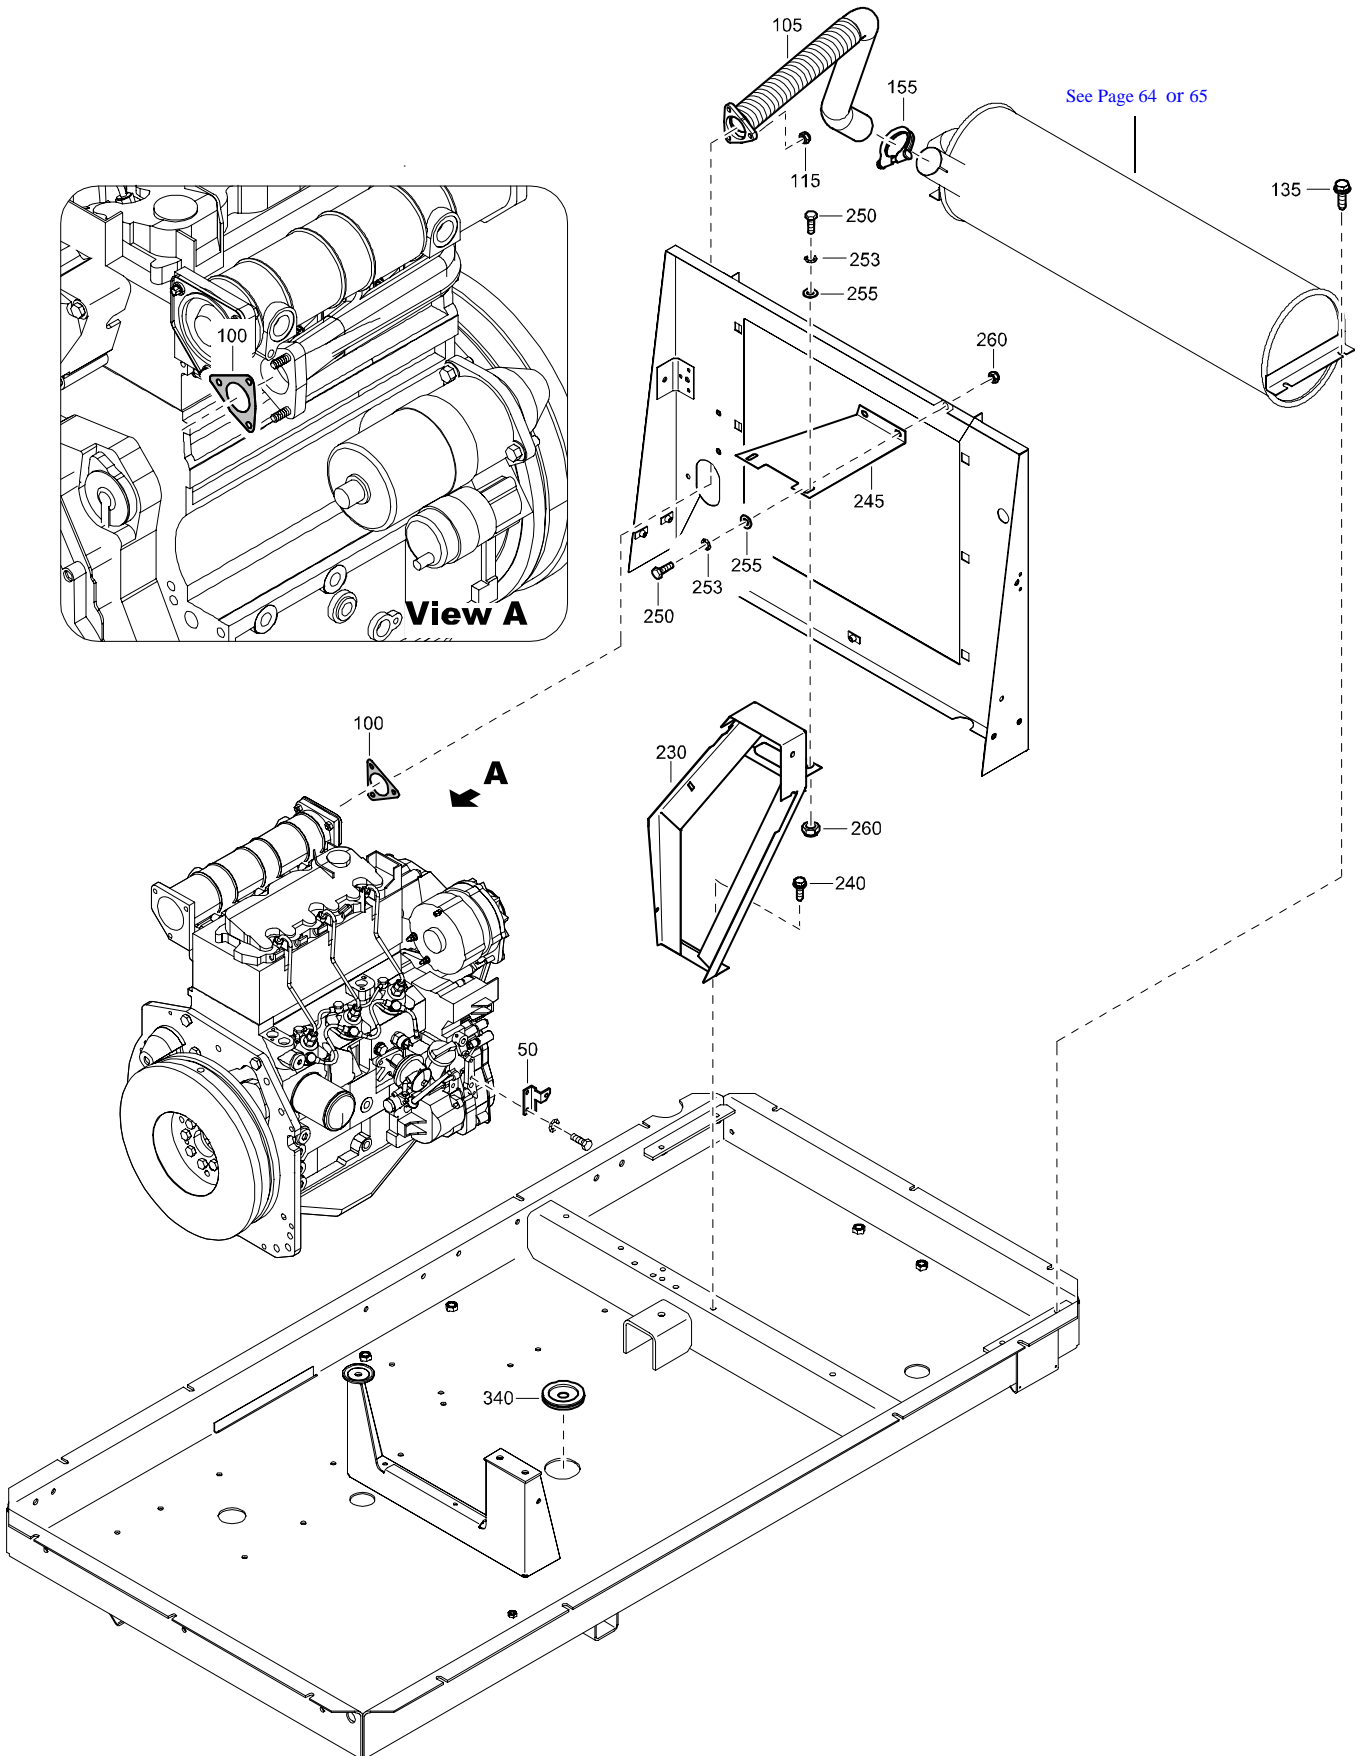


STANDARD

ENGINE AND ACCESSORIES

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
50	1615 9112 00	LEVER	1				
100	1615 7658 00	GASKET	1				
105	1604 5804 00	PIPE WITH FLEXIBLE	1				
115	0291 1185 04	LOCKNUT	3				
135	1615 5664 00	HEX. HEAD SCREW	4				
155	0346 3001 08	PIPE CLAMP	1				
230	1604 4053 04	SCREEN	1				
240	1615 5664 00	HEX. HEAD SCREW	2				
245	1604 4054 02	PLATE	1				
250	0147 1322 03	HEX. HEAD SCREW	4				
253	0333 3227 00	LOCK WASHER	4				
255	0301 2335 00	PLAIN WASHER	4				
260	0266 2110 00	HEXAGON NUT	4				
340	1604 6105 00	GROMMET	1				

STANDARD

 
NO EPA ENGINE

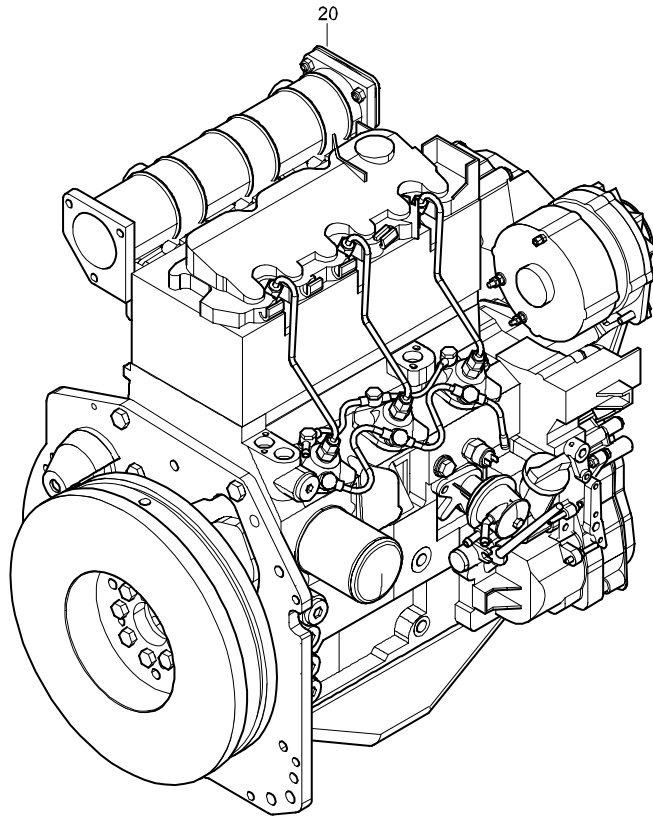

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 0223 00	ENGINE D2011 L03	1				

STANDARD

 
COMPRESSOR ELEMENT

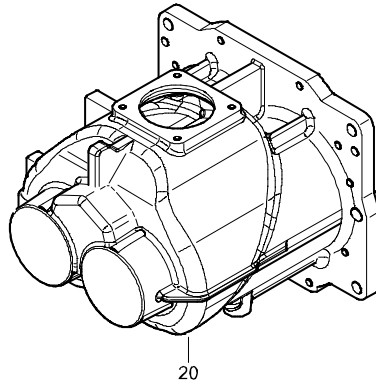

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1616 7194 90	O.I.S. K-38 SERVICE STAGE	1				

STANDARD

 COUPLING

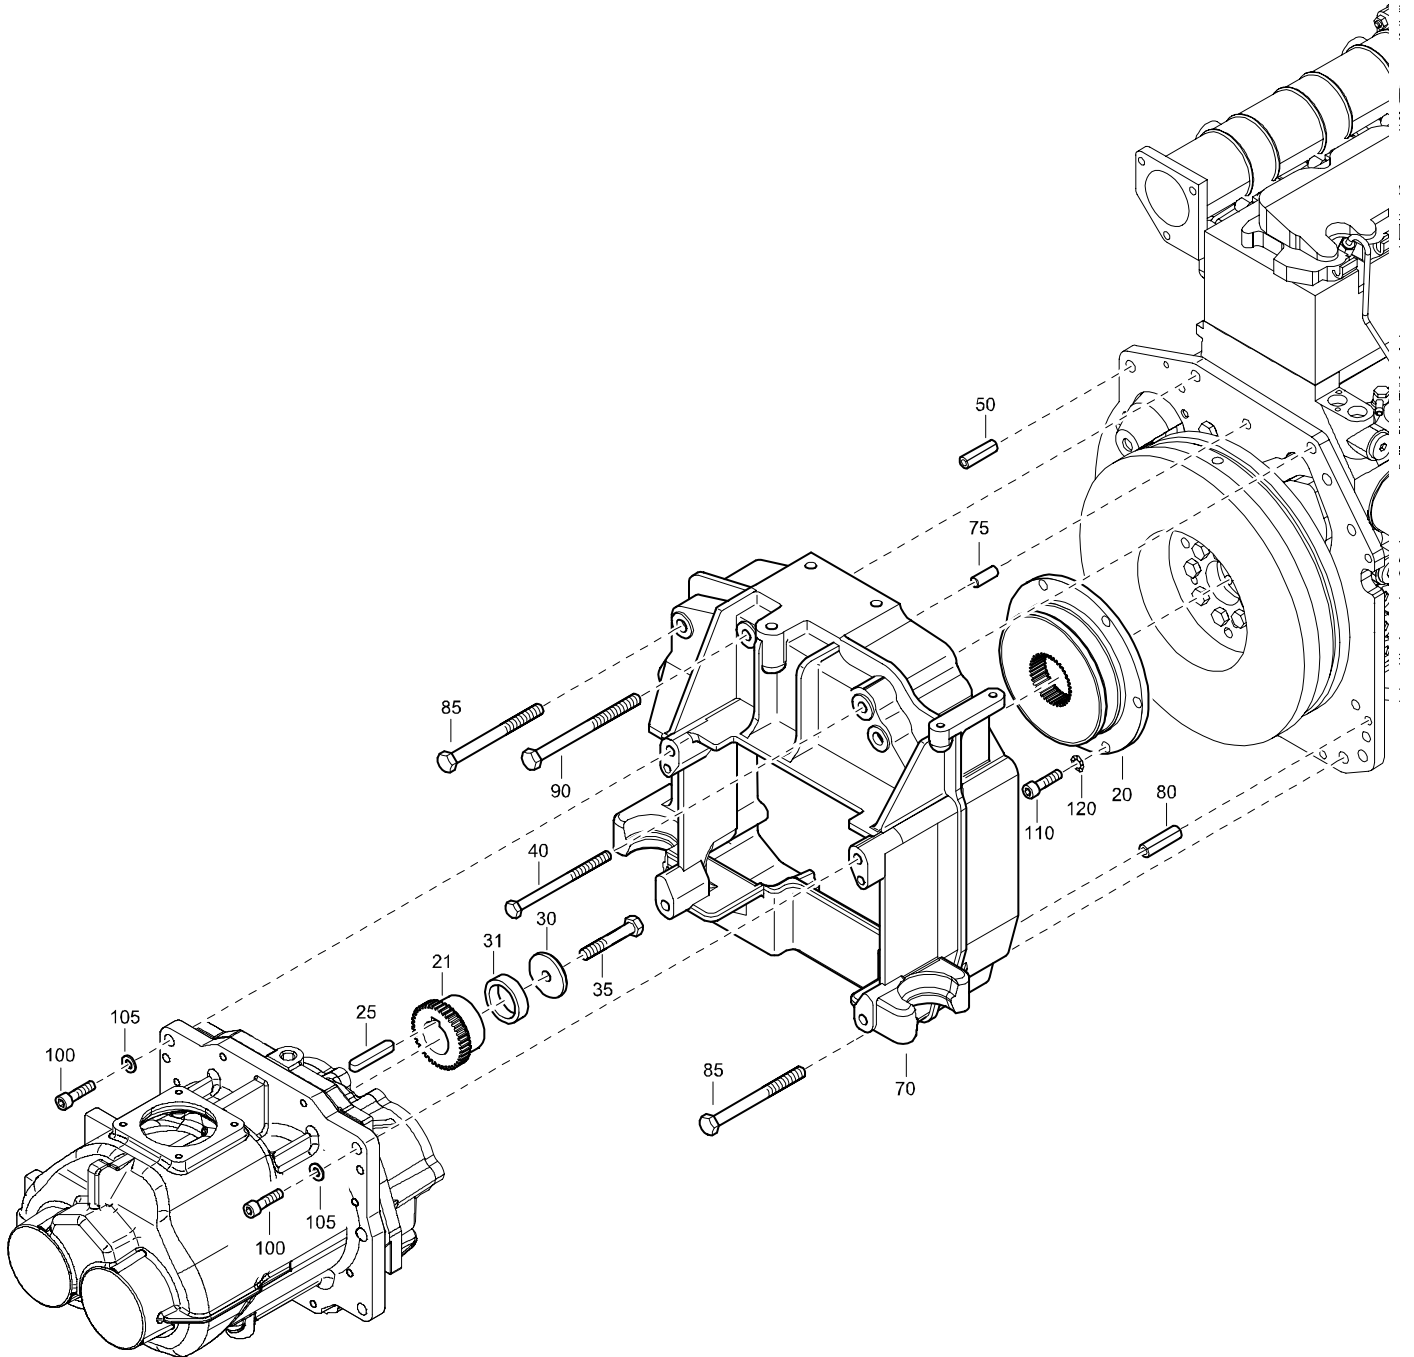


STANDARD

COUPLING

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 0761 00	COUPLING (FEMALE)	1				
21	1604 0774 00	COUPLING (MALE)	1				
25	0337 5196 00	PARALLEL KEY	1				
30	1615 5441 00	WASHER	1				
31	1604 0745 00	BUSH	1				
35	0147 1962 71	HEX. HEAD SCREW	1				
40	0147 1382 03	HEX. HEAD SCREW	1				
50	0108 1392 00	SPRING PIN	2				
70	1615 9398 01	HOUSING	1				
75	0102 0460 00	PARALLEL PIN	1				
80	0108 3417 00	SPRING PIN	2				
85	0147 1457 03	HEX. HEAD SCREW	4				
90	0147 1422 03	HEX. HEAD SCREW	2				
100	0211 1404 00	HEX SOCK. SCREW	4				
105	0300 0274 92	PLAIN WASHER	4				
110	0211 1325 03	HEX SOCK. SCREW	6				
120	0333 3227 00	LOCK WASHER	6				

STANDARD

 REGULATING SYSTEM

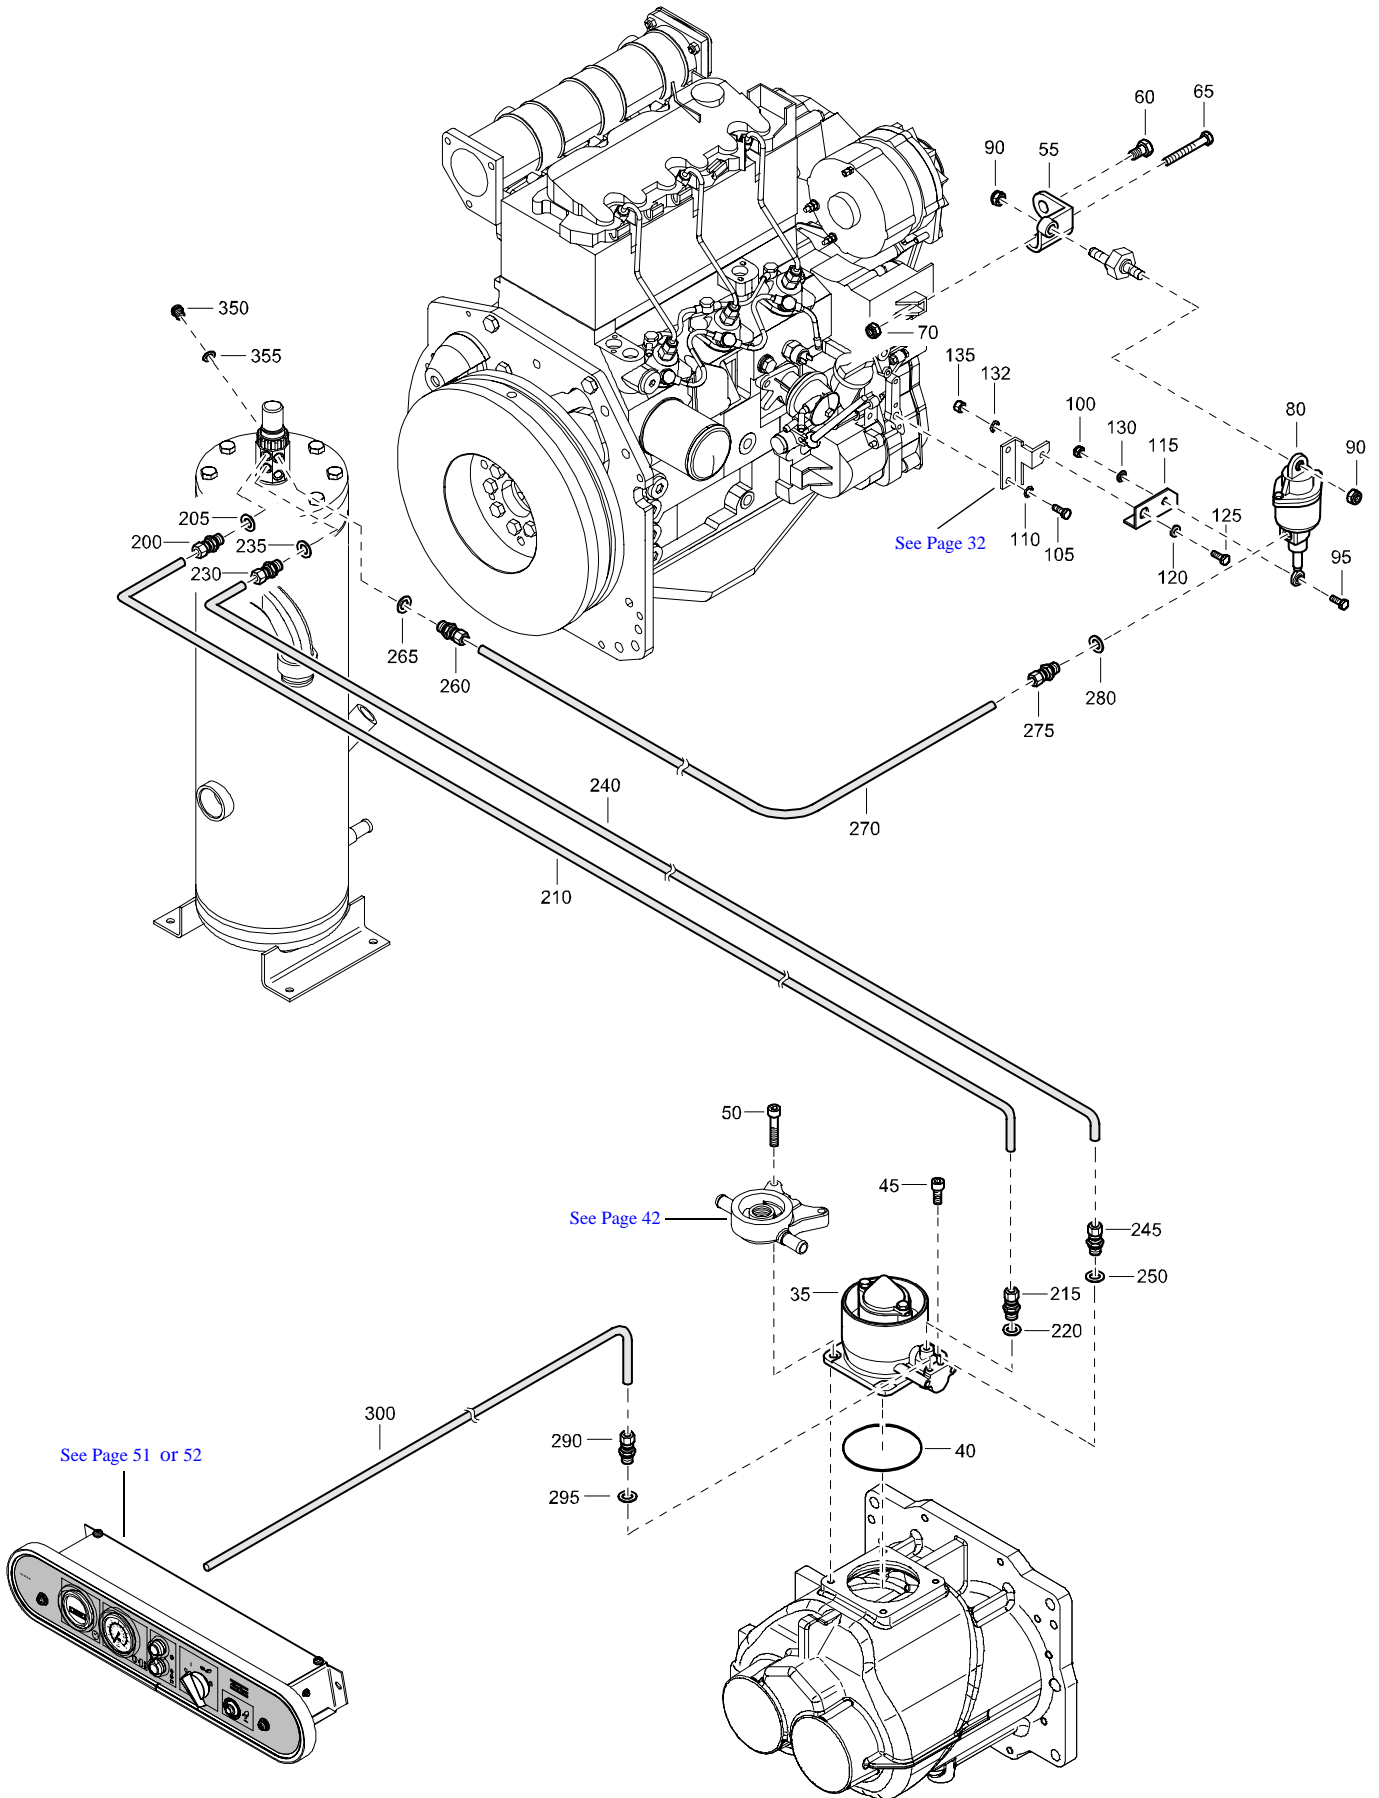


STANDARD

REGULATING SYSTEM

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
35	1615 7667 82	UNLOADING VALVE ASSY (For details see page 88)	1				
40	-	O-RING (Part of service kit, see page 26)	1				
45	0211 1323 03	HEX SOCK. SCREW	2				
50	0211 1328 03	HEX SOCK. SCREW	2				
55	1615 8381 01	BRACKET	1				
60	0147 1359 03	HEX. HEAD SCREW	1				
65	0147 1332 03	HEX. HEAD SCREW	1				
70	0291 1110 00	LOCKNUT	1				
80	1615 7676 82	ACTUATING UNIT (For details see page 89)	1				
90	0291 1110 00	LOCKNUT	2				
95	0147 1246 03	HEX. HEAD SCREW	1				
100	0291 1108 00	LOCKNUT	1				
105	0147 1246 03	HEX. HEAD SCREW	2				
110	0333 3220 00	LOCK WASHER	2				
115	1615 9113 02	BRACKET	1				
120	1202 9539 00	BUSH	1				
125	0147 1246 03	HEX. HEAD SCREW	1				
130	0301 2321 00	PLAIN WASHER	1				
132	0333 3220 00	LOCK WASHER	1				
135	0266 2108 00	HEXAGON NUT	1				
200	0582 1200 06	STRAIGHT PIPE COUPLING	1				
205	0653 1043 00	FLAT GASKET	1				
210	0070 6002 05	PLASTIC TUBE	AR				
215	0582 1200 06	STRAIGHT PIPE COUPLING	1				
220	0653 1043 00	FLAT GASKET	1				
230	0582 1200 05	STRAIGHT PIPE COUPLING	1				
235	0653 1043 00	FLAT GASKET	1				
240	0070 6002 04	PLASTIC TUBE	AR				
245	0582 1200 05	STRAIGHT PIPE COUPLING	1				
250	0653 1043 00	FLAT GASKET	1				
260	0582 1200 05	STRAIGHT PIPE COUPLING	1				
265	0653 1043 00	FLAT GASKET	1				
270	0070 6002 04	PLASTIC TUBE	AR				
275	0582 1200 05	STRAIGHT PIPE COUPLING	1				
280	0653 1043 00	FLAT GASKET	1				
290	0582 1200 05	STRAIGHT PIPE COUPLING	1				
295	0653 1043 00	FLAT GASKET	1				
300	0070 6002 04	PLASTIC TUBE	AR				
350	0686 4201 03	HEXAGON PLUG	1				
355	0653 1046 00	FLAT GASKET	1				

STANDARD

 COOLER AND FAN

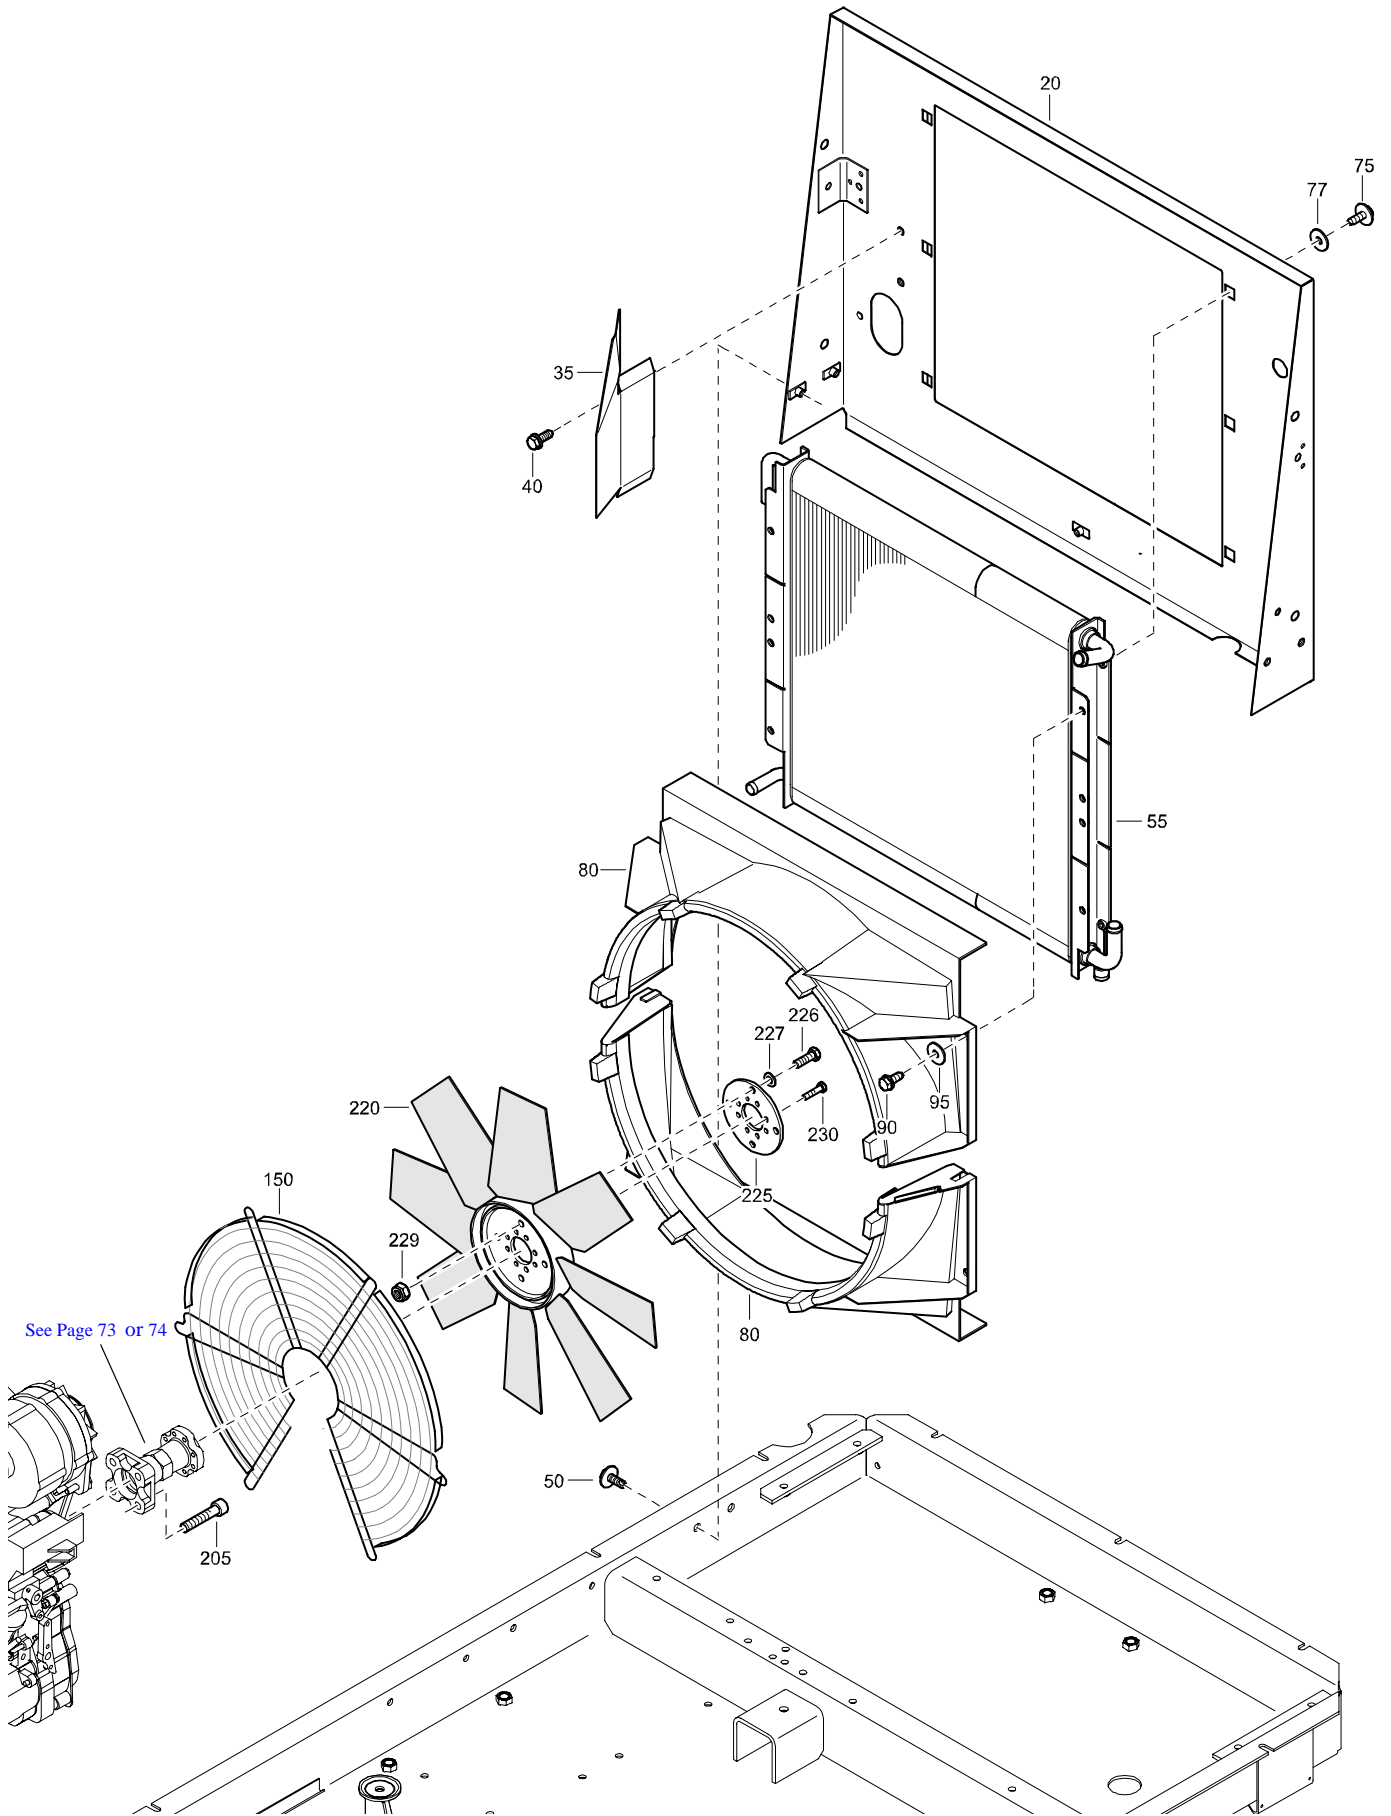


STANDARD

COOLER AND FAN

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 4079 33	COOLER PLATE	1				
35	1604 5780 00	PROTECTION	1				
40	1619 2766 00	HEX. HEAD SCREW	2				
50	1604 3423 00	SCRAPER BOLT	4				
55	1604 3969 02	COOLER	1				
75	1615 5664 00	HEX. HEAD SCREW	4				
77	0300 8019 00	PLAIN WASHER	4				
80	1615 7749 02	FAN COWL	2				
90	1619 2766 00	HEX. HEAD SCREW	8				
95	0300 8019 00	PLAIN WASHER	8				
150	1604 4097 00	GRATING	1				
205	0211 1367 00	HEX SOCK. SCREW	4				
220	1604 5854 00	FAN	1				
225	1615 9433 00	CLAMPING RING	1				
226	0147 1325 03	HEX. HEAD SCREW	4				
227	0301 2335 00	PLAIN WASHER	4				
229	0291 1110 00	LOCKNUT	4				
230	0147 1964 02	HEX. HEAD SCREW	8				

STANDARD

 OIL SYSTEM

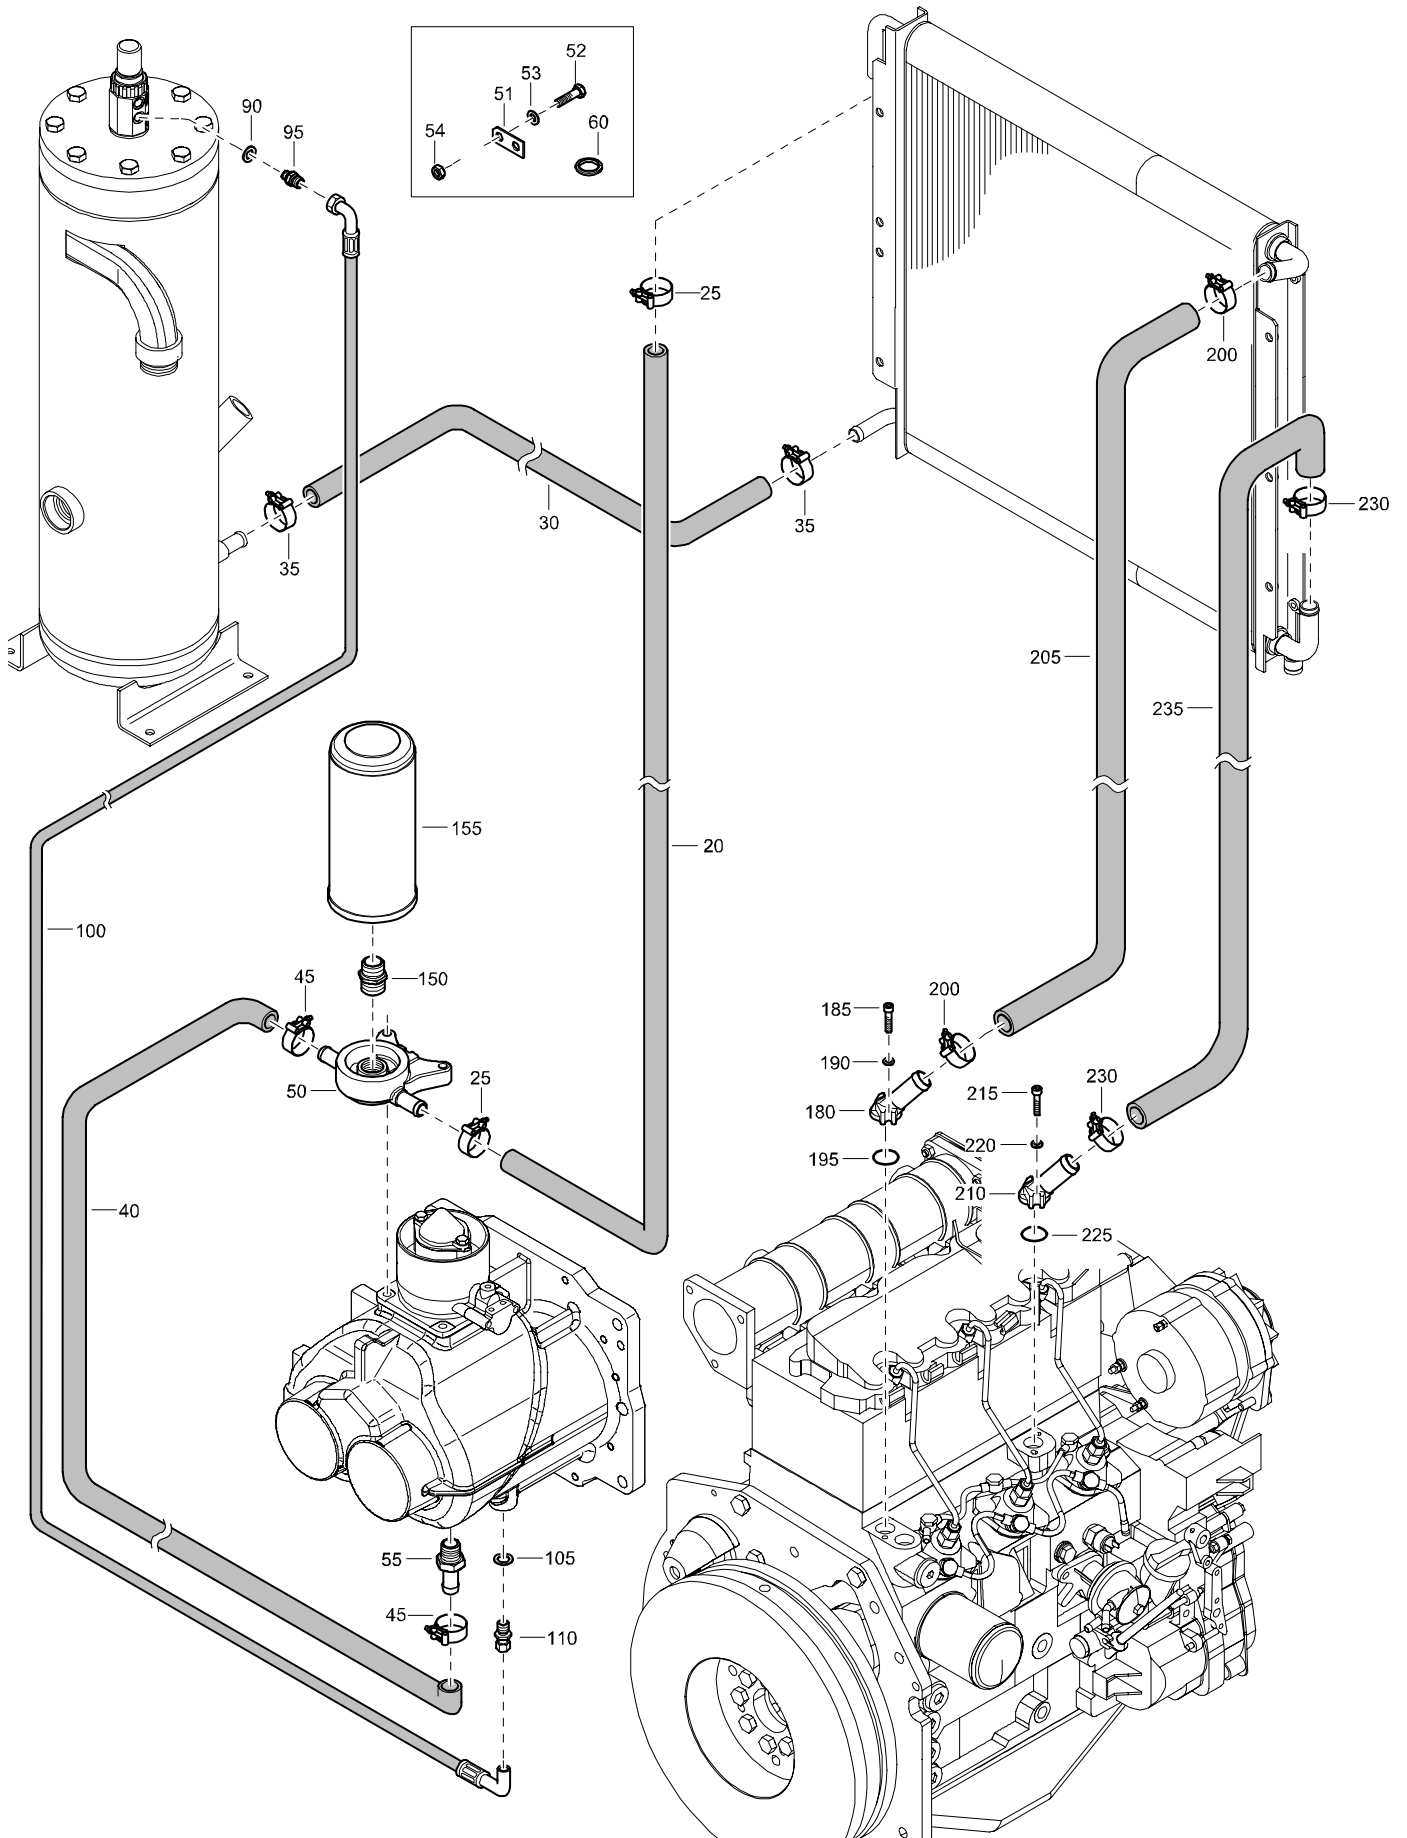


STANDARD

OIL SYSTEM

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	0072 8403 16	HOSE	AR				
25	1202 8663 06	HOSE CLIP	2				
30	0072 8403 16	HOSE	AR				
35	1202 8663 06	HOSE CLIP	2				
40	0072 8403 16	HOSE	AR				
45	1202 8663 06	HOSE CLIP	2				
50	-	FILTER HOUSING (Not available separately)	1				
51	1604 5966 00	PLATE	1				
52	0147 1326 03	HEX. HEAD SCREW	1				
53	0301 2335 00	PLAIN WASHER	1				
54	0266 2110 00	HEXAGON NUT	1				
55	1202 8660 00	NIPPLE	1				
60	0661 1000 27	SEALING WASHER	1				
90	0653 1046 00	FLAT GASKET	1				
95	1079 5840 01	HEXAGON NIPPLE	1				
100	0575 0461 34	HOSE ASSEMBLY	1				
105	0653 1062 00	FLAT GASKET	1				
110	0581 0000 52	STRAIGHT PIPE COUPLING	1				
150	1619 3770 00	NIPPLE	1				
155	1613 6105 00	OIL FILTER	1				
180	1604 4035 00	CONNECTION	1				
185	0211 1249 03	HEX SOCK. SCREW	2				
190	0301 2321 00	PLAIN WASHER	2				
195	1604 3321 00	O-RING	1				
200	1202 8663 02	HOSE CLIP	2				
205	0075 4025 39	HOSE	AR				
210	1604 4035 00	CONNECTION	1				
215	0211 1249 03	HEX SOCK. SCREW	2				
220	0301 2321 00	PLAIN WASHER	2				
225	1604 3321 00	O-RING	1				
230	1202 8663 02	HOSE CLIP	2				
235	0075 4025 39	HOSE	AR				

STANDARD

 AIR INLET

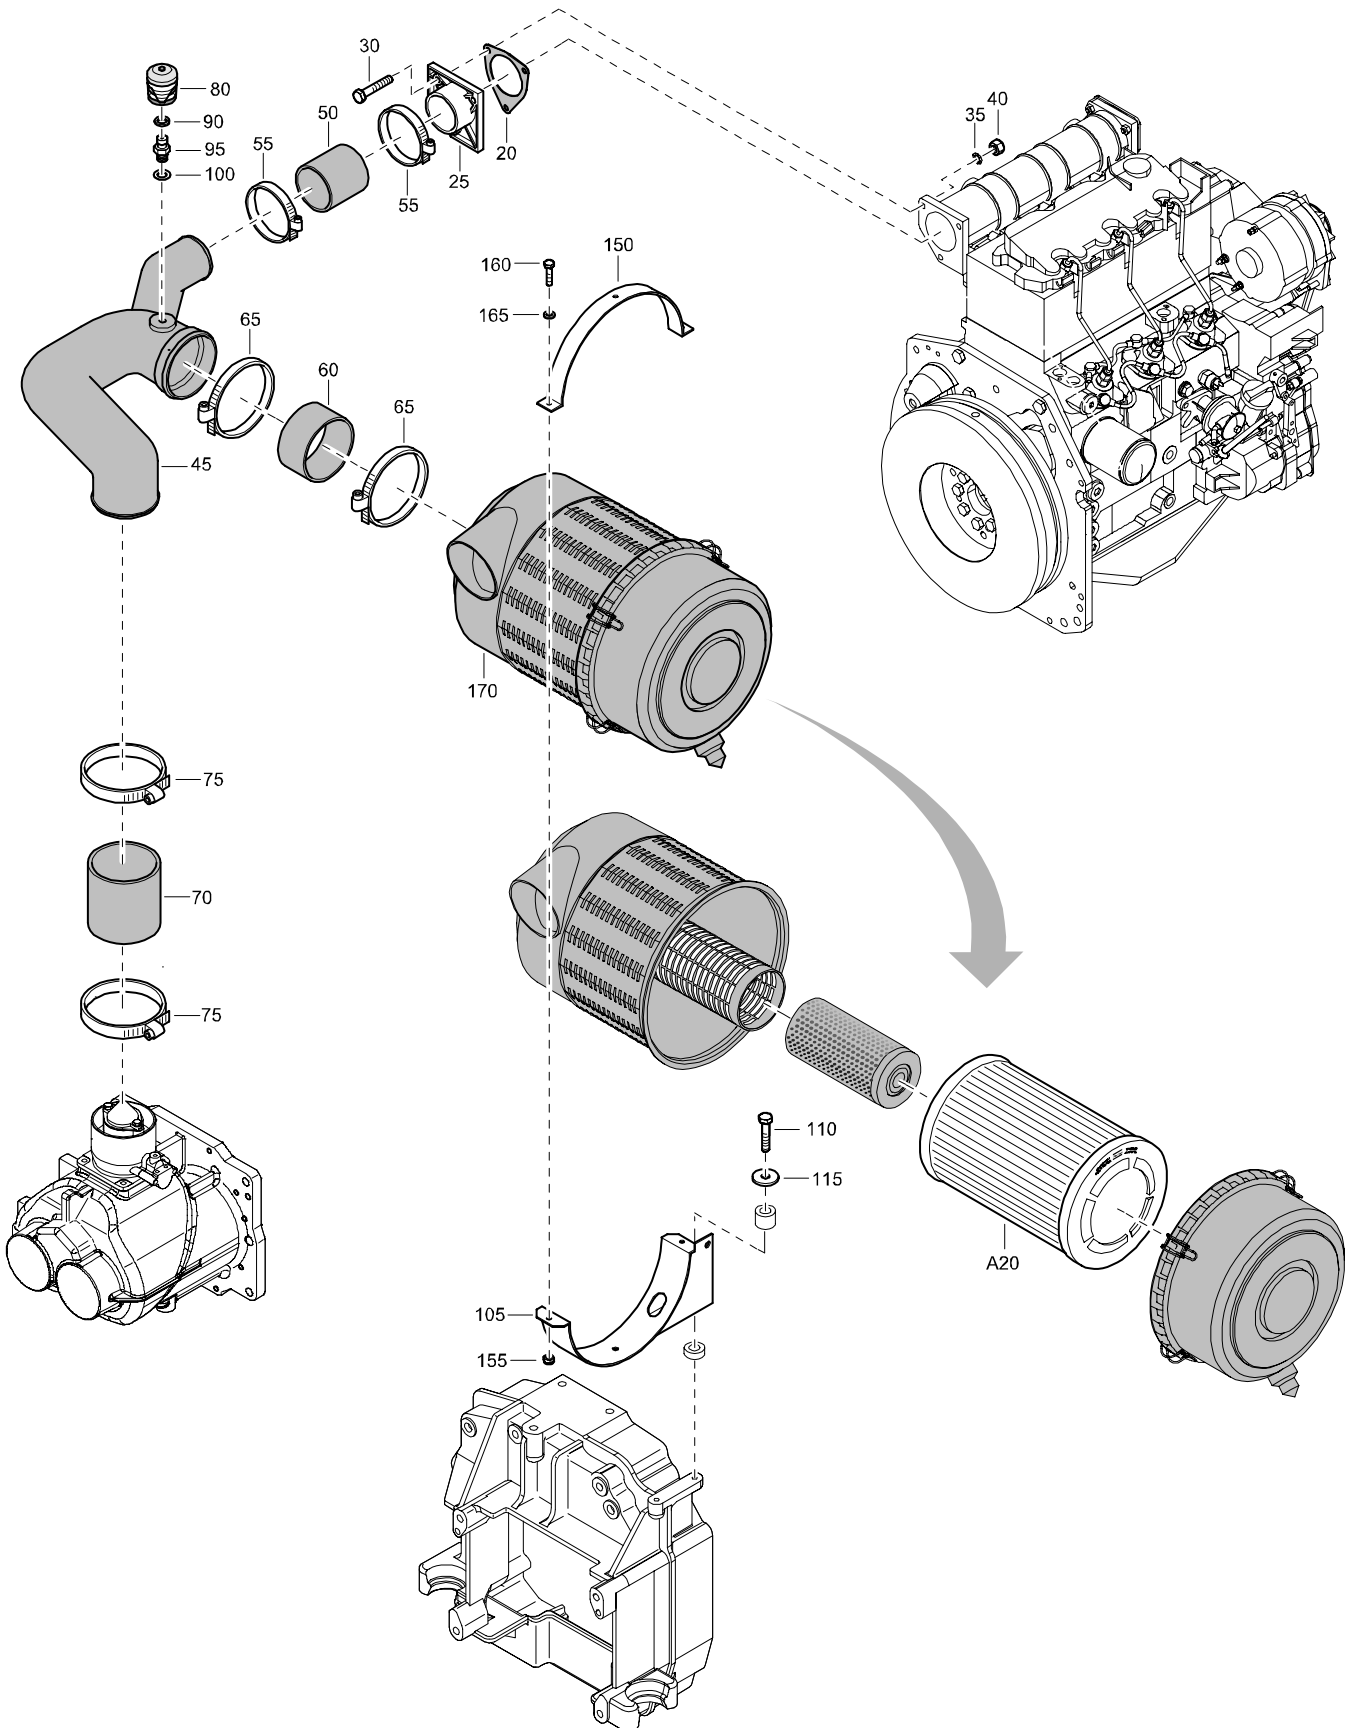


STANDARD

AIR INLET

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1202 9910 00	GASKET	1				
25	1613 5481 01	ADAPTOR	1				
30	0147 1328 03	HEX. HEAD SCREW	3				
35	0333 3227 00	LOCK WASHER	3				
40	0266 2110 00	HEXAGON NUT	3				
45	1615 9396 00	AIRDUCT	1				
50	1615 7704 00	HOSE	1				
55	0347 6100 04	HOSE CLAMP	2				
60	1615 9438 00	HOSE	1				
65	0347 6115 00	HOSE CLAMP	2				
70	1615 7706 00	HOSE	1				
75	0347 6115 00	HOSE CLAMP	2				
80	1613 7912 01	INDICATOR	1				
90	0661 1014 00	SEALING WASHER	1				
95	1612 2152 00	NIPPLE	1				
100	0653 1046 00	FLAT GASKET	1				
105	1615 9441 00	BRACKET	1				
110	0147 1323 03	HEX. HEAD SCREW	2				
115	0301 2335 00	PLAIN WASHER	2				
150	1615 9439 00	CLAMP	1				
155	0291 1108 00	LOCKNUT	2				
160	0147 1249 03	HEX. HEAD SCREW	2				
165	0301 2321 00	PLAIN WASHER	2				
170	1615 9388 01	AIRFILTER	1				
•A20	1613 8004 00	AIR FILTER ELEMENT	1				

STANDARD

 BODYWORK AND MOUNTS FOR STEEL CANOPY

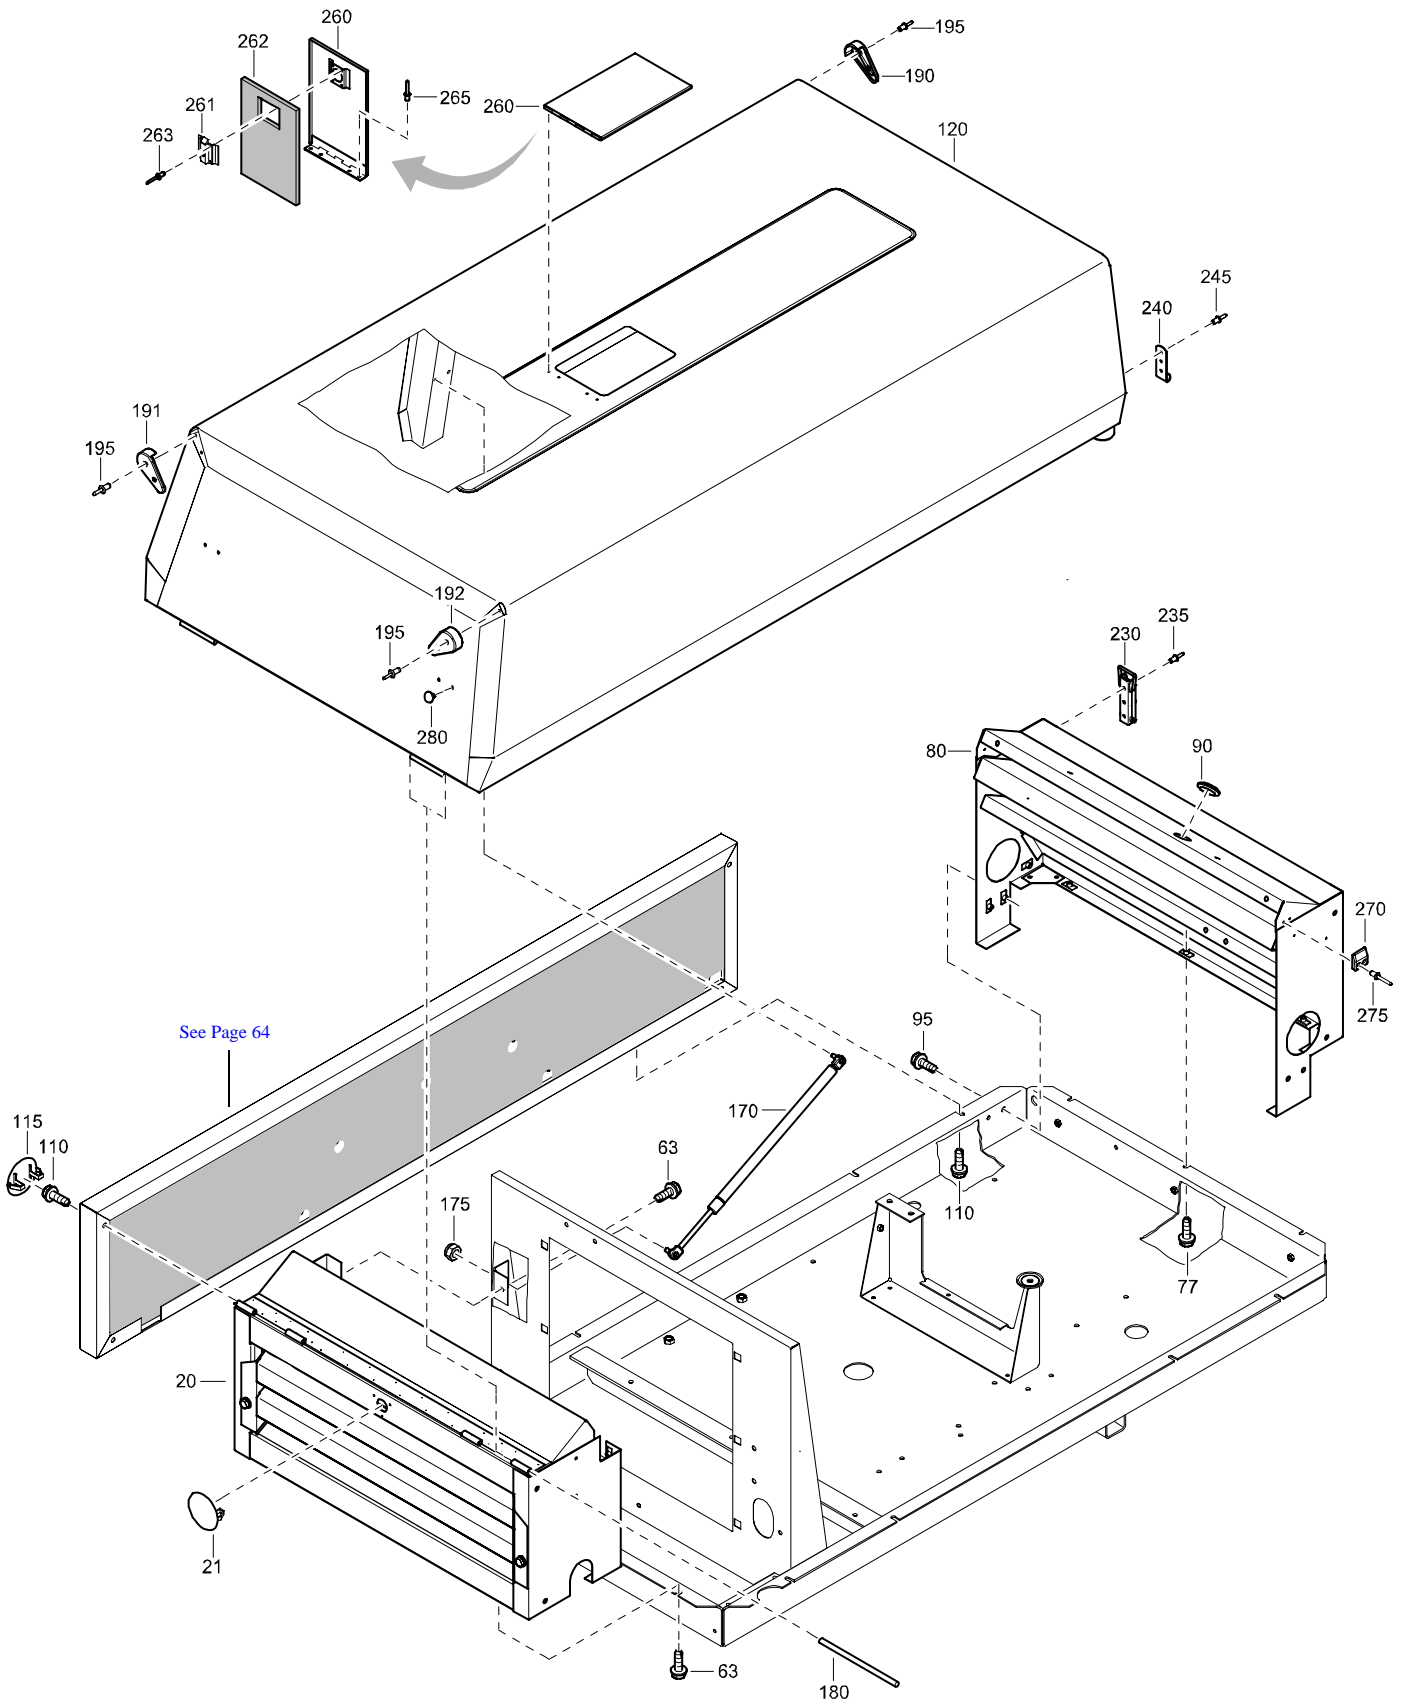


STANDARD

BODYWORK AND MOUNTS FOR STEEL CANOPY

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 4078 85	BAFFLE (For details see page 81)	1				
21	1604 3858 00	PLUG	1				
63	1615 5664 00	HEX. HEAD SCREW	7				
77	1615 5664 00	HEX. HEAD SCREW	3				
80	1604 4066 83	REAR BAFFLE ASSY (For details see page 80)	1				
90	1088 0801 42	GROMMET	1				
95	1604 3423 00	SCRAPER BOLT	4				
110	1615 5664 00	HEX. HEAD SCREW	8				
115	1604 3858 00	PLUG	8				
120	1604 4025 81	HOOD ASSY (For details see page 79)	1				
170	1604 6457 00	GASSPRING	2				
175	0291 1108 00	LOCKNUT	2				
180	1605 0025 00	ROD	2				
190	1604 4056 00	PROTECTION	2				
191	1604 4057 00	PROTECTION	1				
192	1604 4062 00	PROTECTION	1				
195	0129 3113 00	BLIND RIVET	8				
230	1604 6686 00	LATCH	2				
235	0129 3174 01	BLIND RIVET	6				
240	1604 6733 00	CATCH	2				
245	0129 3174 01	BLIND RIVET	6				
260	1604 3846 01	DOOR	1				
261	1613 6650 01	LOCK	1				
262	1604 6181 00	SEAL	1				
263	0129 3172 01	BLIND RIVET	4				
265	0129 3172 01	BLIND RIVET	4				
270	1626 0531 00	POSITIONING GUIDE HOOD	2				
275	0129 3174 01	BLIND RIVET	4				
280	0686 9252 86	PLUG	4				

STANDARD

 BODYWORK FOR HARDHAT

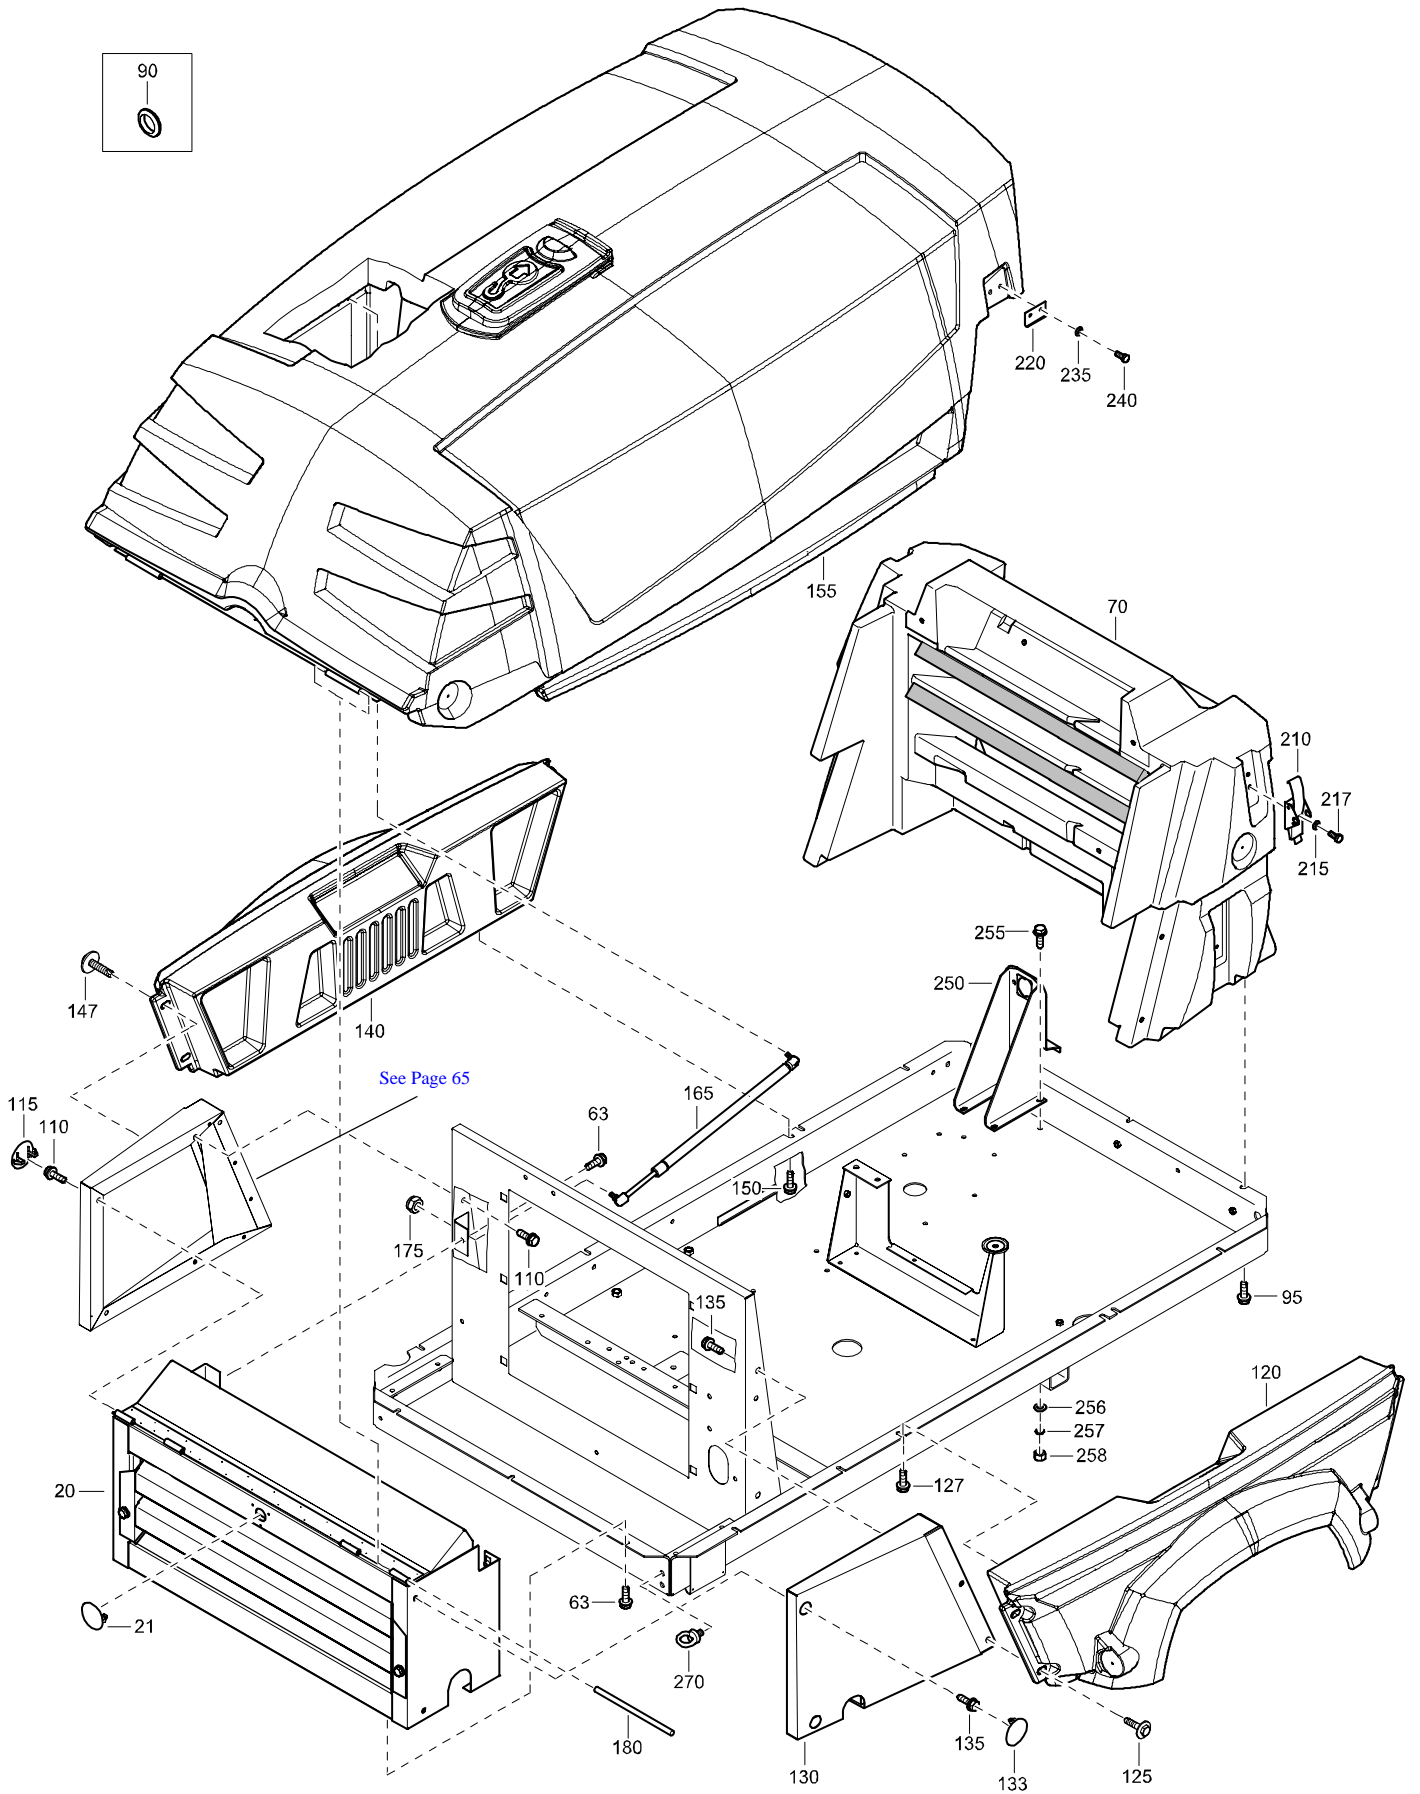


STANDARD

BODYWORK FOR HARDHAT

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 4078 85	BAFFLE (For details see page 81)	1				
21	1604 3858 00	PLUG	1				
63	1615 5664 00	HEX. HEAD SCREW	7				
70	1604 6723 81	BAFFLE ASSY (For details see page 87)	1				
90	1088 0801 42	GROMMET	1				
95	1615 5664 00	HEX. HEAD SCREW	5				
110	1615 5664 00	HEX. HEAD SCREW	5				
115	1604 3858 00	PLUG	2				
120	1604 5963 01	SIDE PANEL	1				
125	1604 6466 00	BOLT	4				
127	1615 5664 00	HEX. HEAD SCREW	2				
130	1604 7179 02	PANEL	1				
133	1604 3858 00	PLUG	2				
135	1615 5664 00	HEX. HEAD SCREW	5				
140	1604 5963 01	SIDE PANEL	1				
147	1604 6466 00	BOLT	4				
150	1615 5664 00	HEX. HEAD SCREW	2				
155	1604 6722 80	HOOD ASSY (For details see page 86)	1				
165	1604 6457 00	GASSPRING	2				
175	0291 1108 00	LOCKNUT	2				
180	1605 0025 00	ROD	2				
210	1604 6276 00	LATCH	2				
215	0301 2321 00	PLAIN WASHER	4				
217	0147 1244 03	HEX. HEAD SCREW	4				
220	1604 6275 00	CATCH	2				
235	0301 2321 00	PLAIN WASHER	4				
240	0147 1244 03	HEX. HEAD SCREW	4				
250	1604 6114 02	BRACKET	1				
255	1615 5664 00	HEX. HEAD SCREW	4				
256	0301 2335 00	PLAIN WASHER	4				
257	0333 3227 00	LOCK WASHER	4				
258	0266 2110 00	HEXAGON NUT	4				
270	0371 1100 20	LIFTING EYE	2				

STANDARD

 
AIR OUTLET

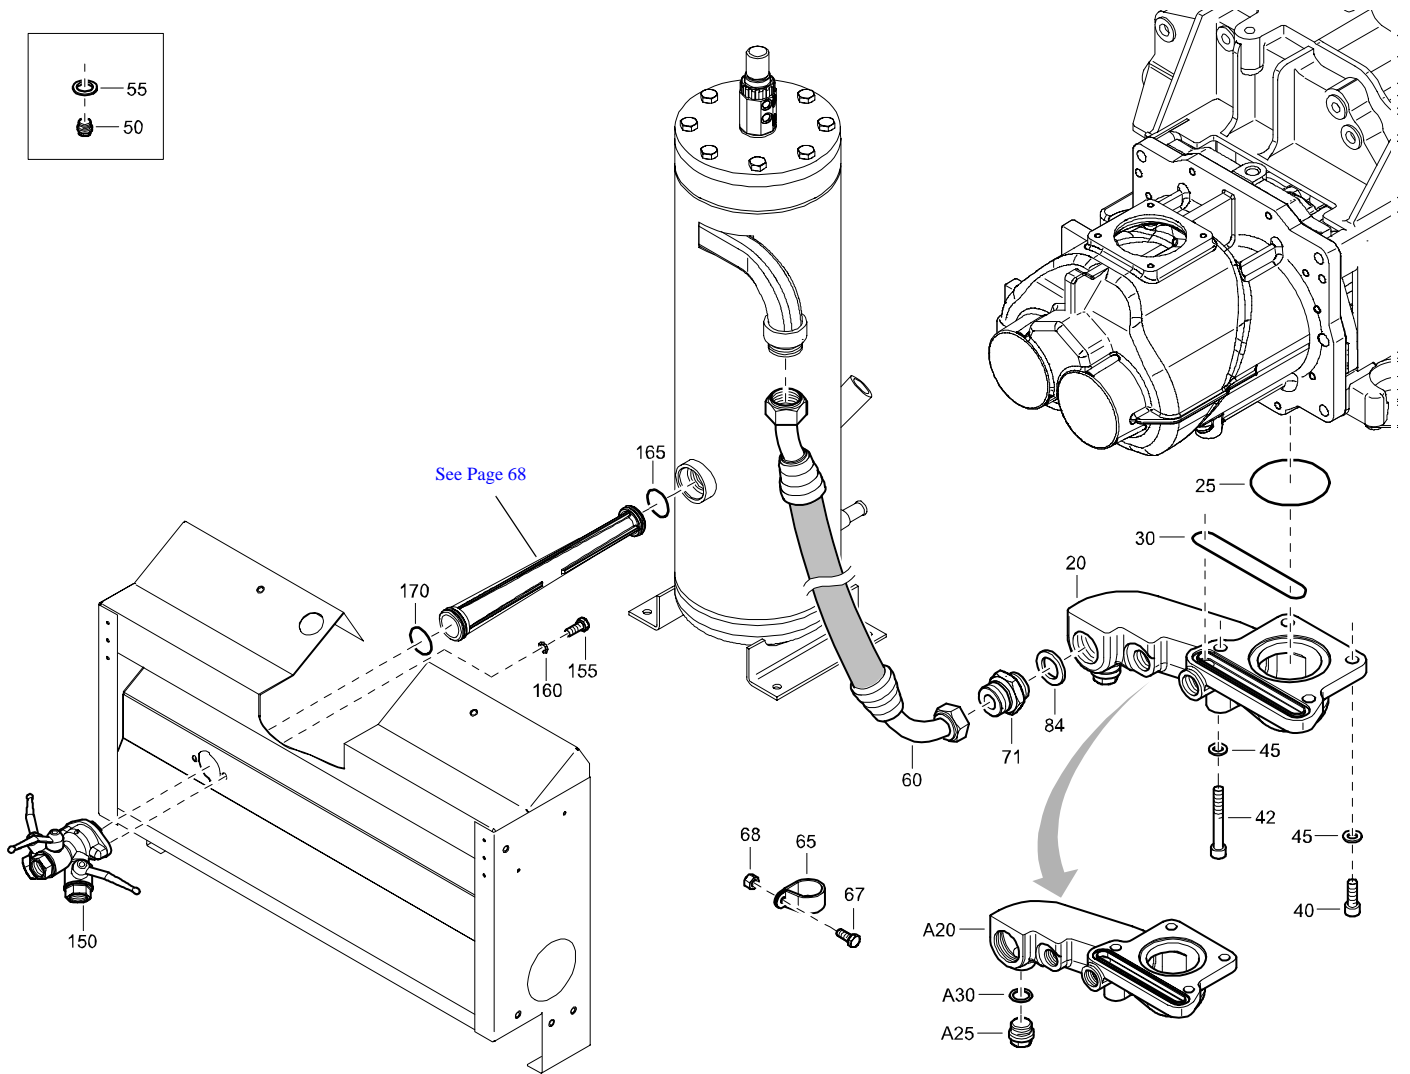

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 3980 81	MANIFOLD ASSY	1	160	0333 3227 00	LOCK WASHER	2
•A20	1604 3980 02	MANIFOLD	1	165	0663 3131 00	O-RING	1
•A25	0686 4230 18	HEXAGON PLUG	1	170	0663 3130 00	O-RING	1
•A30	0653 1115 00	FLAT GASKET	1				
25	0663 7137 00	O-RING	1				
30	0663 7141 00	O-RING	1				
40	0211 1363 00	HEX SOCK. SCREW	3				
42	0211 1373 00	CAP SCREW	1				
45	0301 2344 00	PLAIN WASHER	4				
50	0686 3716 01	HEXAGON PLUG	1				
55	0661 1020 00	SEALING WASHER	1				
60	1604 5742 30	HOSE	1				
65	0346 1000 07	PIPE CLAMP	1				
67	0147 1322 03	HEX. HEAD SCREW	1				
68	0266 2110 00	HEXAGON NUT	1				
71	0571 0035 74	JOINT NIPPLE	1				
84	9125 6295 00	SEAL WASHER	1				
150	1615 9474 81	BALL VALVE ASSY	1				
		(For details see page 92)					
155	0211 1323 00	HEX SOCK. SCREW	2				

STANDARD

 
SAFETY AND CONTROL FOR STEEL CANOPY

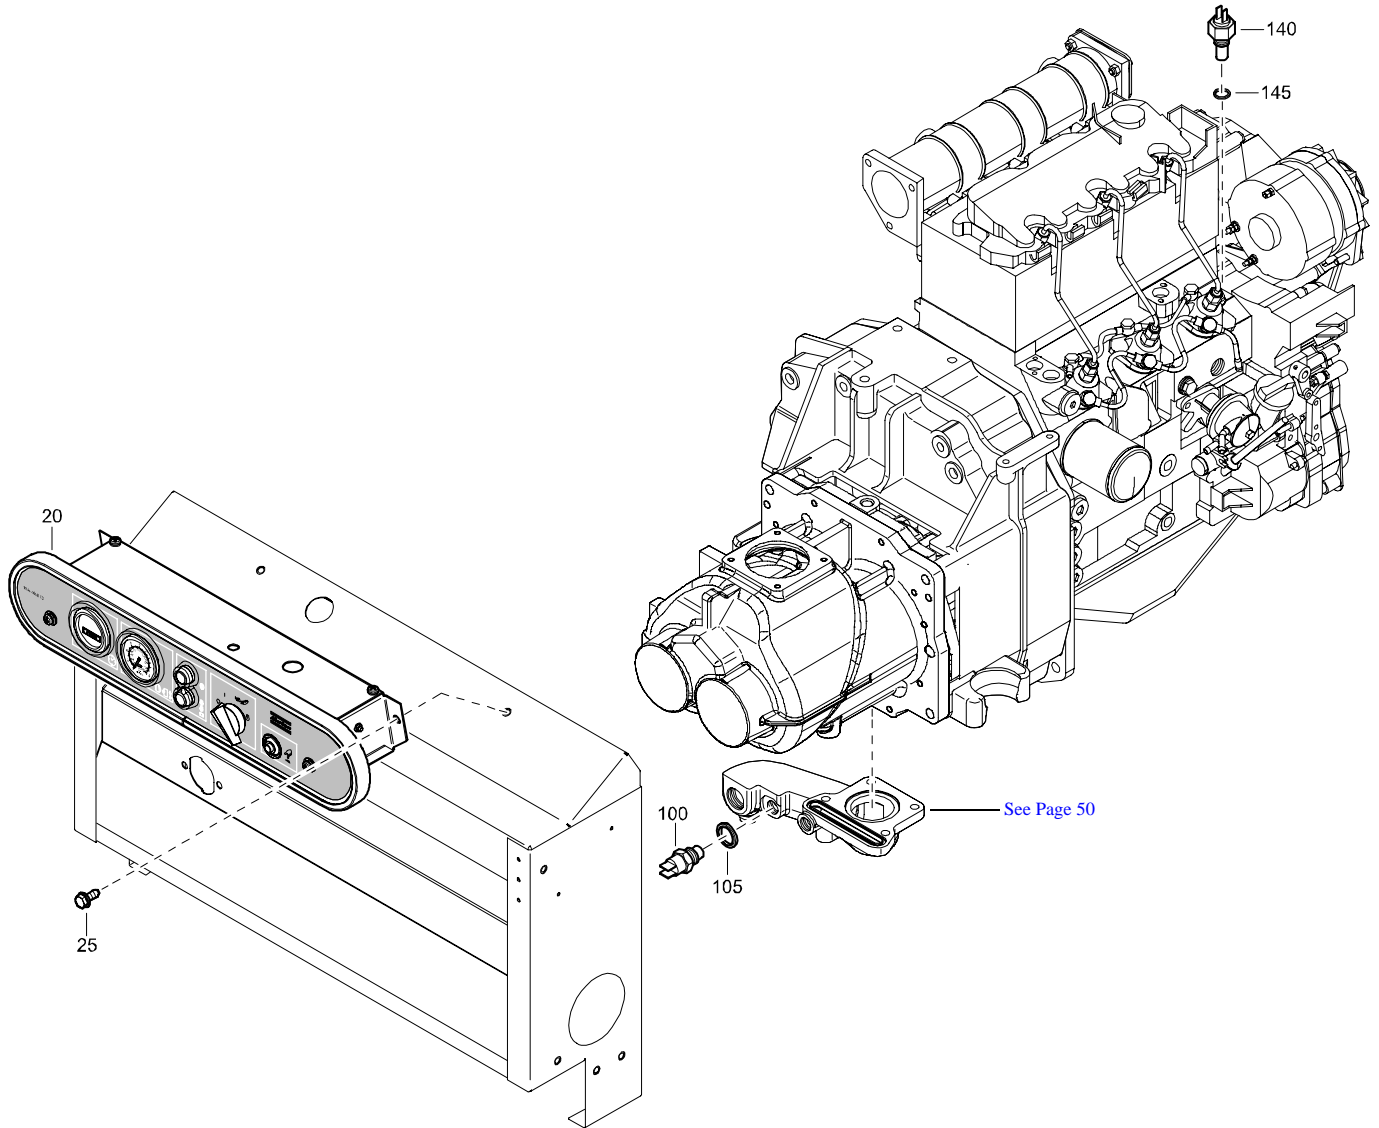

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 4014 83	CONTROL PANEL ASSY (For details see page 78)	1				
25	1619 2766 00	HEX. HEAD SCREW	2				
100	1615 7831 02	TEMPERATURE SWITCH	1				
105	0661 1033 00	SEALING WASHER	1				
140	1089 0637 12	TEMPERATURE SWITCH	1				
145	0653 1070 00	FLAT GASKET	2				

STANDARD

 
SAFETY AND CONTROL FOR HARDHAT

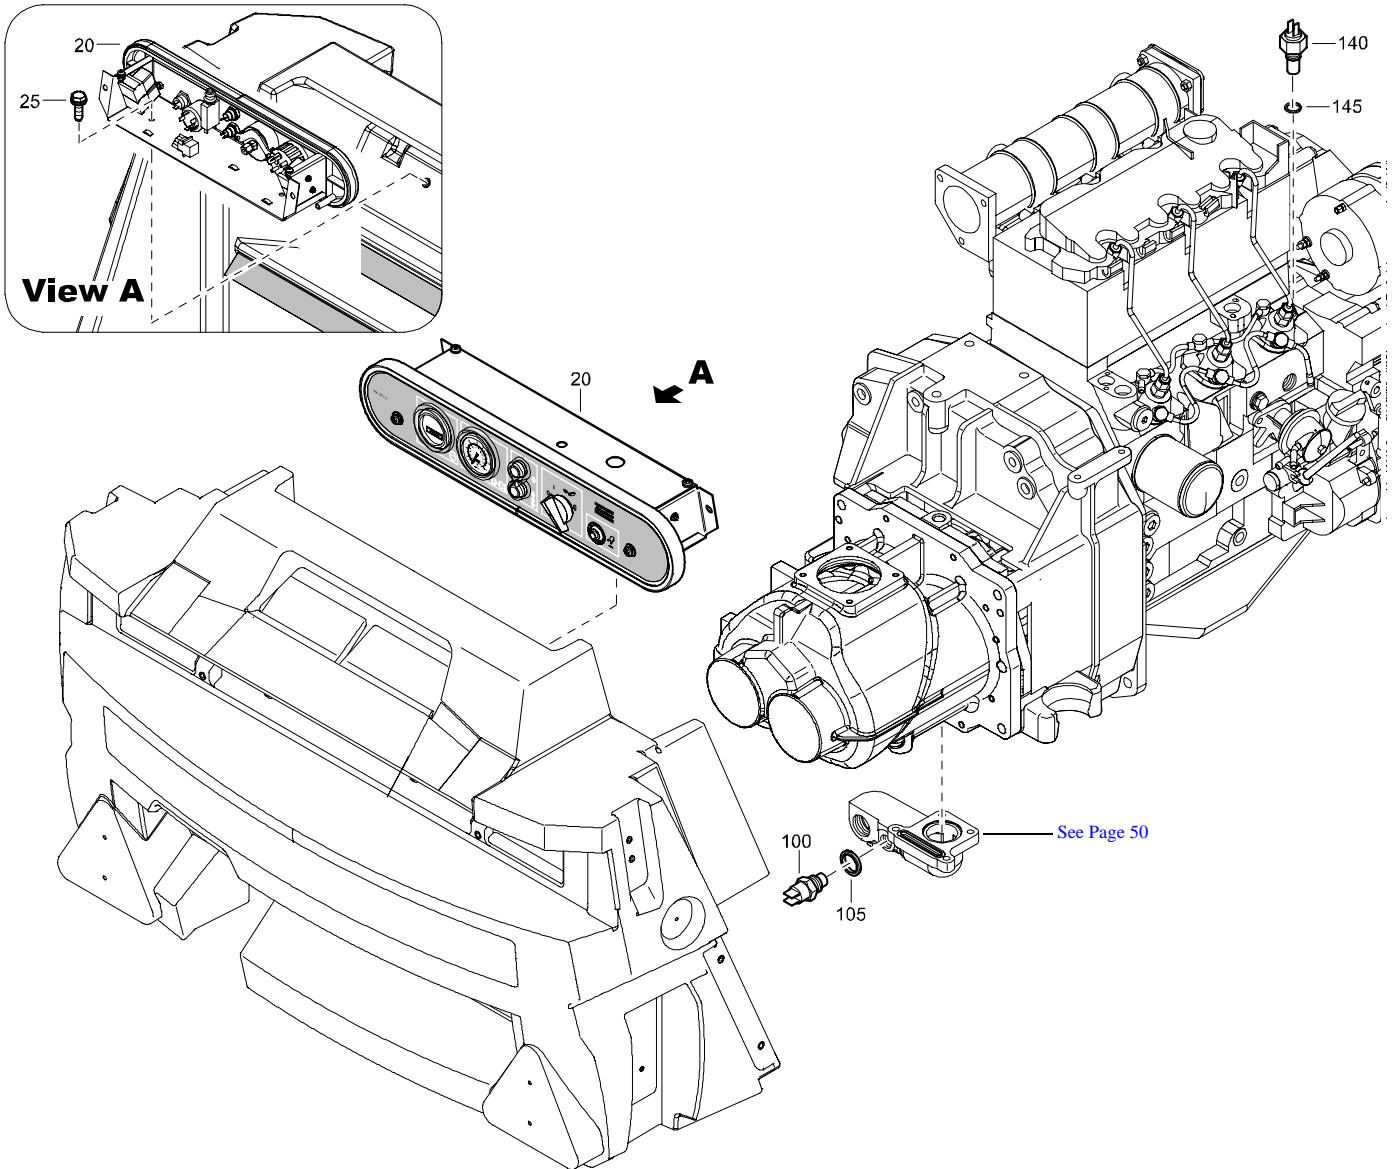

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 6261 82	PANEL (For details see page 85)	1				
25	1619 2766 00	HEX. HEAD SCREW	2				
100	1615 7831 02	TEMPERATURE SWITCH	1				
105	0661 1000 27	SEALING WASHER	1				
140	1089 0637 12	TEMPERATURE SWITCH	1				
145	0653 1070 00	FLAT GASKET	2				

STANDARD

 
ELECTRICAL SYSTEM

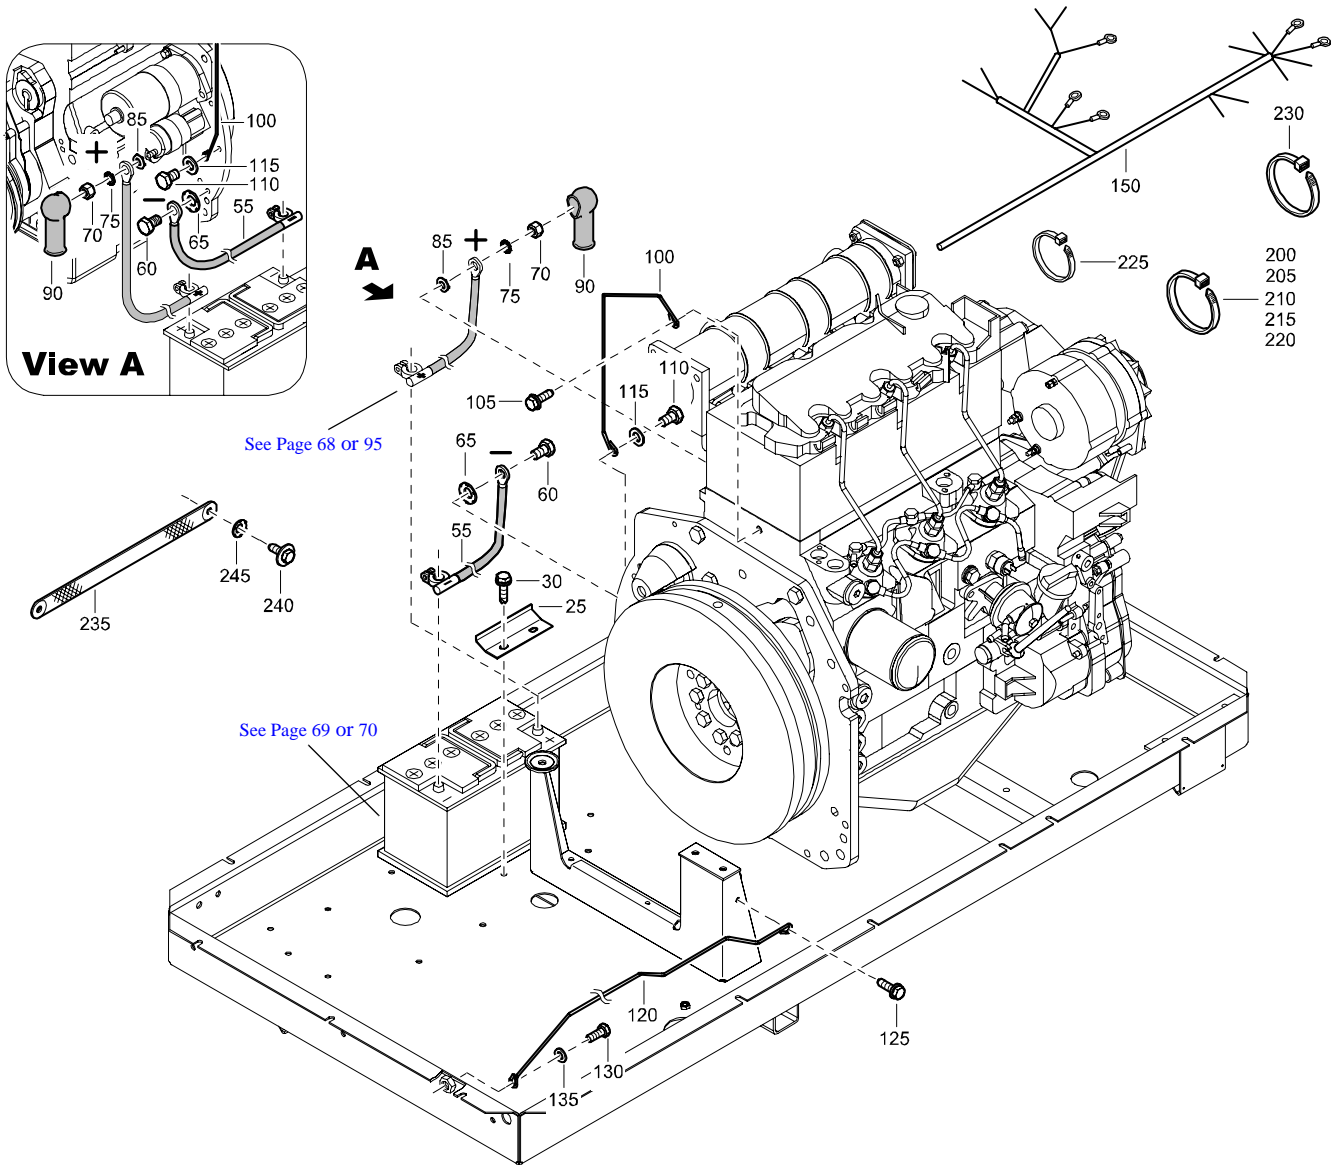


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
25	1202 9011 00	CLAMP	1	210	1088 1301 02	CABLE STRIP	3
30	1619 5337 01	HEX. HEAD SCREW	2	215	1088 1301 02	CABLE STRIP	3
55	1615 7726 01	BATTERY CABLE	1	220	1088 1301 02	CABLE STRIP	2
60	0147 1359 03	HEX. HEAD SCREW	1	225	1088 1301 04	CABLE STRIP	2
65	1088 0019 02	CONTACT WASHER	1	230	1088 1301 05	CABLE STRIP	4
70	0266 2110 00	HEXAGON NUT	1	235	1089 9562 05	EARTHING STRAP	1
75	0333 3227 00	LOCK WASHER	1	240	1615 5664 00	HEX. HEAD SCREW	1
85	1088 0019 02	CONTACT WASHER	1	245	1088 0019 02	CONTACT WASHER	1
90	1619 3729 00	PROTECT.CAP	AR				
100	1604 5316 00	GUIDE	1				
105	1615 5664 00	HEX. HEAD SCREW	1				
110	0147 1359 03	HEX. HEAD SCREW	1				
115	0301 2344 00	PLAIN WASHER	1				
120	1604 4058 01	GUIDE	1				
125	1615 5664 00	HEX. HEAD SCREW	1				
130	0147 1323 03	HEX. HEAD SCREW	1				
135	0301 2335 00	PLAIN WASHER	1				
150	1604 4067 01	WIRE HARNESS	1				
200	1088 1301 02	CABLE STRIP	4				
205	1088 1301 02	CABLE STRIP	4				

STANDARD

 
MARKINGS - L/S FOR STEEL CANOPY

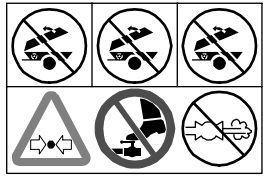


80

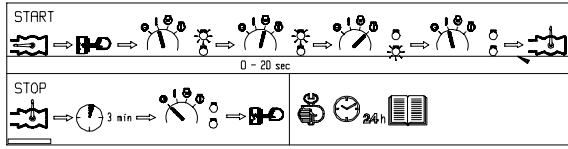 

45

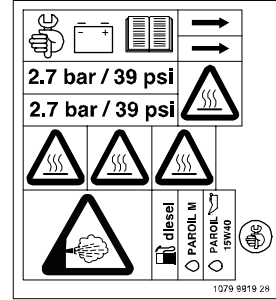 

1079 9919 28

 


20

Atlas Copco



110

 Atlas Copco





105


25

Atlas Copco

  20

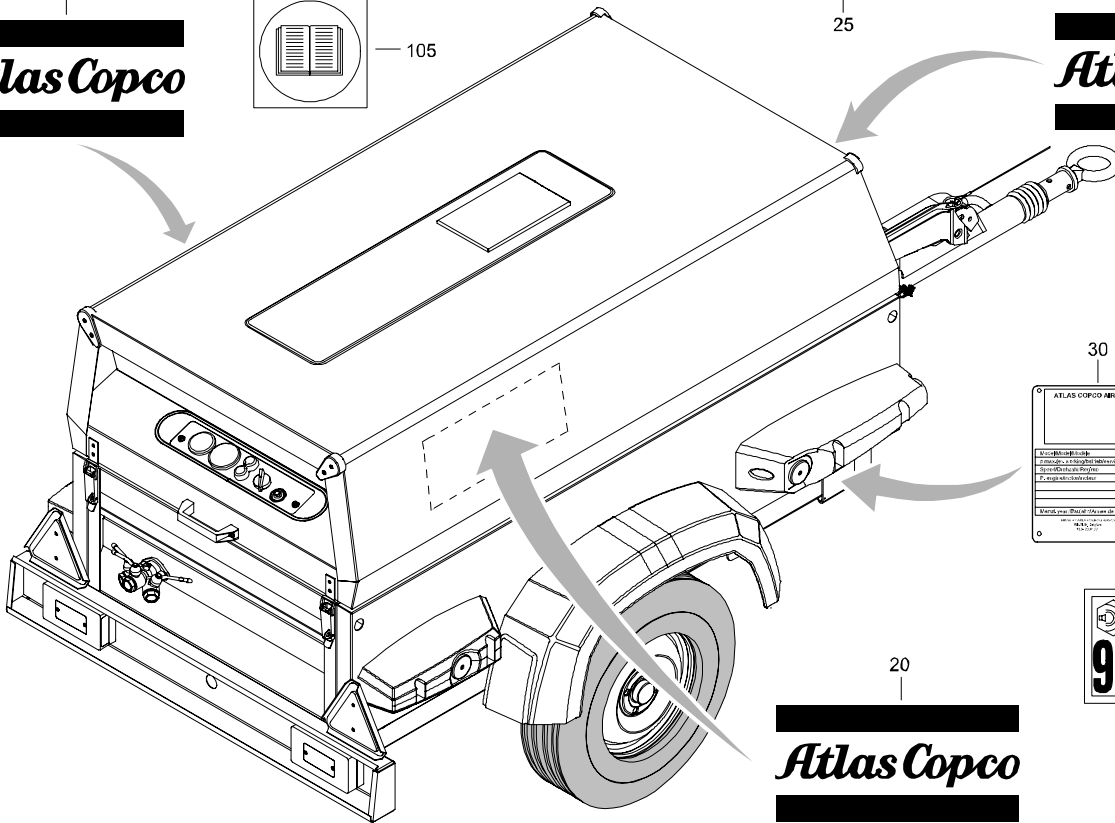

70

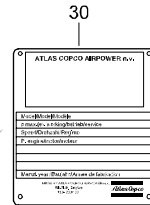 

30



35



170

Atlas Copco

www.atlascopco.com — 150

XAS 97 — 50



42



180

160

Atlas Copco		XAS 47-57-67-77-97 Dd, XAHS 37 Dd, XATS 67 Dd			
SERVICE PAK		Compressor Oil	PAROIL M	PAROIL S	
	XAS 47/57, XAHS 37	2912 4391 06	5 I (1,3 US gal)	1615 5947 00	1615 5950 00
	XAS , XATS 67	2912 4392 06	20 I (5 US gal)	1615 5948 00	1615 5951 00
	XAS 97	2912 4393 06	208 I (55 US gal)	1615 5949 00	1615 5952 00
SEPARATOR KIT		(Engine Oil)	PAROIL 15W40	PAROIL 5W30	
		2911 0069 00	5 I (1,3 US gal)	1615 5953 00	1604 6060 00
			20 I (5 US gal)	1615 5954 00	1604 6059 00
			210 I (55 US gal)	1615 5955 00	


STANDARD

MARKINGS - L/S FOR STEEL CANOPY


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	0690 1132 00	HOUSE MARK	3				
25	0690 1140 00	HOUSE MARK	1				
30	-	DATA PLATE (Not available separately)	1				
35	0129 3270 34	BLIND RIVET	4				
42	1079 9924 90	INSTRUCTION LABEL	1				
45	1079 9924 89	INFORMATION LABEL	1				
50	1604 6678 00	DECAL	2				
60	1079 9919 28	INFORMATION LABEL	1				
70	1079 9919 83	INFORMATION LABEL	1				
80	1079 9902 29	WARNING LABEL	1				
90	1079 9924 88	INFORMATION LABEL	1				
105	1079 9922 07	INFORMATION LABEL	1				
110	1079 9902 58	WARNING LABEL	1				
150	1079 9921 03	INFORMATION LABEL	1				
160	1079 9924 40	INFORMATION LABEL	1				
170	1604 3317 09	LABEL	1				
180	1604 5797 01	WARRANTY LABEL	2				

STANDARD

 MARKINGS - L/S FOR HARDHAT

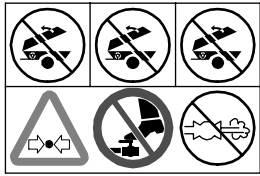


80

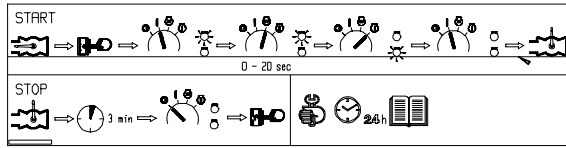 


90

 45

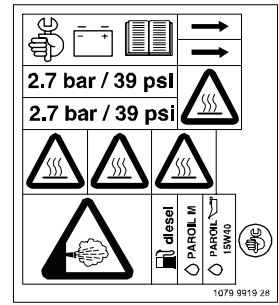


60

 

Atlas Copco

 
20




105



 42




70

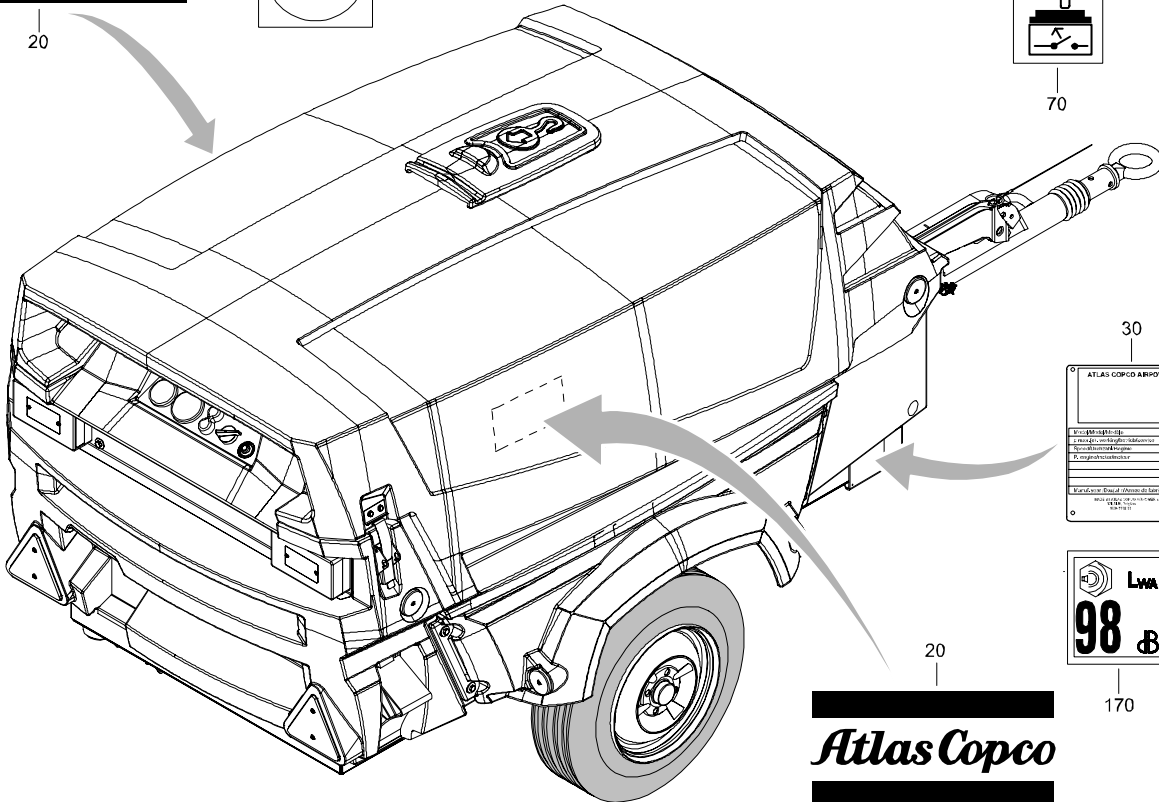 

30



 35



170

Atlas Copco

www.atlascopco.com

150

XAS 97

50



180

Atlas Copco		XAS 47-57-67-77-97 Dd, XAHS 37 Dd, XATS 67 Dd			
SERVICE PAK		Compressor Oil	PAROIL M	PAROIL S	
	XAS 47/57, XAHS 37	2912 4391 06	5 l (1.3 US gal)	1615 5947 00	1615 5950 00
	XAS , XATS 67	2912 4392 06	20 l (5 US gal)	1615 5948 00	1615 5951 00
	XAS 97	2912 4393 06	208 l (55 US gal)	1615 5949 00	1615 5952 00
SEPARATOR KIT		(Engine Oil)	PAROIL 15W40	PAROIL 5W30	
	2911 0068 00	5 l (1.3 US gal)	1615 5953 00	1604 6060 00	
		20 l (5 US gal)	1615 5954 00	1604 6059 00	
		210 l (55 US gal)	1615 5955 00		

160


STANDARD

MARKINGS - L/S FOR HARDHAT

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	0690 1132 00	HOUSE MARK	2				
30	-	DATA PLATE (Not available separately)	1				
35	0129 3270 34	BLIND RIVET	4				
42	1079 9924 90	INSTRUCTION LABEL	1				
45	1079 9924 89	INFORMATION LABEL	1				
50	1604 6678 00	DECAL	2				
60	1079 9919 28	INFORMATION LABEL	1				
70	1079 9919 83	INFORMATION LABEL	1				
80	1079 9902 29	WARNING LABEL	1				
90	1079 9924 88	INFORMATION LABEL	1				
105	1079 9922 07	INFORMATION LABEL	1				
150	1079 9921 42	INFORMATION LABEL	1				
160	1079 9924 40	INFORMATION LABEL	1				
170	1604 3317 09	LABEL	1				
180	1604 5797 01	WARRANTY LABEL	2				

STANDARD

 MARKINGS - CFM FOR STEEL CANOPY

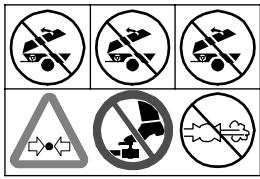

80

Atlas Copco		XAS 47-57-67-77-97 Dd, XAHS 37 Dd, XATS 67 Dd			
SERVICE PAK		Compressor Oil	PAROIL M	PAROIL S	
	XAS 47/57, XAHS 37	2912 4391 06	5 l (1,3 US gal)	1615 5947 00	1615 5950 00
	XAS , XATS 67	2912 4392 06	20 l (5 US gal)	1615 5948 00	1615 5951 00
	XAS 97	2912 4393 06	208 l (55 US gal)	1615 5949 00	1615 5952 00
SEPARATOR KIT		(Engine Oil)	PAROIL 15W40	PAROIL 5W30	
		2911 0068 00	5 l (1,3 US gal)	1615 5953 00	1604 6060 00
			20 l (5 US gal)	1615 5954 00	1604 6059 00
			210 l (55 US gal)	1615 5955 00	

160



105

Atlas Copco

Atlas Copco



110

50

XAS 185 DD7

20

25

Atlas Copco

20

XAS 185 DD7

50



170



30



35

20

Atlas Copco

 
www.atlascopco.com 150




42



180





70

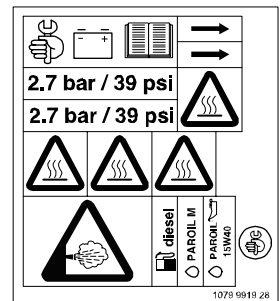 

60

  45

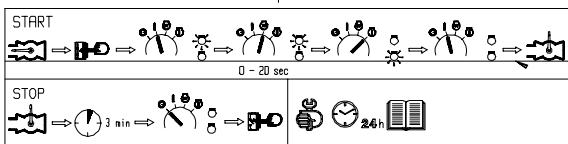

90


STANDARD

MARKINGS - CFM FOR STEEL CANOPY

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	0690 1132 00	HOUSE MARK	3				
25	0690 1140 00	HOUSE MARK	1				
30	-	DATA PLATE (Not available separately)	1				
35	0129 3270 34	BLIND RIVET	4				
42	1079 9924 90	INSTRUCTION LABEL	1				
45	1079 9924 89	INFORMATION LABEL	1				
50	1626 0900 18	DECAL	2				
60	1079 9919 28	INFORMATION LABEL	1				
70	1079 9919 83	INFORMATION LABEL	1				
80	1079 9902 29	WARNING LABEL	1				
90	1079 9924 88	INFORMATION LABEL	1				
105	1079 9922 07	INFORMATION LABEL	1				
110	1079 9902 58	WARNING LABEL	1				
150	1079 9921 03	INFORMATION LABEL	1				
160	1079 9924 40	INFORMATION LABEL	1				
170	1604 3317 09	LABEL NOISE 98LWA	1				
180	1604 5797 01	WARRANTY LABEL	2				

STANDARD

 MARKINGS - CFM FOR HARDHAT

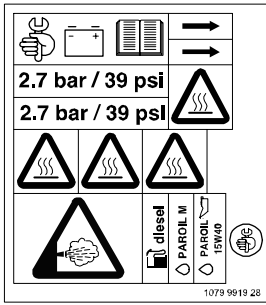


60

Atlas Copco		XAS 47-57-67-77-97 Dd, XAHS 37 Dd, XATS 67 Dd			
SERVICE PAK		Compressor Oil	PAROIL M	PAROIL S	
	XAS 47/57, XAHS 37	2912 4391 06	5 l (1,3 US gal)	1615 5947 00	1615 5950 00
	XAS , XATS 67	2912 4392 06	20 l (5 US gal)	1615 5948 00	1615 5951 00
	XAS 97	2912 4393 06	208 l (55 US gal)	1615 5949 00	1615 5952 00
SEPARATOR KIT		(Engine Oil)	PAROIL 15W40	PAROIL 5W30	
		2911 0068 00	5 l (1,3 US gal)	1615 5953 00	1604 6060 00
			20 l (5 US gal)	1615 5954 00	1604 6059 00
			210 l (55 US gal)	1615 5955 00	

160

 
Atlas Copco



42



 170




70

50

XAS 185 DD7

 20

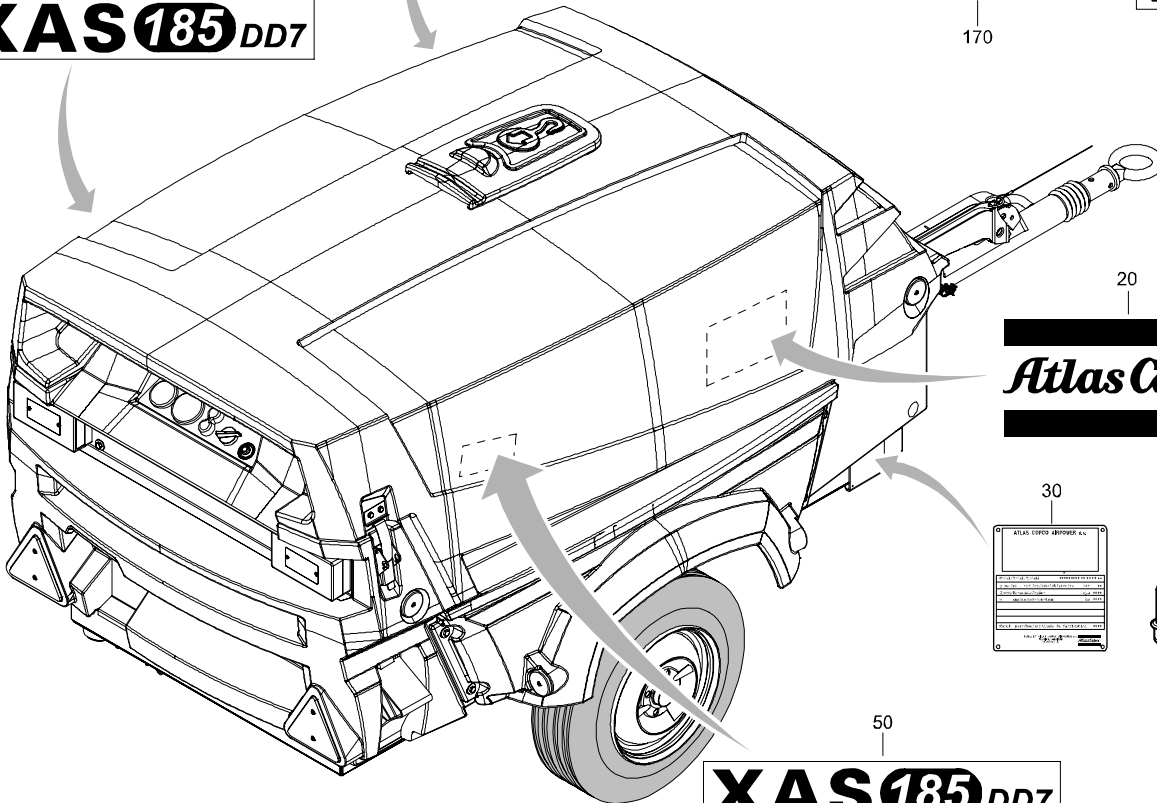

Atlas Copco

20



30



35

50

XAS 185 DD7

 
www.atlascopco.com — 150



180





105

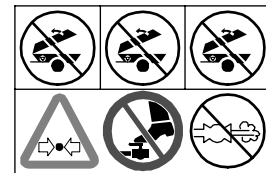

80

  90

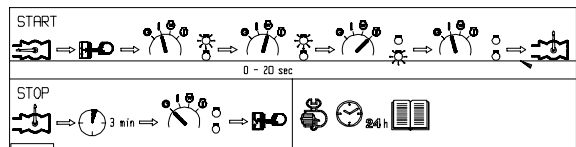

45

STANDARD

MARKINGS - CFM FOR HARDHAT

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	0690 1132 00	HOUSE MARK	2				
30	-	DATA PLATE (Not available separately)	1				
35	0129 3270 34	BLIND RIVET	4				
42	1079 9924 90	INSTRUCTION LABEL	1				
45	1079 9924 89	INFORMATION LABEL	1				
50	1626 0900 18	DECAL	2				
60	1079 9919 28	INFORMATION LABEL	1				
70	1079 9919 83	INFORMATION LABEL	1				
80	1079 9902 29	WARNING LABEL	1				
90	1079 9924 88	INFORMATION LABEL	1				
105	1079 9922 07	INFORMATION LABEL	1				
150	1079 9921 42	INFORMATION LABEL	1				
160	1079 9924 40	INFORMATION LABEL	1				
170	1604 3317 09	LABEL NOISE 98LWA	1				
180	1604 5797 01	WARRANTY LABEL	2				

STANDARD


MARKINGS FOR STEEL CANOPY

20
|
190 CFM

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1079 9924 67	DECAL	2				


STANDARD

 FRAME
NOT SPILLAGE FREE

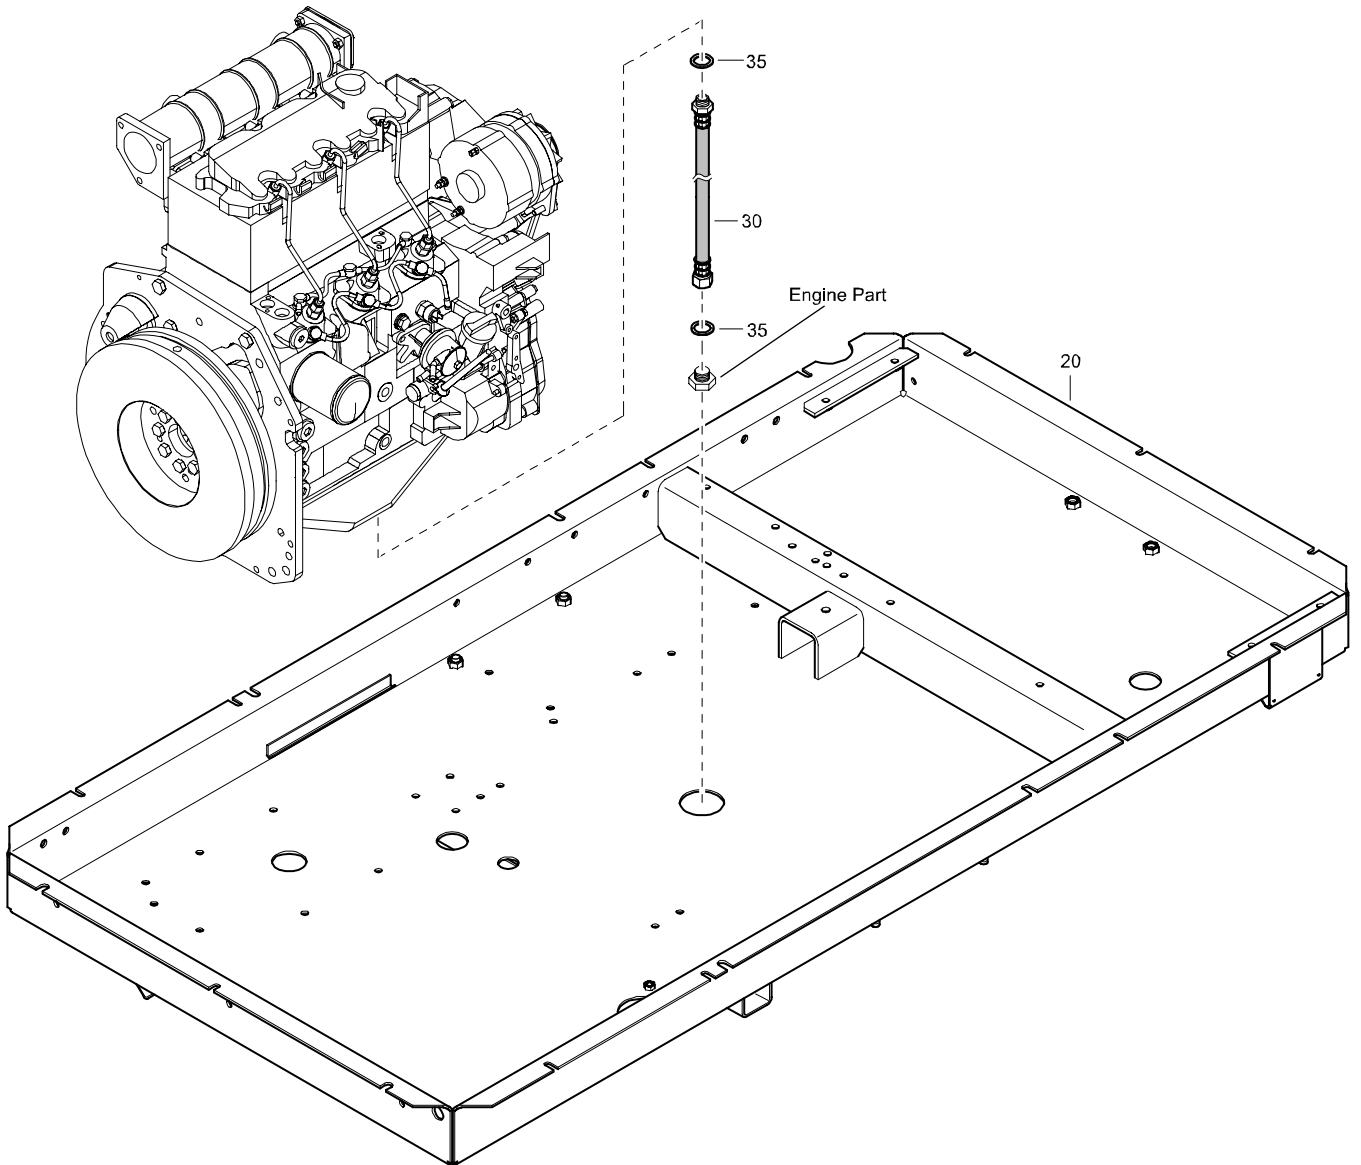

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5459 86	FRAME (For details see page 84)	1				
30	1604 0276 00	HOSE ASSEMBLY	1				
35	0653 1115 00	FLAT GASKET	2				

 
STANDARD
SIDE PANEL AND SILENCER
FOR COMPRESSOR WITHOUT INTEGRATED SPARK ARRESTOR AND PARTICLE FILTER
FOR STEEL CANOPY

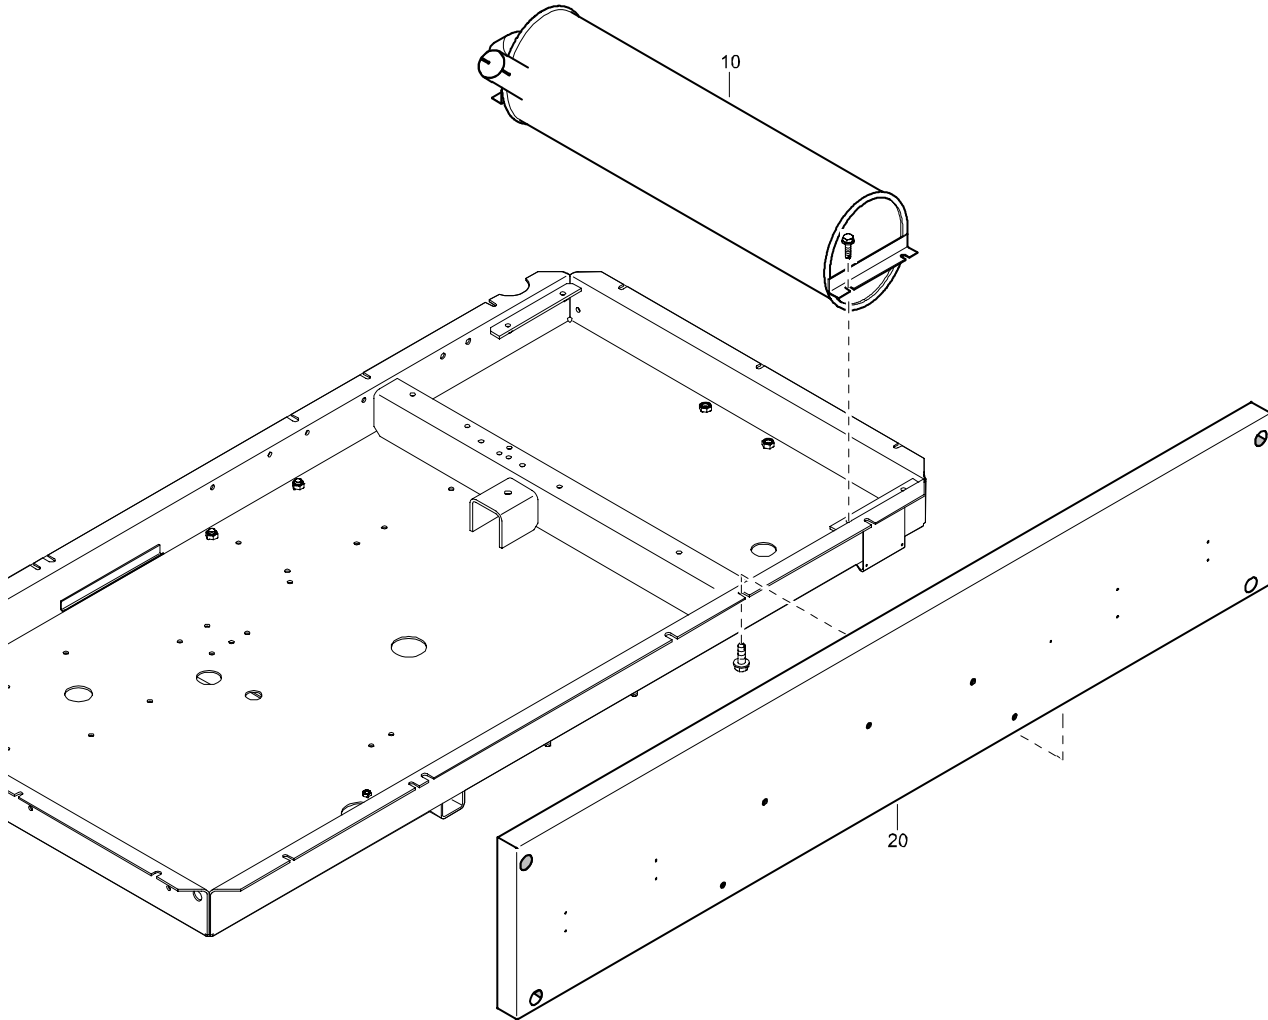

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1604 3861 32	SILENCER	1				
20	1604 5457 81	PANEL	1				

(For details see page 83)

 STANDARD
SIDE PANEL AND SILENCER
FOR COMPRESSOR WITHOUT INTEGRATED SPARK ARRESTOR
FOR HARDHAT

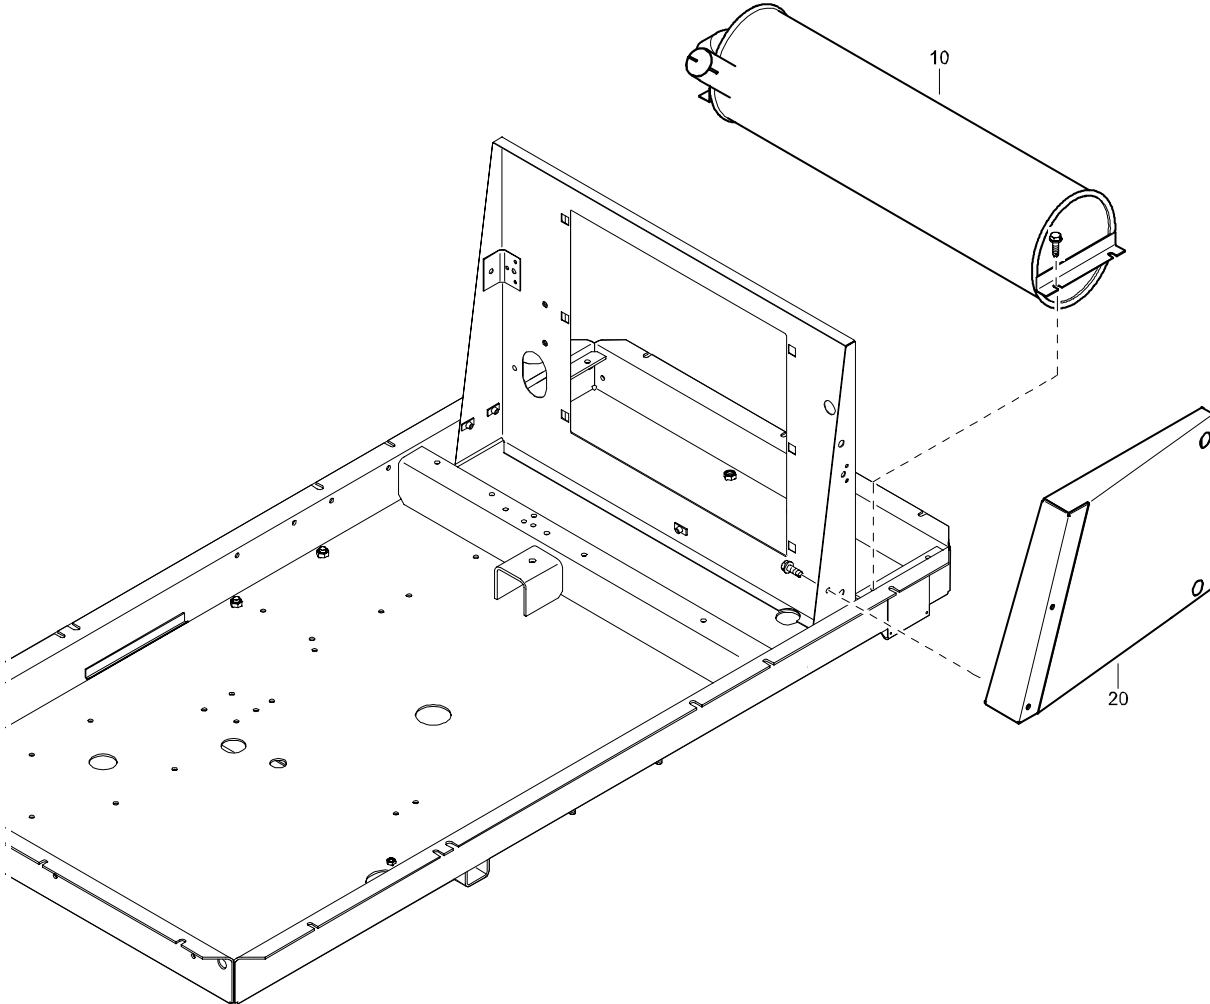

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1604 3861 32	SILENCER	1				
20	1604 7178 02	PANEL	1				

STANDARD

VALVES ON VESSEL FOR ASME

CALIFORNIA Proposition 65 Warning
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

1079 9902 47

50

Tampering with noise control system prohibited

Federal law prohibits the following acts or the causing thereof:

- Atlas Copco**
- (1) The removal or rendering inoperative by any person other than for purposes of maintenance, repair or replacement of any device or element of design incorporated into any new compressor for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use.
- (2) The use of the compressor after such device or element of design has been removed or rendered inoperative by any person.
- Among those acts included in the prohibition against tampering are the acts listed below:
- Removal or rendering inoperative any of the following:
 - engine exhaust muffler,
 - cooling air exhaust and intake silencers,
 - acoustic baffles,
 - housing components, canopy or bottom panel
 - Removal of any of the following:
 - sound absorptive material, including ceiling strips on doors, panels and other canopy parts,
 - fan shroud.
 - Operation of the compressor with any of the enclosure doors open.
- Atlas Copco Approval: 3.1.1.1335

60

 
Compressor noise emission control information

This compressor conforms to U.S. E.P.A. regulations for noise emissions applicable to portable air compressors.

The following acts or the causing thereof by any person are prohibited by the Noise Control Act of 1972:

- (A) The removal or rendering inoperative, other than for the purpose of maintenance, repair, or replacement, of any noise control device or element of design listed in the owner's manual incorporated into this compressor in compliance with the Noise Control Act.
- (B) The use of this compressor after such device or element of design has been removed or rendered inoperative.
- Atlas Copco Approval: 3.1.1.1334


65

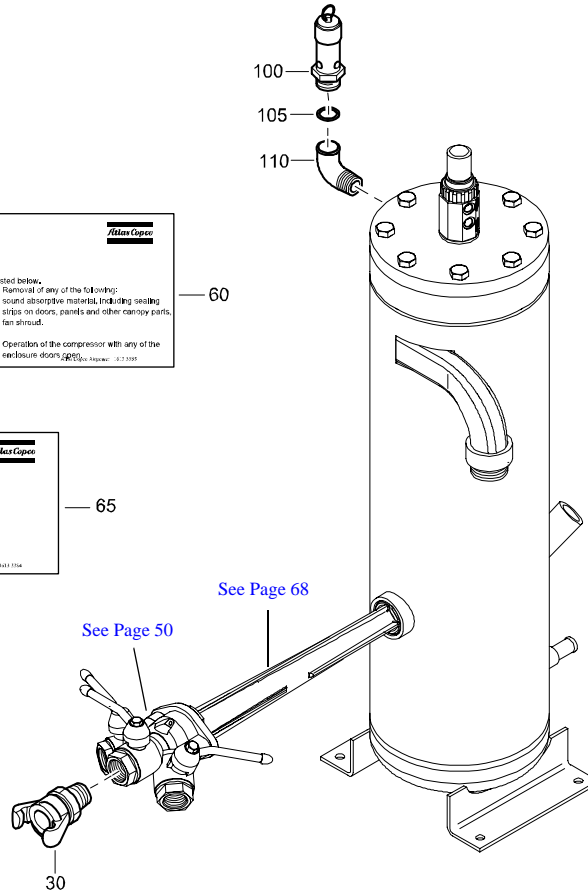

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
30	1310 1365 00	PIPE COUPLING	3				
50	1079 9902 47	WARNING LABEL	1				
60	1613 3385 00	DECAL	1				
65	1613 3384 00	DECAL	2				
100	0830 1005 18	SAFETY VALVE	1				
105	0653 1124 00	FLAT GASKET	1				
110	0560 0200 23	ELBOW	1				

STANDARD

 
VALVES ON VESSEL FOR EC

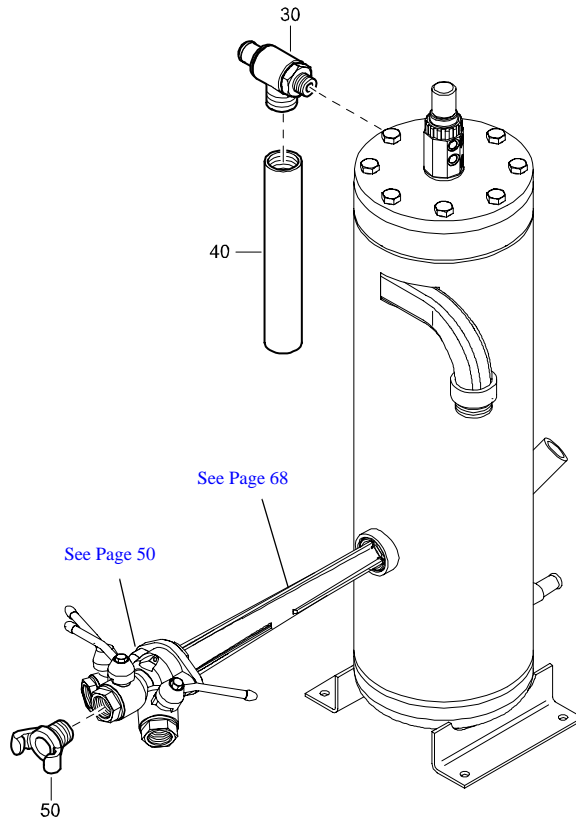

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
30	0832 1001 16	SAFETY VALVE	1				
40	1604 6058 00	PIPE	1				
50	9000 0302 00	PIPE COUPL.	3				


STANDARD

 RESTRICTOR AND BATTERY CABLE FOR COMPRESSOR WITHOUT AFTERCOOLER AND LUBRICATOR

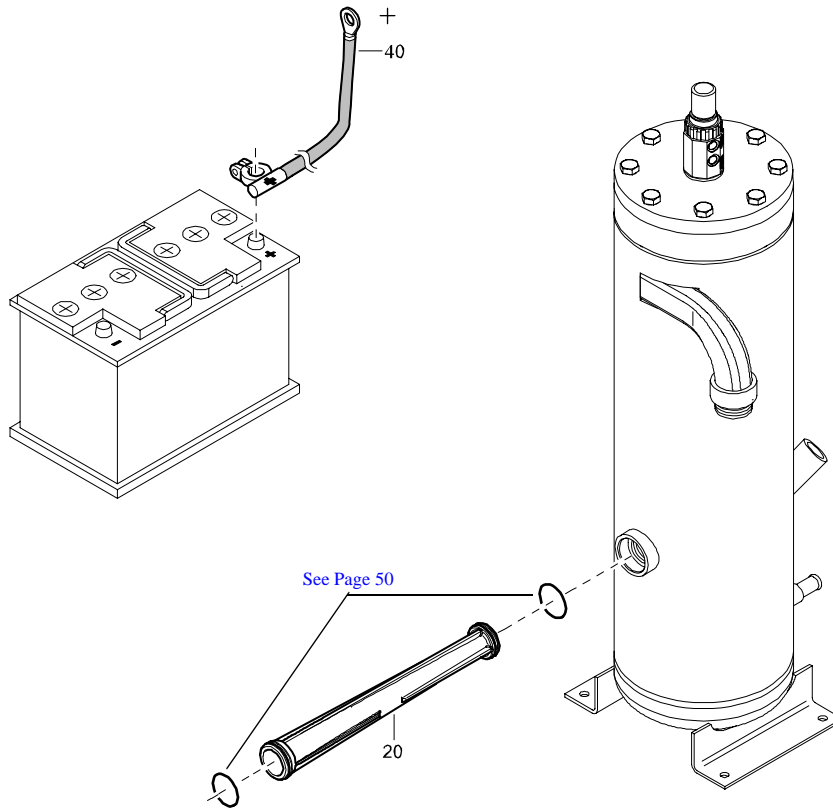


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 4029 01	RESTRICTOR	1				
40	1615 7725 01	BATTERY CABLE	1				

 STANDARD
BATTERY AND VESSEL
FOR COMPRESSOR WITHOUT COLD WEATHER EQUIPMENT
FOR EC

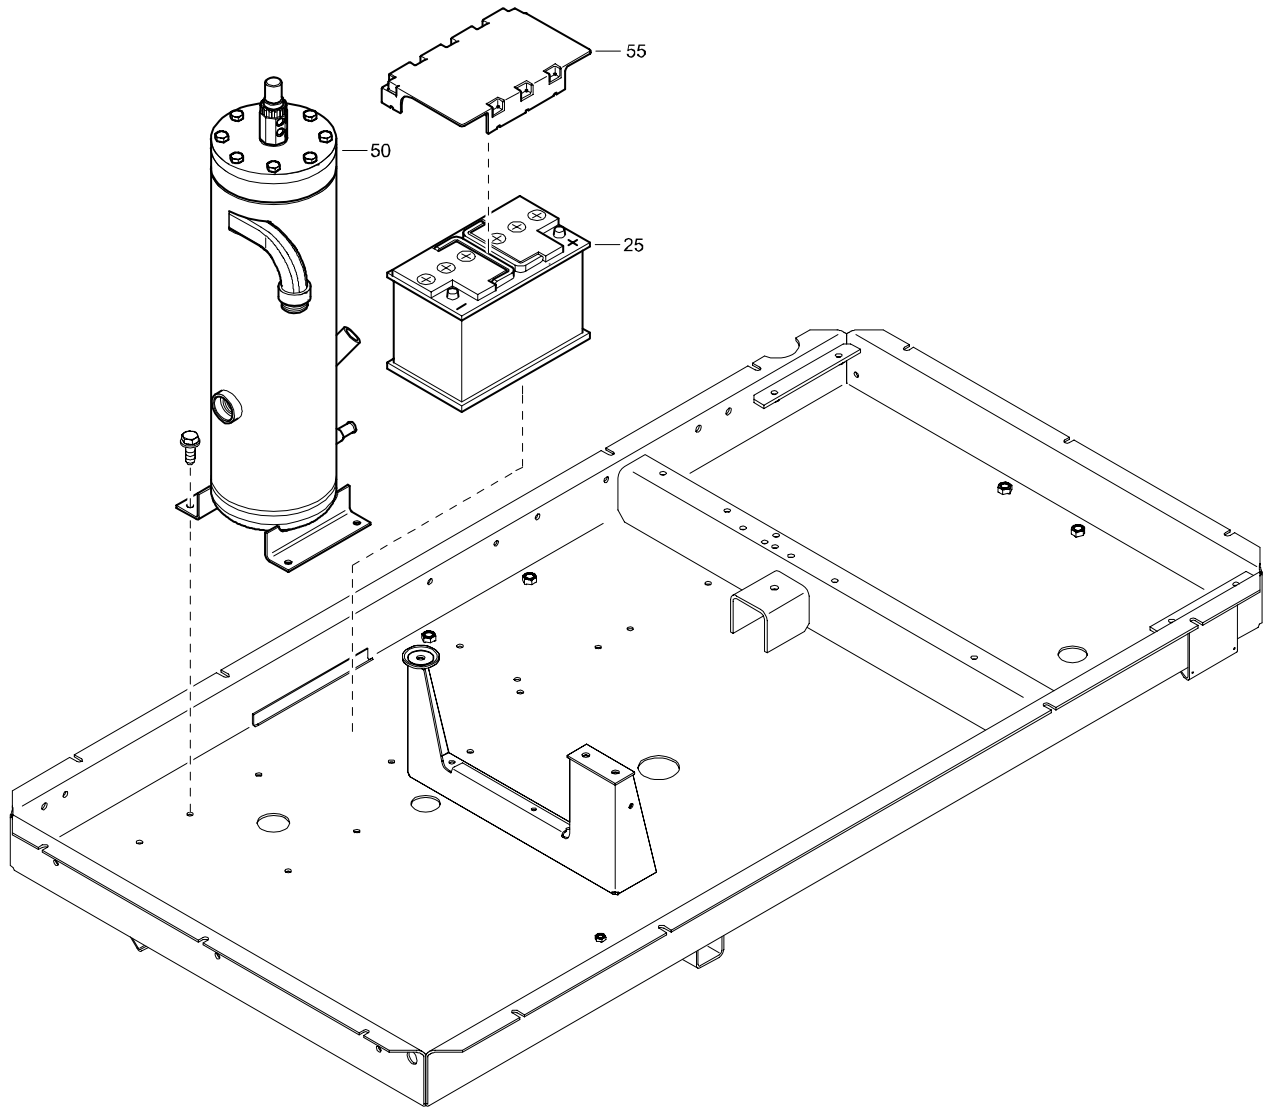


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
25	0926 5400 06	BATTERY	1				
50	1604 4022 87	VESSEL ASSY EC (For details see page 76)	1				
55	1604 7822 00	BATTERY COVER	1				

 STANDARD
BATTERY AND VESSEL
FOR COMPRESSOR WITHOUT COLD WEATHER EQUIPMENT
FOR ASME

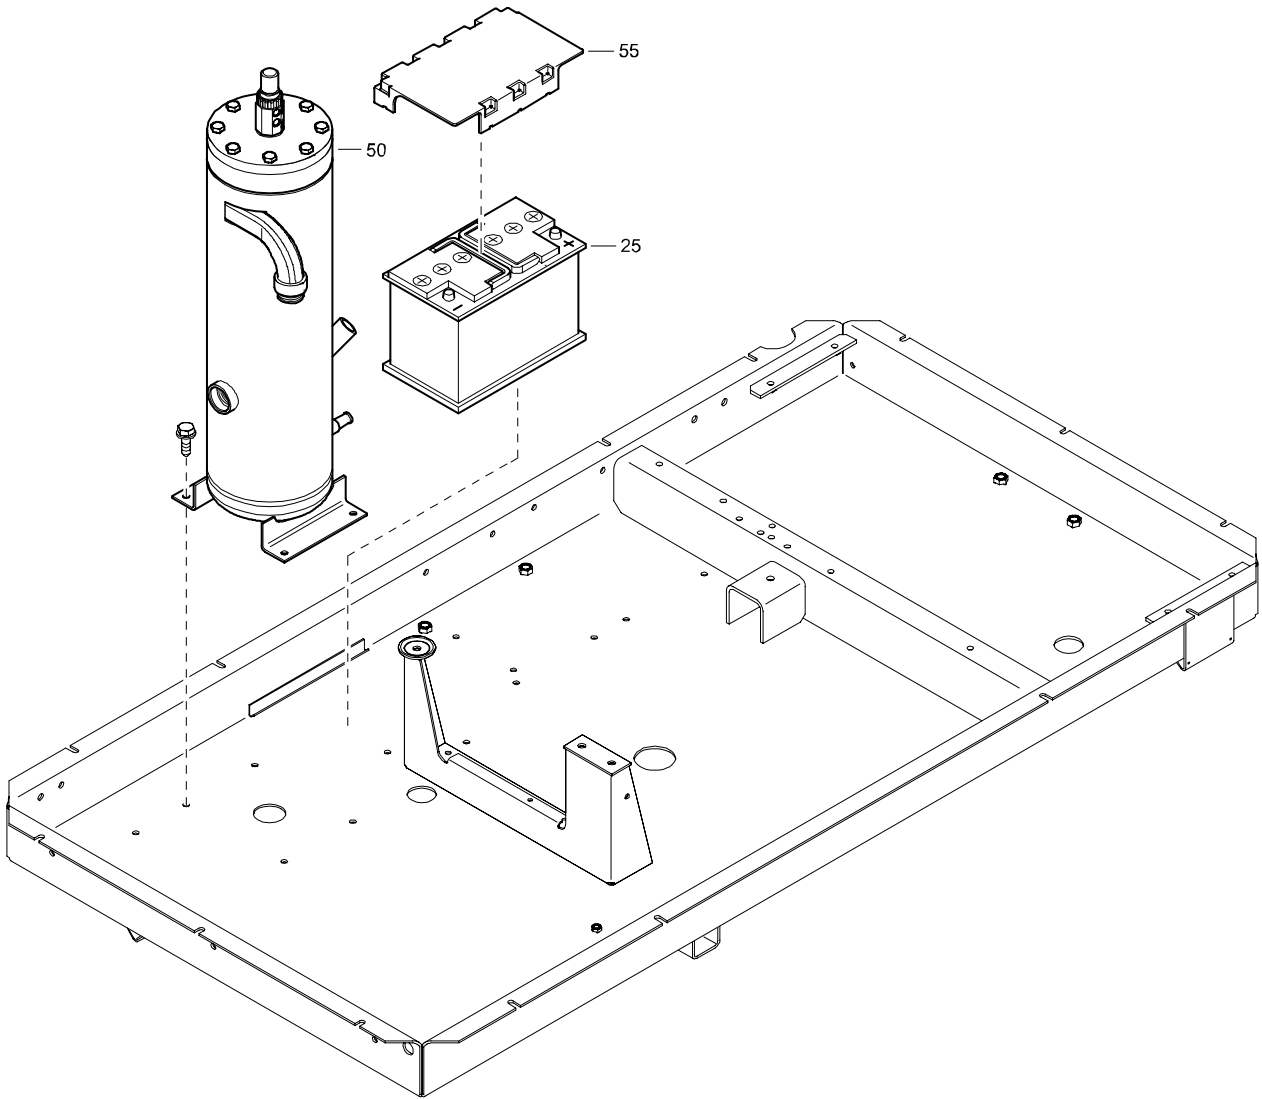

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
25	0926 5400 06	BATTERY	1				
50	1604 4022 88	VESSEL ASSY ASME/EC (For details see page 77)	1				
55	1604 7822 00	BATTERY COVER	1				

 
STANDARD
PLUGS
FOR COMPRESSOR WITHOUT ROAD LIGHT SYSTEM
FOR HARDHAT

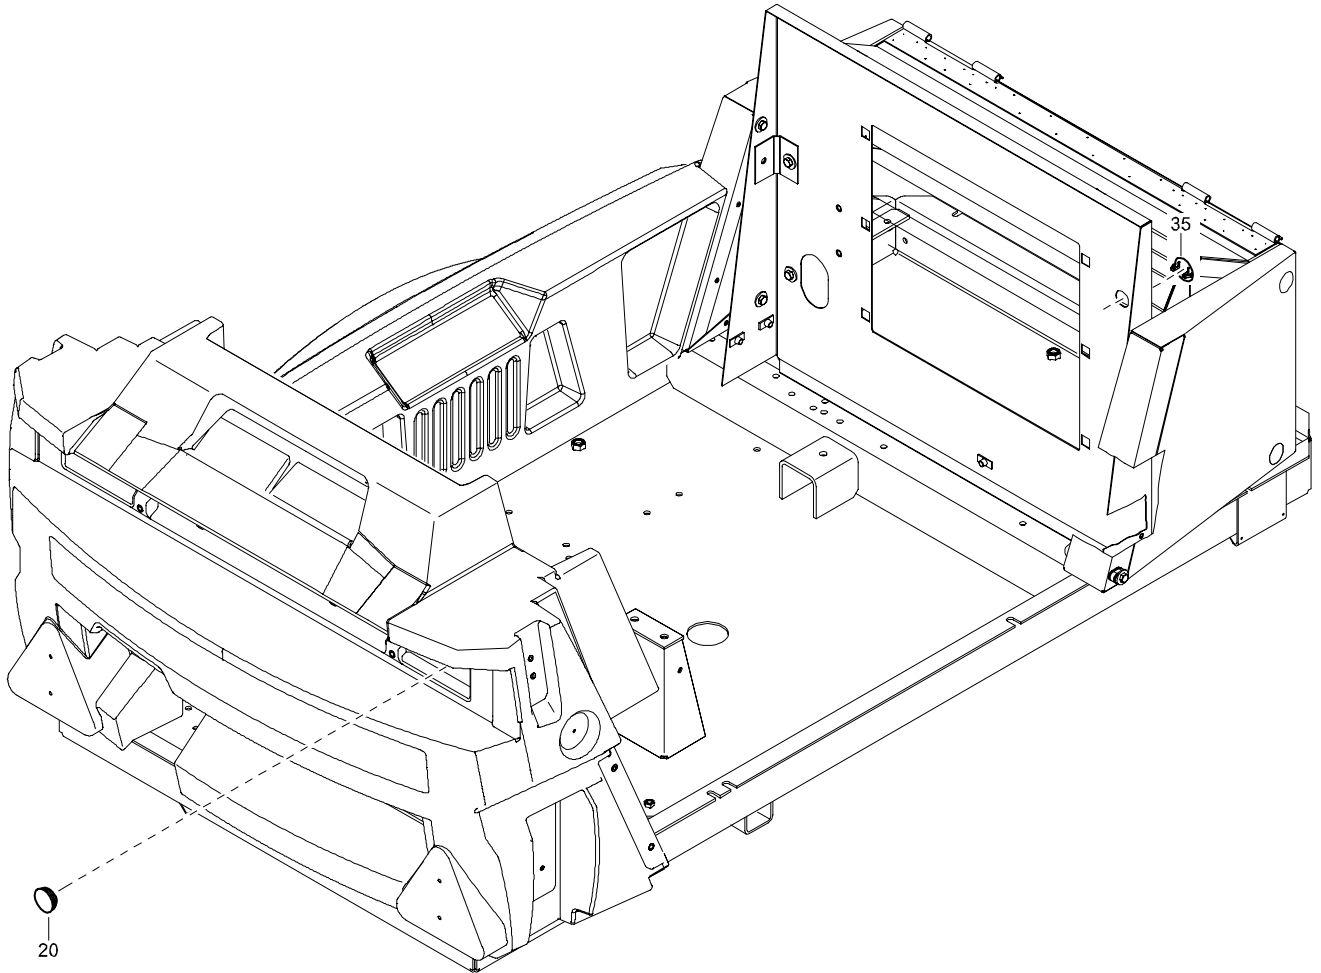

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 6668 00	PLUG	1				
35	1604 3858 00	PLUG	1				

STANDARD

 
LIFTING EYE AND PLUGS FOR COMPRESSOR WITHOUT ROAD LIGHT SYSTEM

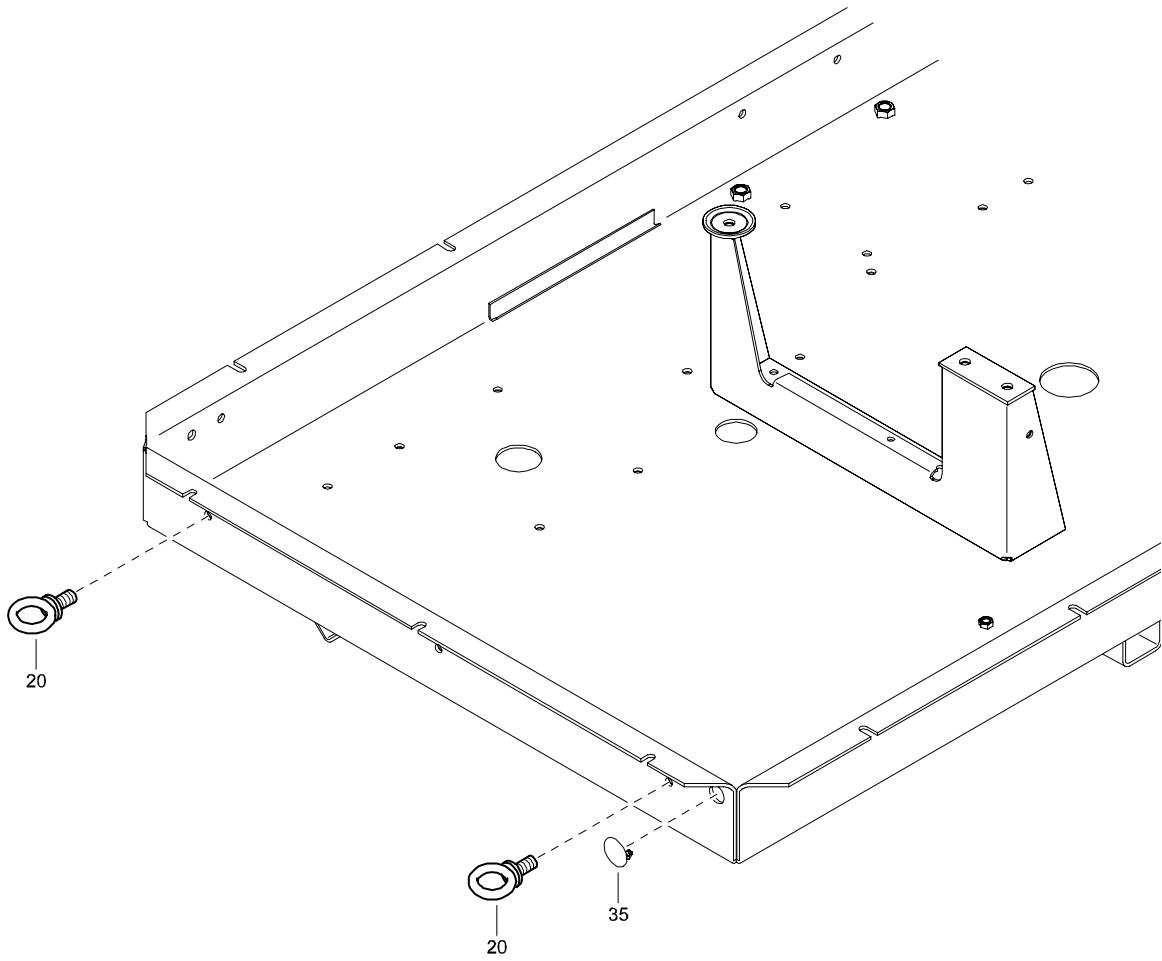

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	0371 1100 20	LIFTING EYE	2				
35	1604 3858 00	PLUG	1				

STANDARD

 
FAN ADAPTOR AND PULLEY FOR COMPRESSOR WITH HARDHAT WITHOUT GENERATOR KIT

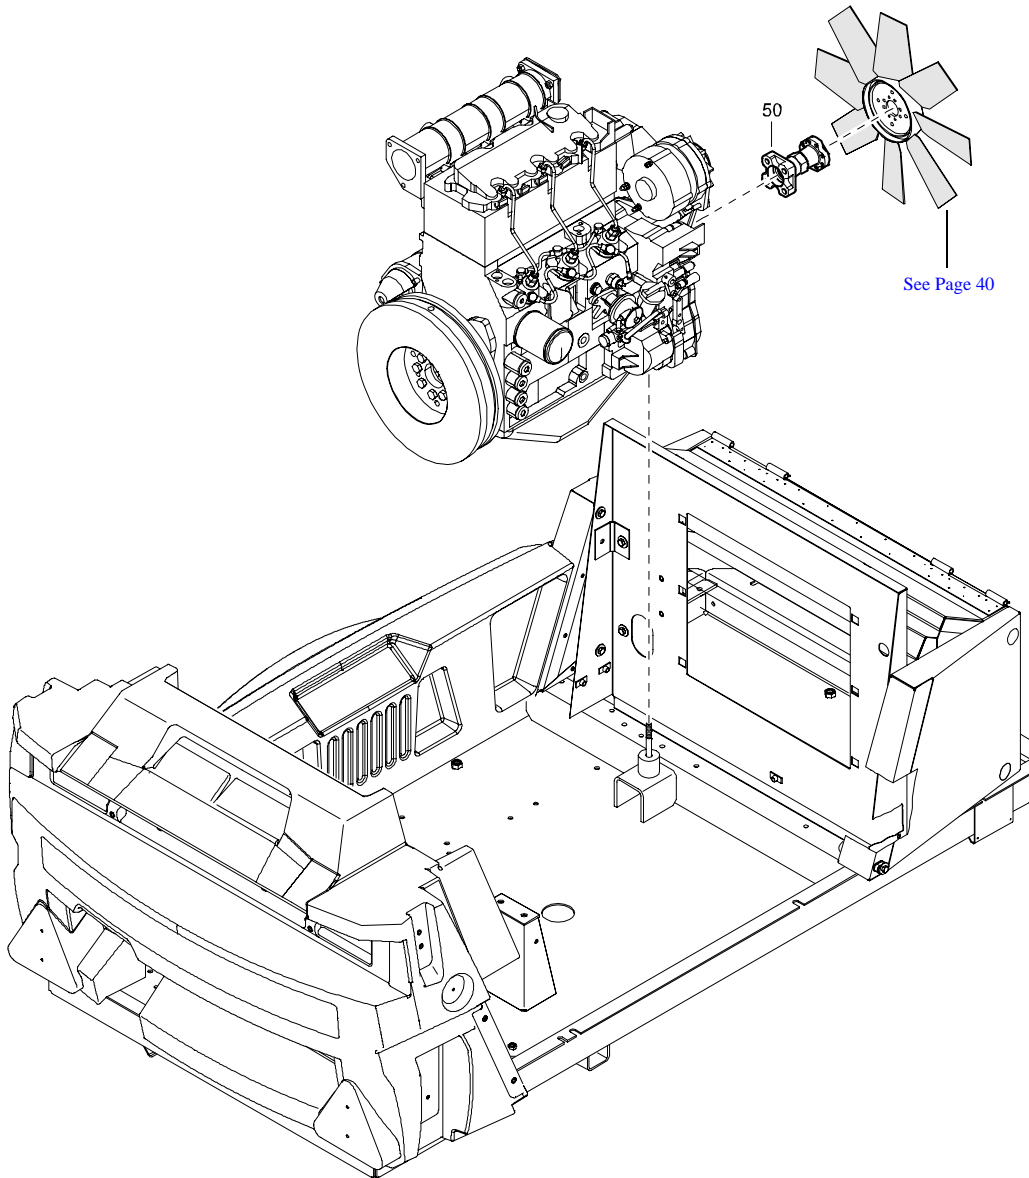

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
50	1615 7689 00	FAN ADAPTOR	1				

STANDARD

 
FAN ADAPTOR AND SIDE PANEL FOR COMPRESSOR WITH STEEL CANOPY WITHOUT GENERATOR KIT

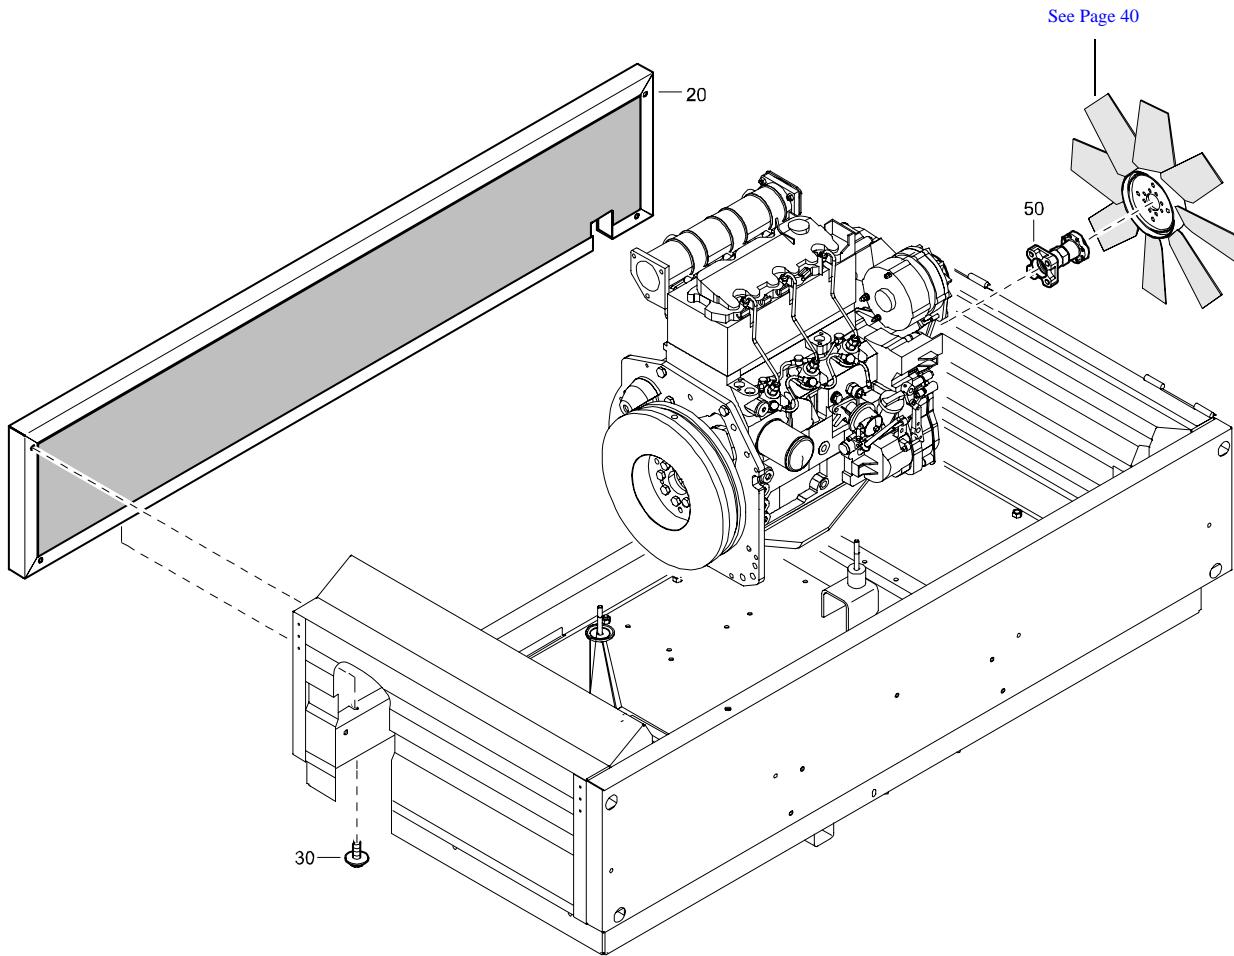

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5456 81	PANEL (For details see page 82)	1				
30	1615 5664 00	HEX. HEAD SCREW	8				
50	1615 7689 00	FAN ADAPTOR	1				

STANDARD

 
FUELTANK ASSEMBLY

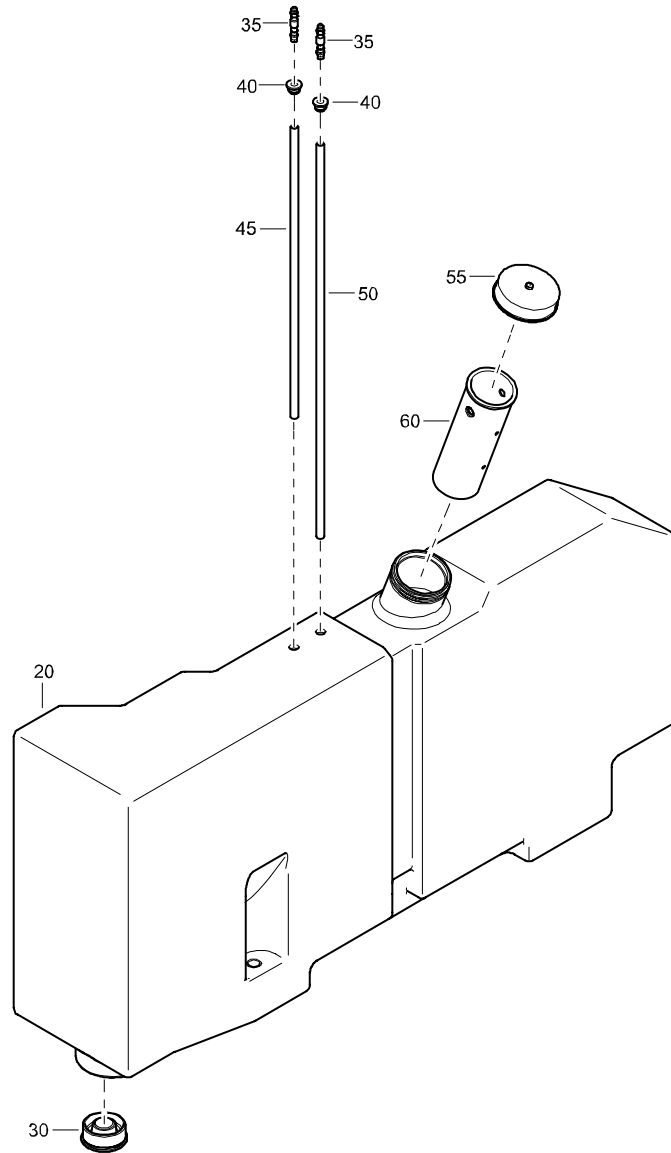

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3964 81	FUEL TANK ASSEMBLY (From page 29)					
•20	1604 3964 01	FUEL TANK	1				
•30	1615 5577 00	PLUG	1				
•35	1615 6651 00	ADAPTOR	2				
•40	1615 6652 00	GROMMET	2				
•45	0070 6002 15	PLASTIC TUBE	AR				
•50	0070 6002 15	PLASTIC TUBE	AR				
•55	1615 7653 02	CAP	1				
•60	1615 7654 00	STRAINER	1				

STANDARD

 
VESSEL ASSEMBLY FOR EC

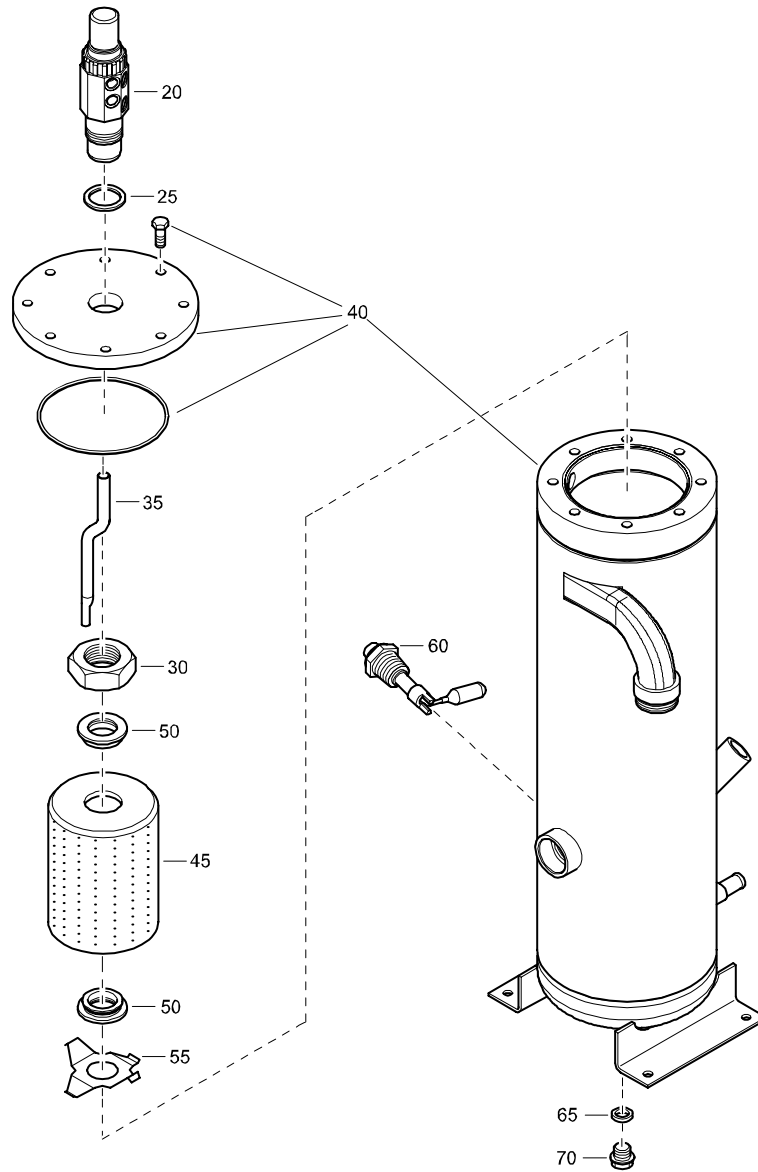

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 4022 87	VESSEL ASSEMBLY (From page 69)					
•20	1615 7664 80	REGULATING VALVE ASSY (For details see page 93)	1				
•25	0661 1049 00	SEALING WASHER	1				
•30	0623 2106 03	BACKNUT	1				
•35	1615 9437 00	TUBE	1				
•40	1604 5750 91	VESSEL EC (For details see page 91)	1				
•45	-	OIL SEPARATOR ELEMENT (Part of service kit, see page 28)	1				
•50	-	SEAL (Part of service kit, see page 28)	2				
•55	1615 7697 02	RETAINER	1				
•60	1616 5108 00	LEVEL GAUGE	1				
•65	0661 1026 00	SEALING WASHER	1				
•70	0686 4203 00	HEXAGON PLUG	1				

STANDARD

 
VESSEL ASSEMBLY FOR ASME

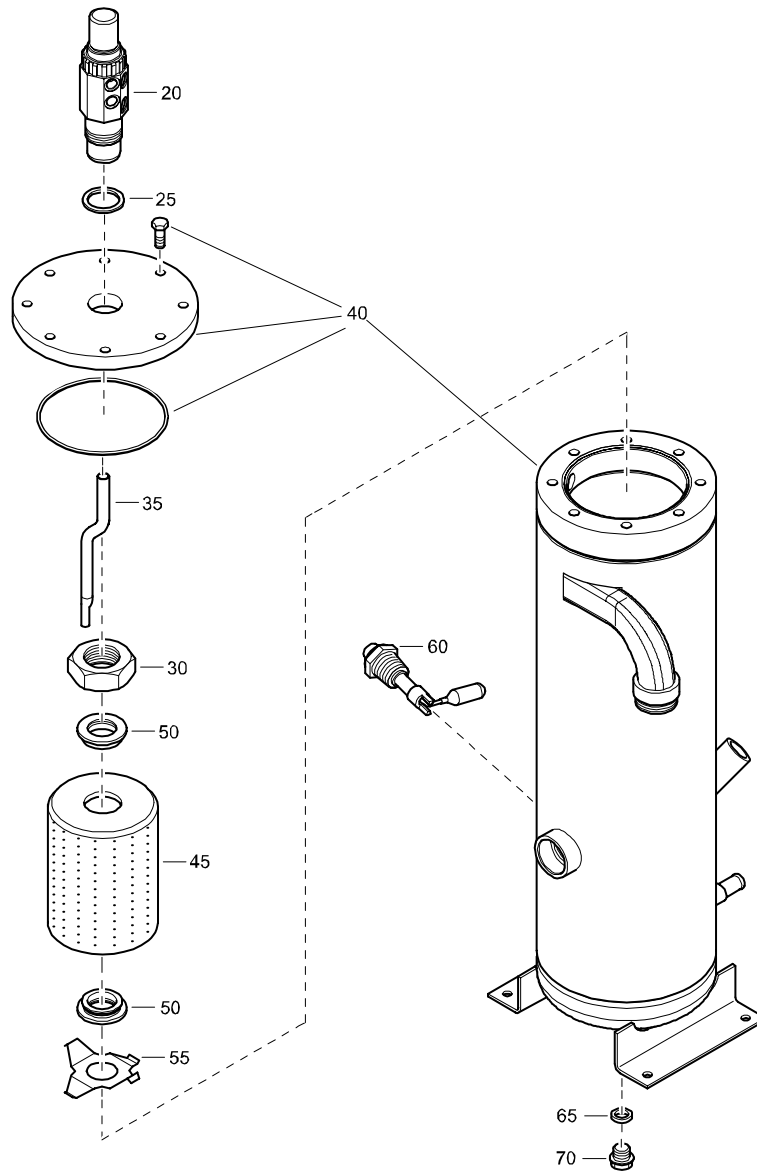

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 4022 88	VESSEL ASSEMBLY (From page 70, 172)					
•20	1615 7664 80	REGULATING VALVE ASSY (For details see page 93)	1				
•25	0661 1049 00	SEALING WASHER	1				
•30	0623 2106 03	BACKNUT	1				
•35	1615 9437 00	TUBE	1				
•40	1604 5749 83	OILSEPARATOR ASME (For details see page 90)	1				
•45	-	OIL.SEP.ELEMENT (Part of service kit, see page 28)	1				
•50	-	SEAL (Part of service kit, see page 28)	2				
•55	1615 7697 02	RETAINER	1				
•60	1616 5108 00	LEVEL GAUGE	1				
•65	0661 1026 00	SEALING WASHER	1				
•70	0686 4203 00	HEXAGON PLUG	1				

STANDARD

 
CONTROL PANEL ASSEMBLY FOR STEEL CANOPY

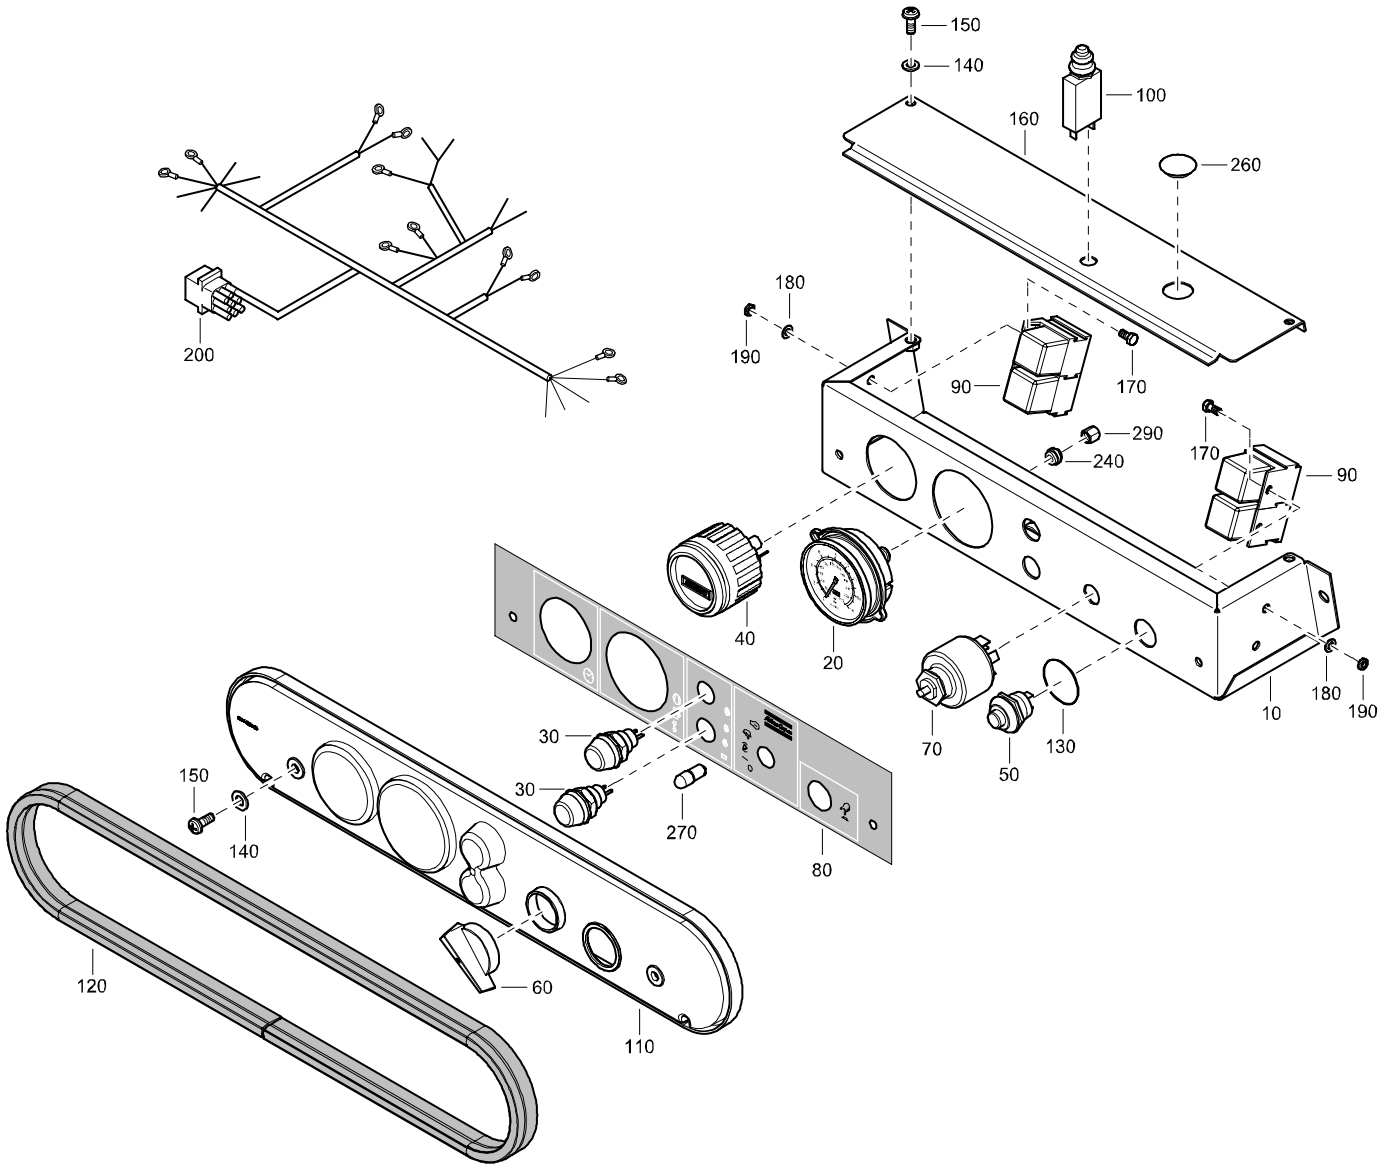

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 4014 83	CONTROL PANEL ASSEMBLY(From page 51)		•290	0584 2310 01	STRAIGHT PIPE COUPLING	1
•10	1604 4014 33	PANEL	AR				
•20	1604 4017 00	PRESSURE GAUGE	1				
•30	1089 0312 11	LAMPHOLDER	2				
•40	1089 0352 02	HOURLMETER	1				
•50	1089 9326 01	PUSH BUTTON	1				
•60	1089 0608 04	BUTTON	1				
•70	1089 0608 03	SWITCH	1				
•80	1604 4015 01	LABEL	1				
•90	1089 0341 01	RELAY	4				
•100	1089 9206 31	CIRCUIT BREAKER	1				
•110	1604 4028 00	COVER	1				
•120	1202 6584 00	SEAL	AR				
•130	0663 9095 00	O-RING	1				
•140	0301 2321 00	PLAIN WASHER	4				
•150	0160 0996 83	CROSS REC SCREW	4				
•160	1604 4039 02	COVER	AR				
•170	0147 1204 03	HEX. HEAD SCREW	4				
•180	0301 2318 00	PLAIN WASHER	4				
•190	0266 2107 00	HEXAGON NUT	4				
•200	1604 4068 00	WIRE HARNESS	1				
•240	0584 0080 09	STRAIGHT PIPE COUPLING	1				
•260	0686 9252 69	PROTECTION PLUG	1				
•270	1091 0168 00	BULB	1				

STANDARD

 
HOOD ASSEMBLY 3 CYLINDER FOR STEEL CANOPY

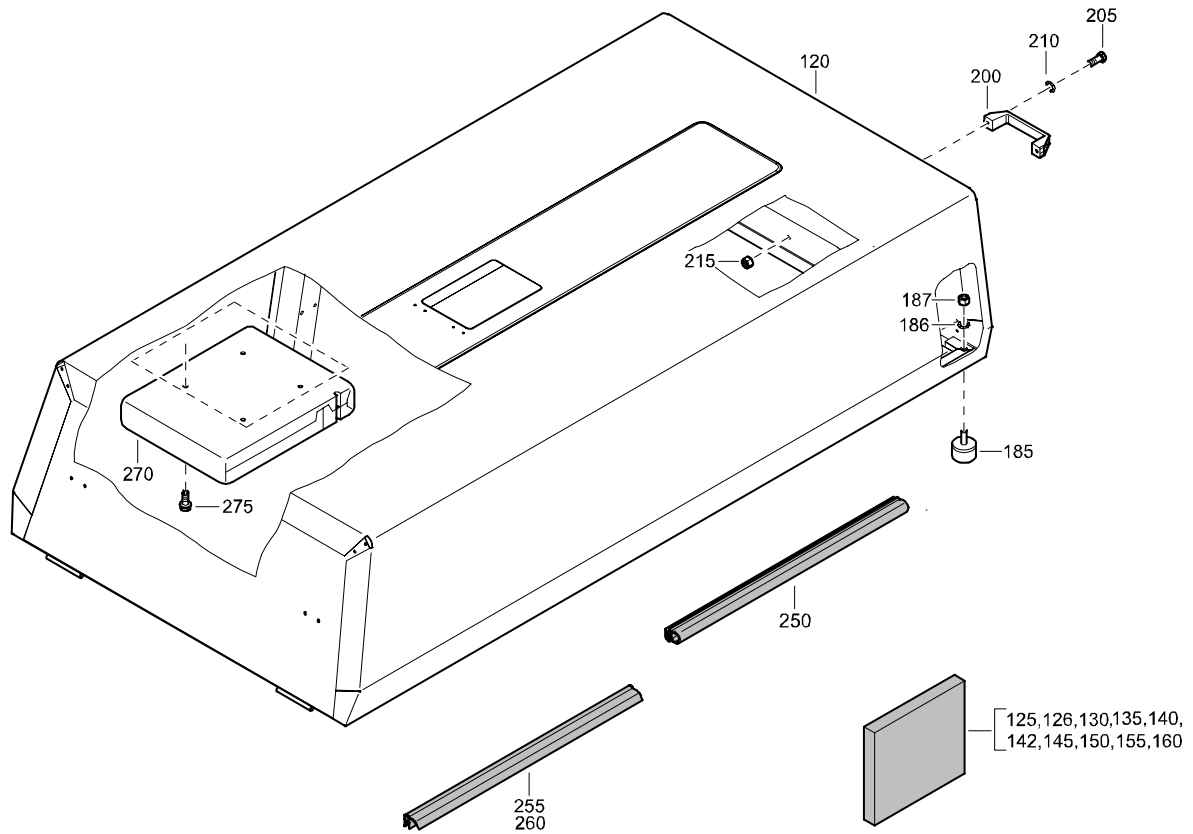

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 4025 81	HOOD ASSEMBLY	(From page 46)	-	1079 0003 32	SILENCING FOAM	
•120	1604 4025 31	HOOD	1			2000 mm x 1500 mm x 30 mm	
•125	-	SILENCING FOAM (40 mm)	2	-	1079 0001 91	SILENCING FOAM	
•126	-	SILENCING FOAM (40 mm)	1			2000 mm x 1500 mm x 40 mm	
•130	-	SILENCING FOAM (40 mm)	1				
•135	-	SILENCING FOAM (40 mm)	1				
•140	-	SILENCING FOAM (40 mm)	1				
•142	-	SILENCING FOAM (40 mm)	1				
•145	-	SILENCING FOAM (40 mm)	1				
•150	-	SILENCING FOAM (40 mm)	1				
•155	-	SILENCING FOAM (40 mm)	1				
•160	-	SILENCING FOAM (30 mm)	2				
•185	1604 1869 00	BUFFER	2				
•186	0333 3220 00	LOCK WASHER	2				
•187	0266 2108 00	HEXAGON NUT	2				
•200	1202 8673 00	HANDGRIP	1				
•205	0147 1246 03	HEX. HEAD SCREW	2				
•210	0333 3220 00	LOCK WASHER	2				
•215	0266 2108 00	HEXAGON NUT	2				
•250	1604 4317 00	SEAL	AR				
•255	1619 2665 00	SEAL	AR				
•260	1619 2665 00	SEAL	AR				
•270	1604 2206 00	HOLDER (DOCUMENT)	1				
•275	1619 5898 01	HEX. HEAD SCREW	4				

STANDARD

 
BAFFLE ASSEMBLY REAR 3 CYLINDER FOR STEEL CANOPY

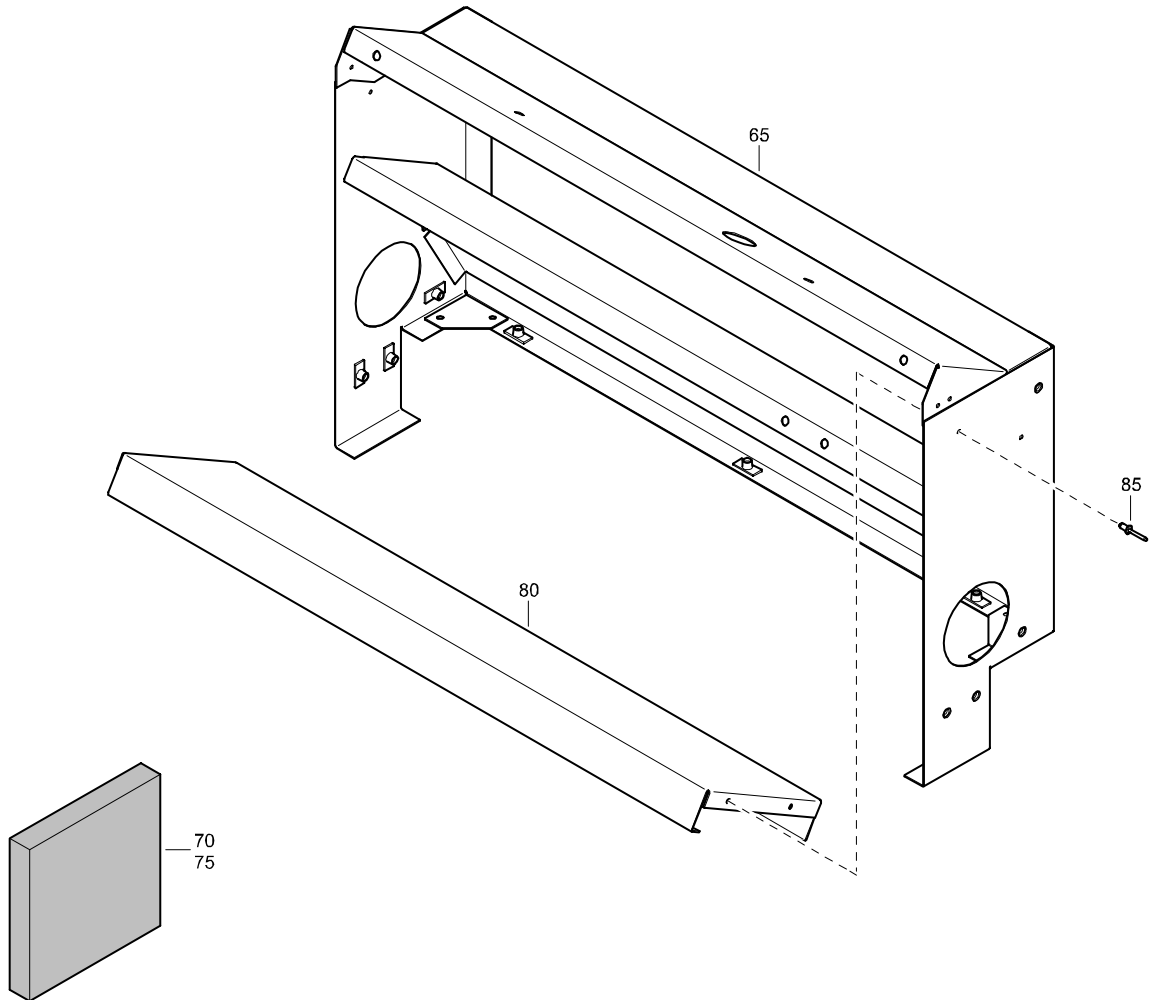

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 4066 83	BAFFLE ASSEMBLY	(From page 46)				
•65	1604 4063 32	REAR BAFFLE	1				
•70	-	SILENCING FOAM (30 mm)	1				
•75	-	SILENCING FOAM (50 mm)	1				
•80	1604 4066 01	BAFFLE	1				
•85	0129 3172 01	BLIND RIVET	4				
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm					
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

STANDARD

 
BAFFLE ASSEMBLY FRONT 3 CYLINDER

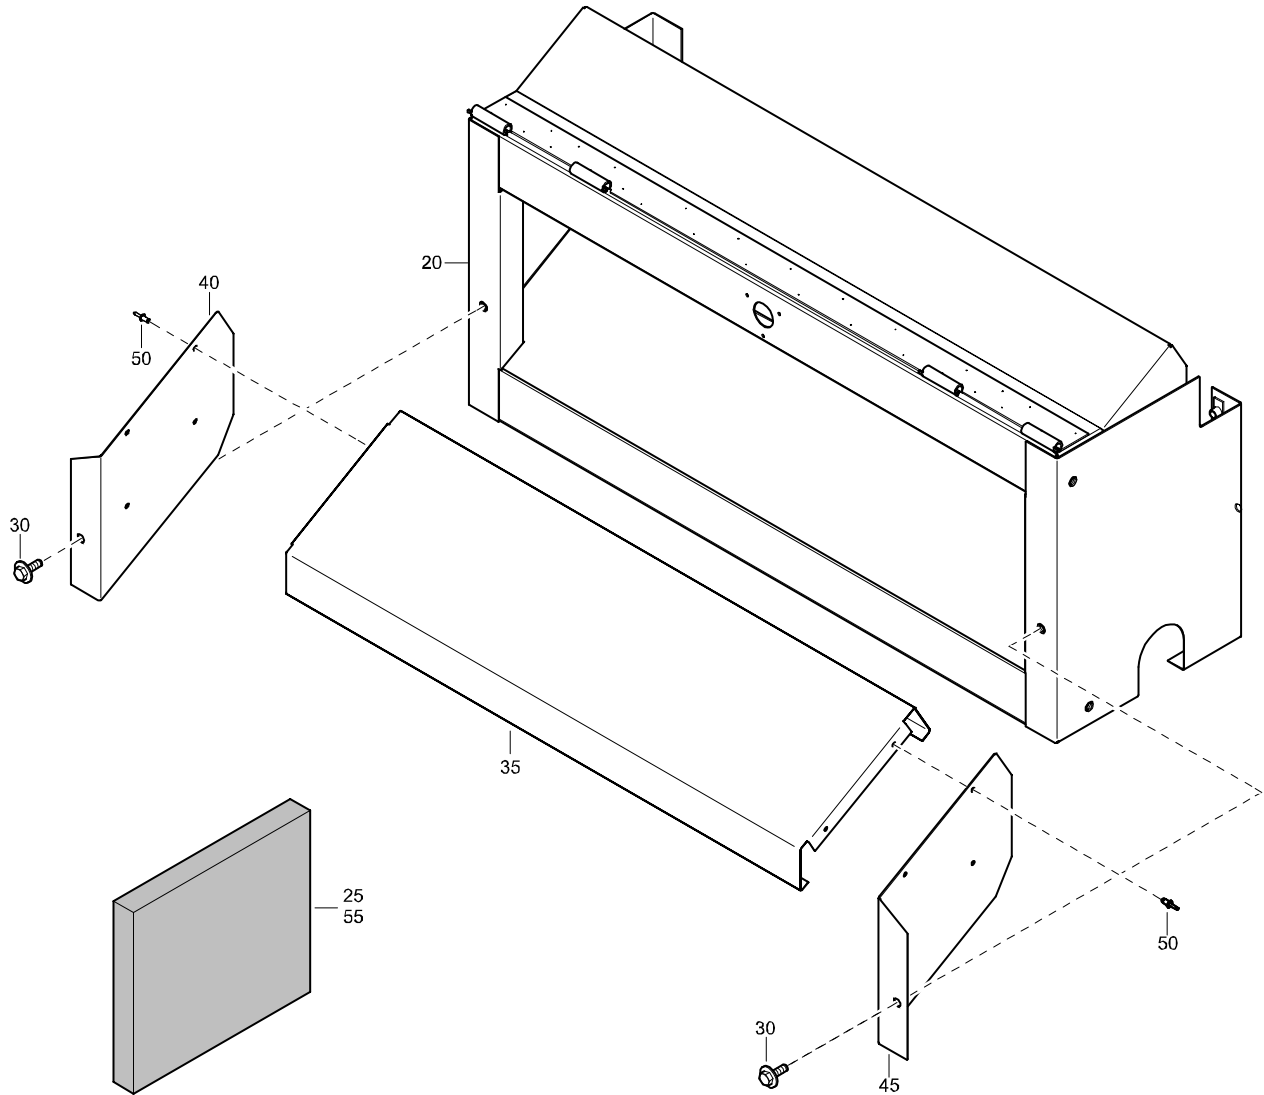

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 4078 85	BAFFLE ASSEMBLY (From page 46, 48)					
•20	1604 4078 34	BAFFLE	1				
•25	-	SILENCING FOAM (30 mm)	1				
•30	1604 3423 00	SCRAPER BOLT	2				
•35	1604 4003 01	BAFFLE	2				
•40	1604 4004 01	PLATE	1				
•45	1604 4005 01	PLATE	1				
•50	0129 3172 01	BLIND RIVET	8				
•55	-	SILENCING FOAM (50 mm)	2				
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm					
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

STANDARD

 
PANEL FOR STEEL CANOPY

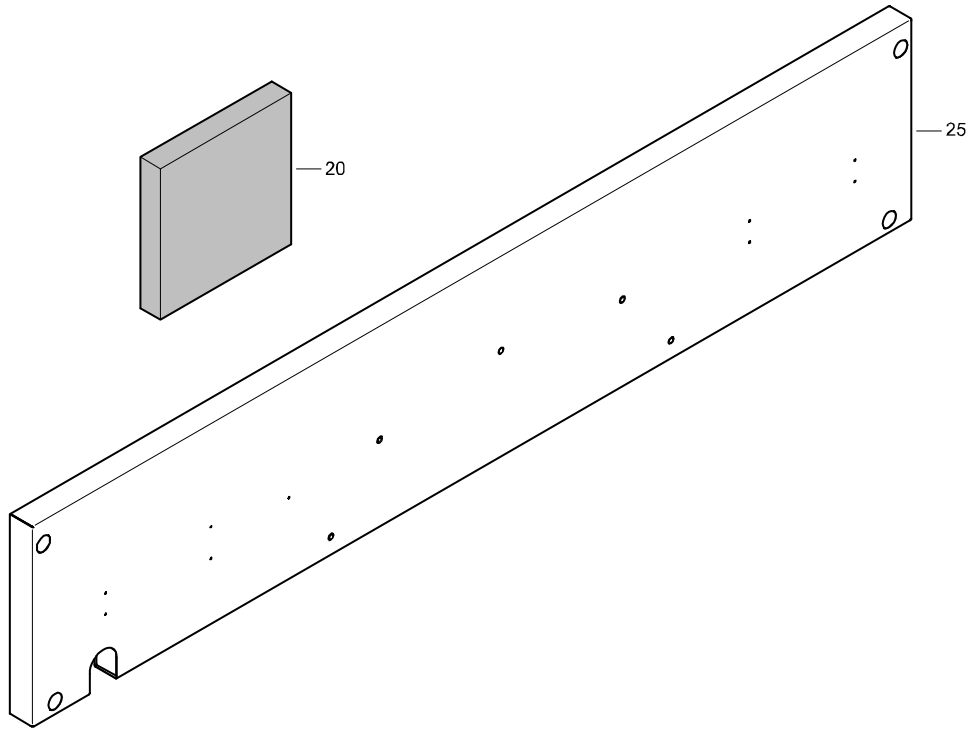

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5456 81	PANEL	(From page 74)				
•20	1604 5456 01	PANEL	1				
•25	-	SILENCING FOAM (50 mm)	1				
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

STANDARD

 
PANEL FOR STEEL CANOPY

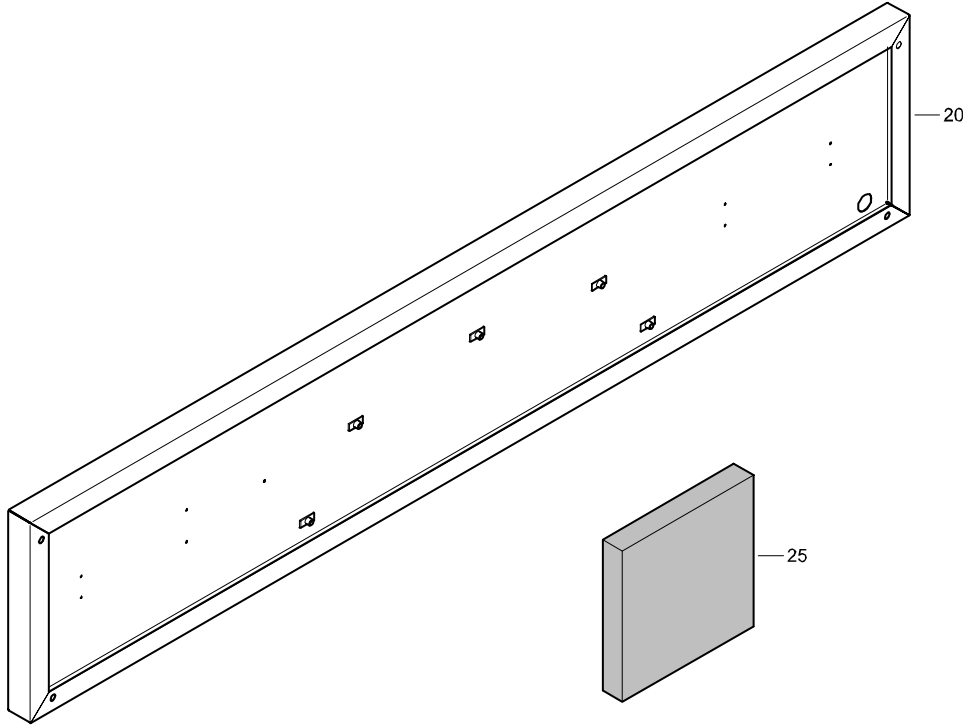

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5457 81	PANEL	(From page 64)				
•20	1604 5457 01	PANEL	1				
•25	-	SILENCING FOAM (50 mm)	1				
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

STANDARD

 
FRAME
NOT SPILLAGE FREE

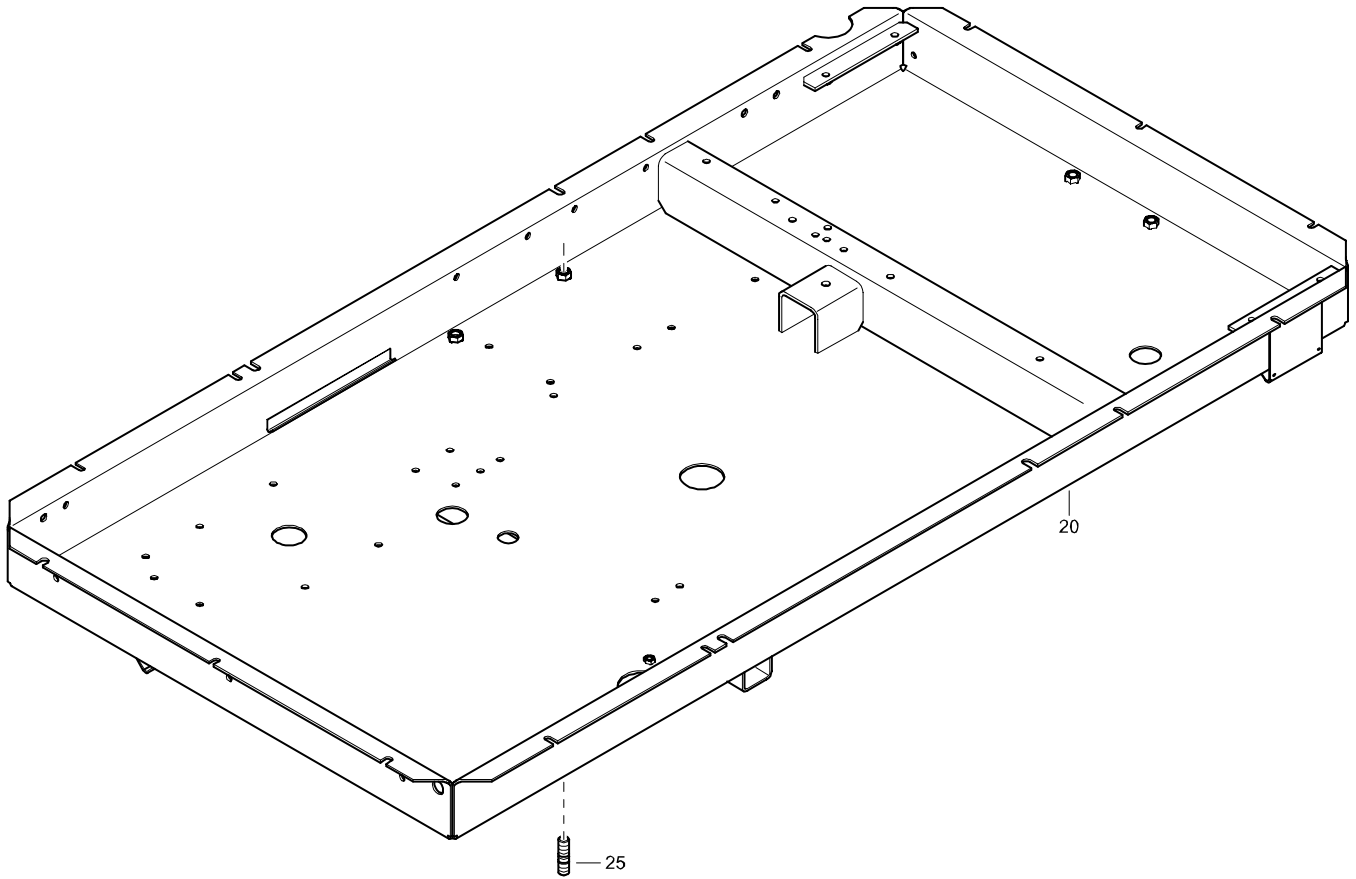

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5459 86	FRAME	(From page 63)				
•20	1604 5459 35	FRAME	1				
•25	0246 1956 57	STUD	4				

STANDARD

 
CONTROL PANEL ASSEMBLY FOR HARDHAT

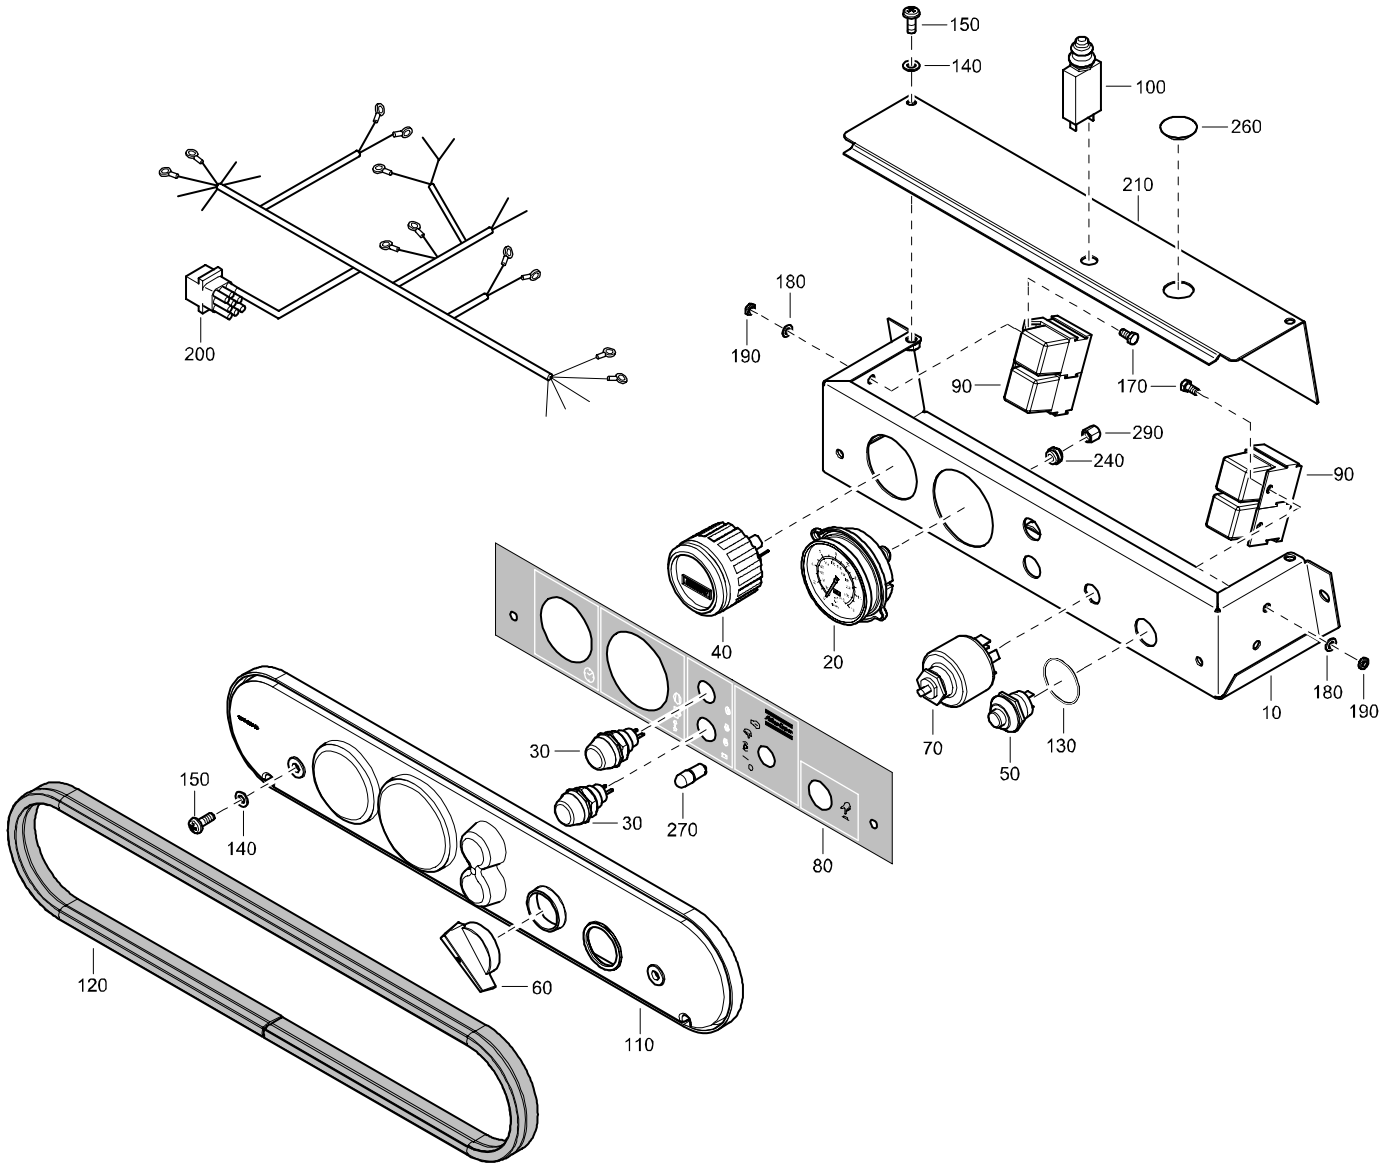

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 6261 82	PANEL	(From page 52)	•290	0584 2310 01	STRAIGHT PIPE COUPLING	1
•10	1604 4014 33	PANEL	AR				
•20	1604 4017 00	PRESSURE GAUGE	1				
•30	1089 0312 11	LAMPHOLDER	2				
•40	1089 0352 02	HOURMETER	1				
•50	1089 9326 01	PUSH BUTTON	1				
•60	1089 0608 04	BUTTON	1				
•70	1089 0608 03	SWITCH	1				
•80	1604 4015 01	LABEL	1				
•90	1089 0341 01	RELAY	4				
•100	1089 9206 31	CIRCUIT BREAKER	1				
•110	1604 4028 00	COVER	1				
•120	1202 6584 00	SEAL	AR				
•130	0663 9095 00	O-RING	1				
•140	0301 2321 00	PLAIN WASHER	4				
•150	0160 0996 83	CROSS REC SCREW	4				
•170	0147 1204 03	HEX. HEAD SCREW	4				
•180	0301 2318 00	PLAIN WASHER	4				
•190	0266 2107 00	HEXAGON NUT	4				
•200	1604 4068 00	WIRE HARNESS	1				
•210	1604 6260 01	COVER	AR				
•240	0584 0080 09	STRAIGHT PIPE COUPLING	1				
•260	0686 9252 69	PROTECTION PLUG	1				
•270	1091 0168 00	BULB	1				

STANDARD

 
HOOD ASSEMBLY 3 CYLINDER FOR HARDHAT

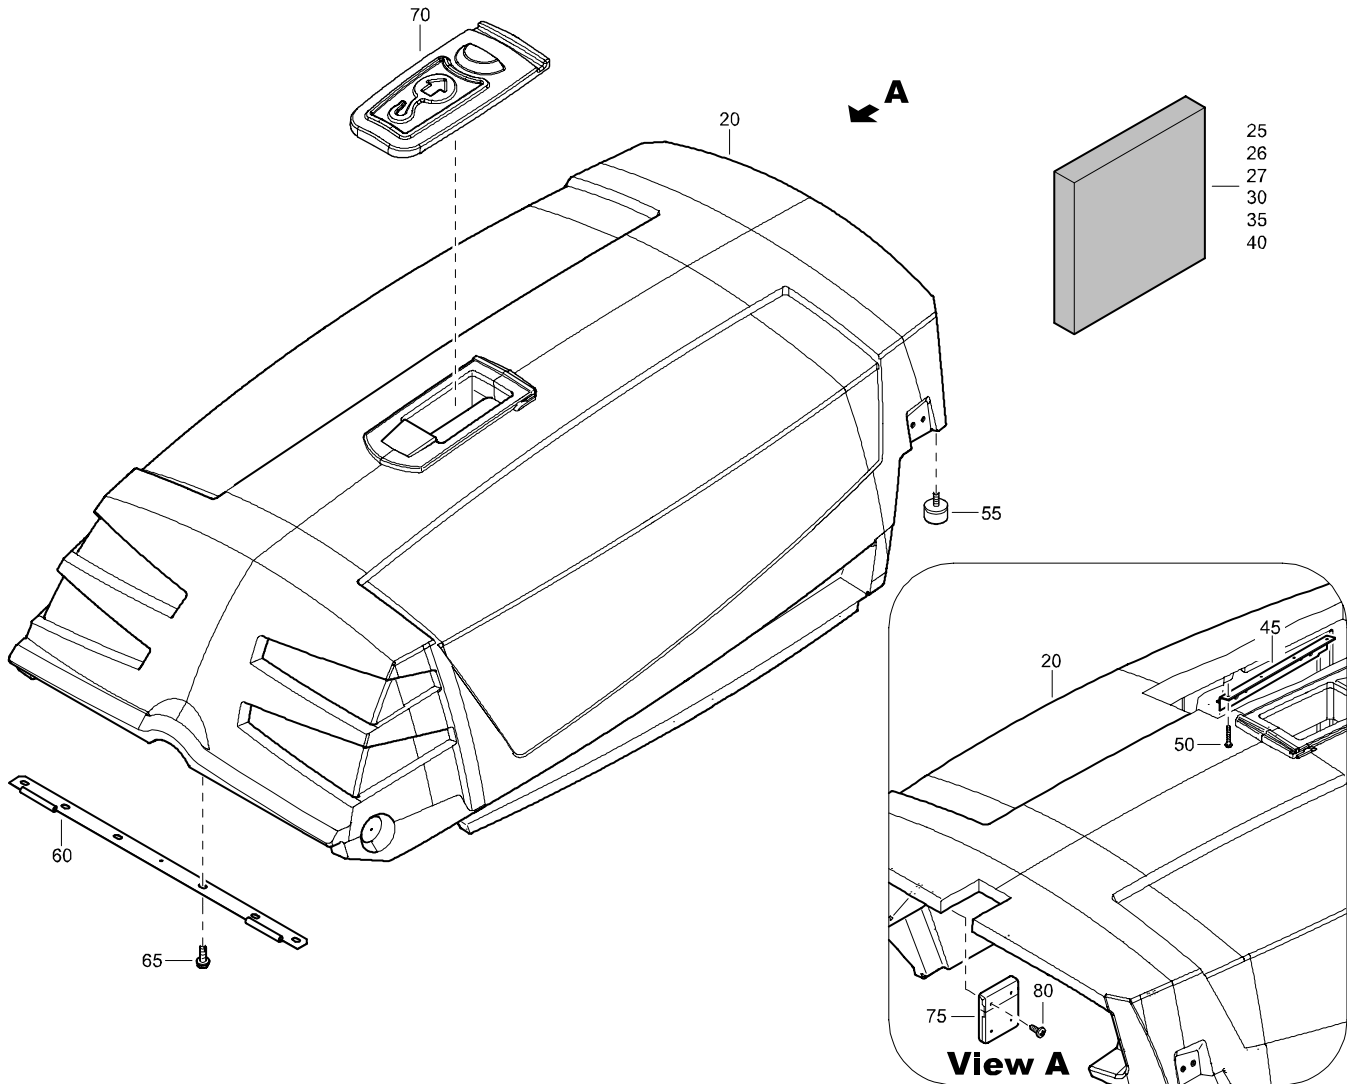

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 6722 80	HOOD ASSEMBLY	(From page 48)	-	1079 0003 32	SILENCING FOAM	
•20	1604 6722 00	HOOD	1	-	1079 0001 91	SILENCING FOAM	
•25	-	SILENCING FOAM (40 mm)	1			2000 mm x 1500 mm x 30 mm	
•26	-	SILENCING FOAM (40 mm)	1			2000 mm x 1500 mm x 40 mm	
•27	-	SILENCING FOAM (40 mm)	1				
•30	-	SILENCING FOAM (30 mm)	1				
•35	-	SILENCING FOAM (30 mm)	2				
•40	-	SILENCING FOAM (40 mm)	1				
•45	1604 6512 01	Z PLATE	2				
•50	0226 0047 05	TAPPING SCREW	24				
•55	1604 1869 00	BUFFER	2				
•60	1604 7177 00	HOOK	1				
•65	1615 5664 00	HEX. HEAD SCREW	6				
•70	1604 6258 01	COVER	1				
•75	1604 2206 00	HOLDER (DOCUMENT)	1				
•80	0226 0047 09	TAPPING SCREW	4				

STANDARD

 
BAFFLE ASSEMBLY FOR HARDHAT

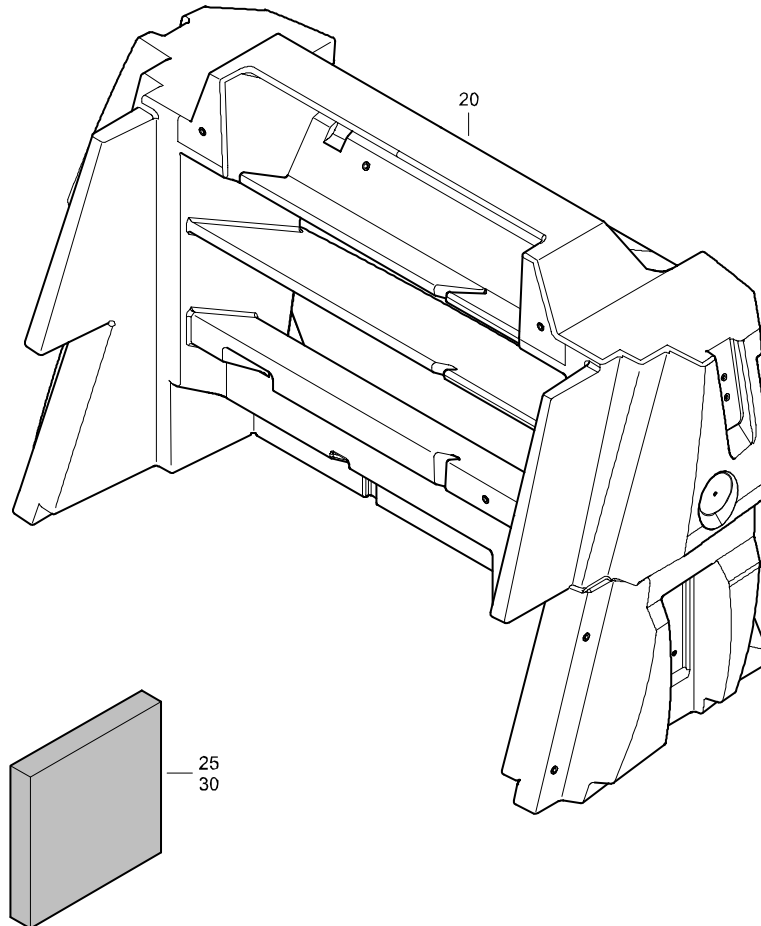

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 6723 81	BAFFLE ASSY	(From page 48)				
•20	1604 6723 01	BAFFLE	1				
•25	-	SILENCING FOAM (30 mm)	1				
•30	-	SILENCING FOAM (50 mm)	1				
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm					
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

STANDARD

 
UNLOADING VALVE ASSEMBLY

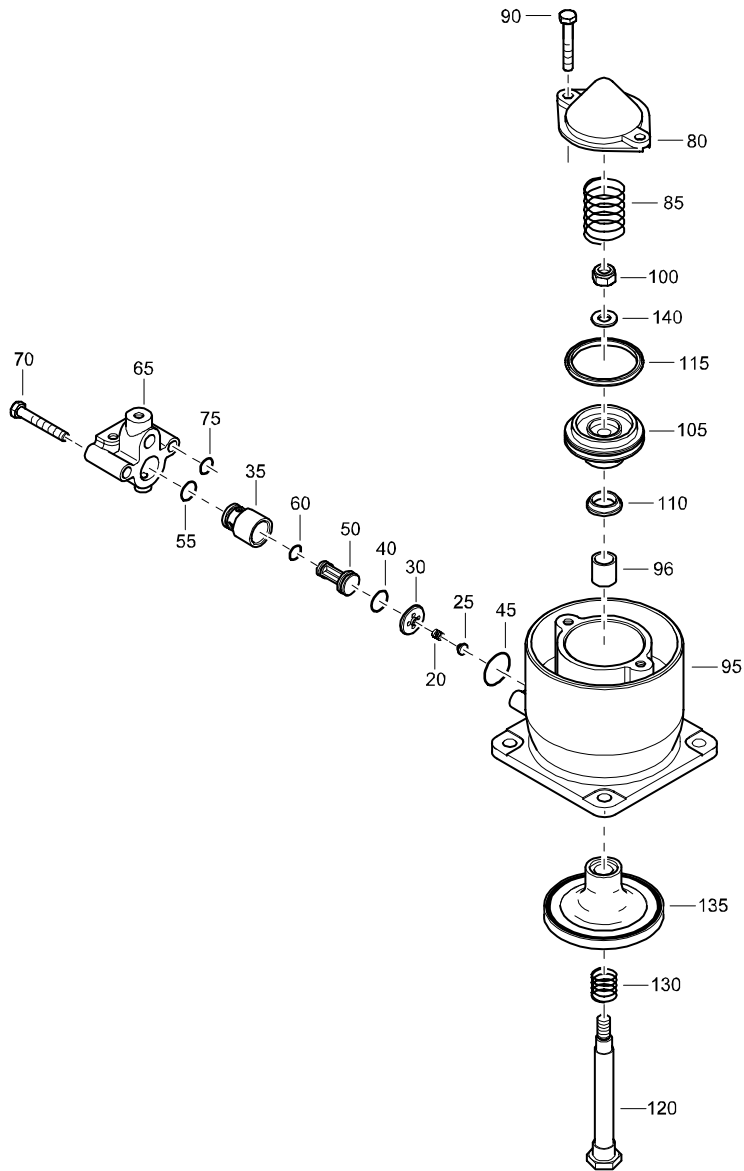

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1615 7667 82	UNLOADING VALVE ASSY (From page 38)		•85	1615 7672 01	SPRING	1
•20	-	SPRING (Part of service kit, see page 26)	1	•90	0147 1251 12	HEX. HEAD SCREW	2
•25	-	VALVE (Part of service kit, see page 26)	1	•95	-	HOUSING (Not available separately)	1
•30	1615 8346 00	RETAINER	1	•96	-	PLAIN BEARING (Not available separately)	1
•35	1615 8345 01	BUSHING	1	•100	0291 1110 00	LOCKNUT	1
•40	-	O-RING (Part of service kit, see page 26)	1	•105	1615 8755 00	PISTON	1
•45	-	O-RING (Part of service kit, see page 26)	1	•110	-	WIPER (Part of service kit, see page 26)	1
•50	1615 7673 00	VALVE	1	•115	-	PISTON SEAL (Part of service kit, see page 26)	1
•55	-	O-RING (Part of service kit, see page 26)	1	•120	1615 8757 00	PISTON ROD	1
•60	-	O-RING (Part of service kit, see page 26)	1	•130	-	SPRING (Part of service kit, see page 26)	1
•65	-	HOUSING (Not available separately)	1	•135	-	VALVE (Part of service kit, see page 26)	1
•70	0147 1252 12	HEX. HEAD SCREW	2	•140	0301 2335 00	PLAIN WASHER	1
•75	-	O-RING (Part of service kit, see page 26)	1				
•80	-	COVER UNLOADING VALVE (Not available separately)	1				

STANDARD

 
ACTUATING UNIT ASSEMBLY

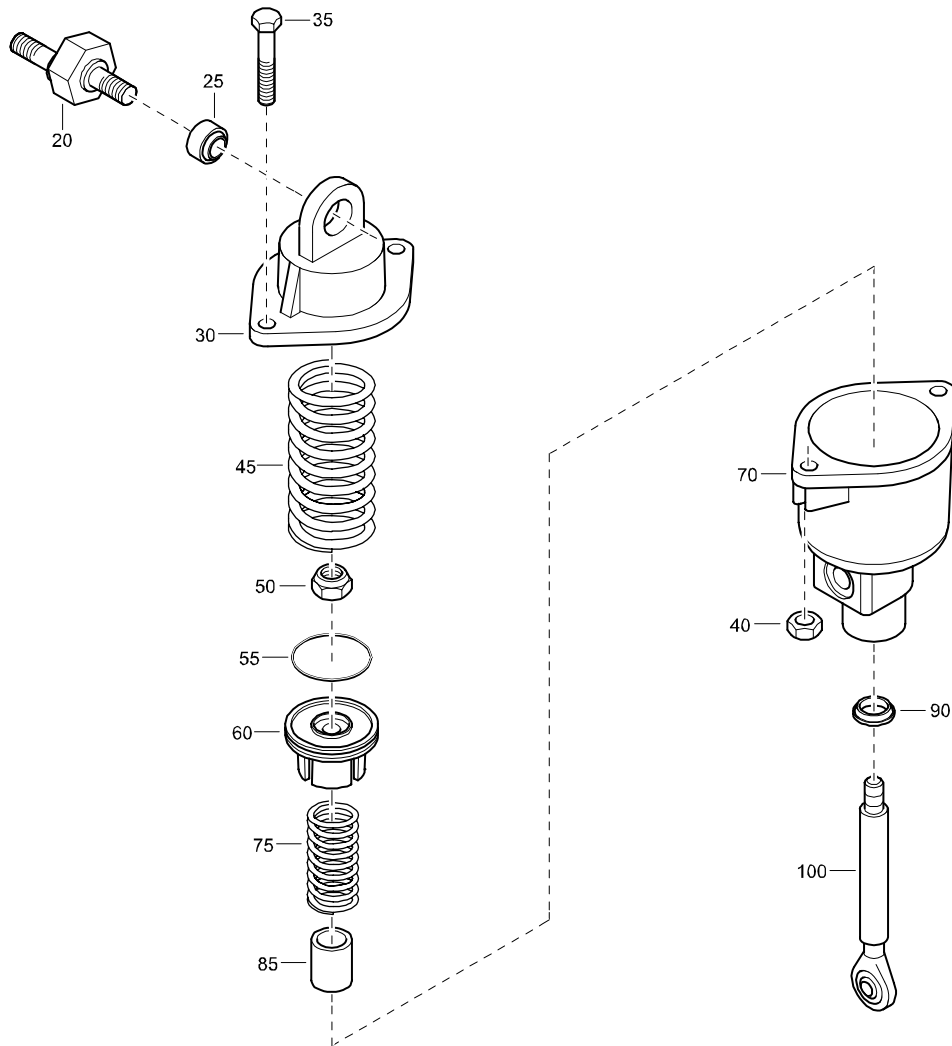

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1615 7676 82	ACTUATING UNIT ASSEMBLY(From page 38)					
•20	1615 8382 00	ADAPTOR	1				
•25	0501 0007 00	SPHERICAL PLAIN BEARING	1				
•30	-	COVER	1				
		(Not available separately)					
•35	0147 1252 12	HEX .HEAD SCREW	2				
•40	0266 2108 00	HEXAGON NUT	2				
•45	1615 8369 00	SPRING	1				
•50	0291 1110 00	LOCKNUT	2				
•55	0665 099954	PISTON SEAL	1				
•60	1615 8755 00	PISTON	1				
•70	-	HOUSING	1				
		(Not available separately)					
•75	2252 0489 00	COMPR.SPRING	1				
•85	-	PLAIN BEARING	1				
		(Not available separately)					
•90	0665 9110 01	WIPER	1				
•100	1615 8756 80	PISTON	1				

STANDARD

 
OILSEPARATOR ASME

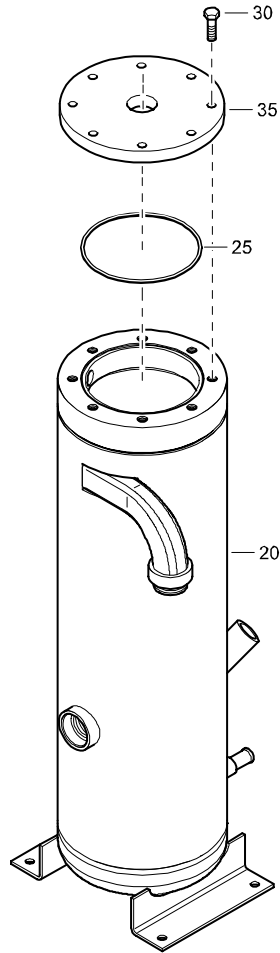

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5749 83	OILSEPARATOR ASME	(From page 77)				
•20	1604 5749 30	VESSEL	1				
•25	-	O-RING	1				
		(Part of service kit, see page 28)					
•30	0147 1403 03	HEX. HEAD SCREW	8				
•35	1615 7693 00	COVER	1				

STANDARD

 
VESSEL EC

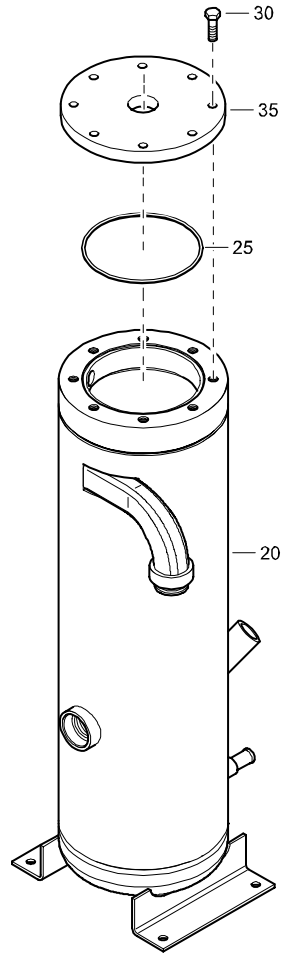

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5750 91	VESSEL EC	(From page 76)				
•20	1604 5750 30	VESSEL	1				
•25	-	O-RING	1				
		(Part of service kit, see page 28)					
•30	0147 1403 03	HEX. HEAD SCREW	8				
•35	1615 7693 00	COVER	1				

STANDARD

 
BALL VALVE ASSEMBLY

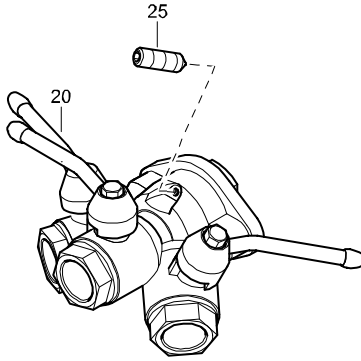

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1615 9474 81	BALL VALVE ASSEMBLY (From page 50)					
•20	1615 9474 01	VALVE HOUSING	1				
•25	0196 1552 63	SET SCREW	1				

STANDARD

 
REGULATING VALVE ASSEMBLY

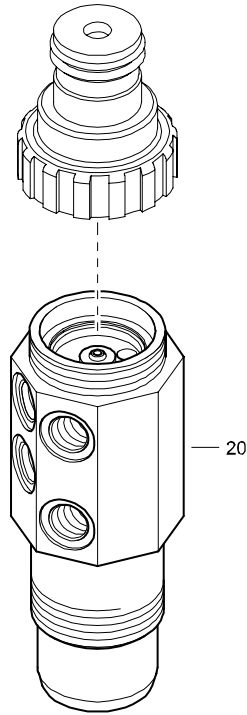

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1615 7664 80	REGULATING VALVE ASSY (From page 76, 77)					
•20	1615 7665 00	HOUSING	1				

OPTIONS

 
ADDITIONAL FUELFILTER

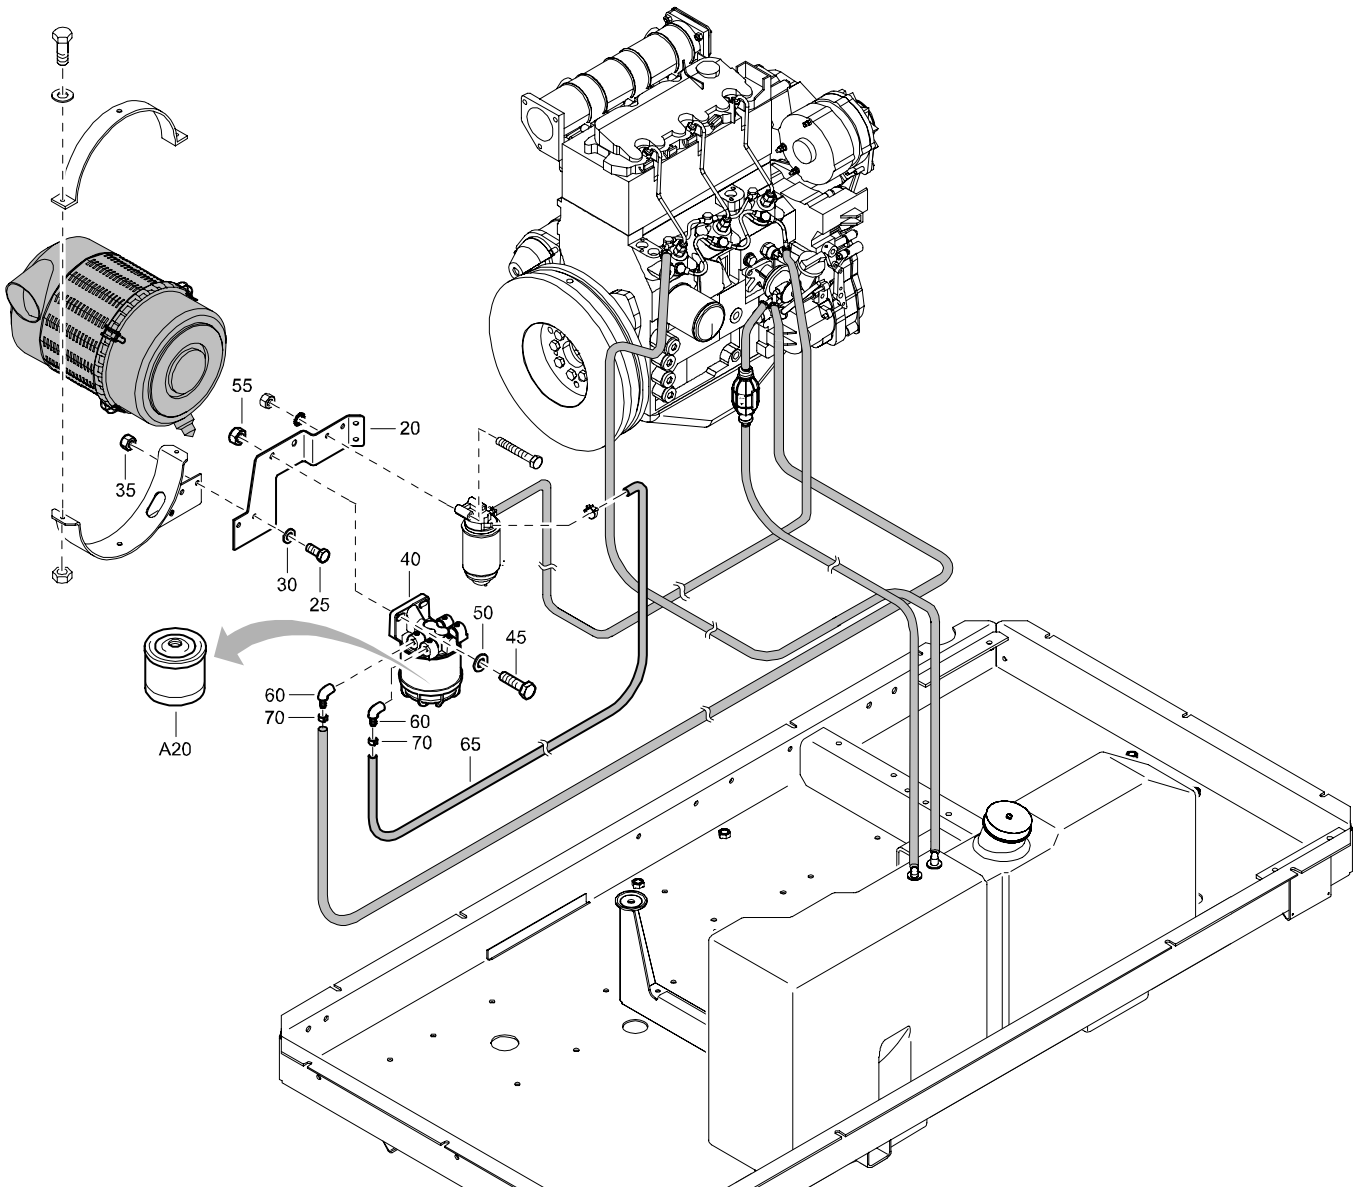

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 0126 00	SUPPORT	1				
25	0147 1322 03	HEX. HEAD SCREW	2				
30	0301 2335 00	PLAIN WASHER	2				
35	0266 2110 00	HEXAGON NUT	2				
40	1615 8929 00	FUELFILTER	1				
•A20	2914 8092 00	FILTERELEMENT	1				
45	0147 1363 03	HEX. HEAD SCREW	2				
50	0301 2344 00	PLAIN WASHER	2				
55	0266 2111 00	HEXAGON NUT	2				
60	1615 8933 00	HOSE NIPPLE	2				
65	0071 8402 48	FUEL HOSE	AR				
70	1604 4137 00	HOSE CLIP	2				

OPTIONS

 BATTERY CABLE

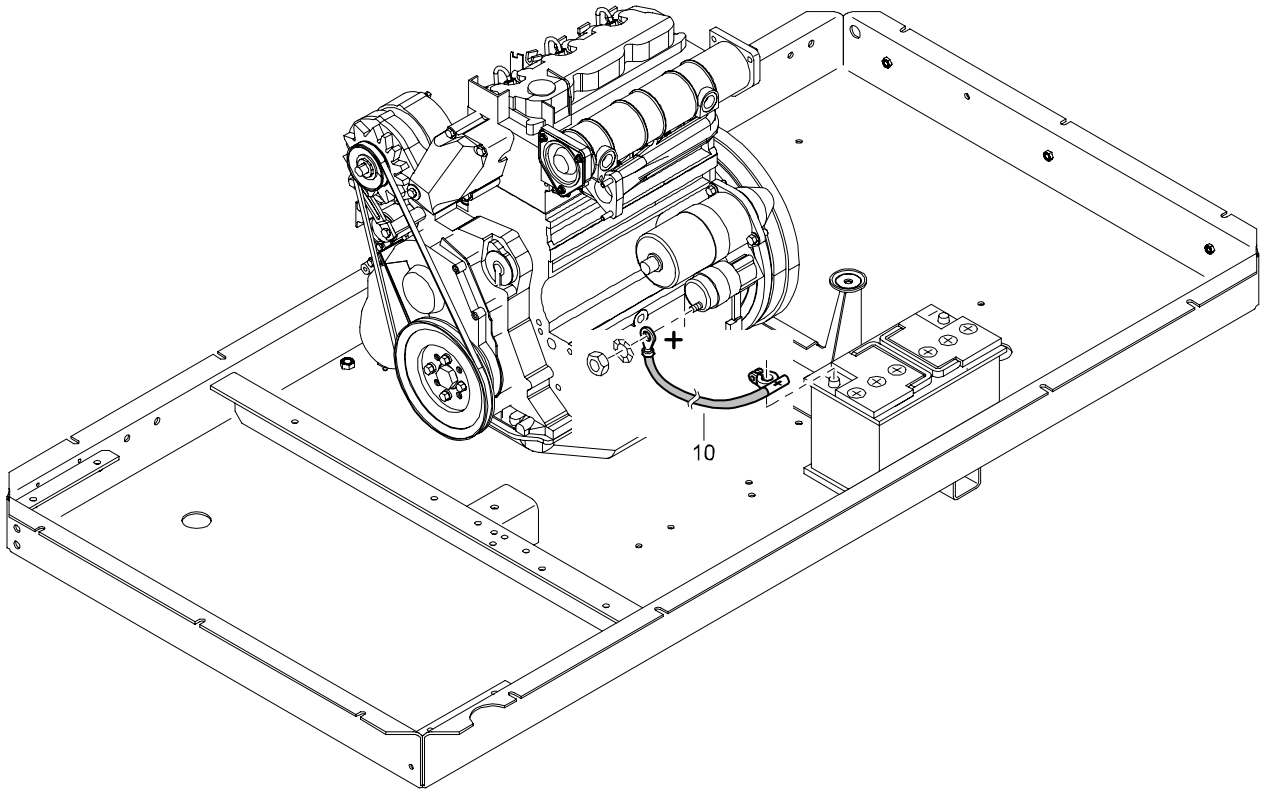


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1615 7725 01	BATTERY CABLE	1				

OPTIONS

TOWING EYES AC EYE - WITH BRAKES, DN EYE - WITH BRAKES, BALL COUPLING

 
AC EYE - WITH BRAKES

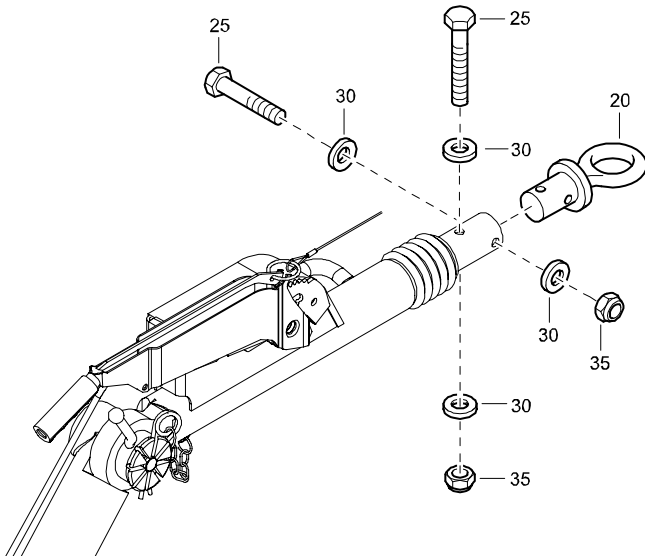

REF	PART NUMBER	DESIGNATION	QTY
20	1614 4368 00	A.C. EYE	1
25	1202 9844 02	BOLT	2
30	1202 9845 00	WASHER	4
35	0291 1185 13	LOCKNUT	2

1611 7701 12/00

 
DIN EYE - WITH BRAKES

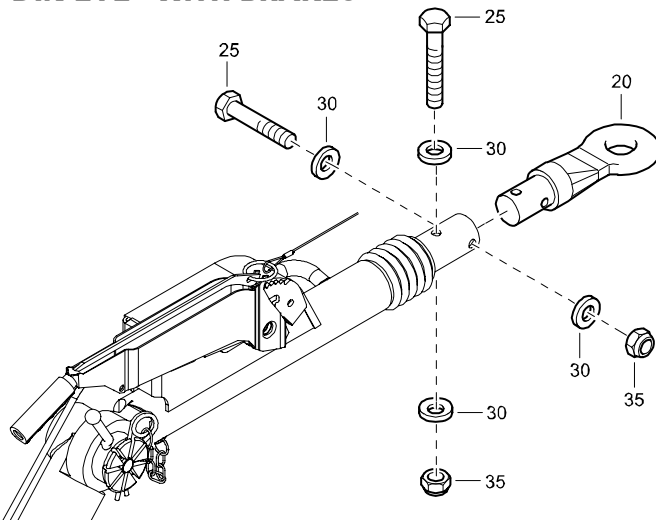

REF	PART NUMBER	DESIGNATION	QTY
20	1614 4392 00	DIN EYE	1
25	1202 9844 02	BOLT	2
30	1202 9845 00	WASHER	4
35	0291 1185 13	LOCKNUT	2

1611 7702 12/00

 BALL COUPLING - WITH BRAKES

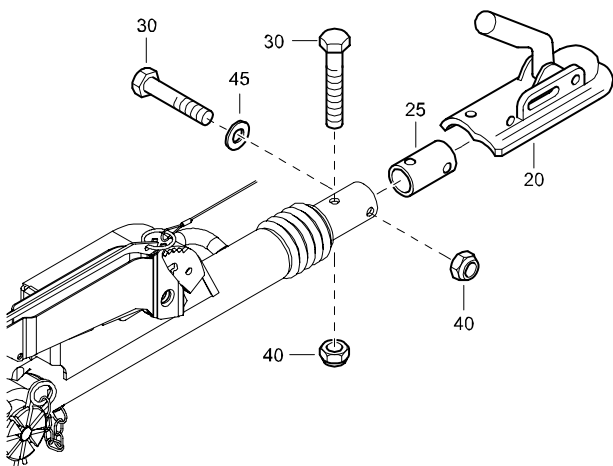


REF	PART NUMBER	DESIGNATION	QTY
20	1619 6826 00	BALL COUPLING	1
25	1202 9732 00	BUSH	1
30	1202 9844 02	BOLT	2
40	0291 1185 13	LOCKNUT	2
45	1202 9845 00	WASHER	1

1611 7703 12/02

OPTIONS

TOWING EYES ITA EYE - WITH BRAKES, GB EYE 50 MM, NATO EYE

 
ITA EYE - WITH BRAKES

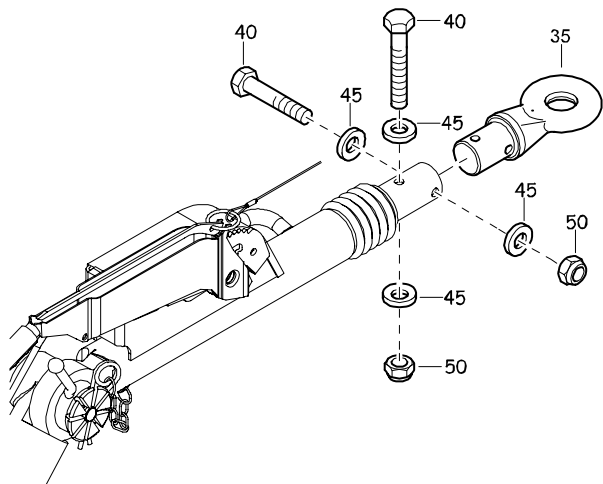

REF	PART NUMBER	DESIGNATION	QTY
35	1615 6820 02	TOWING EYE	1
40	1202 9844 02	BOLT	2
45	1202 9845 00	WASHER	4
50	0291 1185 13	LOCKNUT	2

1611 7704 12/04

 
GB EYE 50 MM - WITH BRAKES

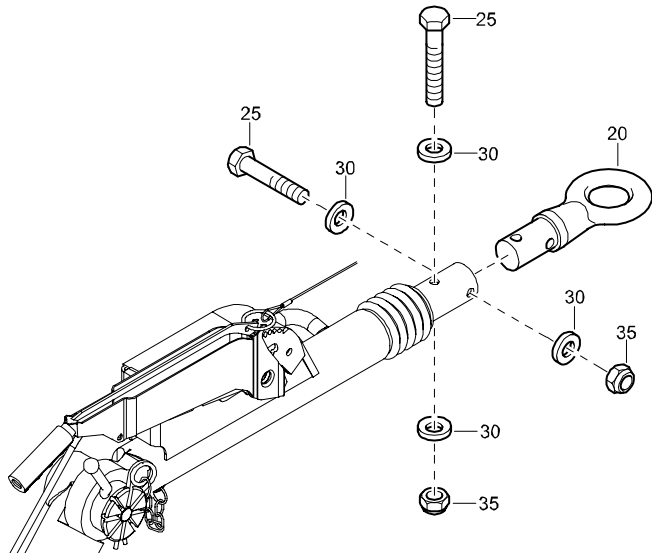

REF	PART NUMBER	DESIGNATION	QTY
20	1615 8659 01	50MM EYE	1
25	1202 9844 02	BOLT	2
30	1202 9845 00	WASHER	4
35	0291 1185 13	LOCKNUT	2

1611 7706 12/01

 NATO EYE - WITH BRAKES

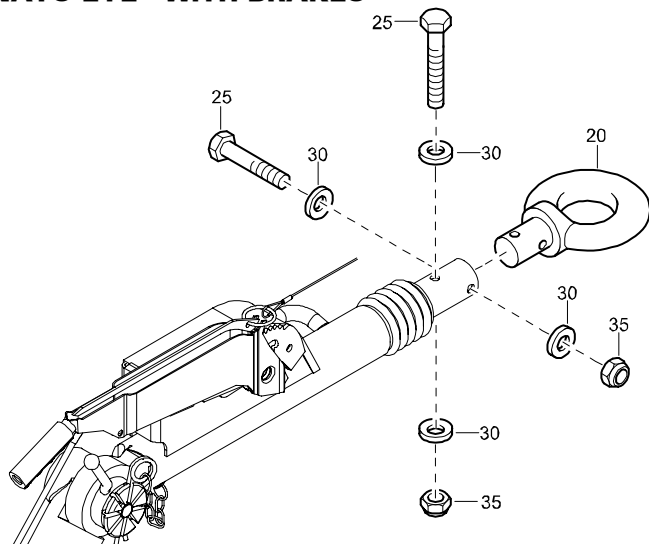


REF	PART NUMBER	DESIGNATION	QTY
20	1614 4678 00	NATO EYE	1
25	1202 9844 02	BOLT	2
30	1202 9845 00	WASHER	4
35	0291 1185 13	LOCKNUT	2

1611 7707 12/00

OPTIONS

TOWING EYES BALL COUPLING, JOCKY WHEEL, SAFETY CHAIN

 
BALL COUPLING - NO BRAKES

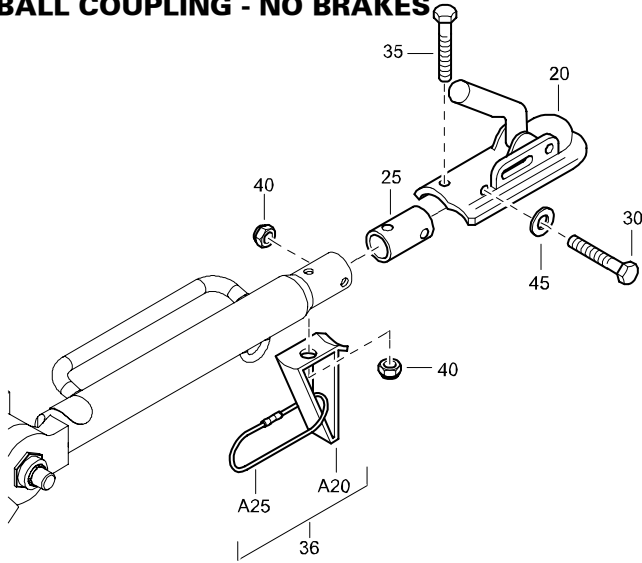

REF	PART NUMBER	DESIGNATION	QTY
20	1619 6826 00	BALL COUPLING	1
25	1202 9732 00	BUSH	1
30	1202 9844 02	BOLT	1
35	1202 9844 05	BOLT	1
36	1615 7467 00	BRACKET	1
•A20	1619 7213 00	SUPPORT	1
•A25	1615 6884 00	CABLE	1
40	0291 1185 13	LOCKNUT	2
45	0301 2358 00	PLAIN WASHER	1

1611 7713 12/02

 
JOCKY WHEEL

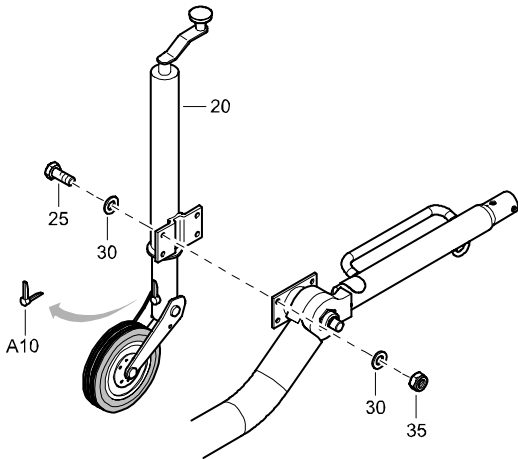

REF	PART NUMBER	DESIGNATION	QTY
20	1615 7769 00	SWIVEL WHEEL	1
•A10	2914 2370 00	LOCKING PIN	1
25	0147 1362 03	HEX. HEAD SCREW	4
30	0301 2344 00	PLAIN WASHER	8
35	0291 1111 00	LOCKNUT	4

1611 7721 12/01

 SAFETY CHAIN

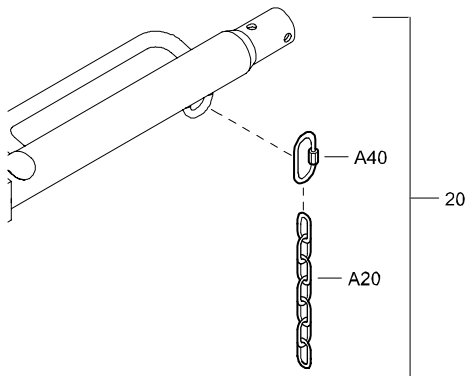


REF	PART NUMBER	DESIGNATION	QTY
20	1604 1574 80	CHAIN ASSY	1
•A20	1604 1574 00	SAFETY CHAIN	1
•A40	1604 1572 02	QUICK COUPLING	2

1611 7722 12/02

OPTIONS

 
SUPPORT LEG

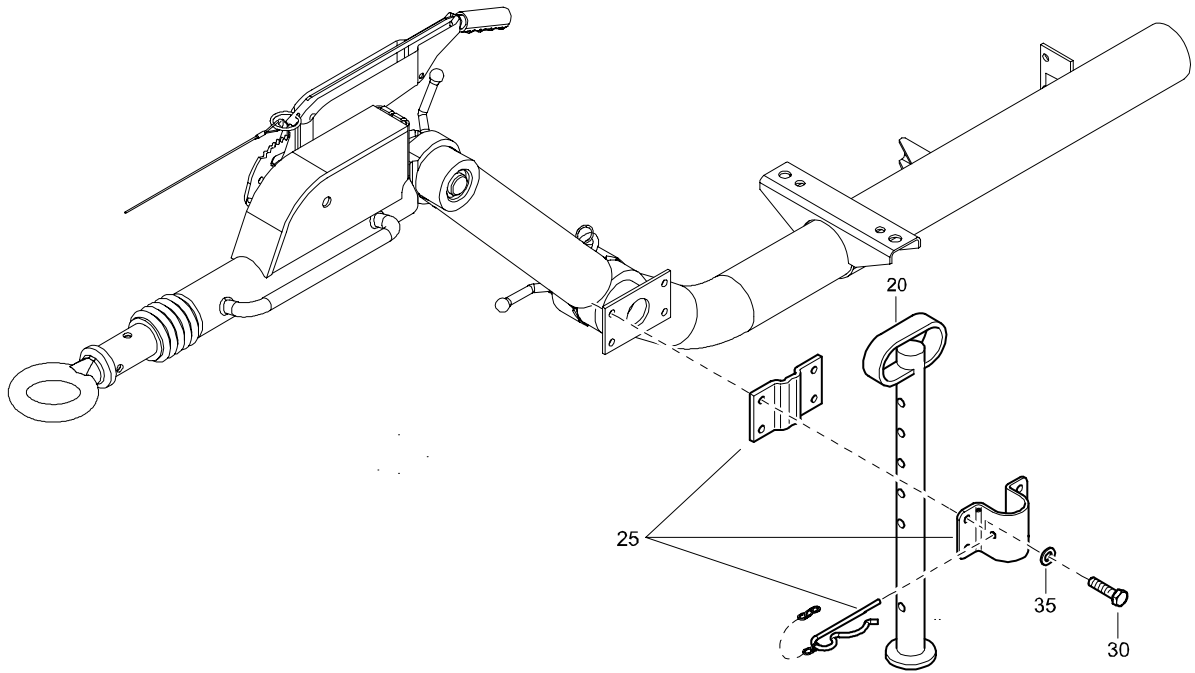

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1615 7752 01	FOOT	1				
25	1615 7751 00	CLAMP ASSY	1				
30	0147 1364 03	HEX. HEAD SCREW	4				
35	0301 2344 00	PLAIN WASHER	4				

OPTIONS

 UNDERCARRIAGE FIXED WITHOUT BRAKES

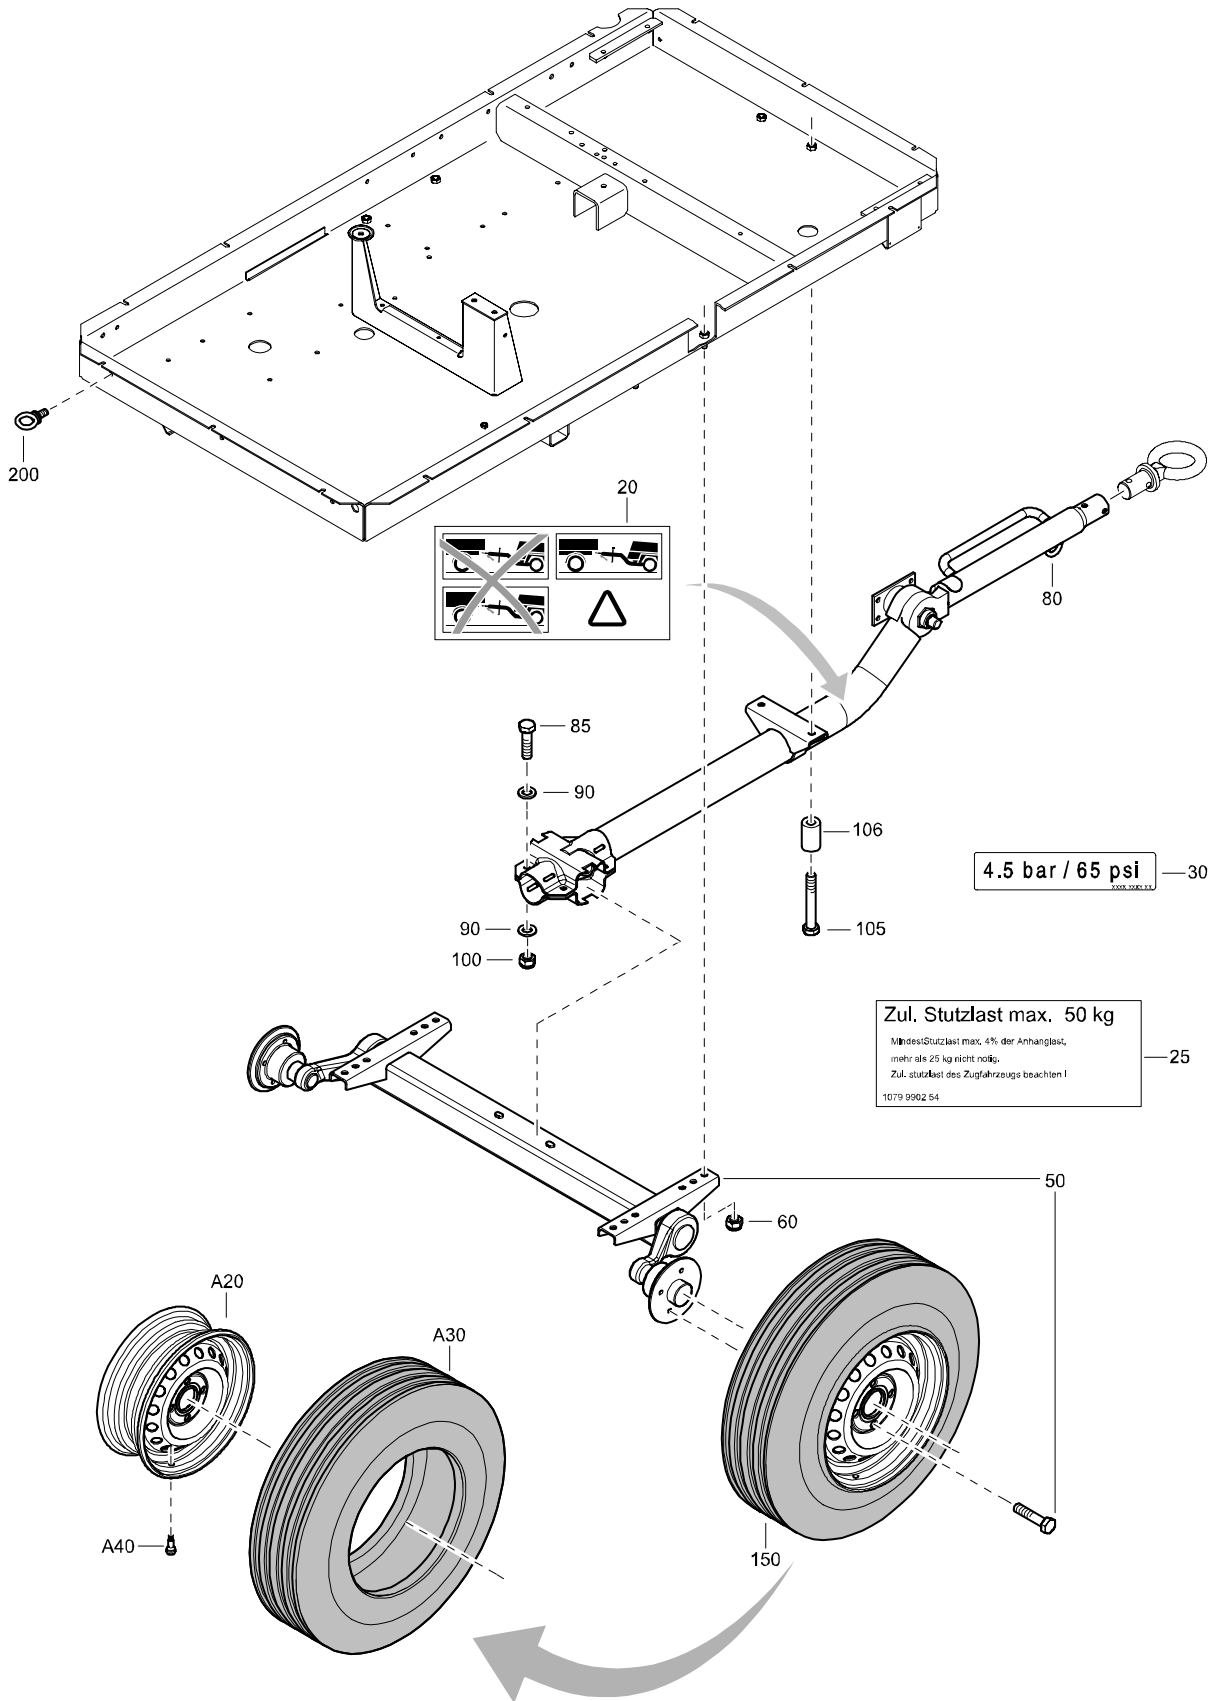


OPTIONS

UNDERCARRIAGE FIXED WITHOUT BRAKES

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1079 9902 00	WARNING LABEL	1				
25	1079 9902 54	LABEL	1				
30	1079 9917 97	INFORMATION LABEL	2				
50	1604 3802 00	AXLE	1				
		(For details see page 176)					
60	0291 1112 00	LOCKNUT	4				
80	1604 3804 09	FIXED NOBRAKES	1				
		(For details see page 178)					
85	0147 1403 03	HEX. HEAD SCREW	4				
90	0301 2358 00	PLAIN WASHER	8				
100	0291 1112 00	LOCKNUT	4				
105	0147 1412 03	HEX. HEAD SCREW	2				
106	1615 9575 00	SPACER	2				
150	1615 9618 87	TYRE ASSY	2				
•A20	1604 0333 00	DISC WHEEL	1				
•A30	0538 0400 21	TYRE	1				
•A40	1615 6322 00	VENTIL	1				
200	0371 1100 21	LIFTING EYE	2				

OPTIONS

 UNDERCARRIAGE FIXED WITH BRAKES

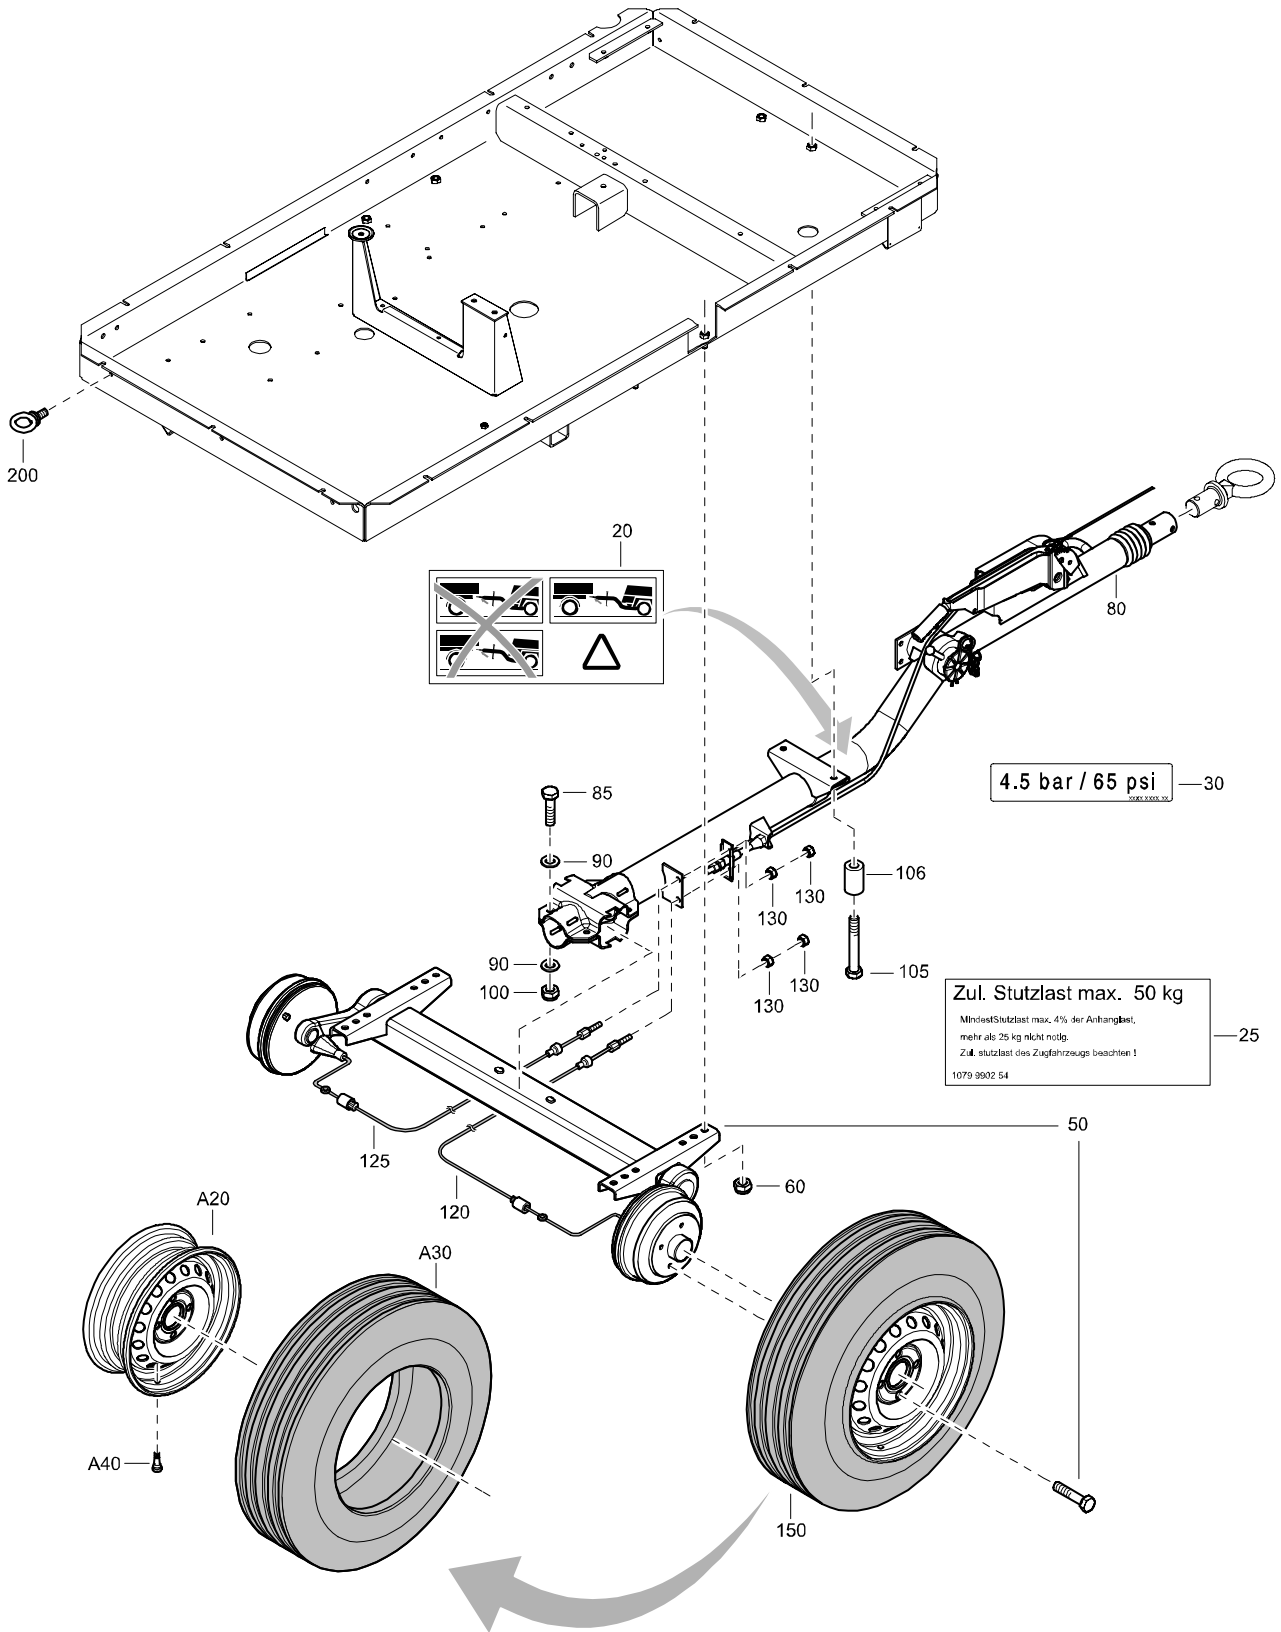


OPTIONS

UNDERCARRIAGE FIXED WITH BRAKES

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1079 9902 00	WARNING LABEL	1				
25	1079 9902 54	LABEL	1				
30	1079 9917 97	INFORMATION LABEL	2				
50	1604 3803 00	AXLE	1				
		(For details see page 177)					
60	0291 1112 00	LOCKNUT	4				
80	1604 3806 13	TOWBAR	1				
		(For details see page 179)					
85	0147 1403 03	HEX. HEAD SCREW	4				
90	0301 2358 00	PLAIN WASHER	8				
100	0291 1112 00	LOCKNUT	4				
105	0147 1412 03	HEX. HEAD SCREW	2				
106	1615 9575 00	SPACER	2				
120	1615 9352 00	BRAKE CABLE	1				
125	1615 9353 00	BRAKE CABLE	1				
130	0266 2110 00	HEXAGON NUT	4				
150	1615 9618 87	TYRE ASSY	2				
•A20	1604 0333 00	DISC WHEEL	1				
•A30	0538 0400 21	TYRE	1				
•A40	1615 6322 00	VENTIL	1				
200	0371 1100 21	LIFTING EYE	2				

OPTIONS

 UNDERCARRIAGE ADJUSTABLE WITH BRAKES

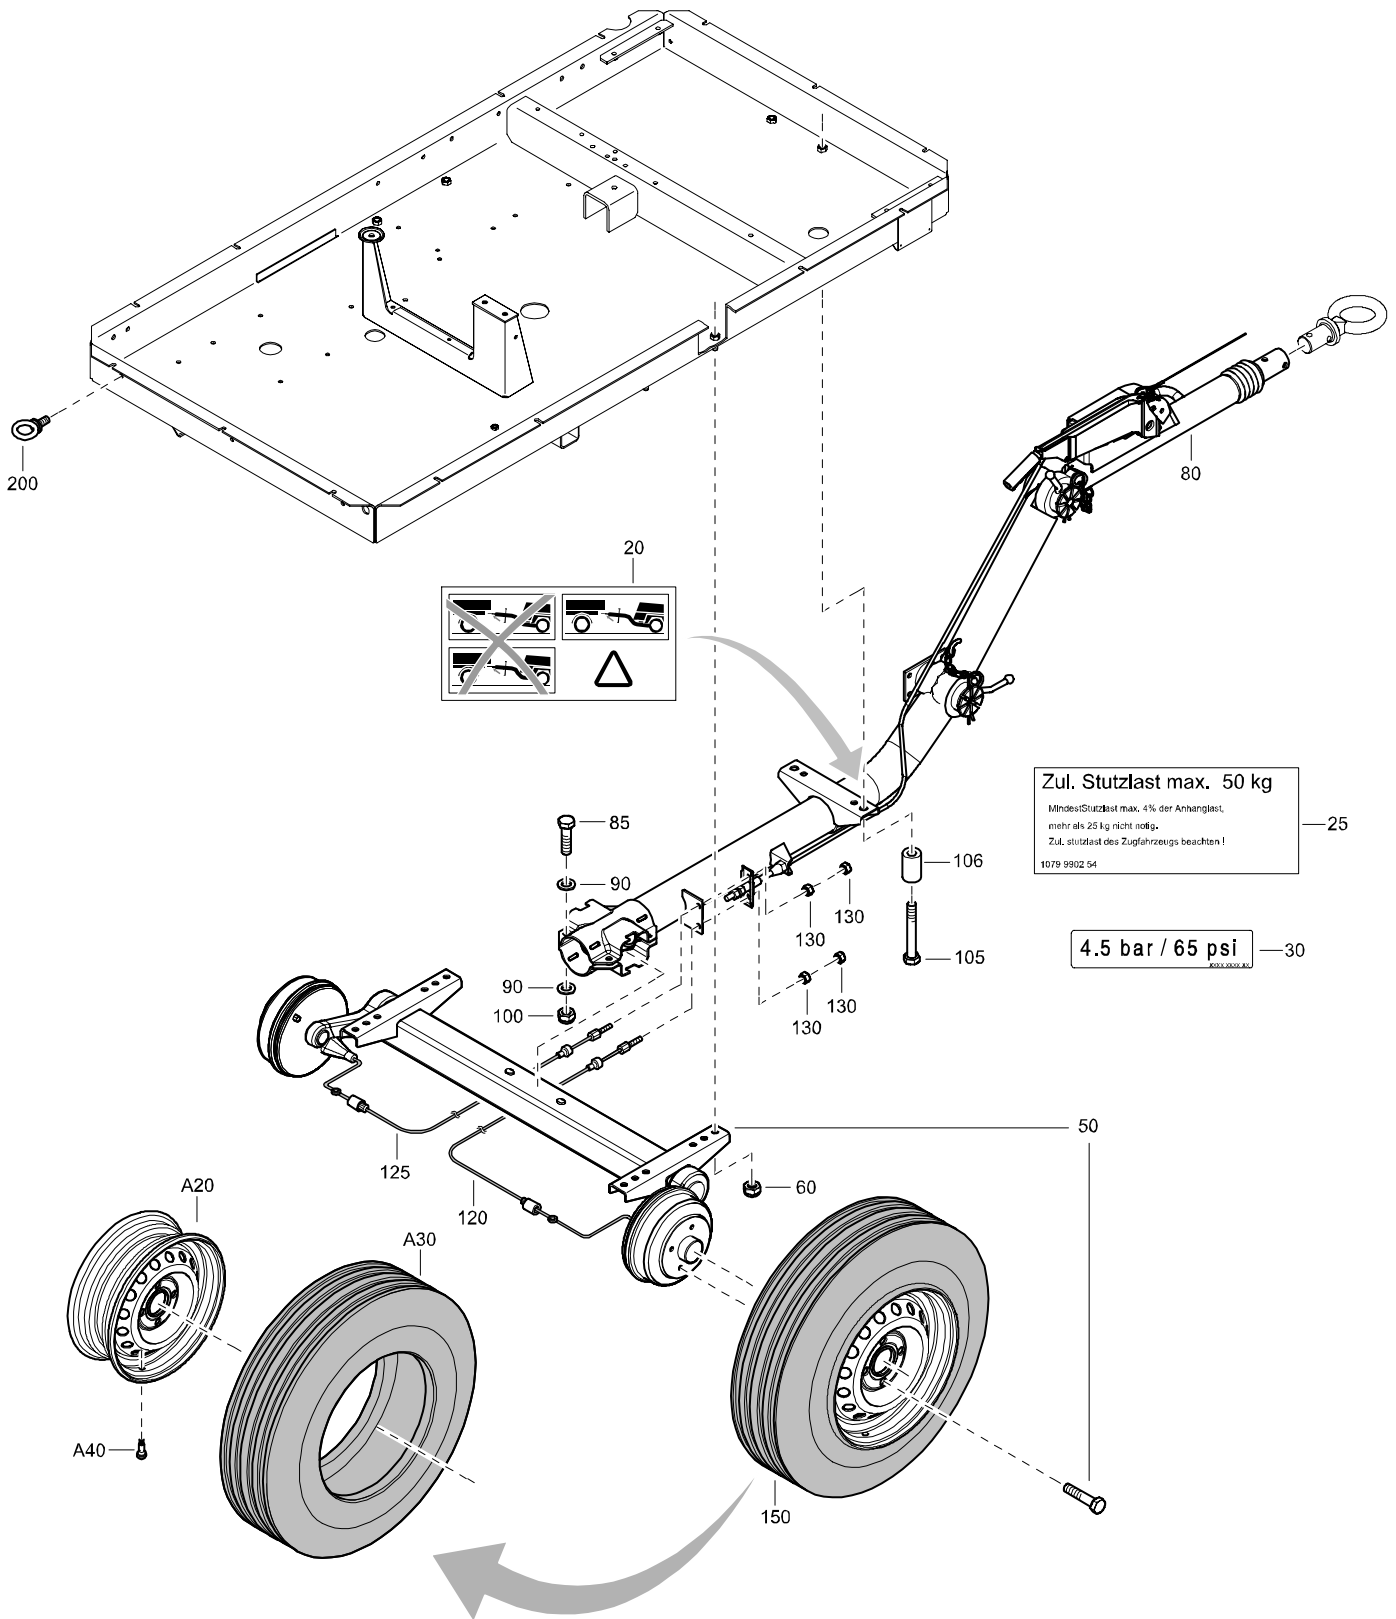


OPTIONS

UNDERCARRIAGE ADJUSTABLE WITH BRAKES

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1079 9902 00	WARNING LABEL	1				
25	1079 9902 54	LABEL	1				
30	1079 9917 97	INFORMATION LABEL	2				
50	1604 3803 00	AXLE	1				
		(For details see page 177)					
60	0291 1112 00	LOCKNUT	4				
80	1604 3807 06	TOWBAR	1				
		(For details see page 180)					
85	0147 1403 03	HEX. HEAD SCREW	4				
90	0301 2358 00	PLAIN WASHER	8				
100	0291 1112 00	LOCKNUT	4				
105	0147 1411 03	HEX. HEAD SCREW	2				
106	1615 9575 00	SPACER	2				
120	1615 9352 00	BRAKE CABLE	1				
125	1615 9353 00	BRAKE CABLE	1				
130	0266 2110 00	HEXAGON NUT	4				
150	1615 9618 87	TYRE ASSY	2				
•A20	1604 0333 00	DISC WHEEL	1				
•A30	0538 0400 21	TYRE	1				
•A40	1615 6322 00	VENTIL	1				
200	0371 1100 21	LIFTING EYE	2				

OPTIONS

 
SAFETY CHAIN USA

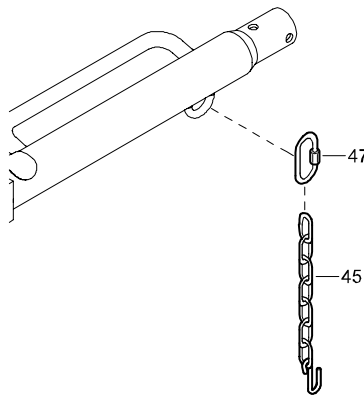

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
45	1615 9731 00	SAFETY CHAIN	2				
47	1604 1572 01	QUICK COUPLING	1				

OPTIONS

 
MUDGUARDS FOR STEEL CANOPY

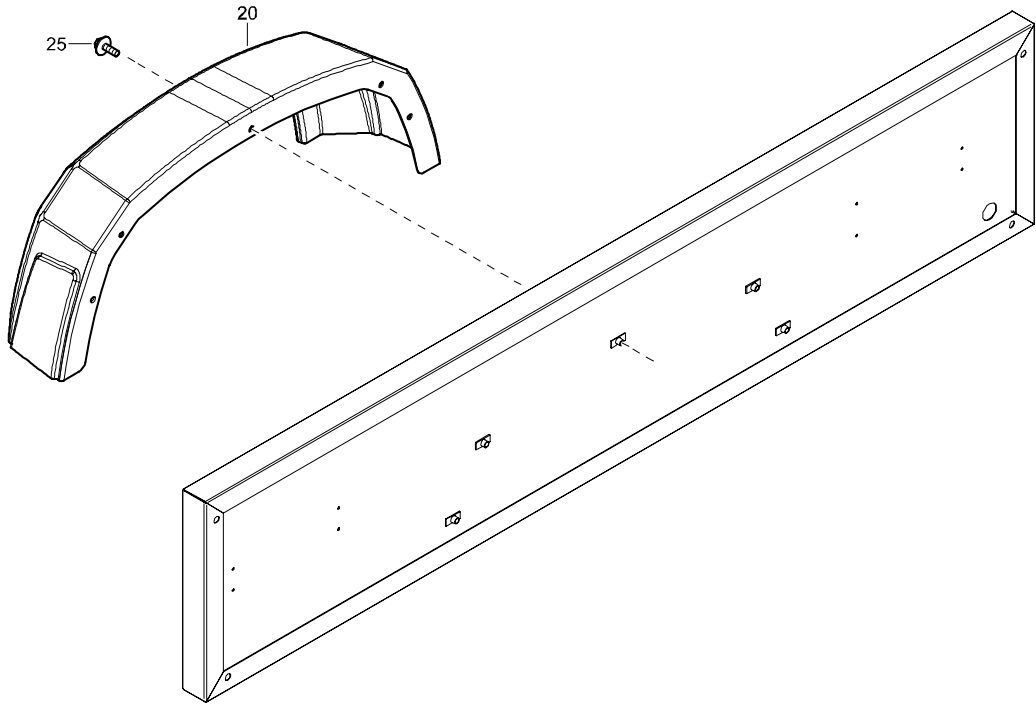

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5450 01	MUDGUARD	2				
25	1615 5664 00	HEX. HEAD SCREW	10				

OPTIONS

 
COSMOS GLOBAL COVERAGE WITH GPRS NETWORK

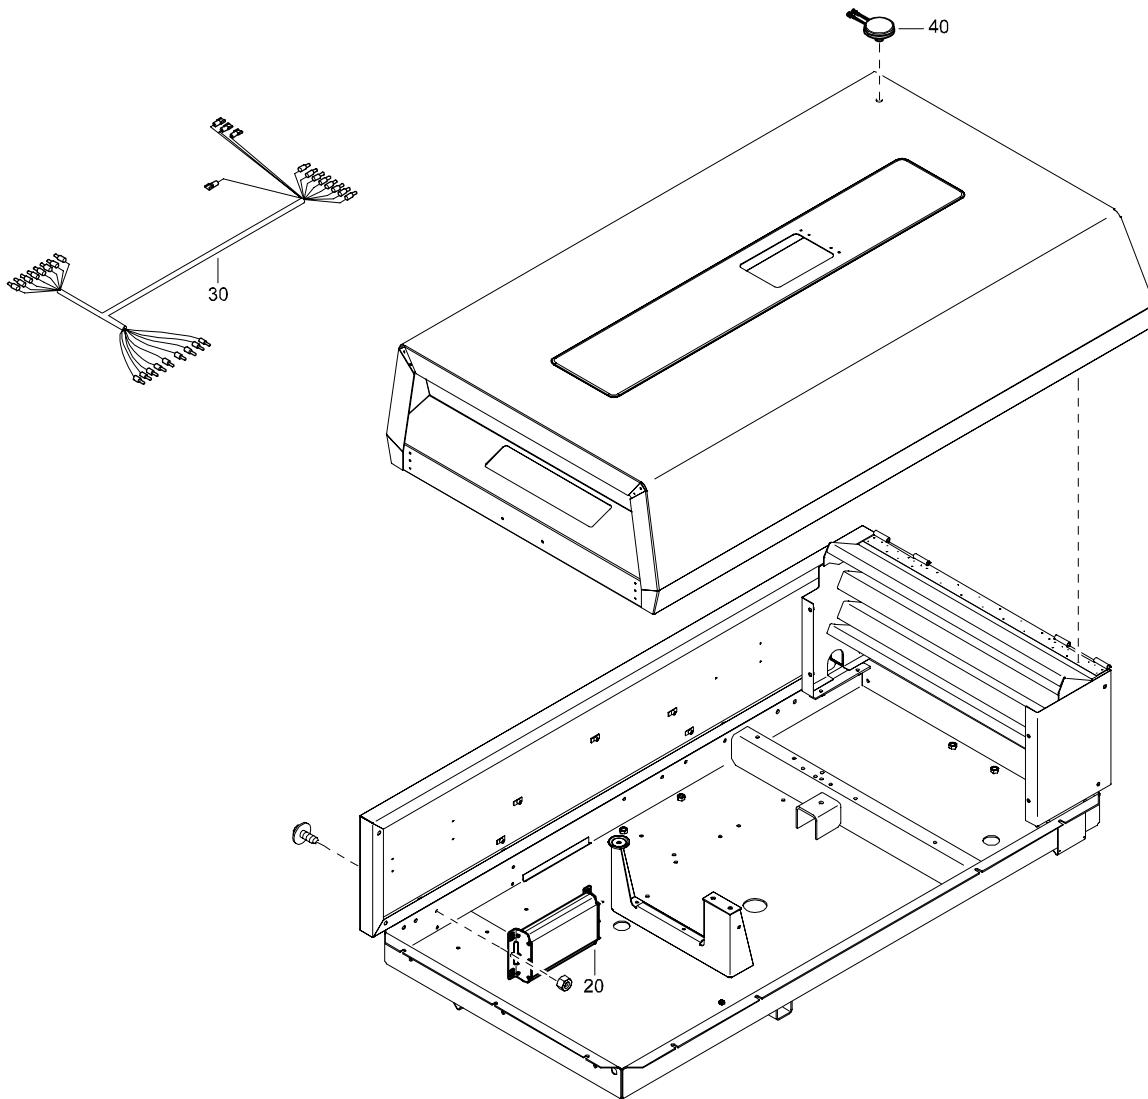

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 7945 00	COSMOS MODULE	1				
30	1626 0283 00	WIRING COSMOS	1				
40	1089 9593 97	ANTENNA	1				

OPTIONS

 
COSMOS GLOBAL COVERAGE WITH CDMA NETWORK

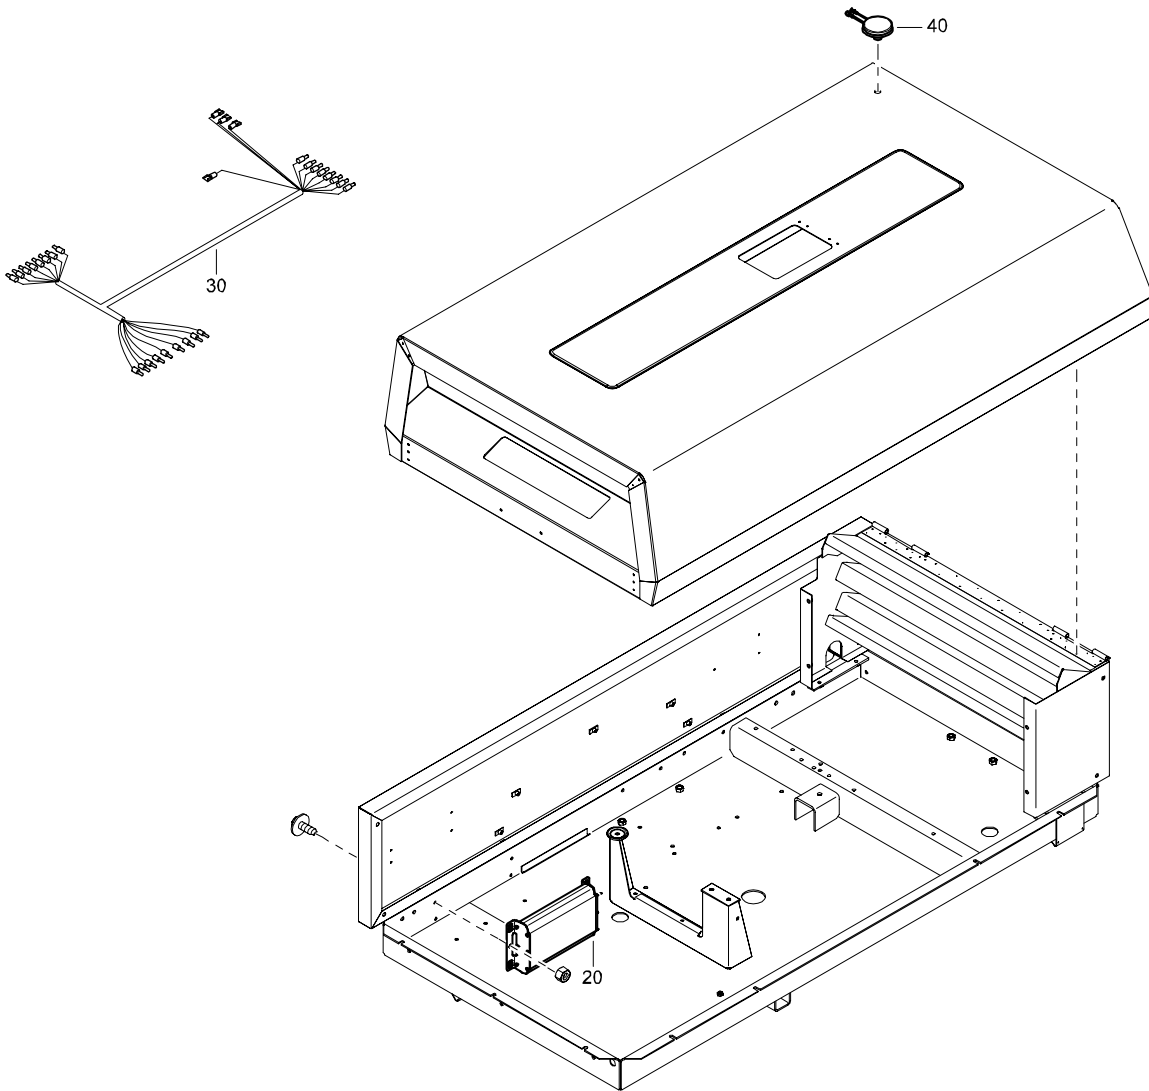

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 8945 00	COSMOS MODULE	1				
30	1626 0283 00	WIRING COSMOS	1				
40	1089 9593 97	ANTENNA	1				

OPTIONS

 
TOOLBOX SINGLE

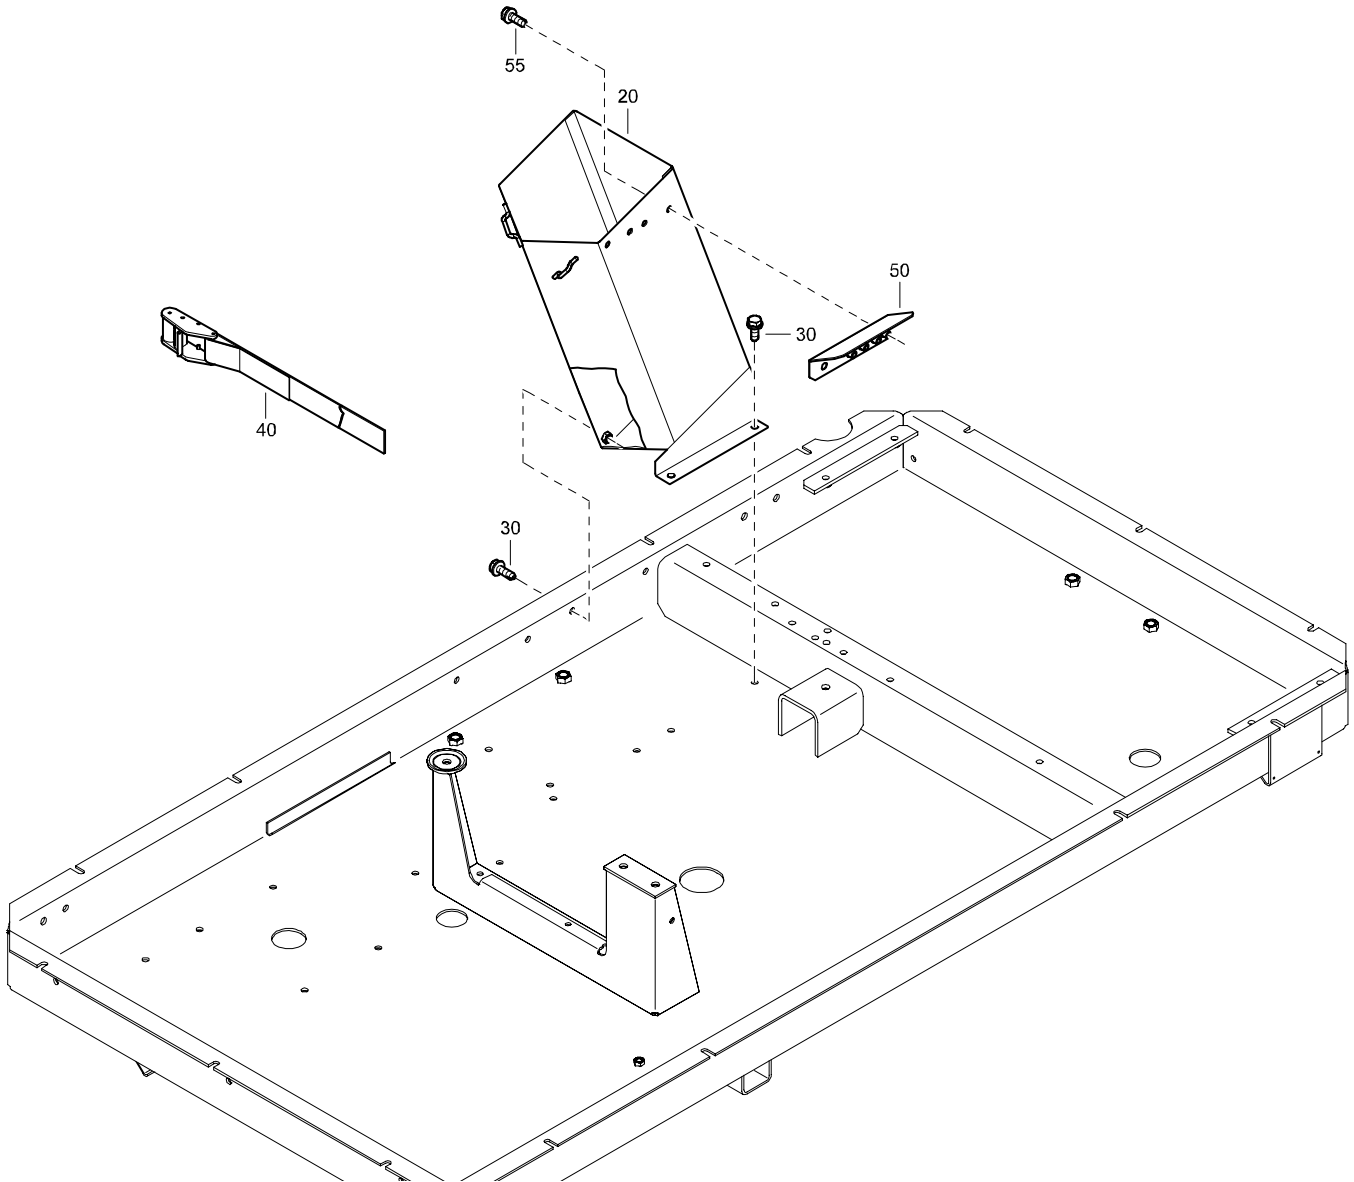

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 3904 32	TOOLBOX	1				
30	1619 2766 00	HEX. HEAD SCREW	4				
40	1615 9121 00	NYLON BAND	1				
50	1604 6593 30	PROTECTION	1				
55	1619 2766 00	HEX. HEAD SCREW	2				

OPTIONS

 
TOOLBOX TWIN

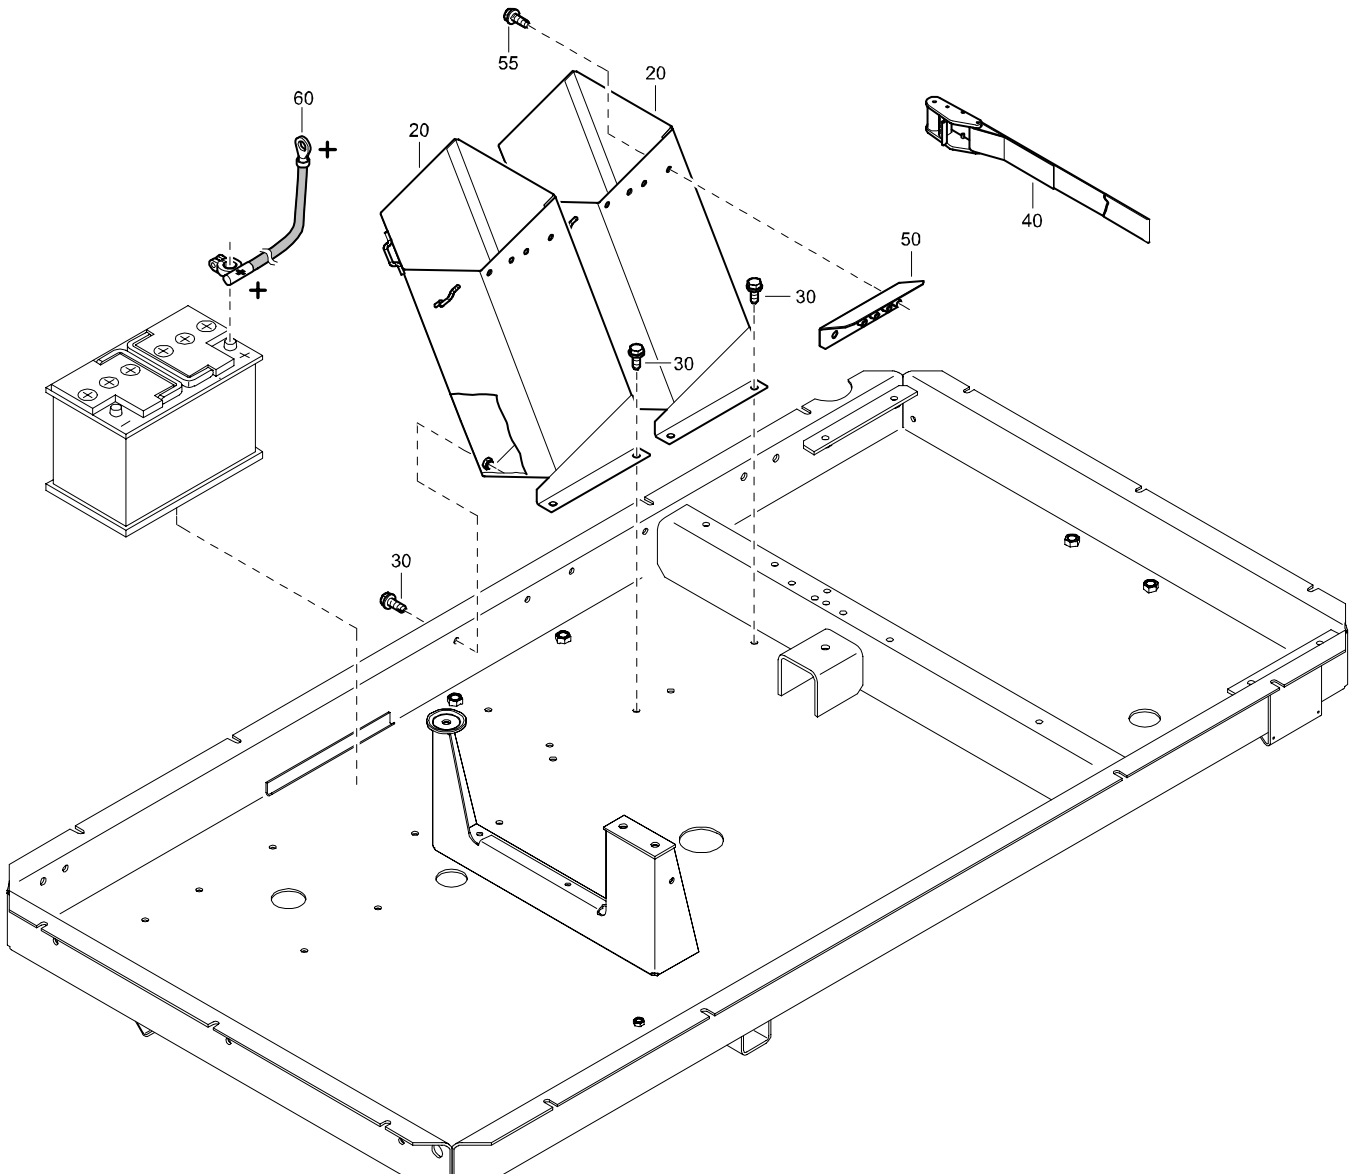

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 3904 32	TOOLBOX	2				
30	1619 2766 00	HEX. HEAD SCREW	8				
40	1615 9121 00	NYLON BAND	2				
50	1604 6593 30	PROTECTION	1				
55	1619 2766 00	HEX. HEAD SCREW	2				
60	1604 9615 00	BATTERY CABLE	1				

OPTIONS

 
FRAME SPILLAGE FREE

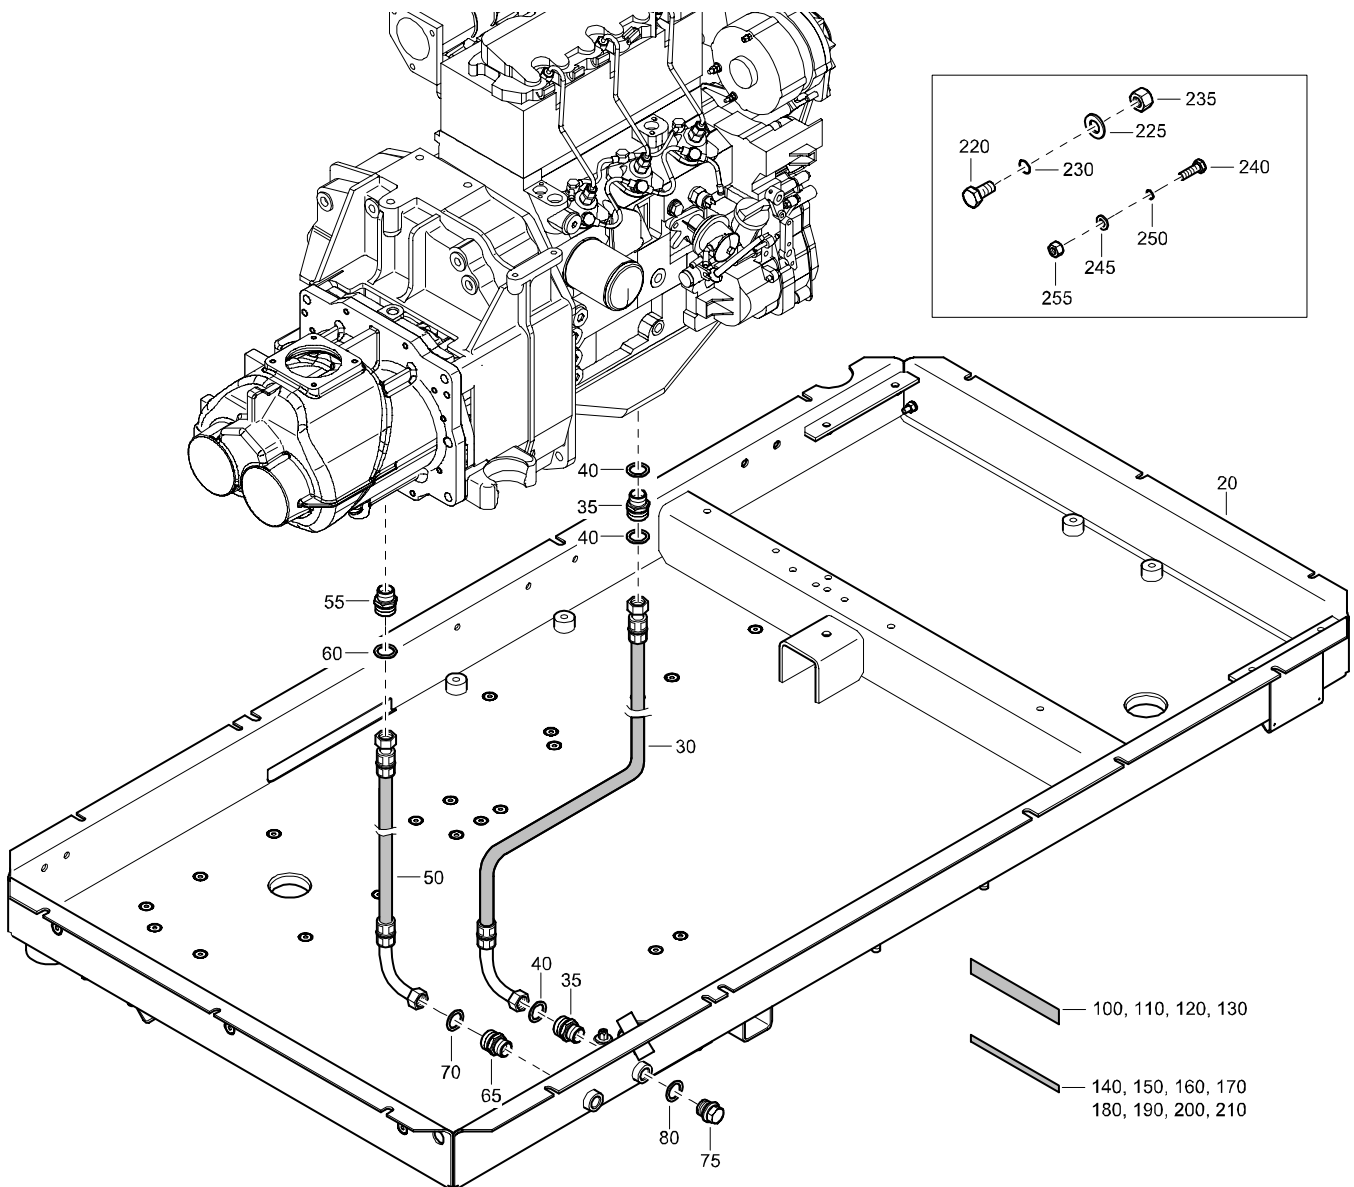

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5417 86	FRAME <i>(For details see page 189)</i>	1	180	1615 7057 00	SEAL	AR
30	1604 5426 00	HOSE ASSEMBLY	1	190	1615 7057 00	SEAL	AR
35	0571 0035 71	JOINT NIPPLE	2	200	1615 7057 00	SEAL	AR
40	0653 1115 00	FLAT GASKET	3	210	1615 7057 00	SEAL	AR
50	1604 5447 00	HOSE ASSEMBLY	1	220	0147 1400 03	HEX. HEAD SCREW	2
55	0571 0035 71	JOINT NIPPLE	1	225	0301 2371 00	PLAIN WASHER	2
60	0653 1115 00	FLAT GASKET	1	230	0663 2122 00	O-RING	2
65	0571 0035 71	JOINT NIPPLE	1	235	0266 2112 00	HEXAGON NUT	2
70	0653 1115 00	FLAT GASKET	1	240	0147 1325 03	HEX. HEAD SCREW	1
75	0686 4230 18	HEXAGON PLUG	1	245	0301 2335 00	PLAIN WASHER	1
80	0653 1115 00	FLAT GASKET	1	250	0663 3117 00	O-RING	1
100	1619 5188 00	SEAL	AR	255	0266 2110 00	HEXAGON NUT	1
110	1619 5188 00	SEAL	AR				
120	1619 5188 00	SEAL	AR				
130	1619 5188 00	SEAL	AR				
140	1615 7057 00	SEAL	AR				
150	1615 7057 00	SEAL	AR				
160	1615 7057 00	SEAL	AR				
170	1615 7057 00	SEAL	AR				

OPTIONS

 
METAL FILLERNECK-FUELTANK

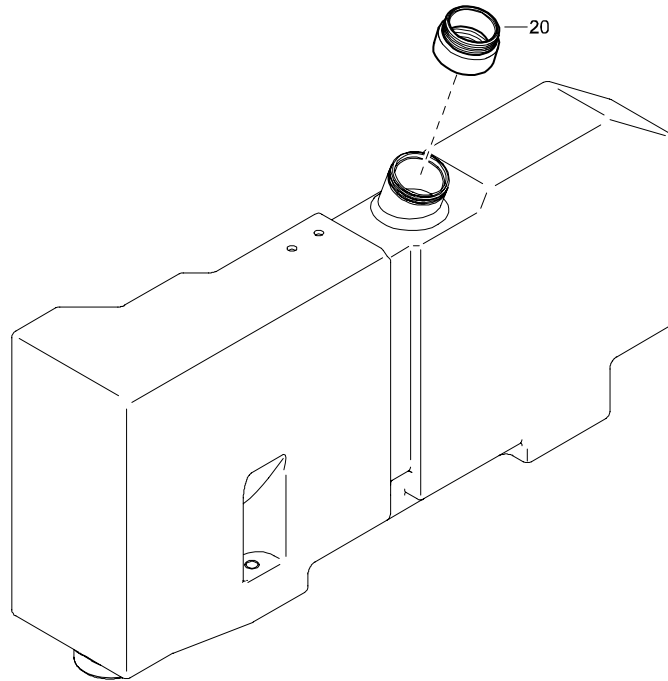

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 4494 00	CONNECTION NUT FUELTANK	1				

OPTIONS

 
SPARK ARRESTOR

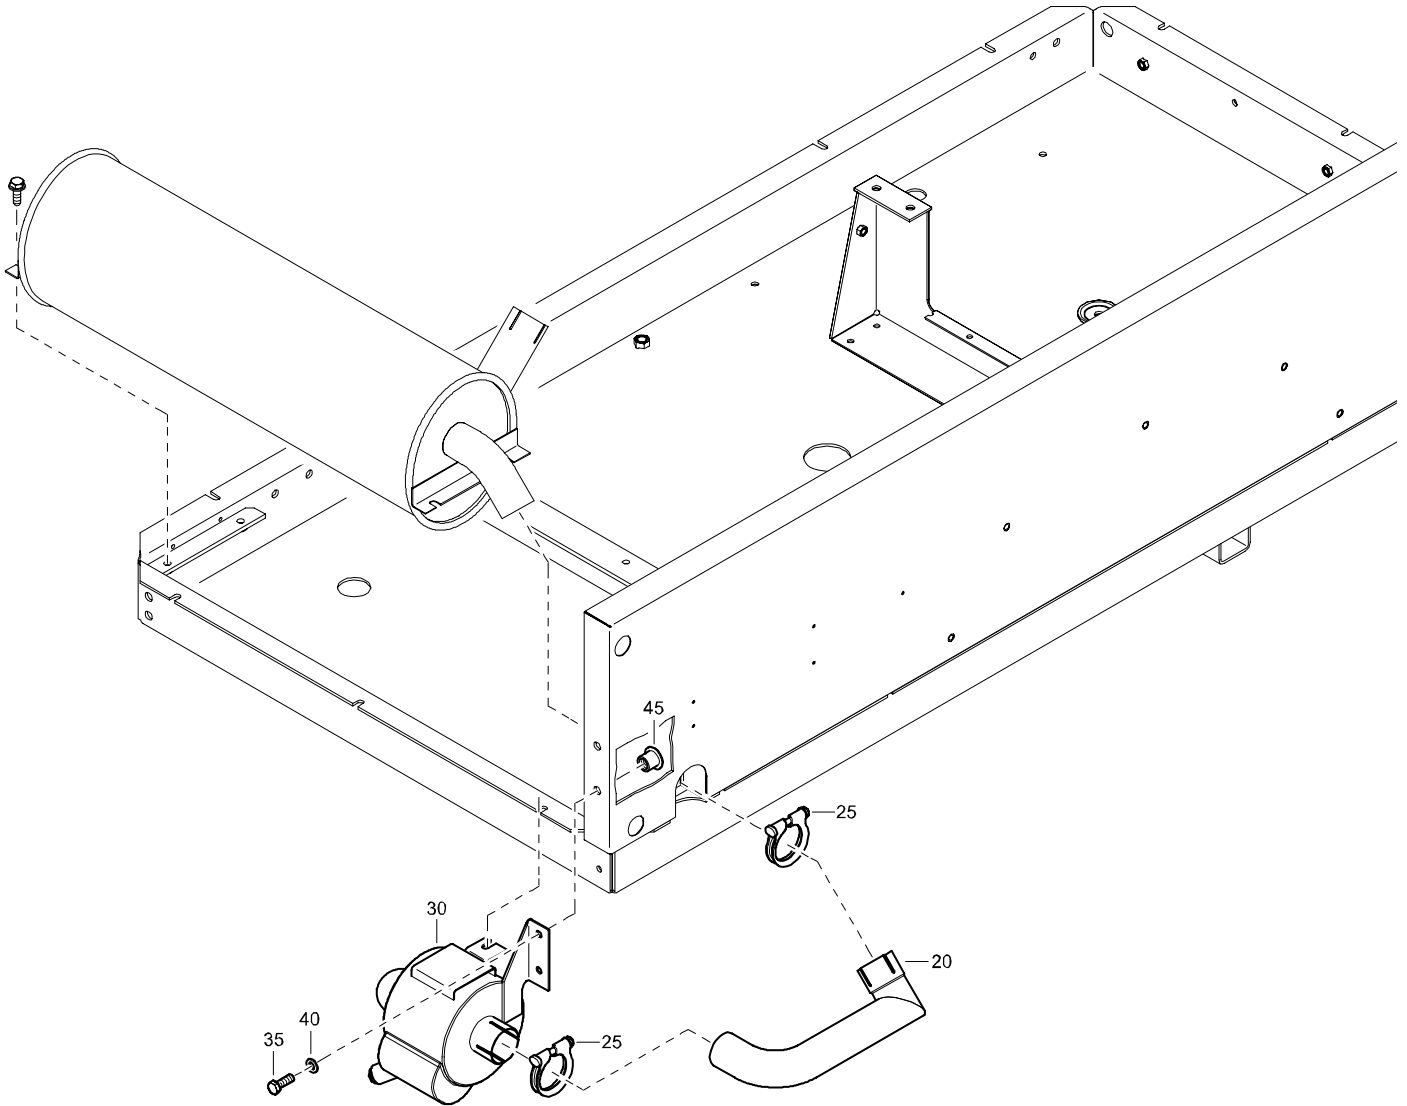

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5774 00	SPARK ARRESTOR	1				
25	0346 3001 08	PIPE CLAMP	2				
30	1604 5772 00	SPARK ARRESTOR	1				
35	0147 1323 03	HEX. HEAD SCREW	2				
40	0301 2335 00	PLAIN WASHER	2				
45	0298 1000 17	BLIND RIVET NUT	2				

OPTIONS

 
INLET SHUTDOWN VALVE (NOT APPLICABLE FOR HARDHAT)

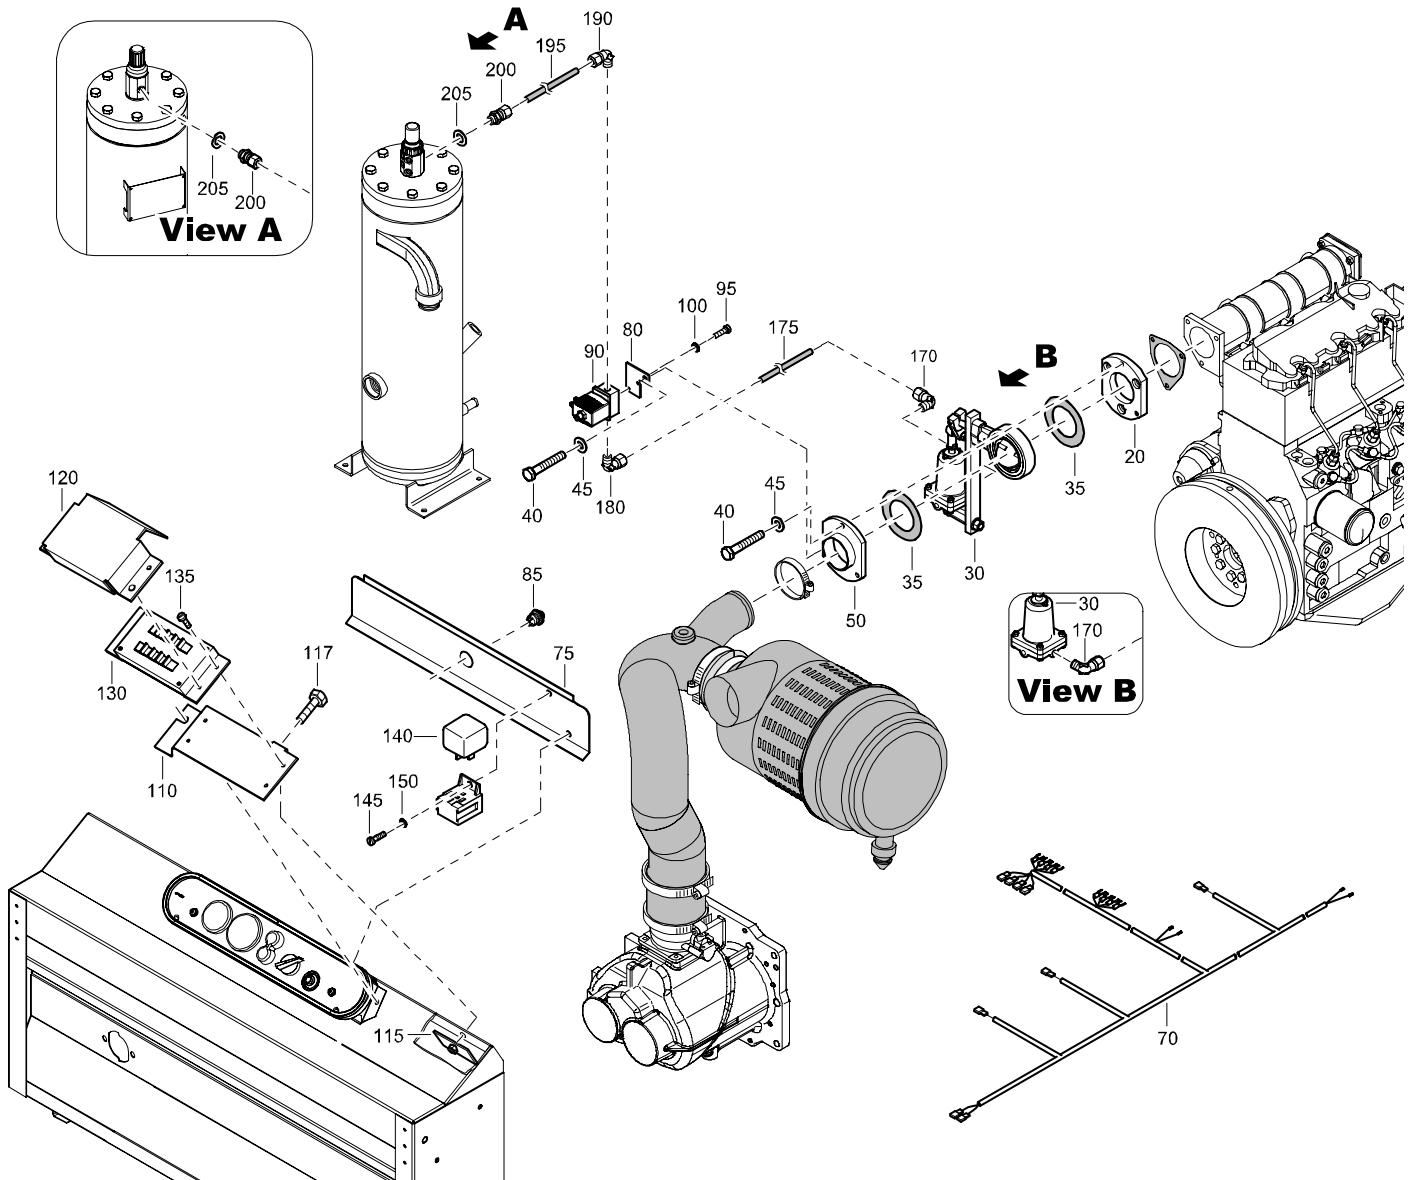

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1615 9630 00	FLANGE	1	145	0160 6060 00	SLOTTED SCREW	1
30	1615 9600 00	VALVE	1	150	0333 3215 00	LOCK WASHER	1
35	1615 9598 00	GASKET	2	170	0581 1200 16	ELBOW PIPE COUPLING	1
40	0147 1329 03	HEX. HEAD SCREW	3	175	0070 6002 04	PLASTIC TUBE	AR
45	0301 2335 00	PLAIN WASHER	3	180	0581 1200 16	ELBOW PIPE COUPLING	1
50	1615 9631 00	FLANGE	1	190	0581 1200 16	ELBOW PIPE COUPLING	1
70	1604 5809 00	WIRE HARNESS	1	195	0070 6002 04	PLASTIC TUBE	AR
75	1604 5808 00	COVER	1	200	0582 1200 06	STRAIGHT PIPE COUPLING	1
80	1615 9751 01	BRACKET	1	205	0653 1043 00	FLAT GASKET	1
85	1089 9326 01	PUSH BUTTON	1				
90	1089 0621 52	SOLENOID VALVE	1				
95	0147 1170 03	HEX. HEAD SCREW	2				
100	0333 3214 00	LOCK WASHER	2				
110	1604 5781 00	BRACKET	1				
115	1604 3947 00	BRACKET	1				
117	0147 1323 03	HEX. HEAD SCREW	1				
120	1604 5782 00	PROTECTION	1				
130	1615 9478 00	SPEED SWITCH	1				
135	0160 6062 00	SLOTTED SCREW	4				
140	1089 0341 01	RELAY	1				

OPTIONS

 
PARTICLE FILTER (NOT APPLICABLE FOR HARDHAT)

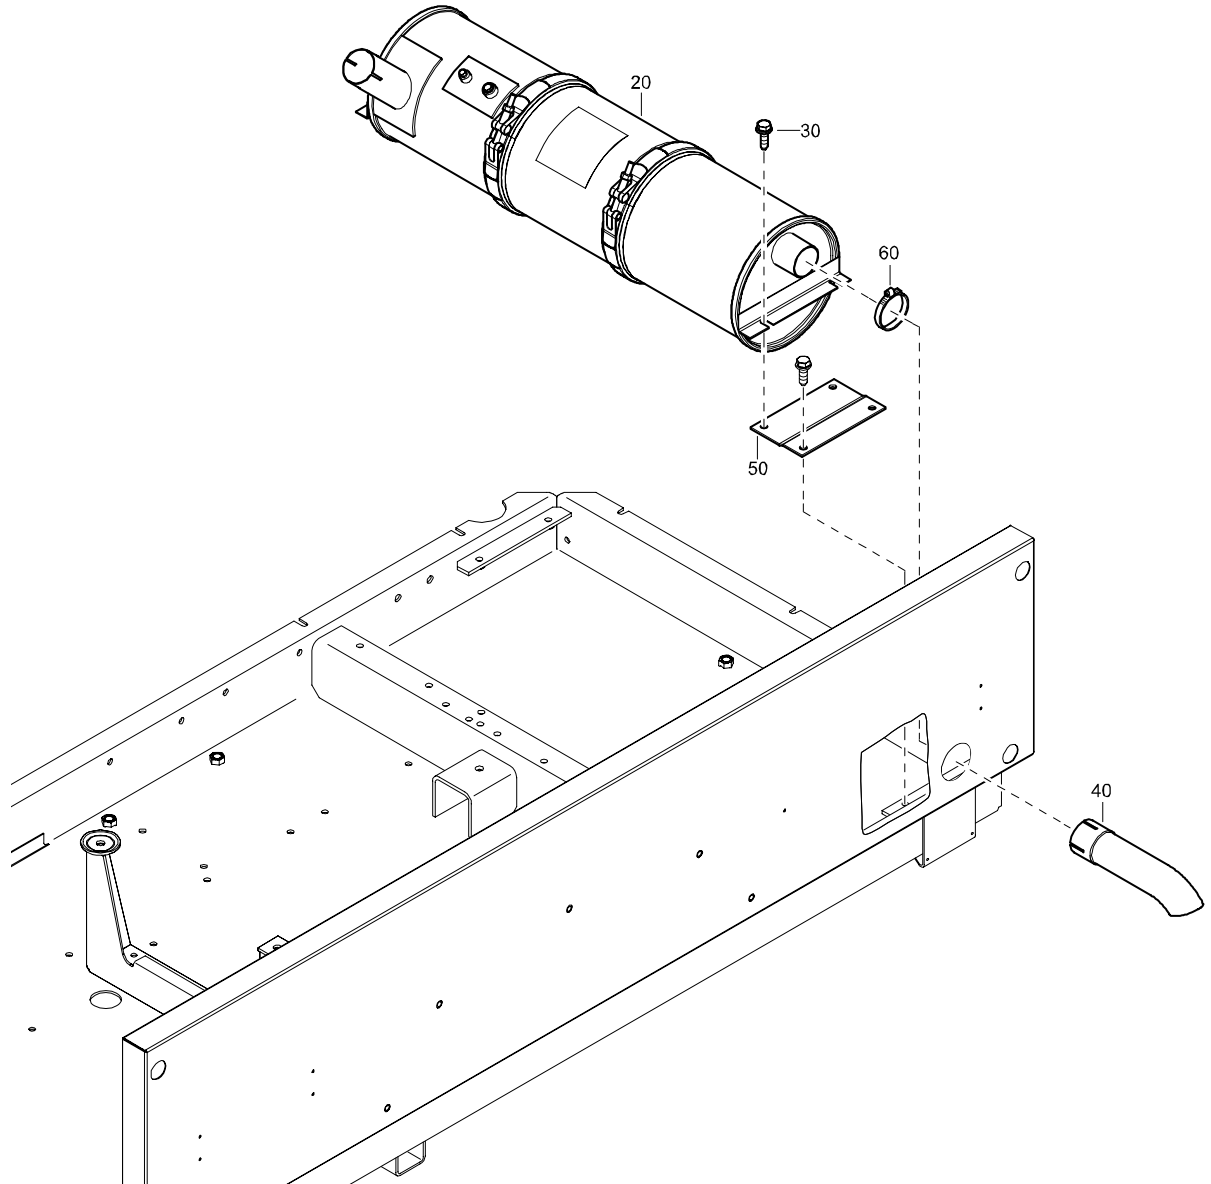

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5801 00	FILTER	1				
30	1615 5664 00	HEX. HEAD SCREW	2				
40	1604 6029 00	EXHAUST	1				
50	1604 6030 00	PLATE	1				
60	0346 3001 08	PIPE CLAMP	1				

OPTIONS

 
NON RETURN VALVE

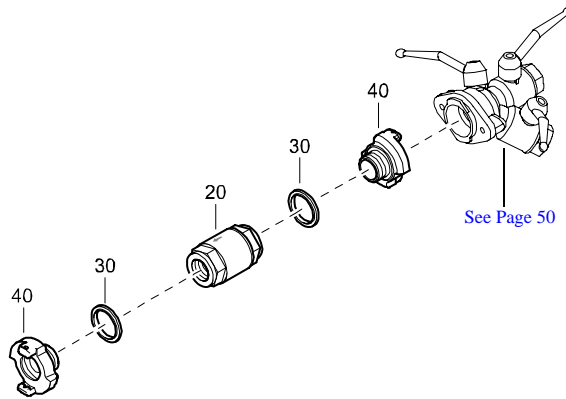

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1615 9615 00	NON RETURN VALVE	1				
30	0661 1049 00	SEALING WASHER	2				
40	9000 0303 00	PIPE COUPL.	2				

OPTIONS

 
MINIMUM PRESSURE VALVE FOR COMPRESSOR WITHOUT AFTERCOOLER OR LUBRICATOR

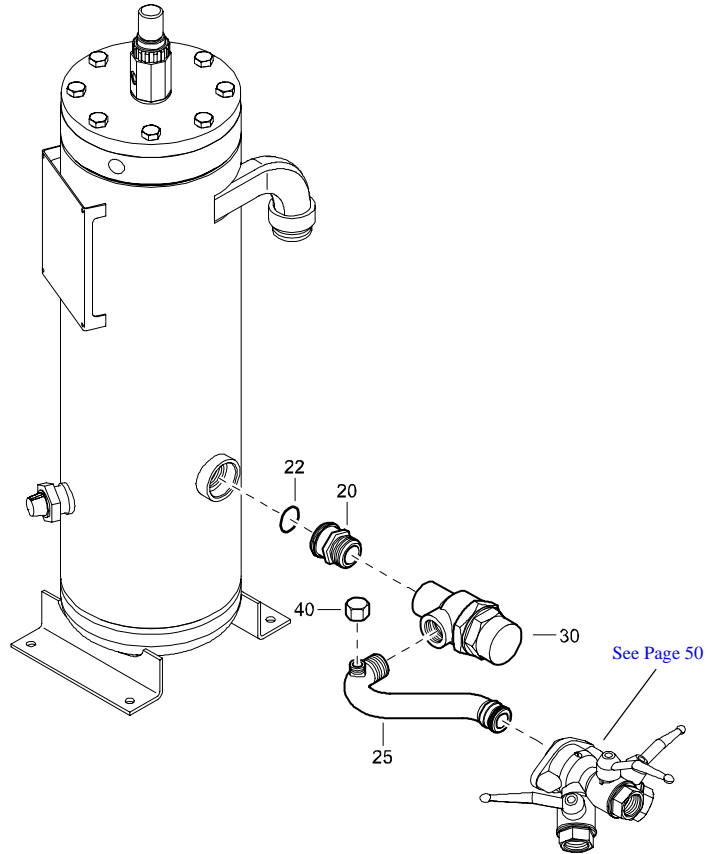

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 6824 00	NIPPLE	1				
22	0663 2109 48	O-RING	1				
25	1604 3981 30	PIPE	1				
30	1604 3984 00	MIN.PRES.VALVE	1				
40	0687 3104 00	PIPE CAP	1				

OPTIONS

 
MINIMUM PRESSURE VALVE FOR COMPRESSOR WITHOUT AFTERCOOLER OR LUBRICATOR

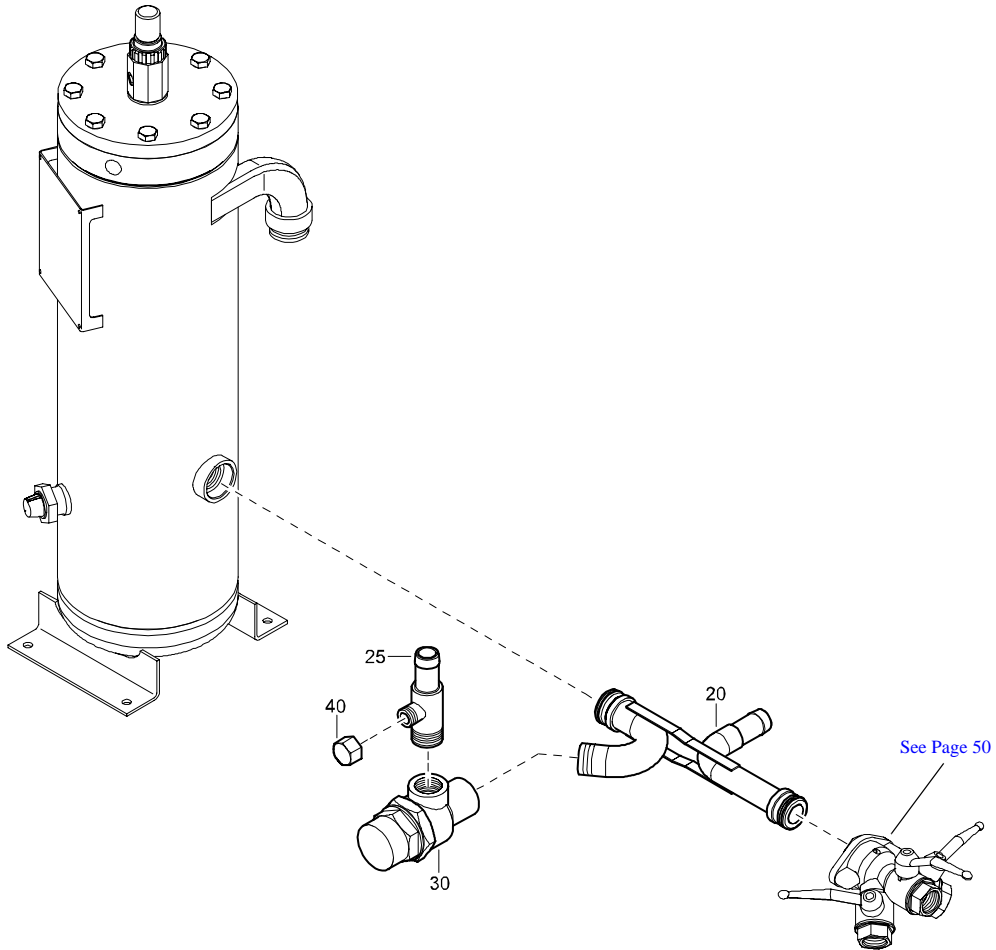

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 3982 00	PIPE	1				
25	1604 3983 00	PIPE	1				
30	1604 3984 00	MIN.PRES.VALVE	1				
40	0687 3104 00	PIPE CAP	1				

OPTIONS

 
MINIMUM PRESSURE VALVE FOR COMPRESSOR WITH LUBRICATOR

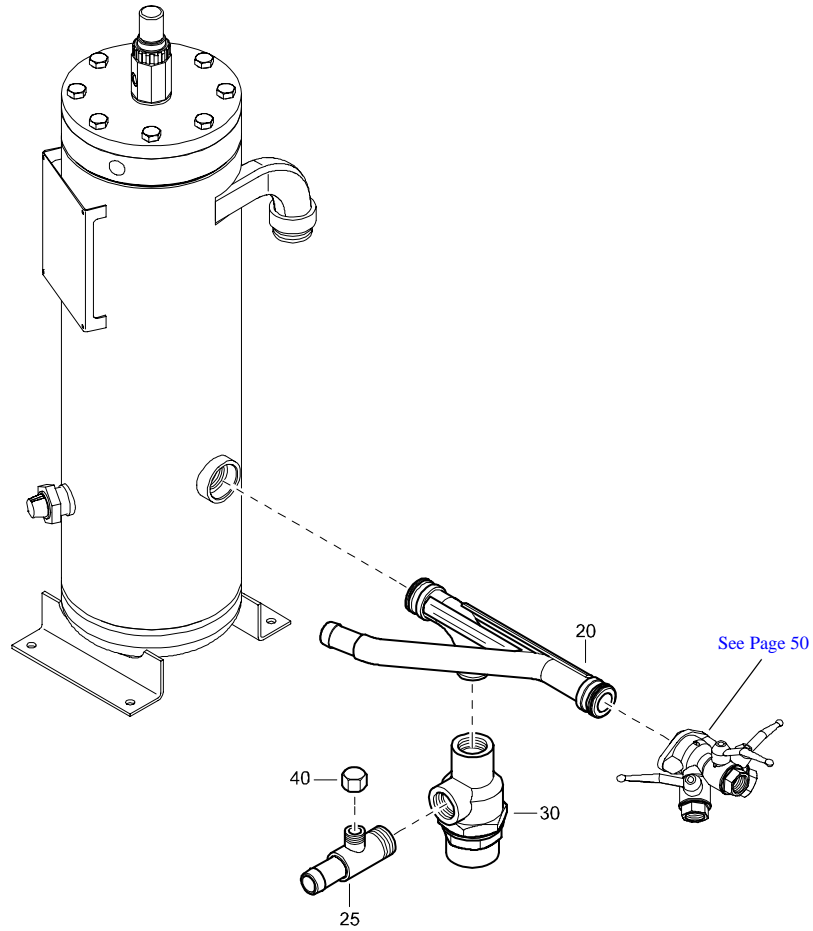

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5873 00	PIPE	1				
25	1604 3983 00	PIPE	1				
30	1604 3984 00	MIN.PRES.VALVE	1				
40	0687 3104 00	PIPE CAP	1				

OPTIONS

 
BRACKETS FOR AFTERCOOLER FOR STEEL CANOPY

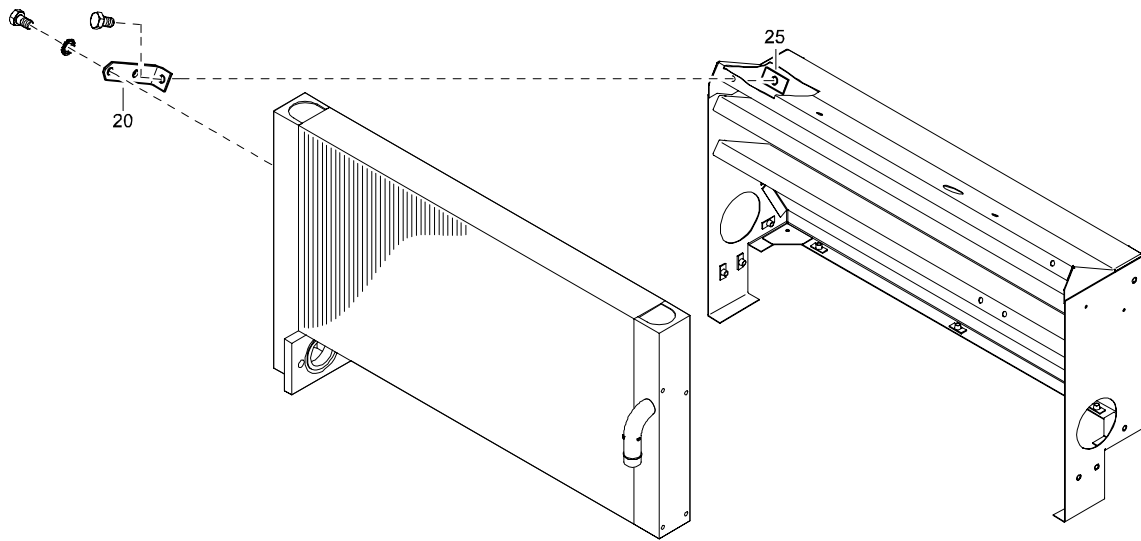

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 3946 00	BRACKET	2				
25	1604 3947 00	BRACKET	2				

OPTIONS

 
BRACKETS FOR AFTERCOOLER FOR HARDHAT

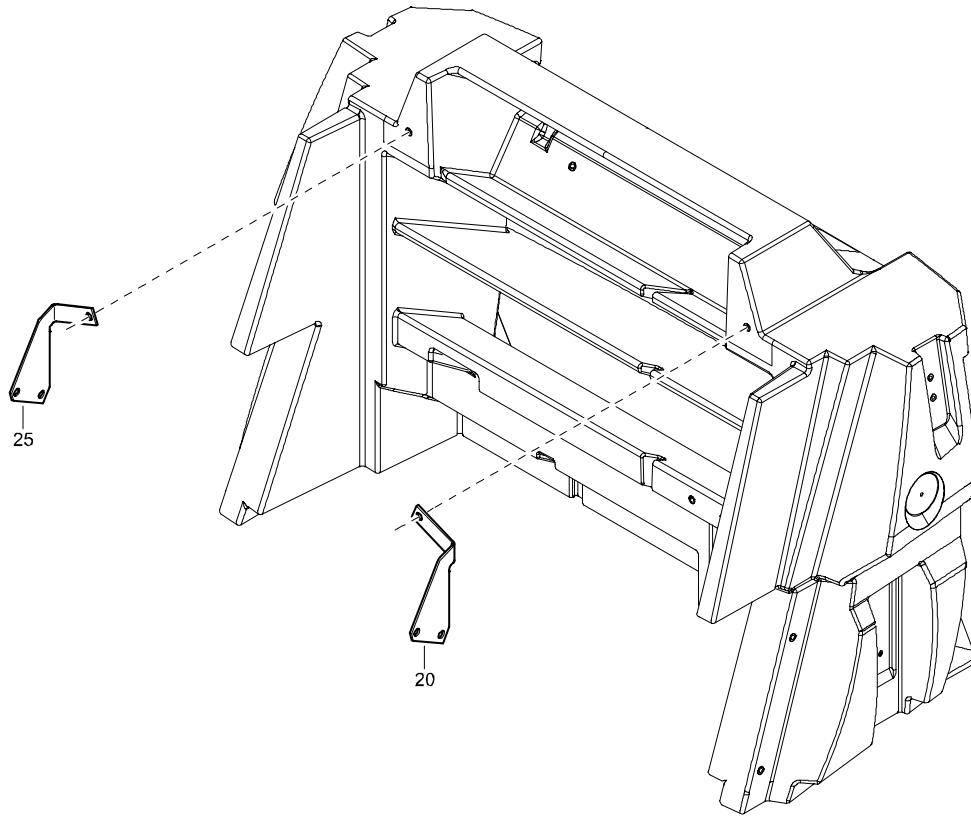

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 6170 01	BRACKET	1				
25	1604 6171 01	BRACKET	1				

OPTIONS

 
**RESTRICTOR
FOR COMPRESSOR WITH LUBRICATOR
(NOT APPLICABLE FOR HARDHAT)**

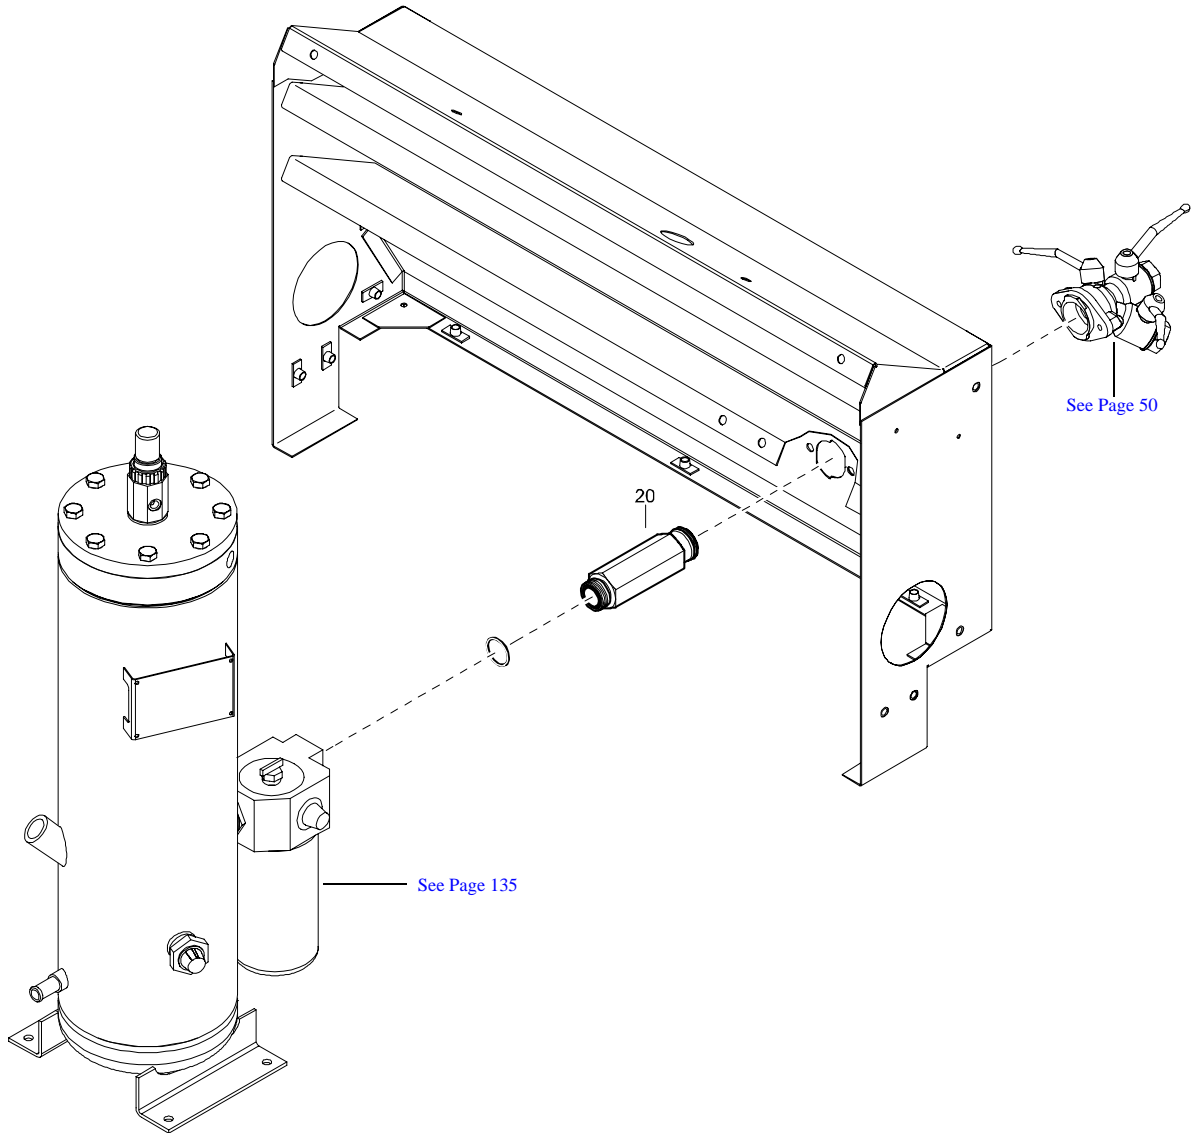

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 3819 02	NIPPLE	1				

OPTIONS

 
PIPE FOR AFTERCOOLER BYPASS

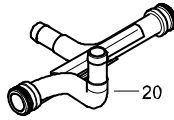

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 4031 00	PIPE	1				

OPTIONS

 
SAFETY CARTRIDGE

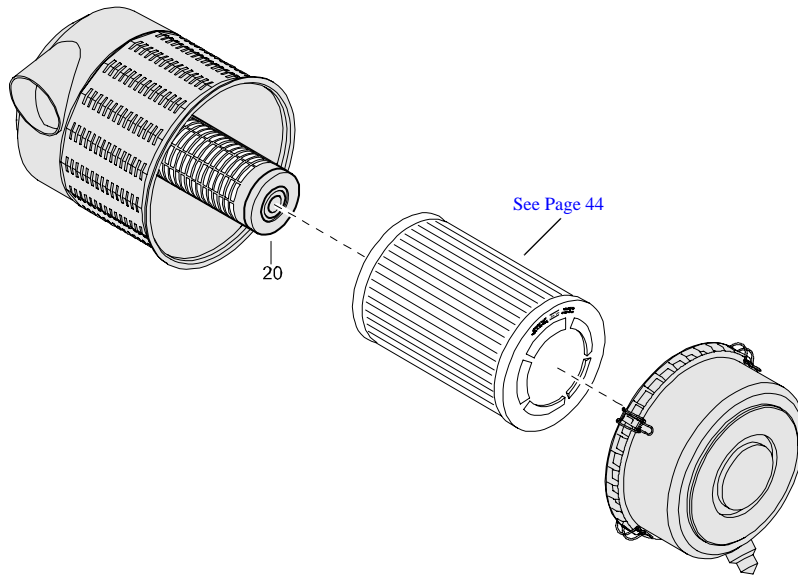

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	2914 9311 00	SAFETY CARTRIDGE 15MÜ	1				

OPTIONS

 
SAFETY CHAIN FOR COMPRESSOR WITH ANTI THEFT DEVICE

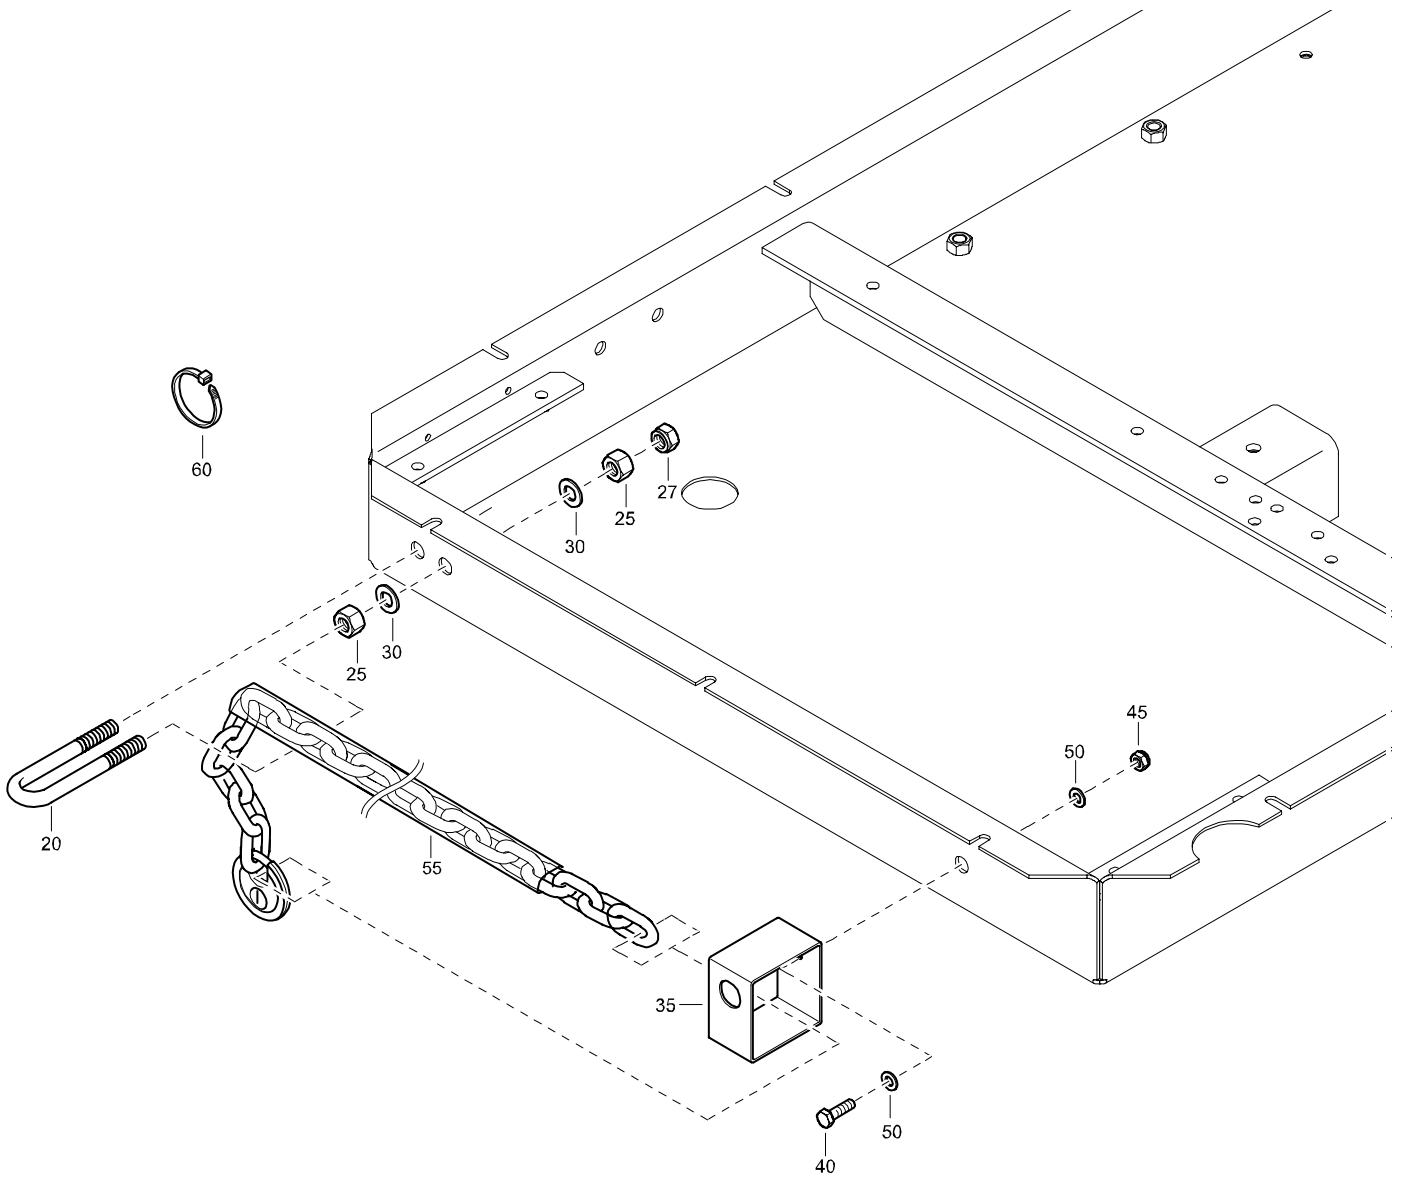

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5443 01	FASTENER	1				
25	0266 1138 02	NUT	4				
27	0291 1112 00	LOCKNUT	2				
30	0300 0276 02	WASHER	4				
35	1604 5444 00	BRACKET	1				
40	0147 1325 03	HEX. HEAD SCREW	1				
45	0291 1110 00	LOCKNUT	1				
50	0301 2335 00	PLAIN WASHER	2				
55	1604 6783 00	SAFETY CHAIN	1				
60	1088 1301 02	CABLE STRIP	1				

OPTIONS

 
HOSE REEL (NOT APPLICABLE FOR HARDHAT)

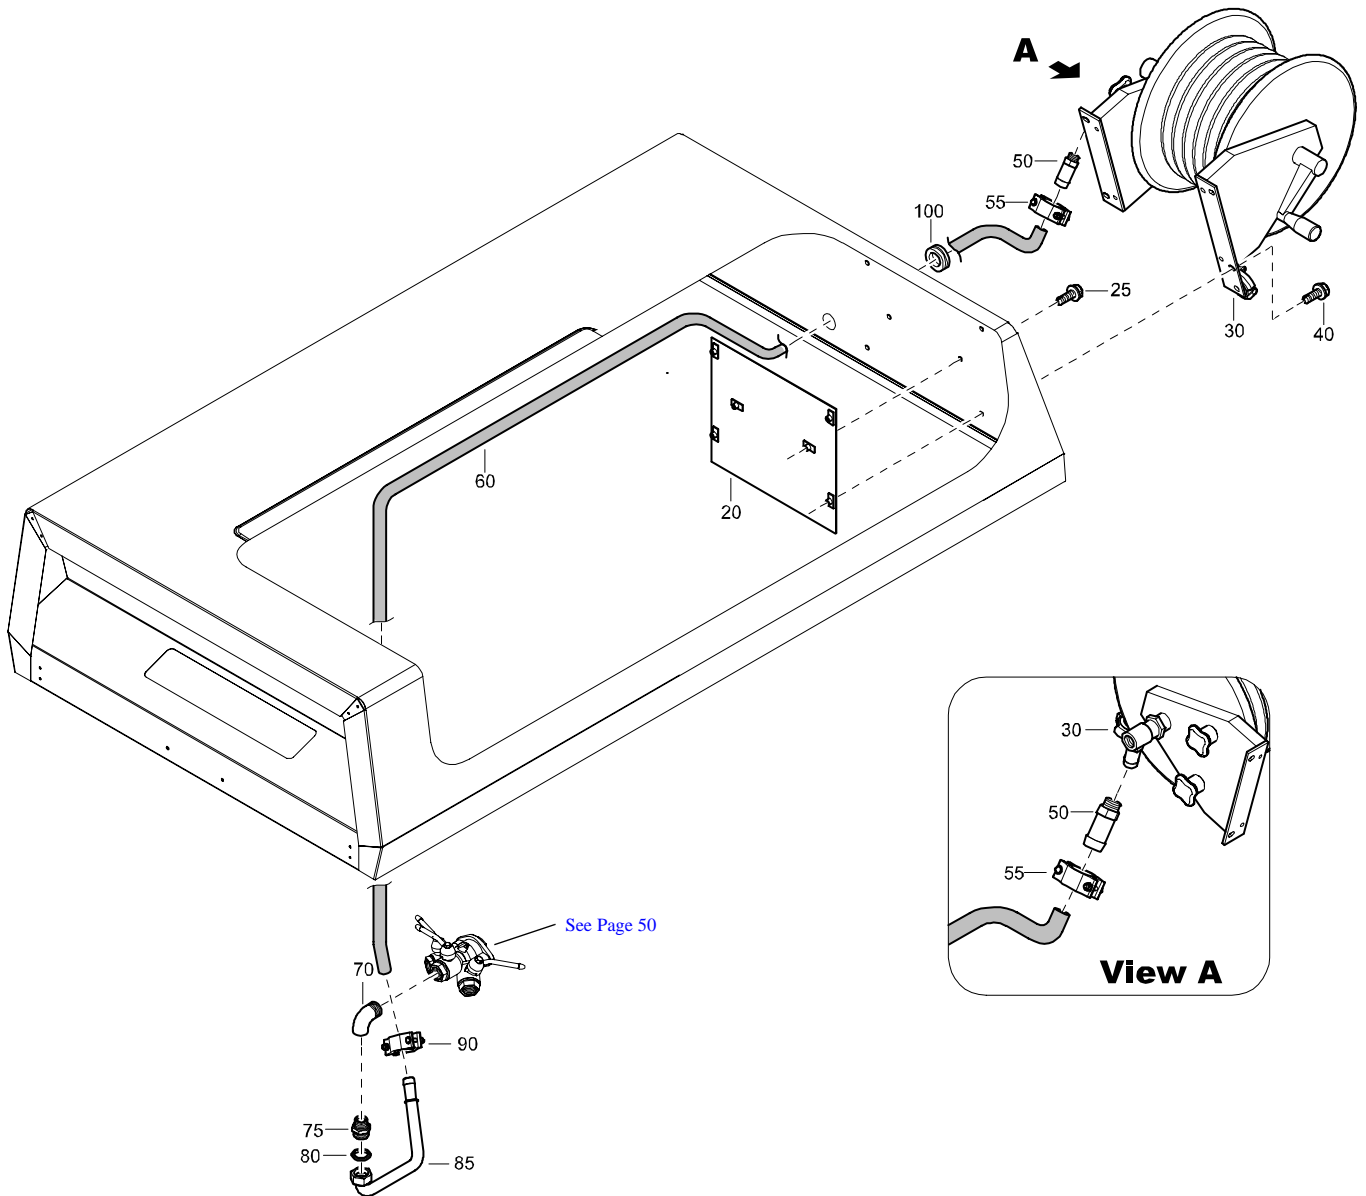

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 3936 00	PLATE (HOSE REEL)	1				
25	1615 5664 00	HEX. HEAD SCREW	2				
30	1604 1430 01	HOSE REEL	1				
		(For details see page 175)					
40	1615 5664 00	HEX. HEAD SCREW	4				
50	9000 0245 00	HOSE NIPPLE	1				
55	9000 0196 00	CLAMP	1				
60	0072 8403 26	HOSE	AR				
70	0560 0200 01	ELBOW	1				
75	1619 6249 00	NIPPLE	1				
80	0661 1038 00	SEALING WASHER	1				
85	1604 3923 00	PIPE (HOSE REEL)	1				
90	9000 0196 00	CLAMP	1				
100	1088 0801 42	GROMMET	1				

OPTIONS

 
ROAD LIGHT SYSTEM FOR HARDHAT

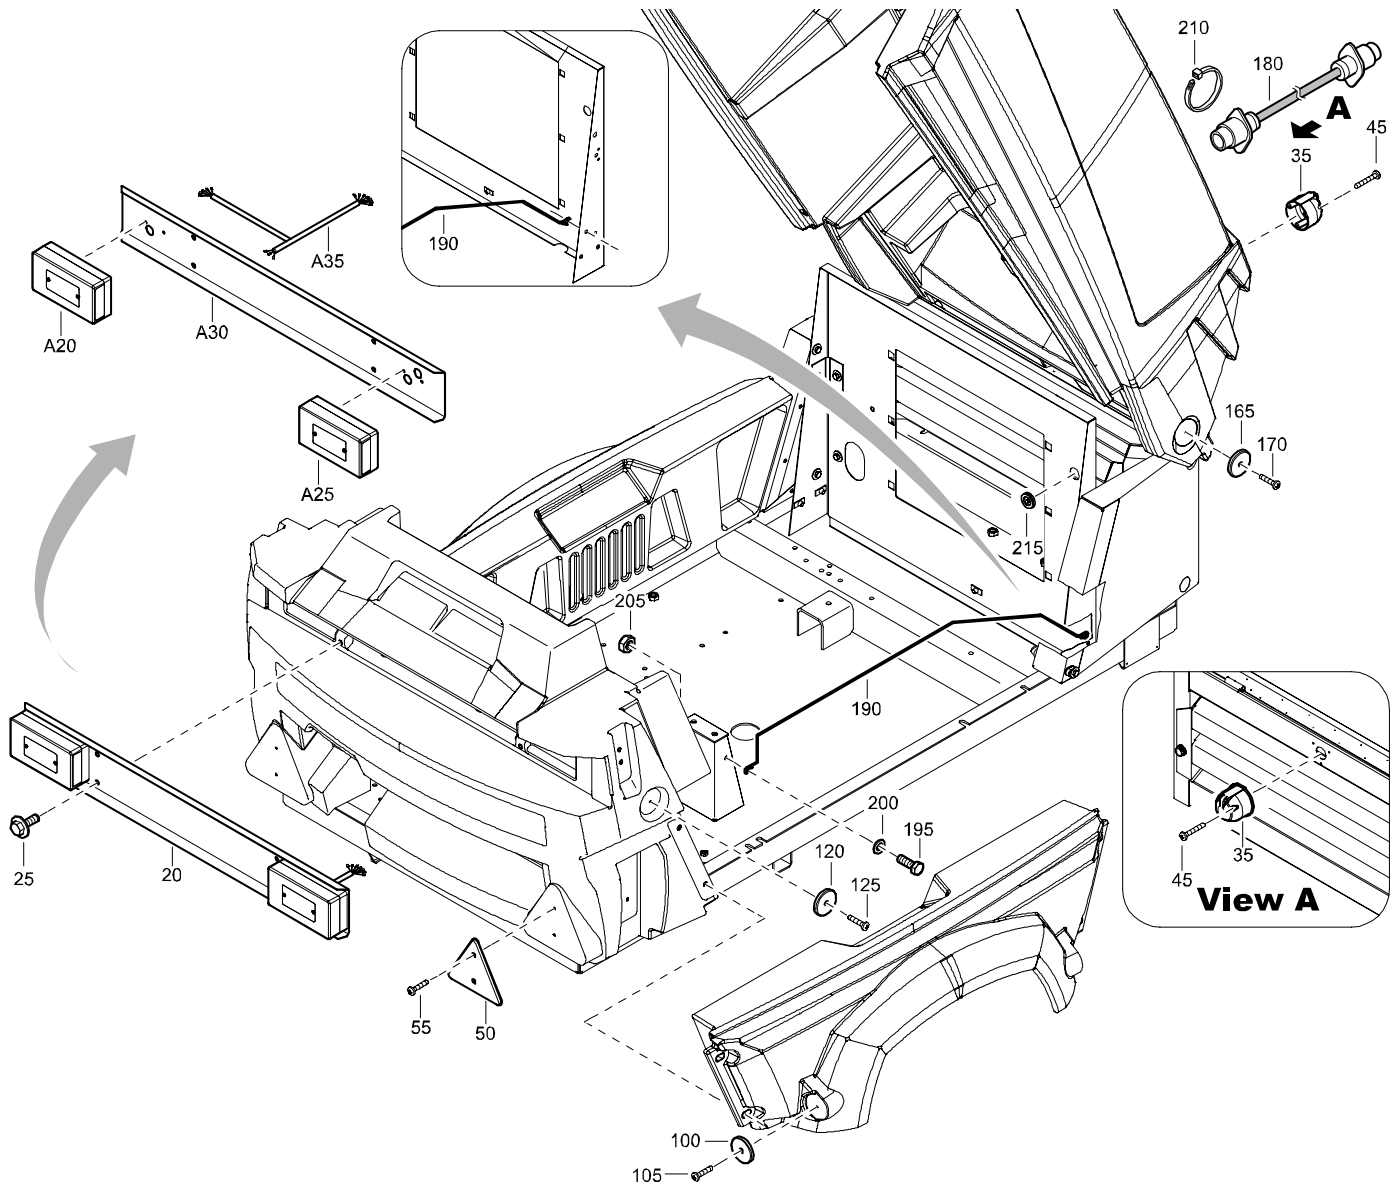

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 6262 81	ROAD SIGNALISATION	1	205	0266 2110 00	HEXAGON NUT	1
•A20	1604 2228 00	LIGHT (LEFT)	1	210	1088 1301 02	CABLE STRIP	12
•A25	1604 2229 00	LIGHT (RIGHT)	1	215	1088 0803 25	GROMMET	1
•A30	1604 6262 01	PLATE	1				
•A35	1604 6453 00	WIRE HARNESS	1				
25	1604 3423 00	SCRAPER BOLT	4				
35	1089 0291 22	APPLIANCE INLET	1				
45	0226 0047 05	TAPPING SCREW	3				
50	1202 9402 01	REFLECTOR	2				
55	0226 0047 13	TAPPING SCREW	4				
100	1615 7740 00	REFLECTOR	2				
105	0226 0047 13	TAPPING SCREW	2				
120	1615 5520 00	REFLECTOR	4				
125	0226 0047 13	TAPPING SCREW	4				
165	1615 5520 00	REFLECTOR	2				
170	0226 0047 13	TAPPING SCREW	2				
180	1616 0864 00	CABLE	1				
190	1604 4060 00	GUIDE	1				
195	0147 1323 03	HEX. HEAD SCREW	1				
200	0301 2335 00	PLAIN WASHER	1				

OPTIONS

 
SEMI ROAD LIGHT SYSTEM FOR STEEL CANOPY

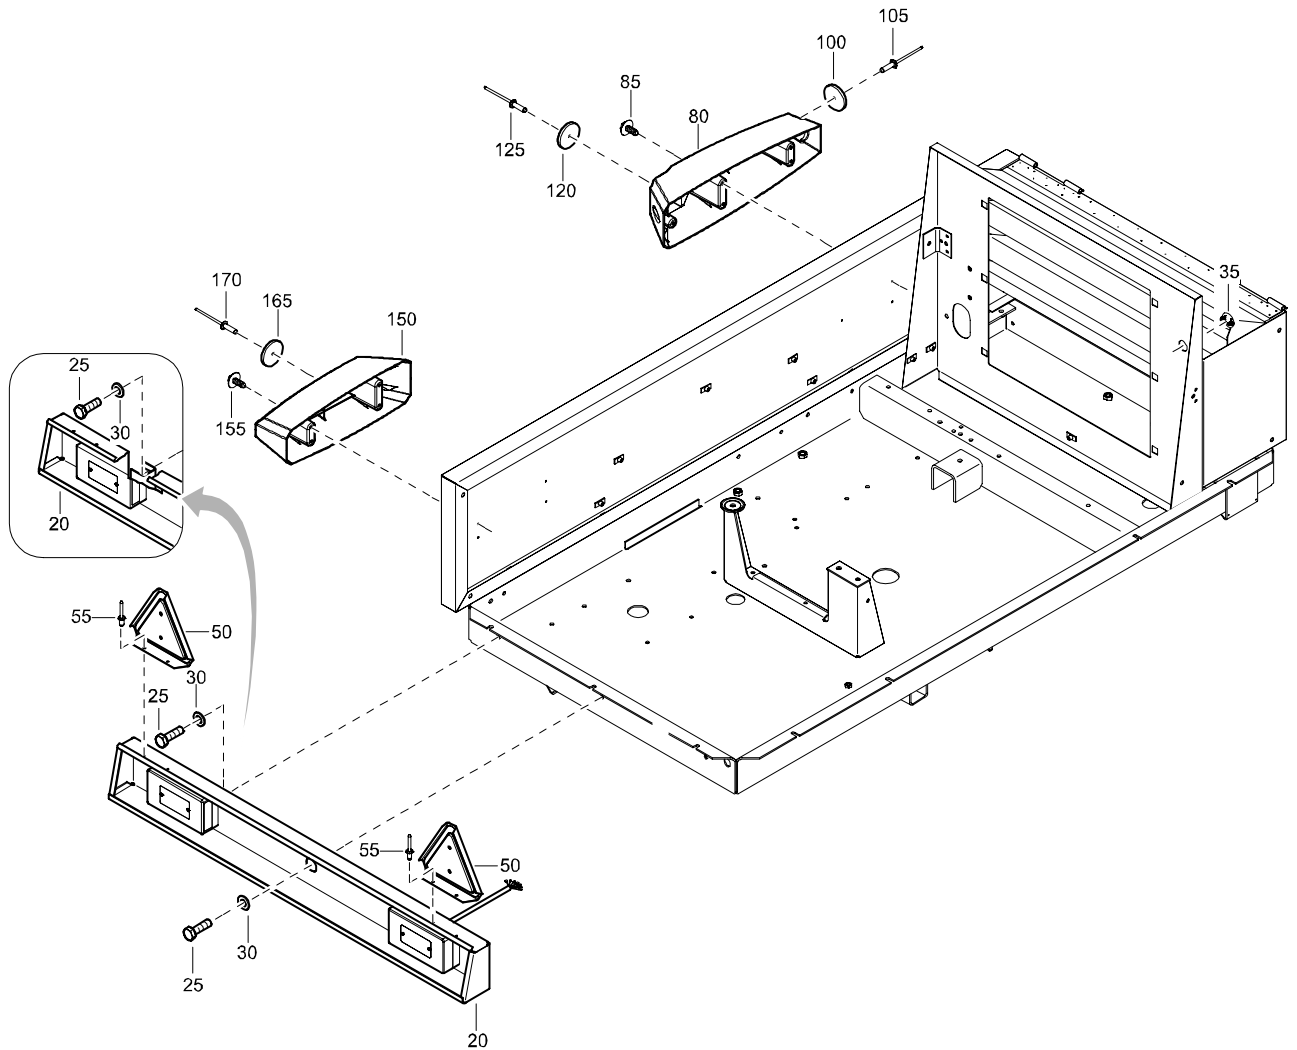

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5445 85	BUMPER <i>(For details see page 190)</i>	1				
25	0147 1325 03	HEX. HEAD SCREW	3				
30	0301 2335 00	PLAIN WASHER	3				
35	1604 3858 00	PLUG	1				
50	1604 5446 85	REFLECTOR ASSY <i>(For details see page 193)</i>	2				
55	0129 3174 01	BLIND RIVET	4				
80	1604 4051 01	PROTECTION FRONT	2				
85	1619 2765 00	SCREW	10				
100	1615 7740 00	REFLECTOR	2				
105	0129 3116 00	BLIND RIVET	2				
120	1615 5520 00	REFLECTOR	2				
125	0129 3116 00	BLIND RIVET	2				
150	1604 5451 01	PROTECTION REAR	2				
155	1619 2765 00	SCREW	8				
165	1615 5520 00	REFLECTOR	2				
170	0129 3116 00	BLIND RIVET	2				

OPTIONS

 
ROAD LIGHT SYSTEM FOR STEEL CANOPY

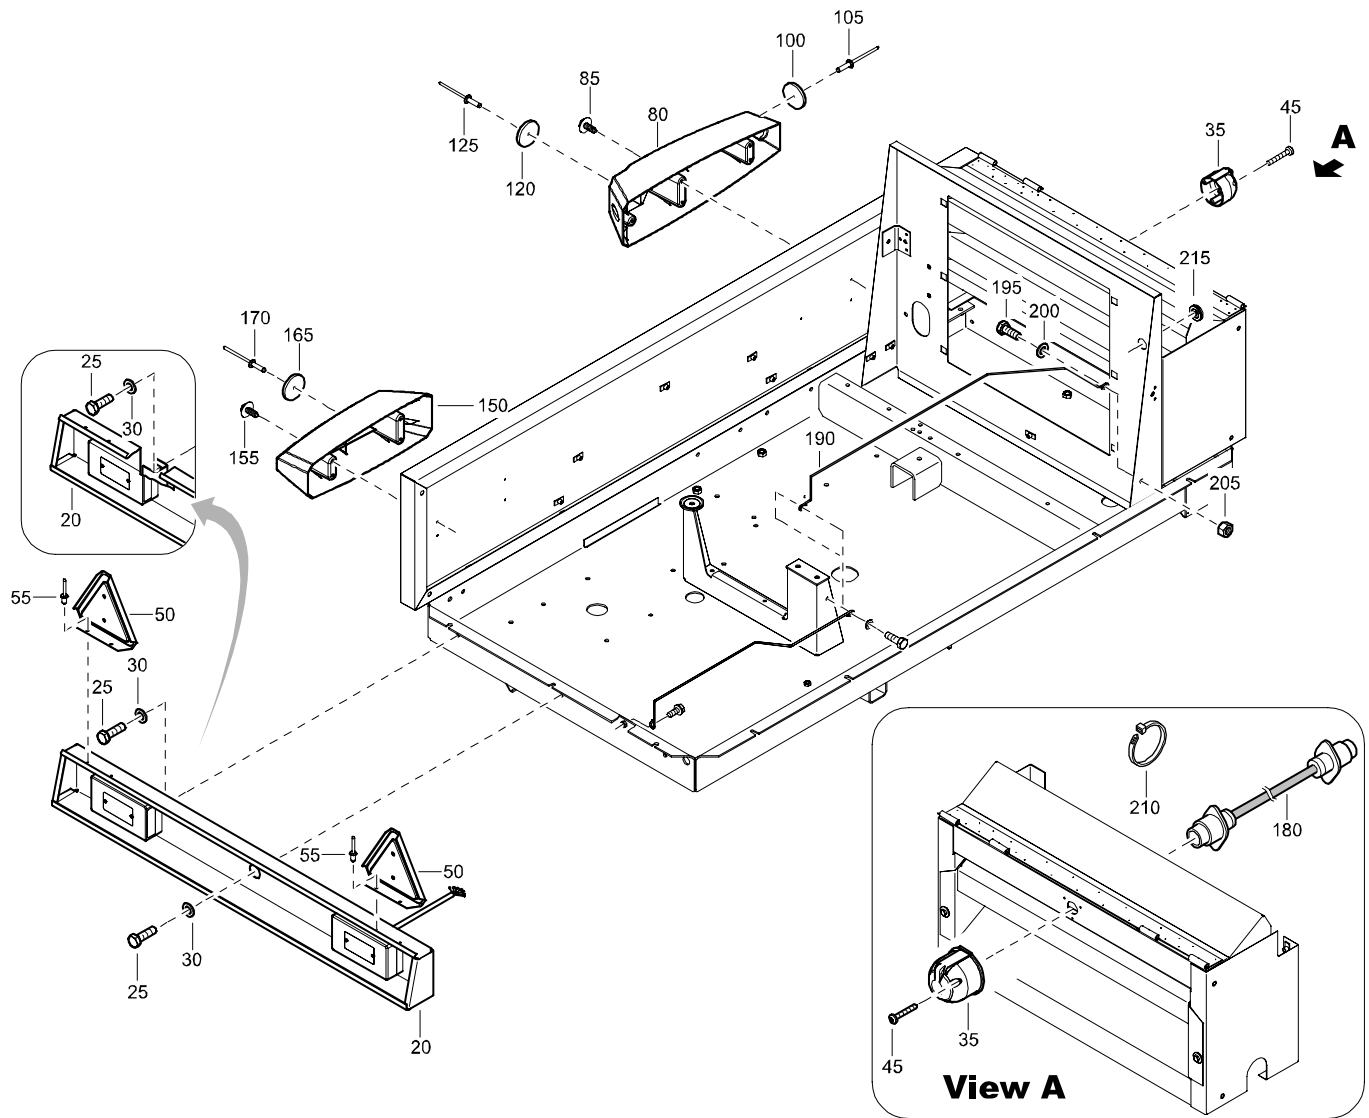

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5445 84	BUMPER ASSY (For details see page 190)	1	190	1604 4060 00	GUIDE	1
25	0147 1325 03	HEX. HEAD SCREW	3	195	0147 1323 03	HEX. HEAD SCREW	1
30	0301 2335 00	PLAIN WASHER	3	200	0301 2335 00	PLAIN WASHER	1
35	1089 0291 22	APPLIANCE INLET	1	205	0266 2110 00	HEXAGON NUT	1
45	0226 0047 05	TAPPING SCREW	3	210	1088 1301 02	CABLE STRIP	12
50	1604 5446 84	REFLECTOR ASSY (For details see page 192)	2	215	1088 0803 25	GROMMET	1
55	0129 3174 01	BLIND RIVET	4				
80	1604 4051 01	PROTECTION FRONT	2				
85	1619 2765 00	SCREW	10				
100	1615 7740 00	REFLECTOR	2				
105	0129 3116 00	BLIND RIVET	2				
120	1615 5520 00	REFLECTOR	2				
125	0129 3116 00	BLIND RIVET	2				
150	1604 5451 01	PROTECTION REAR	2				
155	1619 2765 00	SCREW	8				
165	1615 5520 00	REFLECTOR	2				
170	0129 3116 00	BLIND RIVET	2				
180	1616 0864 00	CABLE	1				

OPTIONS

 
SIMPLIFIED BUMPER (NOT APPLICABLE FOR HARDHAT)

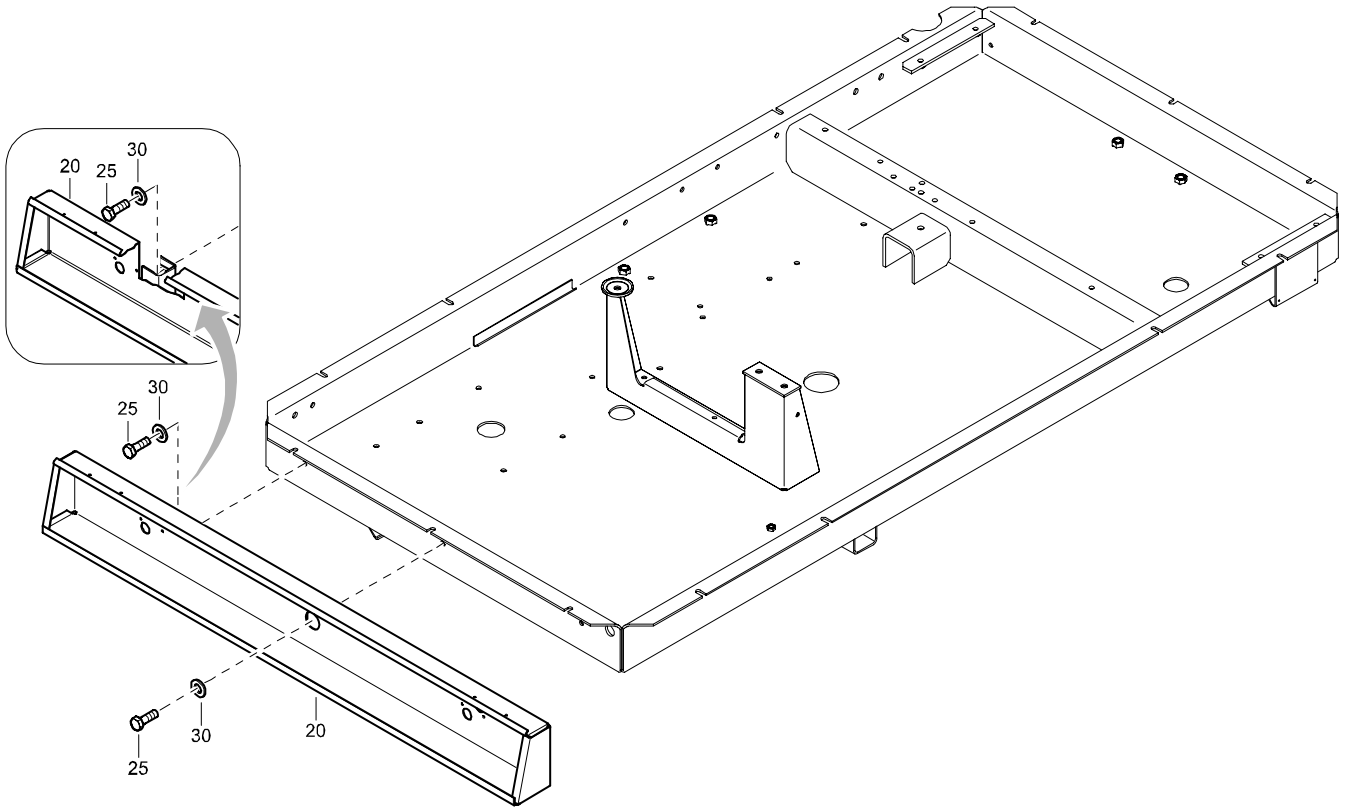

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5445 85	BUMPER <i>(For details see page 190)</i>	1				
25	0147 1325 03	HEX. HEAD SCREW	3				
30	0301 2335 00	PLAIN WASHER	3				

OPTIONS

 
ADAPTER 24V

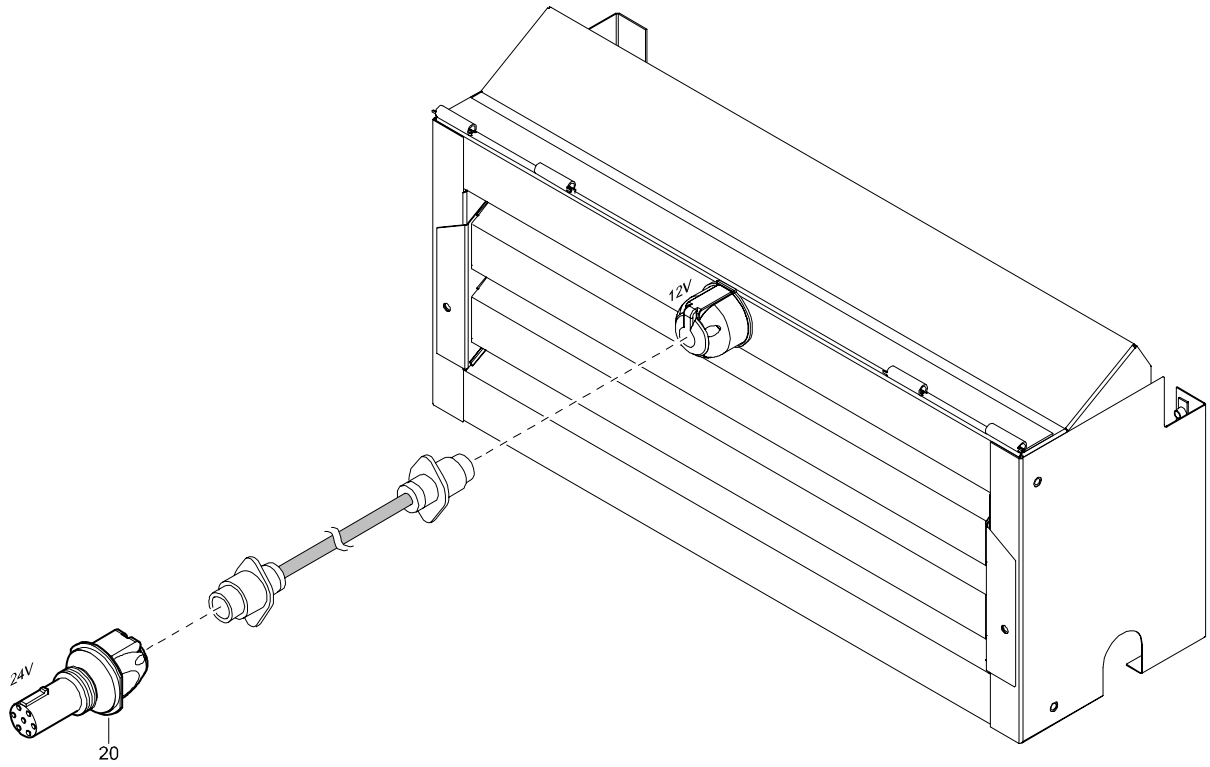

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5313 00	ADAPTER 24V RS	1				

OPTIONS

 
SEMI ROAD LIGHT SYSTEM FOR HARDHAT

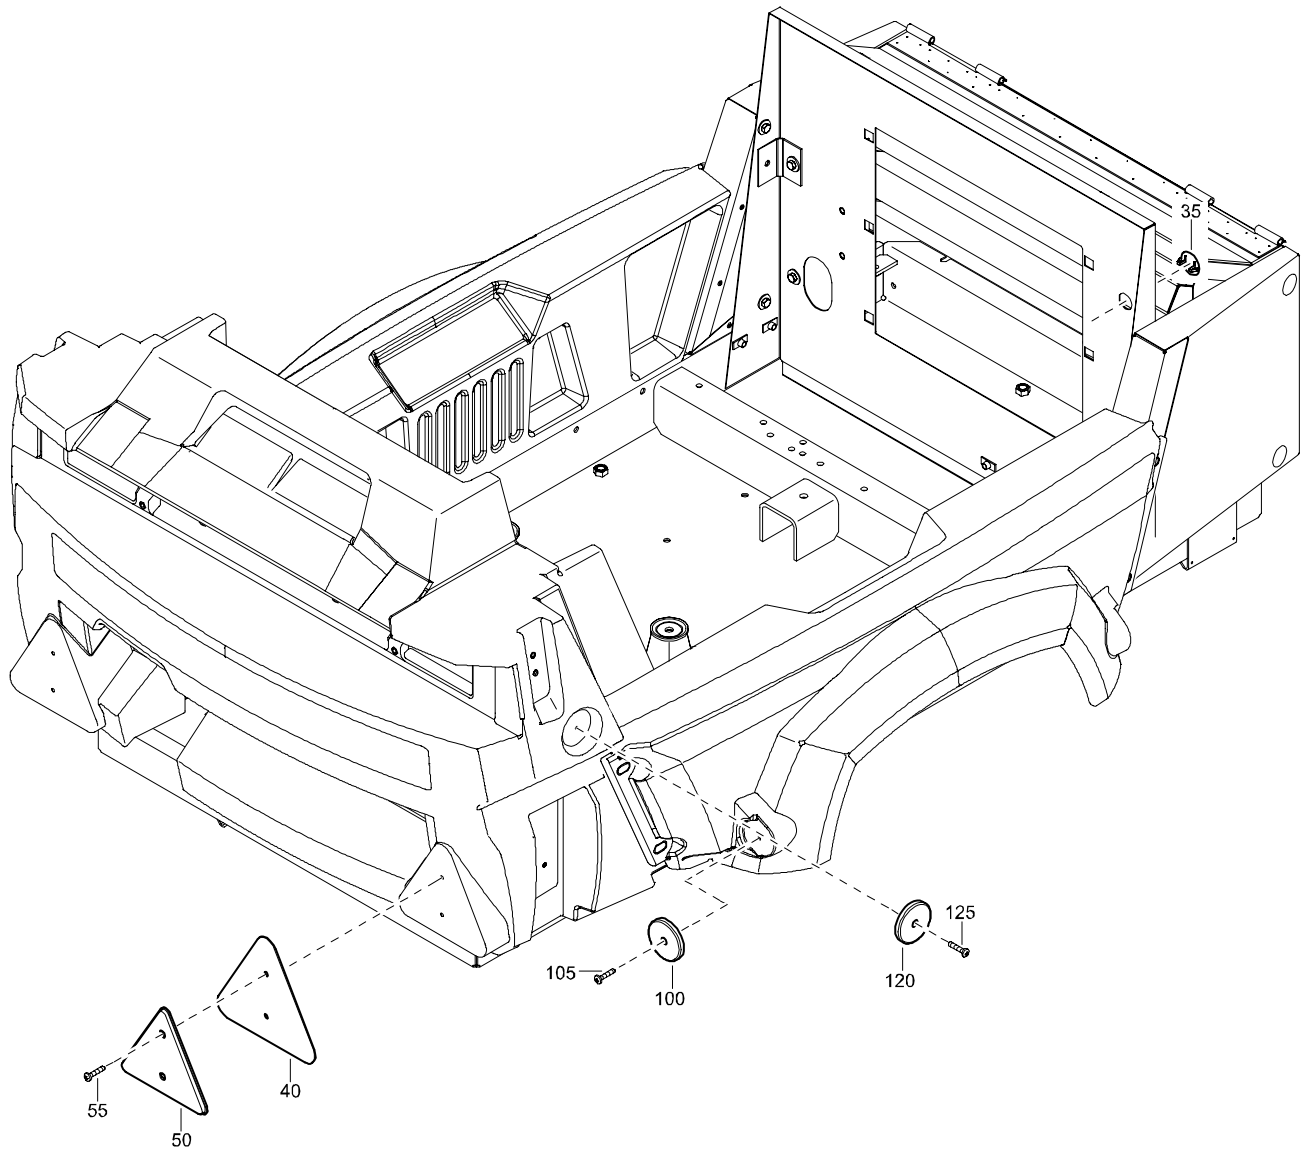

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
35	1604 3858 00	PLUG	1				
40	1202 9666 00	PLATE	2				
50	1202 9402 01	REFLECTOR	2				
55	0226 0047 13	TAPPING SCREW	4				
100	1615 7740 00	REFLECTOR	2				
105	0226 0047 13	TAPPING SCREW	2				
120	1615 5520 00	REFLECTOR	4				
125	0226 0047 13	TAPPING SCREW	4				

OPTIONS

 
**SUPPORT MOUNTED
(NOT APPLICABLE FOR HARDHAT)**

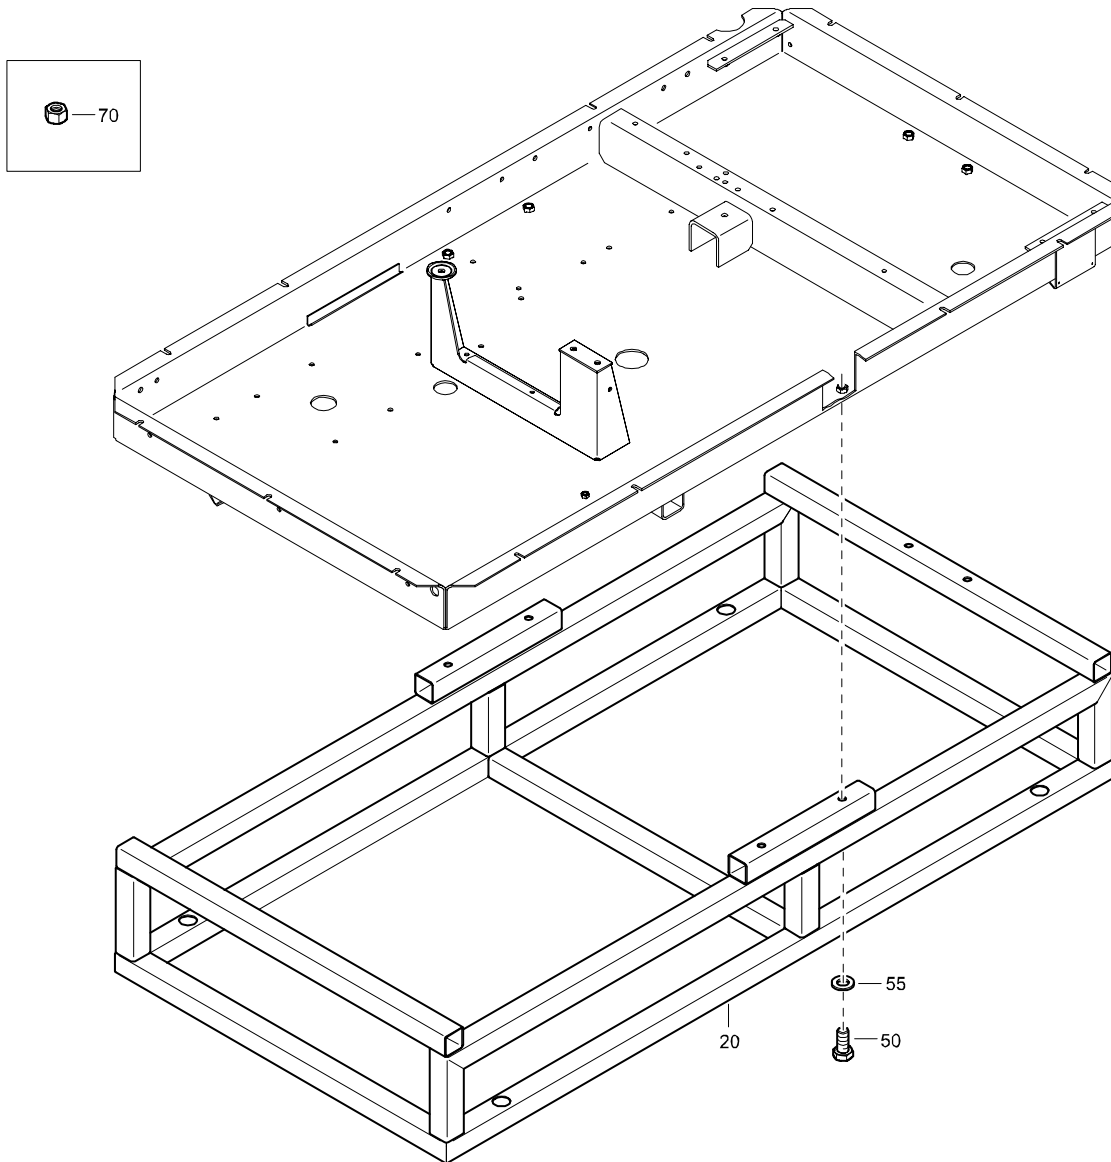

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5320 00	SUPPORT	1				
50	0147 1400 15	HEX. HEAD SCREW	2				
55	0301 2358 00	PLAIN WASHER	4				
70	0266 2112 00	HEXAGON NUT	4				

OPTIONS

 LUBRICATOR FOR STEEL CANOPY

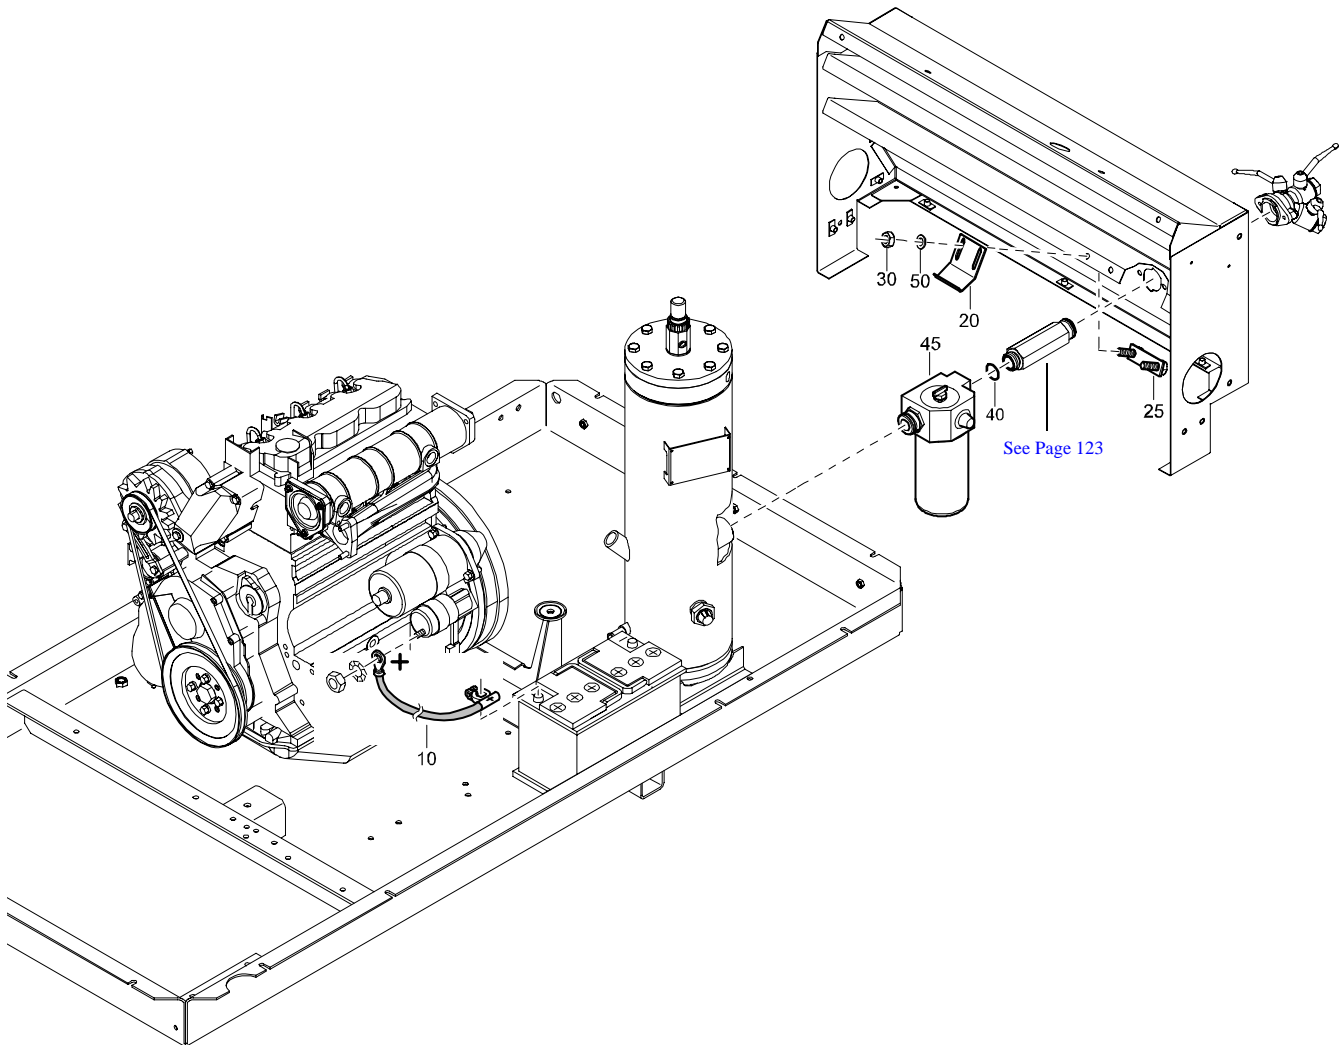

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1615 7725 01	BATTERY CABLE	1				
20	1604 5759 02	BRACKET	1				
25	1604 5760 00	BRACKET	1				
30	0266 2110 00	HEXAGON NUT	2				
40	0663 2108 20	O-RING	1				
45	1615 8584 85	LUBRICATOR ASS'Y	1				
50	0301 2335 00	PLAIN WASHER	2				


OPTIONS

AFTERCOOLER WITH WATERSEPARATOR

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1615 7725 01	BATTERY CABLE	1				
20	1604 4031 00	PIPE	1				
30	1604 4040 00	BRACKET	1				
35	0147 1323 03	HEX. HEAD SCREW	1				
40	0333 3227 00	LOCK WASHER	1				
42	0266 2110 00	HEXAGON NUT	1				
45	1604 4041 00	BRACKET	1				
50	0147 1323 03	HEX. HEAD SCREW	1				
55	0333 3227 00	LOCK WASHER	1				
57	0266 2110 00	HEXAGON NUT	1				
70	0147 1323 03	HEX. HEAD SCREW	2				
100	1604 3943 00	AFTERCOOLER	1				
105	0147 1320 03	HEX. HEAD SCREW	2				
110	0333 3227 00	LOCK WASHER	2				
120	0147 1320 03	HEX. HEAD SCREW	2				
125	0333 3227 00	LOCK WASHER	2				
130	0147 1320 03	HEX. HEAD SCREW	4				
135	0333 3227 00	LOCK WASHER	4				
150	0072 8403 39	HOSE	AR				
155	1615 8627 00	SLEEVE	2				
160	1079 3471 01	HOSE CLIP	2				
180	1615 8581 00	WATERSEPARATOR	1				
185	0663 7136 00	O-RING	1				
190	0211 1363 03	HEX SOCK. SCREW	2				
195	0333 3232 00	LOCK WASHER	2				
220	1604 4019 00	HOSE COUPLING	1				
221	1626 0874 00	HOSE NIPPLE	1				
222	0661 1049 00	SEALING WASHER	1				
225	0663 7136 00	O-RING	1				
230	0333 3232 00	LOCK WASHER	2				
235	0147 1363 03	HEX. HEAD SCREW	2				
250	0072 8403 39	HOSE	AR				
255	1079 3471 01	HOSE CLIP	2				
260	1615 8627 00	SLEEVE	2				
280	0653 1062 00	FLAT GASKET	1				
285	1604 3952 00	COUPLING	1				
290	1615 8620 00	RESTRICTOR	1				
295	9090 0507 00	SILENCER	1				
300	0070 6002 05	PLASTIC TUBE	AR				

OPTIONS

 AFTERCOOLER WITH WATERSEPARATOR AND PD-FILTER

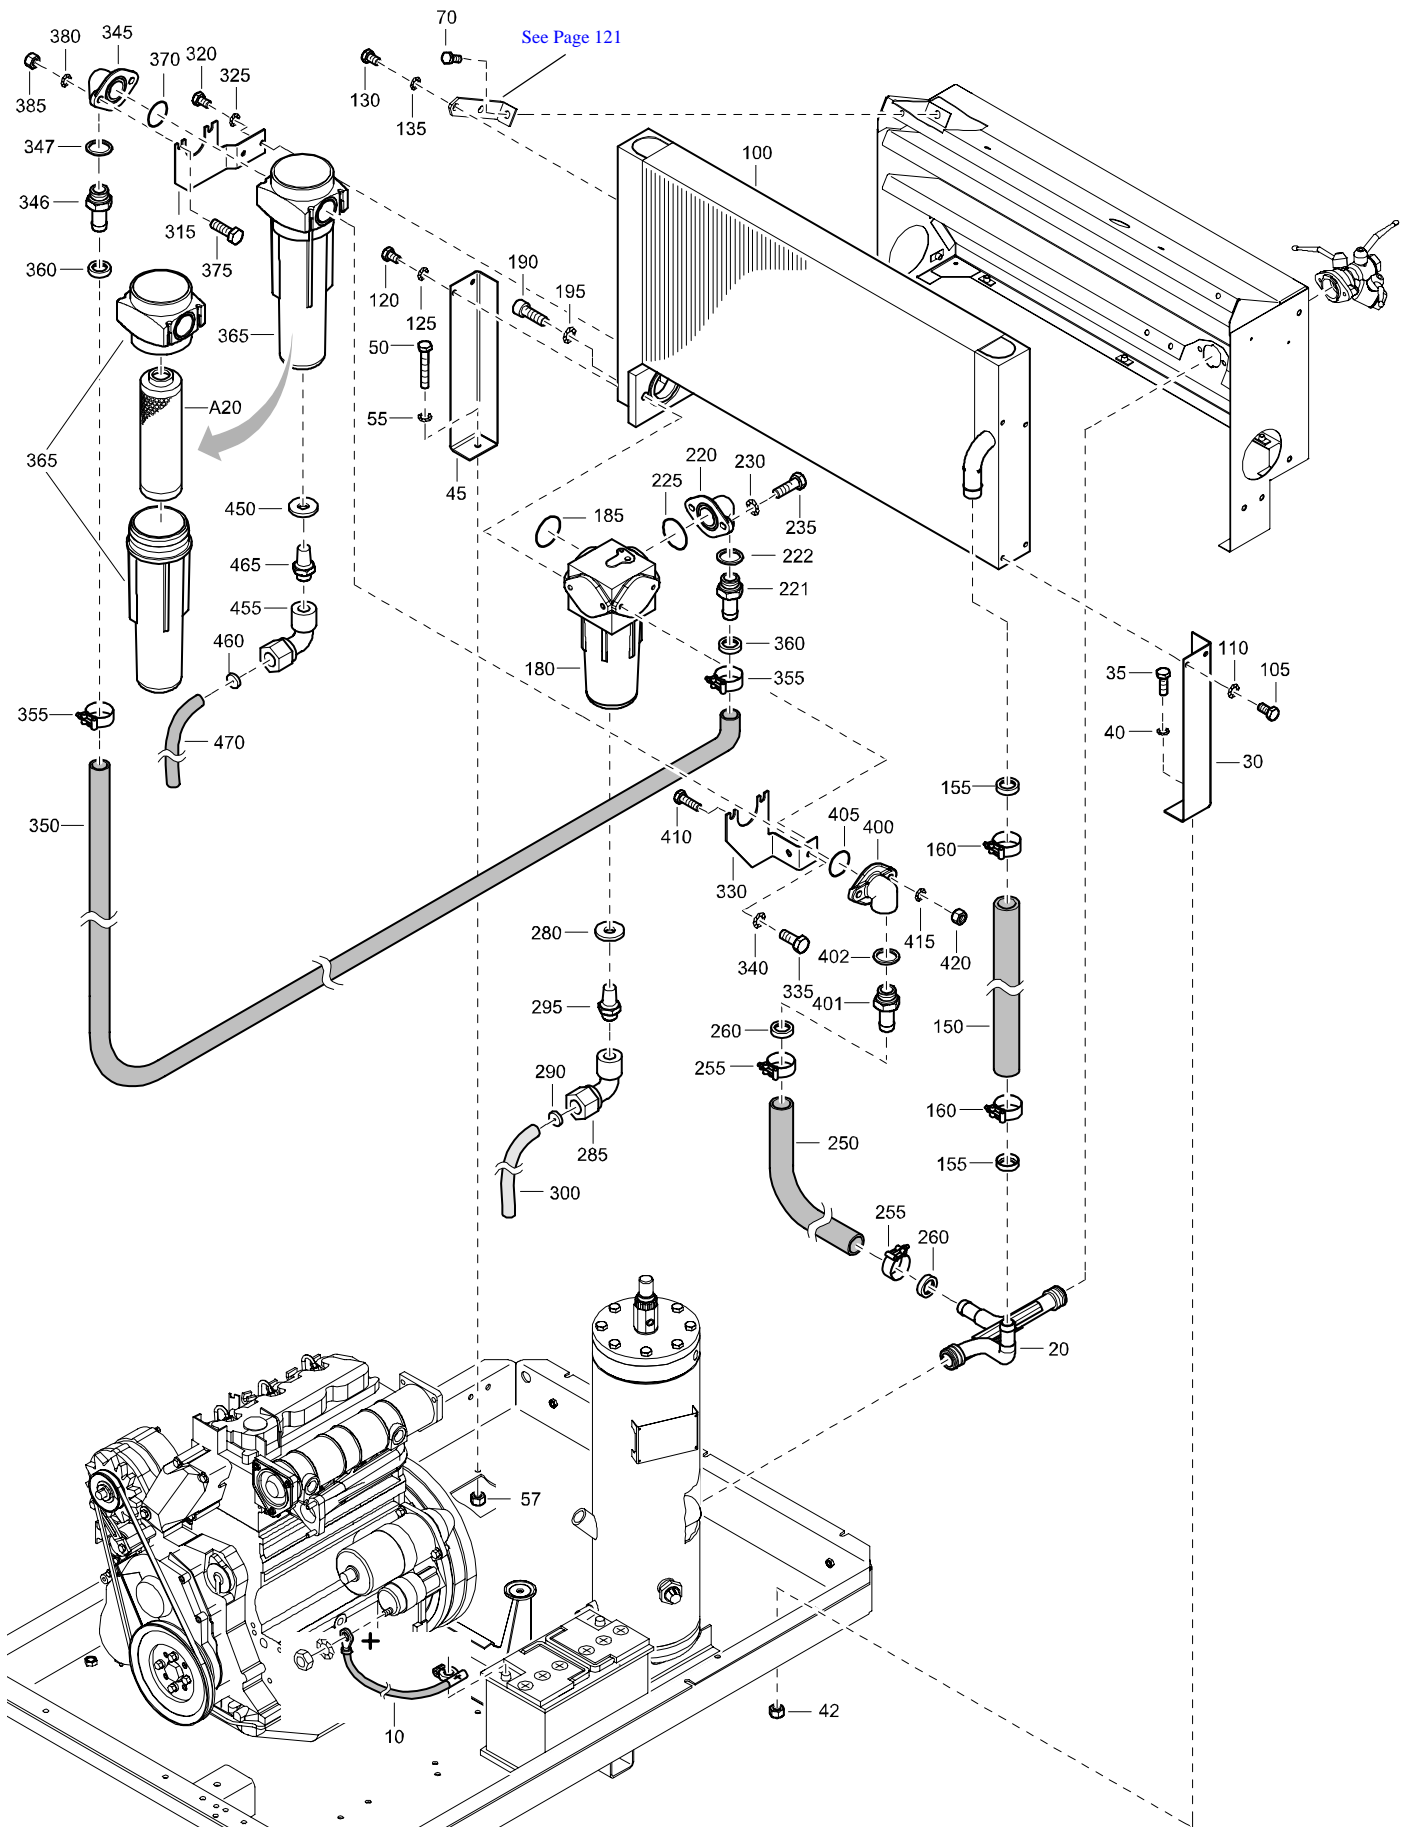


OPTIONS

AFTERCOOLER WITH WATERSEPARATOR AND PD-FILTER

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1615 7725 01	BATTERY CABLE	1	410	0147 1325 03	HEX. HEAD SCREW	2
20	1604 4031 00	PIPE	1	415	0333 3227 00	LOCK WASHER	2
30	1604 4040 00	BRACKET	1	420	0266 2110 00	HEXAGON NUT	2
35	0147 1323 03	HEX. HEAD SCREW	1	450	0653 1062 00	FLAT GASKET	1
40	0333 3227 00	LOCK WASHER	1	455	1604 3952 00	COUPLING	1
42	0266 2110 00	HEXAGON NUT	1	460	1615 8620 00	RESTRICTOR	1
45	1604 4041 00	BRACKET	1	465	9090 0507 00	SILENCER	1
50	0147 1323 03	HEX. HEAD SCREW	1	470	0070 6002 05	PLASTIC TUBE	AR
55	0333 3227 00	LOCK WASHER	1				
57	0266 2110 00	HEXAGON NUT	1				
70	0147 1323 03	HEX. HEAD SCREW	2				
100	1604 3943 00	AFTERCOOLER	1				
105	0147 1320 03	HEX. HEAD SCREW	2				
110	0333 3227 00	LOCK WASHER	2				
120	0147 1320 03	HEX. HEAD SCREW	2				
125	0333 3227 00	LOCK WASHER	2				
130	0147 1320 03	HEX. HEAD SCREW	4				
135	0333 3227 00	LOCK WASHER	4				
150	0072 8403 39	HOSE	AR				
155	1615 8627 00	SLEEVE	2				
160	1079 3471 01	HOSE CLIP	2				
180	1615 8581 00	WATERSEPARATOR	1				
185	0663 7136 00	O-RING	1				
190	0211 1363 03	HEX SOCK. SCREW	2				
195	0333 3232 00	LOCK WASHER	2				
220	1604 4019 00	HOSE COUPLING	1				
221	1626 0874 00	HOSE NIPPLE	1				
222	0661 1049 00	SEALING WASHER	1				
225	0663 7136 00	O-RING	1				
230	0333 3232 00	LOCK WASHER	2				
235	0147 1363 03	HEX. HEAD SCREW	2				
250	0072 8403 39	HOSE	AR				
255	1079 3471 01	HOSE CLIP	2				
260	1615 8627 00	SLEEVE	2				
280	0653 1062 00	FLAT GASKET	1				
285	1604 3952 00	COUPLING	1				
290	1615 8620 00	RESTRICTOR	1				
295	9090 0507 00	SILENCER	1				
300	0070 6002 05	PLASTIC TUBE	AR				
315	1604 3949 01	BRACKET	1				
320	0147 1320 03	HEX. HEAD SCREW	2				
325	0333 3227 00	LOCK WASHER	2				
330	1604 3950 01	BRACKET	1				
335	0147 1362 03	HEX. HEAD SCREW	2				
340	0333 3232 00	LOCK WASHER	2				
345	1604 4019 00	HOSE COUPLING	1				
346	1626 0874 00	HOSE NIPPLE	1				
347	0661 1049 00	SEALING WASHER	1				
350	0072 8403 39	HOSE	AR				
355	1079 3471 01	HOSE CLIP	2				
360	1615 8627 00	SLEEVE	2				
365	1615 8597 00	FILTER	1				
•A20	1615 8598 00	CARTRIDGE	1				
370	0663 9125 00	O-RING	1				
375	0147 1325 03	HEX. HEAD SCREW	2				
380	0333 3227 00	LOCK WASHER	2				
385	0266 2110 00	HEXAGON NUT	2				
400	1604 4019 00	HOSE COUPLING	1				
401	1626 0874 00	HOSE NIPPLE	1				
402	0661 1049 00	SEALING WASHER	1				
405	0663 9125 00	O-RING	1				

OPTIONS

 AFTERCOOLER WITH WATERSEPARATOR AND PD-QD FILTER

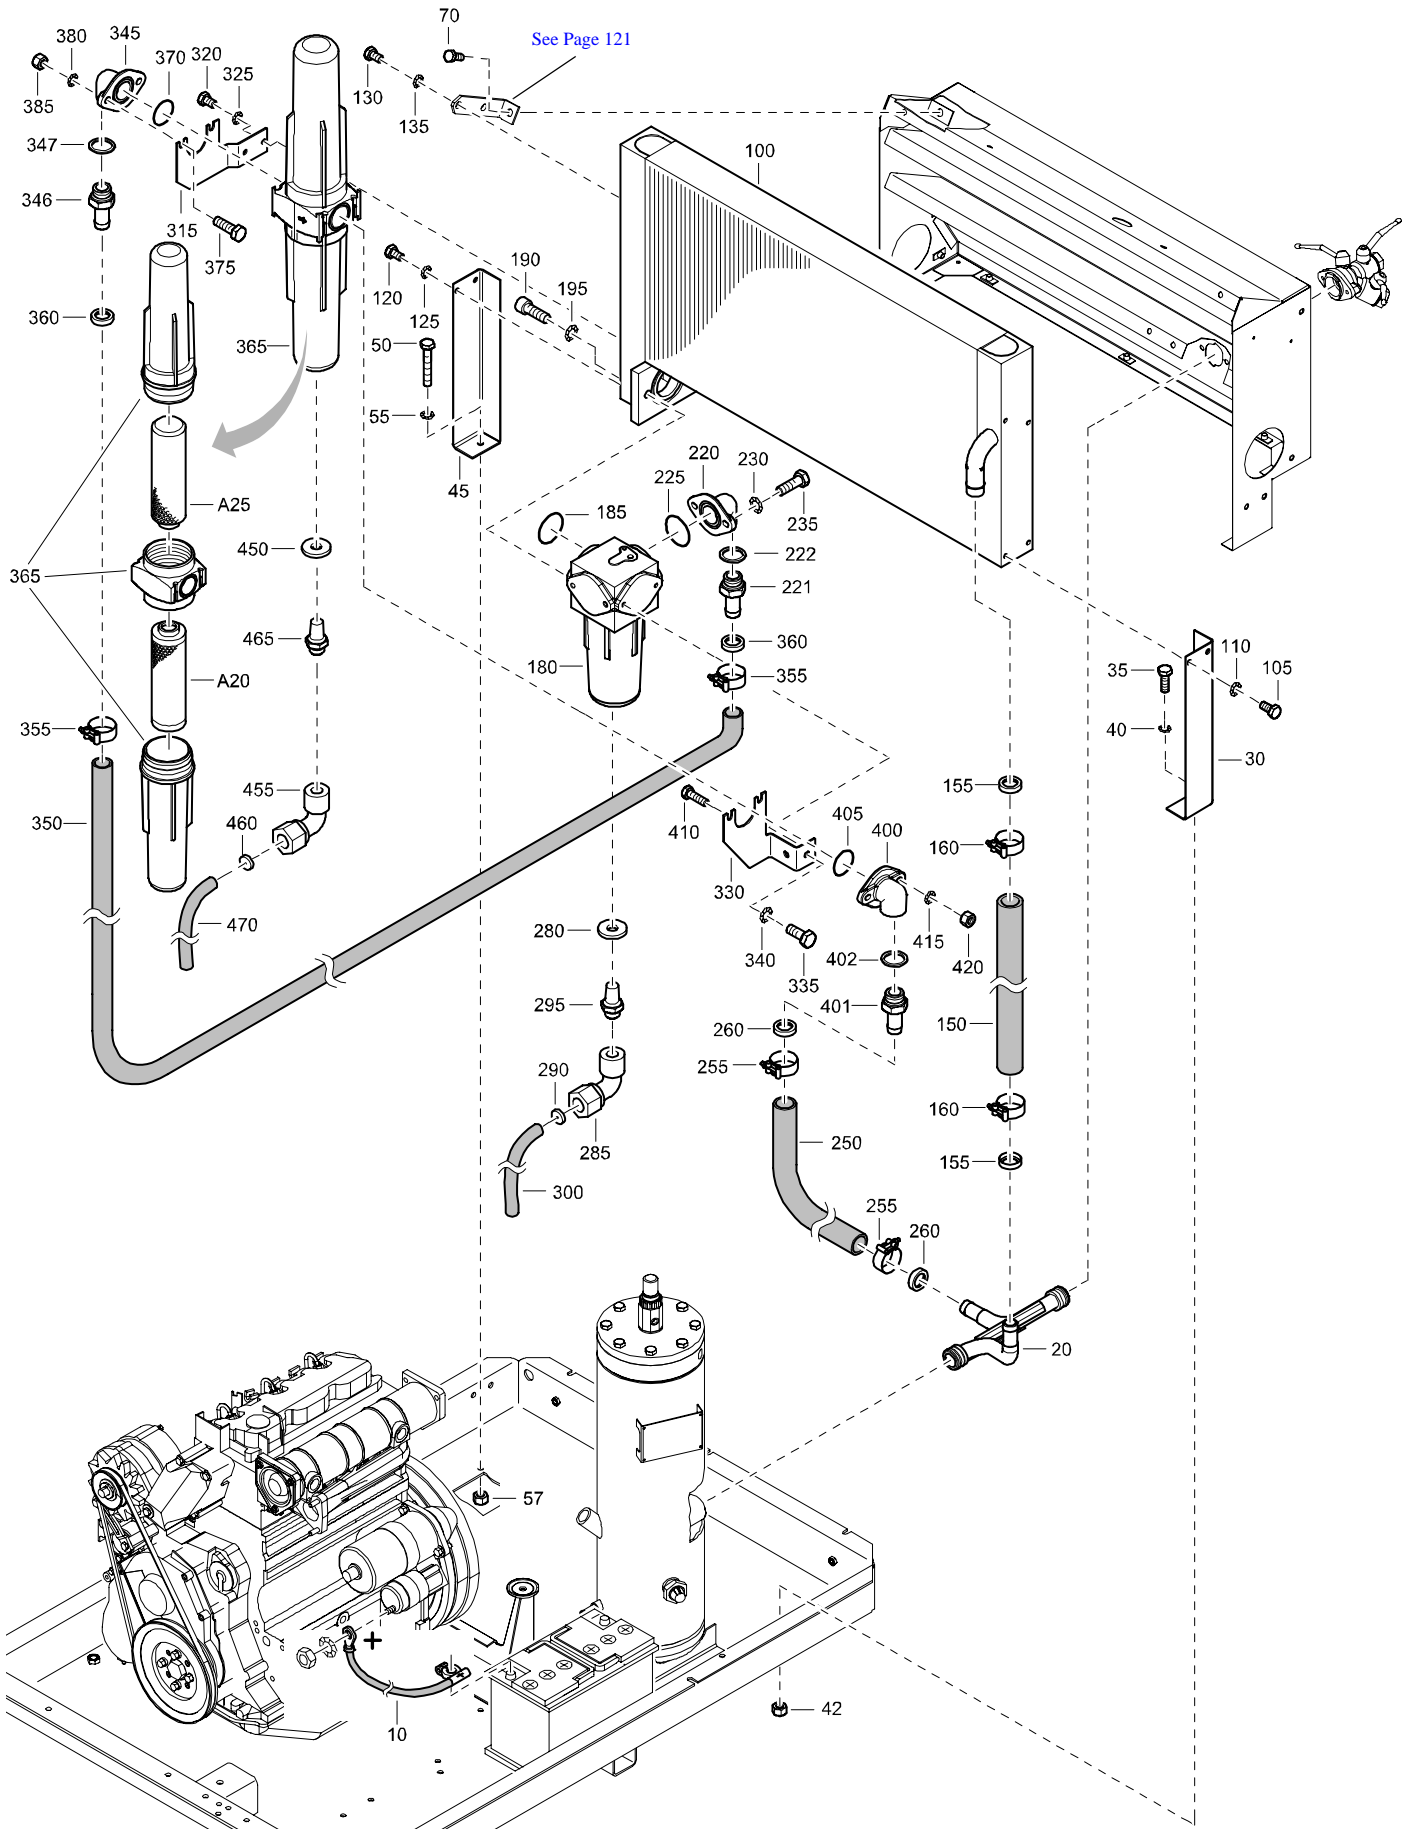


OPTIONS

AFTERCOOLER WITH WATERSEPARATOR AND PD-QD FILTER

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1615 7725 01	BATTERY CABLE	1	405	0663 9125 00	O-RING	1
20	1604 4031 00	PIPE	1	410	0147 1325 03	HEX. HEAD SCREW	2
30	1604 4040 00	BRACKET	1	415	0333 3227 00	LOCK WASHER	2
35	0147 1323 03	HEX. HEAD SCREW	1	420	0266 2110 00	HEXAGON NUT	2
40	0333 3227 00	LOCK WASHER	1	450	0653 1062 00	FLAT GASKET	1
42	0266 2110 00	HEXAGON NUT	1	455	1604 3952 00	COUPLING	1
45	1604 4041 00	BRACKET	1	460	1615 8620 00	RESTRICTOR	1
50	0147 1323 03	HEX. HEAD SCREW	1	465	9090 0507 00	SILENCER	1
55	0333 3227 00	LOCK WASHER	1	470	0070 6002 05	PLASTIC TUBE	AR
57	0266 2110 00	HEXAGON NUT	1				
70	0147 1323 03	HEX. HEAD SCREW	2				
100	1604 3943 00	AFTERCOOLER	1				
105	0147 1320 03	HEX. HEAD SCREW	2				
110	0333 3227 00	LOCK WASHER	2				
120	0147 1320 03	HEX. HEAD SCREW	2				
125	0333 3227 00	LOCK WASHER	2				
130	0147 1320 03	HEX. HEAD SCREW	4				
135	0333 3227 00	LOCK WASHER	4				
150	0072 8403 39	HOSE	AR				
155	1615 8627 00	SLEEVE	2				
160	1079 3471 01	HOSE CLIP	2				
180	1615 8581 00	WATERSEPARATOR	1				
185	0663 7136 00	O-RING	1				
190	0211 1363 03	HEX SOCK. SCREW	2				
195	0333 3232 00	LOCK WASHER	2				
220	1604 4019 00	HOSE COUPLING	1				
221	1626 0874 00	HOSE NIPPLE	1				
222	0661 1049 00	SEALING WASHER	1				
225	0663 7136 00	O-RING	1				
230	0333 3232 00	LOCK WASHER	2				
235	0147 1363 03	HEX. HEAD SCREW	2				
250	0072 8403 39	HOSE	AR				
255	1079 3471 01	HOSE CLIP	2				
260	1615 8627 00	SLEEVE	2				
280	0653 1062 00	FLAT GASKET	1				
285	1604 3952 00	COUPLING	1				
290	1615 8620 00	RESTRICTOR	1				
295	9090 0507 00	SILENCER	1				
300	0070 6002 05	PLASTIC TUBE	AR				
315	1604 3949 01	BRACKET	1				
320	0147 1320 03	HEX. HEAD SCREW	2				
325	0333 3227 00	LOCK WASHER	2				
330	1604 3950 01	BRACKET	1				
335	0147 1362 03	HEX. HEAD SCREW	2				
340	0333 3232 00	LOCK WASHER	2				
345	1604 4019 00	HOSE COUPLING	1				
346	1626 0874 00	HOSE NIPPLE	1				
347	0661 1049 00	SEALING WASHER	1				
350	0072 8403 39	HOSE	AR				
355	1079 3471 01	HOSE CLIP	2				
360	1615 8627 00	SLEEVE	2				
365	1615 8583 00	FILTER	1				
•A20	1615 8598 00	CARTRIDGE	1				
•A25	1615 8599 00	CARTRIDGE	1				
370	0663 9125 00	O-RING	1				
375	0147 1325 03	HEX. HEAD SCREW	2				
380	0333 3227 00	LOCK WASHER	2				
385	0266 2110 00	HEXAGON NUT	2				
400	1604 4019 00	HOSE COUPLING	1				
401	1626 0874 00	HOSE NIPPLE	1				
402	0661 1049 00	SEALING WASHER	1				

OPTIONS

 AFTERCOOLER WITH WATERSEPARATOR AND LUBRICATOR

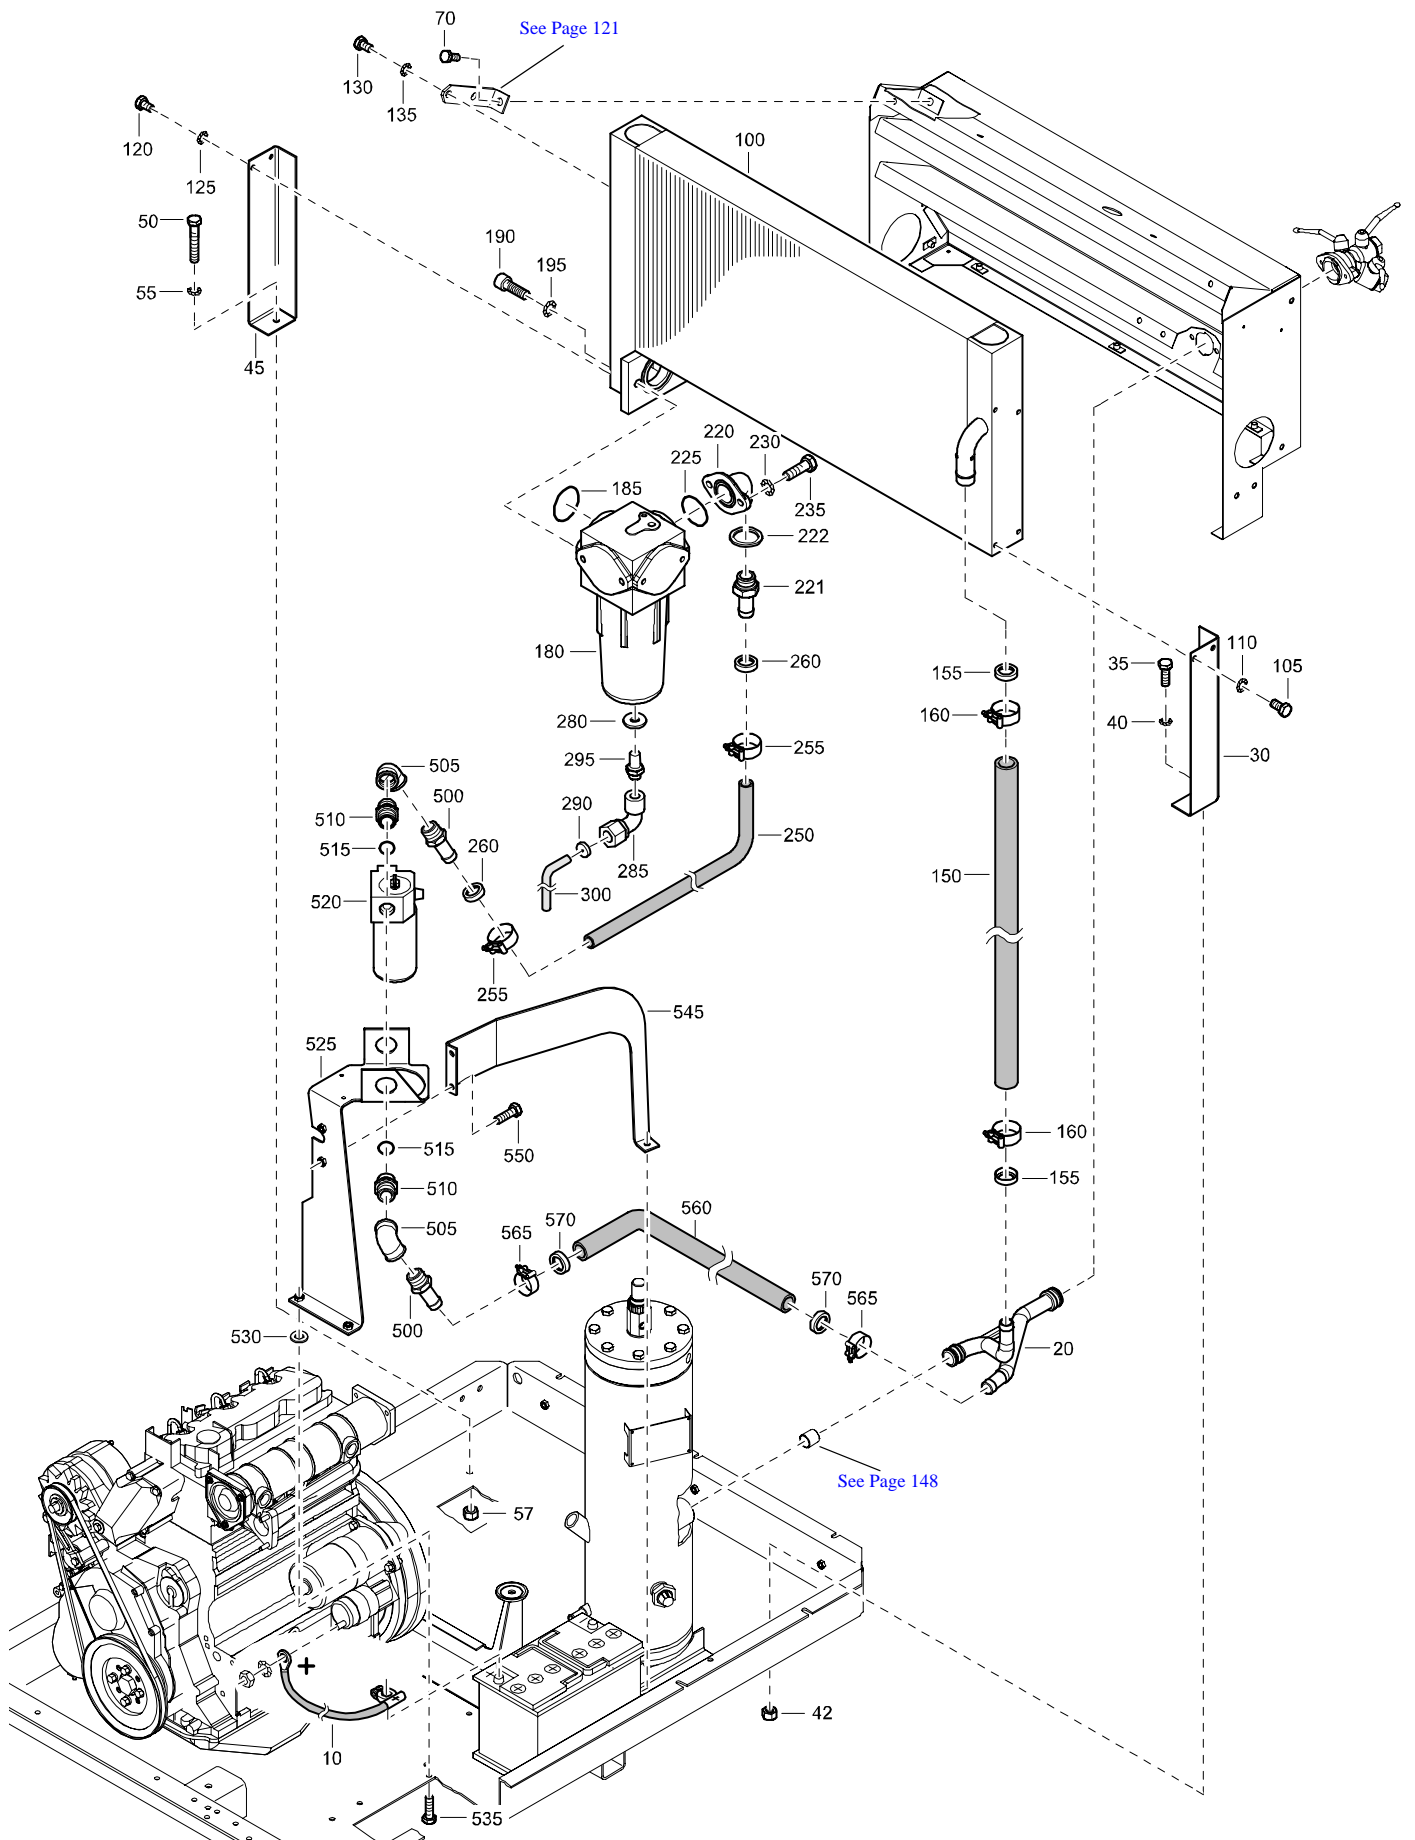


OPTIONS

AFTERCOOLER WITH WATERSEPARATOR AND LUBRICATOR

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1604 9615 00	BATTERY CABLE	1				
20	1604 4034 00	PIPE	1				
30	1604 4040 00	BRACKET	1				
35	0147 1323 03	HEX. HEAD SCREW	1				
40	0333 3227 00	LOCK WASHER	1				
42	0266 2110 00	HEXAGON NUT	1				
45	1604 4041 00	BRACKET	1				
50	0147 1323 03	HEX. HEAD SCREW	1				
55	0333 3227 00	LOCK WASHER	1				
57	0266 2110 00	HEXAGON NUT	1				
70	0147 1323 03	HEX. HEAD SCREW	2				
100	1604 3943 00	AFTERCOOLER	1				
105	0147 1320 03	HEX. HEAD SCREW	2				
110	0333 3227 00	LOCK WASHER	2				
120	0147 1320 03	HEX. HEAD SCREW	2				
125	0333 3227 00	LOCK WASHER	2				
130	0147 1320 03	HEX. HEAD SCREW	4				
135	0333 3227 00	LOCK WASHER	4				
150	0072 8403 39	HOSE	AR				
155	1615 8627 00	SLEEVE	2				
160	1079 3471 01	HOSE CLIP	2				
180	1615 8581 00	WATERSEPARATOR	1				
185	0663 7136 00	O-RING	1				
190	0211 1363 03	HEX SOCK. SCREW	2				
195	0333 3232 00	LOCK WASHER	2				
220	1604 4019 00	HOSE COUPLING	1				
221	1626 0874 00	HOSE NIPPLE	1				
222	0661 1049 00	SEALING WASHER	1				
225	0663 7136 00	O-RING	1				
230	0333 3232 00	LOCK WASHER	2				
235	0147 1363 03	HEX. HEAD SCREW	2				
250	0072 8403 39	HOSE	AR				
255	1079 3471 01	HOSE CLIP	2				
260	1615 8627 00	SLEEVE	2				
280	0653 1062 00	FLAT GASKET	1				
285	1604 3952 00	COUPLING	1				
290	1615 8620 00	RESTRICTOR	1				
295	9090 0507 00	SILENCER	1				
300	0070 6002 05	PLASTIC TUBE	AR				
500	9000 0246 00	HOSE NIPPLE	2				
505	0560 0200 24	ELBOW	2				
510	1604 1425 01	BUSHING	2				
515	0663 2108 20	O-RING	2				
520	1615 8584 85	LUBRICATOR ASS'Y	1				
522	8099 0202 36	LUBRICATING OIL	1				
525	1604 3962 31	BRACKET	1				
530	0301 2344 00	PLAIN WASHER	2				
535	0147 1325 03	HEX. HEAD SCREW	2				
545	1604 3976 00	BRACKET	1				
550	0147 1325 03	HEX. HEAD SCREW	2				
560	0072 8403 39	HOSE	AR				
565	1079 3471 01	HOSE CLIP	2				
570	1615 8627 00	SLEEVE	2				

OPTIONS

 AFTERCOOLER WITH WATERSEPARATOR - PD-FILTER AND LUBRICATOR

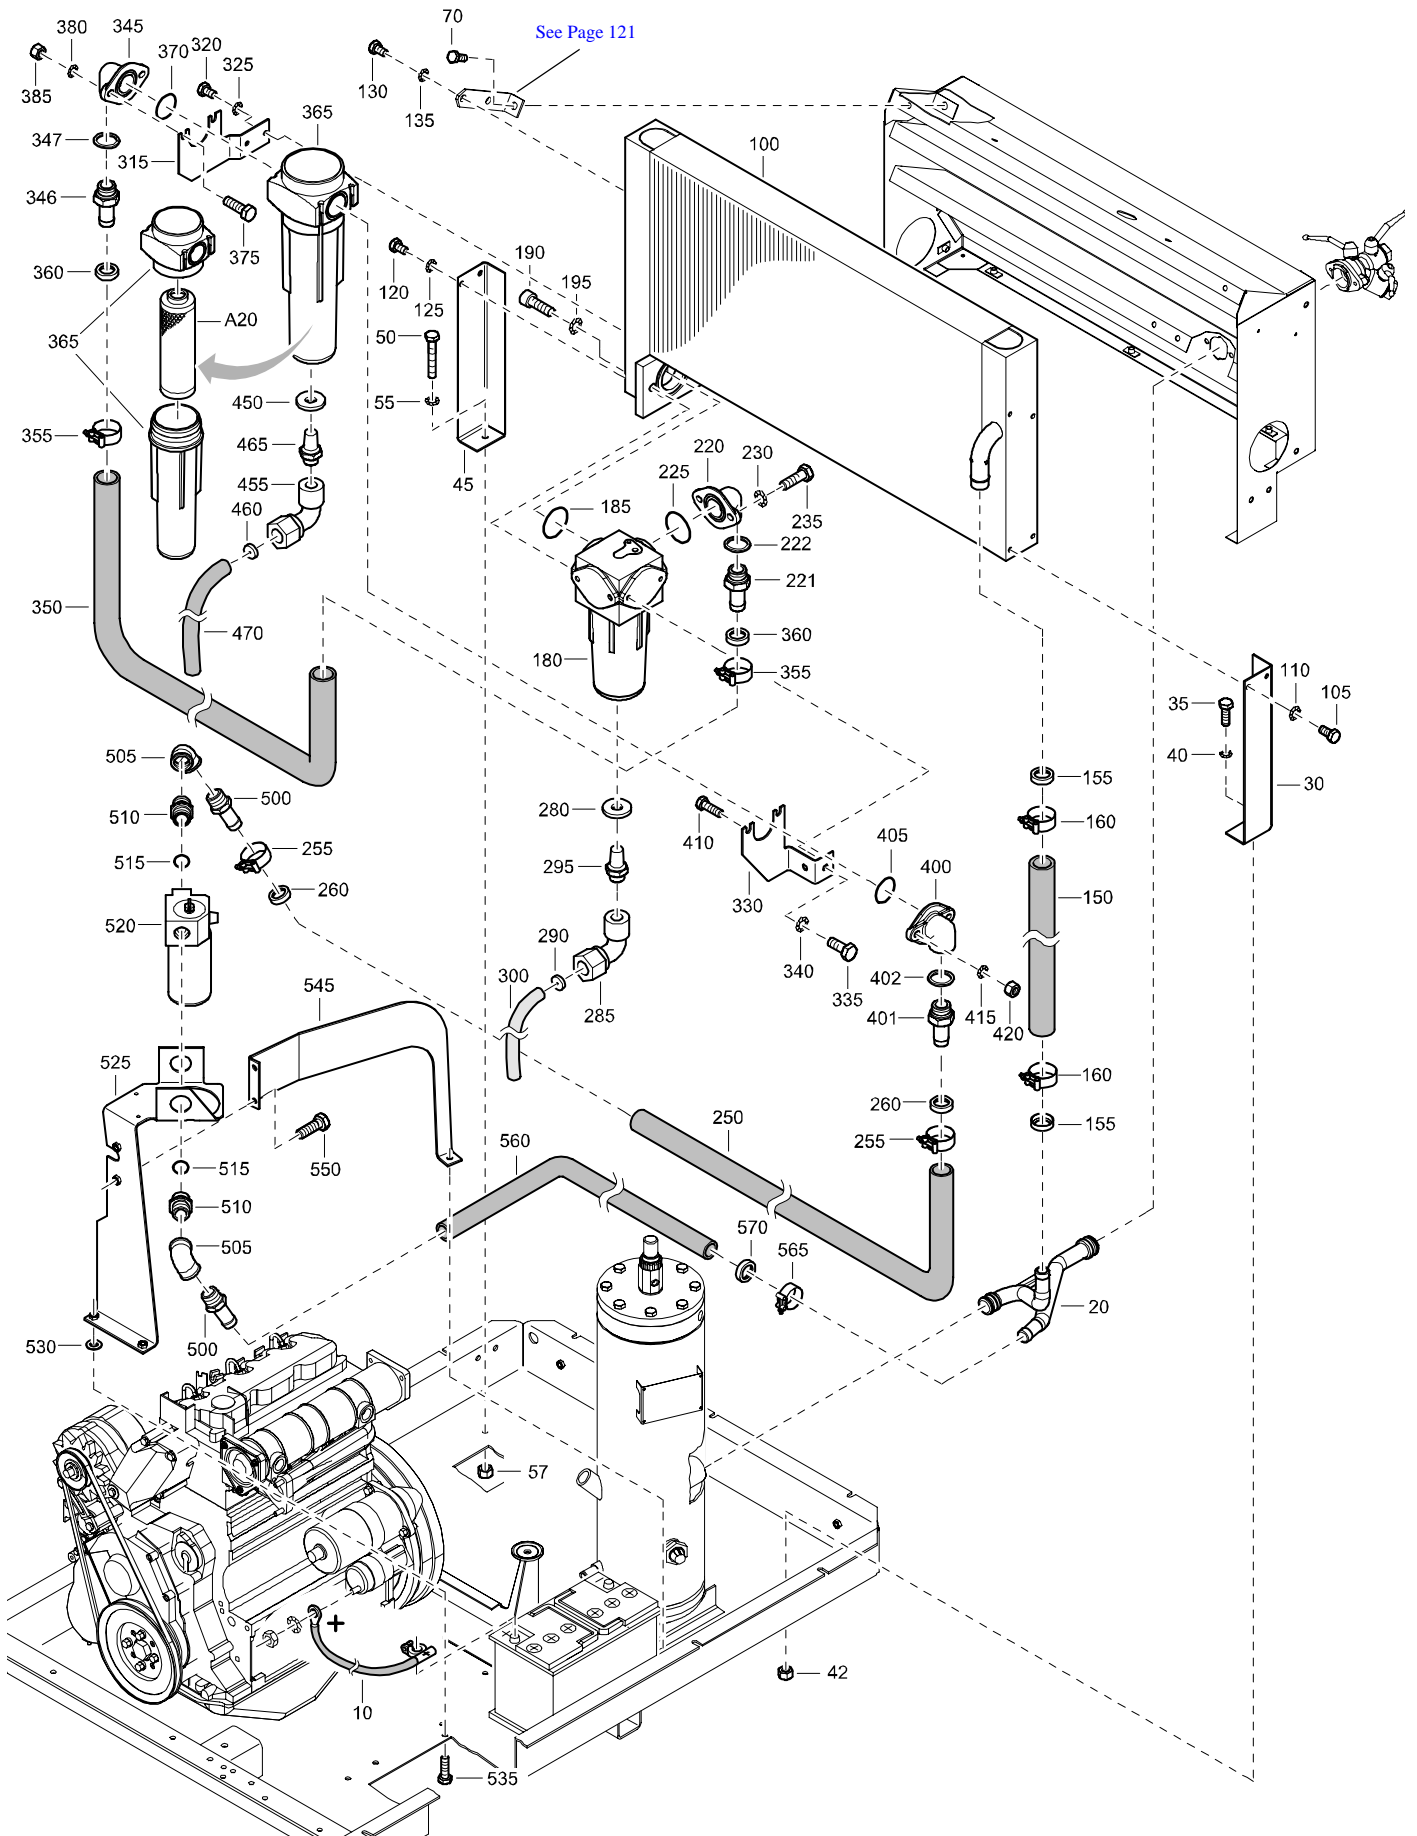


OPTIONS

AFTERCOOLER WITH WATERSEPARATOR - PD-FILTER AND LUBRICATOR

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1604 9615 00	BATTERY CABLE	1	410	0147 1325 03	HEX. HEAD SCREW	2
20	1604 4034 00	PIPE	1	415	0333 3227 00	LOCK WASHER	2
30	1604 4040 00	BRACKET	1	420	0266 2110 00	HEXAGON NUT	2
35	0147 1323 03	HEX. HEAD SCREW	1	450	0653 1062 00	FLAT GASKET	1
40	0333 3227 00	LOCK WASHER	1	455	1604 3952 00	COUPLING	1
42	0266 2110 00	HEXAGON NUT	1	460	1615 8620 00	RESTRICTOR	1
45	1604 4041 00	BRACKET	1	465	9090 0507 00	SILENCER	1
50	0147 1323 03	HEX. HEAD SCREW	1	470	0070 6002 05	PLASTIC TUBE	AR
55	0333 3227 00	LOCK WASHER	1	500	9000 0246 00	HOSE NIPPLE	2
57	0266 2110 00	HEXAGON NUT	1	505	0560 0200 24	ELBOW	2
70	0147 1323 03	HEX. HEAD SCREW	2	510	1604 1425 01	BUSHING	2
100	1604 3943 00	AFTERCOOLER	1	515	0663 2108 20	O-RING	2
105	0147 1320 03	HEX. HEAD SCREW	2	520	1615 8584 85	LUBRICATOR ASS'Y	1
110	0333 3227 00	LOCK WASHER	2	522	8099 0202 36	LUBRICATING OIL	1
120	0147 1320 03	HEX. HEAD SCREW	2	525	1604 3962 31	BRACKET	1
125	0333 3227 00	LOCK WASHER	2	530	0301 2344 00	PLAIN WASHER	2
130	0147 1320 03	HEX. HEAD SCREW	4	535	0147 1325 03	HEX. HEAD SCREW	2
135	0333 3227 00	LOCK WASHER	4	545	1604 3976 00	BRACKET	1
150	0072 8403 39	HOSE	AR	550	0147 1325 03	HEX. HEAD SCREW	2
155	1615 8627 00	SLEEVE	2	560	0072 8403 39	HOSE	AR
160	1079 3471 01	HOSE CLIP	2	565	1079 3471 01	HOSE CLIP	2
180	1615 8581 00	WATERSEPARATOR	1	570	1615 8627 00	SLEEVE	2
185	0663 7136 00	O-RING	1				
190	0211 1363 03	HEX SOCK. SCREW	2				
195	0333 3232 00	LOCK WASHER	2				
220	1604 4019 00	HOSE COUPLING	1				
221	1626 0874 00	HOSE NIPPLE	1				
222	0661 1049 00	SEALING WASHER	1				
225	0663 7136 00	O-RING	1				
230	0333 3232 00	LOCK WASHER	2				
235	0147 1363 03	HEX. HEAD SCREW	2				
250	0072 8403 39	HOSE	AR				
255	1079 3471 01	HOSE CLIP	2				
260	1615 8627 00	SLEEVE	2				
280	0653 1062 00	FLAT GASKET	1				
285	1604 3952 00	COUPLING	1				
290	1615 8620 00	RESTRICTOR	1				
295	9090 0507 00	SILENCER	1				
300	0070 6002 05	PLASTIC TUBE	AR				
315	1604 3949 01	BRACKET	1				
320	0147 1320 03	HEX. HEAD SCREW	2				
325	0333 3227 00	LOCK WASHER	2				
330	1604 3950 01	BRACKET	1				
335	0147 1362 03	HEX. HEAD SCREW	2				
340	0333 3232 00	LOCK WASHER	2				
345	1604 4019 00	HOSE COUPLING	1				
346	1626 0874 00	HOSE NIPPLE	1				
347	0661 1049 00	SEALING WASHER	1				
350	0072 8403 39	HOSE	AR				
355	1079 3471 01	HOSE CLIP	2				
360	1615 8627 00	SLEEVE	2				
365	1615 8597 00	FILTER	1				
•A20	1615 8598 00	CARTRIDGE	1				
370	0663 9125 00	O-RING	1				
375	0147 1325 03	HEX. HEAD SCREW	2				
380	0333 3227 00	LOCK WASHER	2				
385	0266 2110 00	HEXAGON NUT	2				
400	1604 4019 00	HOSE COUPLING	1				
401	1626 0874 00	HOSE NIPPLE	1				
402	0661 1049 00	SEALING WASHER	1				
405	0663 9125 00	O-RING	1				

OPTIONS

 AFTERCOOLER WITH WATERSEPARATOR - PD-QD-FILTER AND LUBRICATOR

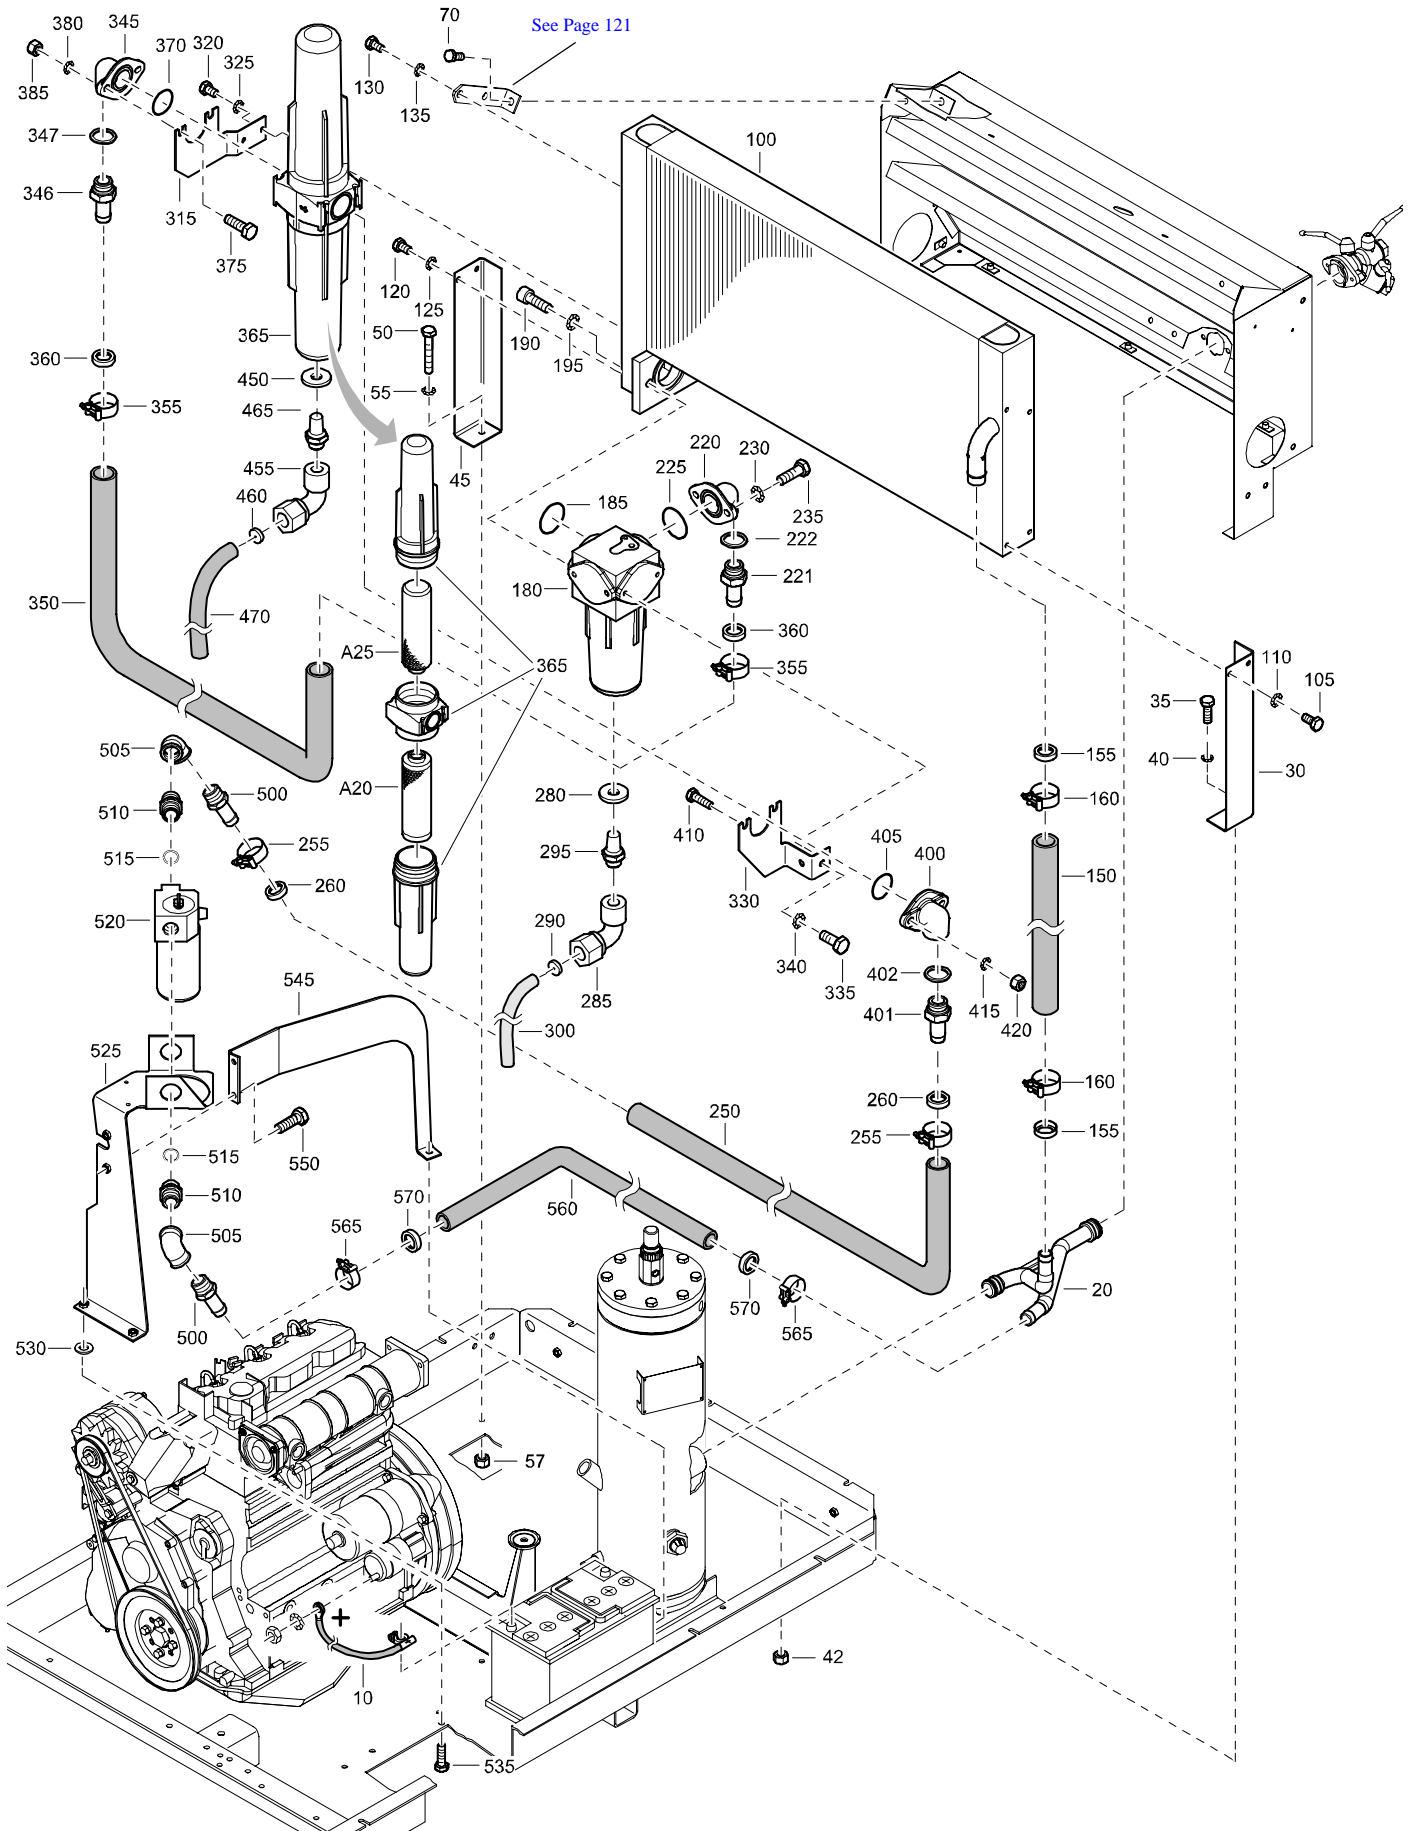


OPTIONS

AFTERCOOLER WITH WATERSEPARATOR - PD-QD-FILTER AND LUBRICATOR

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1604 9615 00	BATTERY CABLE	1	405	0663 9125 00	O-RING	1
20	1604 4034 00	PIPE	1	410	0147 1325 03	HEX. HEAD SCREW	2
30	1604 4040 00	BRACKET	1	415	0333 3227 00	LOCK WASHER	2
35	0147 1323 03	HEX. HEAD SCREW	1	420	0266 2110 00	HEXAGON NUT	2
40	0333 3227 00	LOCK WASHER	1	450	0653 1062 00	FLAT GASKET	1
42	0266 2110 00	HEXAGON NUT	1	455	1604 3952 00	COUPLING	1
45	1604 4041 00	BRACKET	1	460	1615 8620 00	RESTRICTOR	1
50	0147 1323 03	HEX. HEAD SCREW	1	465	9090 0507 00	SILENCER	1
55	0333 3227 00	LOCK WASHER	1	470	0070 6002 05	PLASTIC TUBE	AR
57	0266 2110 00	HEXAGON NUT	1	500	9000 0246 00	HOSE NIPPLE	2
70	0147 1323 03	HEX. HEAD SCREW	2	505	0560 0200 24	ELBOW	2
100	1604 3943 00	AFTERCOOLER	1	510	1604 1425 01	BUSHING	2
105	0147 1320 03	HEX. HEAD SCREW	2	515	0663 2108 20	O-RING	2
110	0333 3227 00	LOCK WASHER	2	520	1615 8584 85	LUBRICATOR ASS'Y	1
120	0147 1320 03	HEX. HEAD SCREW	2	522	8099 0202 36	LUBRICATING OIL	1
125	0333 3227 00	LOCK WASHER	2	525	1604 3962 31	BRACKET	1
130	0147 1320 03	HEX. HEAD SCREW	4	530	0301 2344 00	PLAIN WASHER	2
135	0333 3227 00	LOCK WASHER	4	535	0147 1325 03	HEX. HEAD SCREW	2
150	0072 8403 39	HOSE	AR	545	1604 3976 00	BRACKET	1
155	1615 8627 00	SLEEVE	2	550	0147 1325 03	HEX. HEAD SCREW	2
160	1079 3471 01	HOSE CLIP	2	560	0072 8403 39	HOSE	AR
180	1615 8581 00	WATERSEPARATOR	1	565	1079 3471 01	HOSE CLIP	2
185	0663 7136 00	O-RING	1	570	1615 8627 00	SLEEVE	2
190	0211 1363 03	HEX SOCK. SCREW	2				
195	0333 3232 00	LOCK WASHER	2				
220	1604 4019 00	HOSE COUPLING	1				
221	1626 0874 00	HOSE NIPPLE	1				
222	0661 1049 00	SEALING WASHER	1				
225	0663 7136 00	O-RING	1				
230	0333 3232 00	LOCK WASHER	2				
235	0147 1363 03	HEX. HEAD SCREW	2				
250	0072 8403 39	HOSE	AR				
255	1079 3471 01	HOSE CLIP	2				
260	1615 8627 00	SLEEVE	2				
280	0653 1062 00	FLAT GASKET	1				
285	1604 3952 00	COUPLING	1				
290	1615 8620 00	RESTRICTOR	1				
295	9090 0507 00	SILENCER	1				
300	0070 6002 05	PLASTIC TUBE	AR				
315	1604 3949 01	BRACKET	1				
320	0147 1320 03	HEX. HEAD SCREW	2				
325	0333 3227 00	LOCK WASHER	2				
330	1604 3950 01	BRACKET	1				
335	0147 1362 03	HEX. HEAD SCREW	2				
340	0333 3232 00	LOCK WASHER	2				
345	1604 4019 00	HOSE COUPLING	1				
346	1626 0874 00	HOSE NIPPLE	1				
347	0661 1049 00	SEALING WASHER	1				
350	0072 8403 39	HOSE	AR				
355	1079 3471 01	HOSE CLIP	2				
360	1615 8627 00	SLEEVE	2				
365	1615 8583 00	FILTER	1				
•A20	1615 8598 00	CARTRIDGE	1				
•A25	1615 8599 00	CARTRIDGE	1				
370	0663 9125 00	O-RING	1				
375	0147 1325 03	HEX. HEAD SCREW	2				
380	0333 3227 00	LOCK WASHER	2				
385	0266 2110 00	HEXAGON NUT	2				
400	1604 4019 00	HOSE COUPLING	1				
401	1626 0874 00	HOSE NIPPLE	1				
402	0661 1049 00	SEALING WASHER	1				

OPTIONS

 
PIPES AND FITTINGS FOR AFTERCOOLER BYPASS

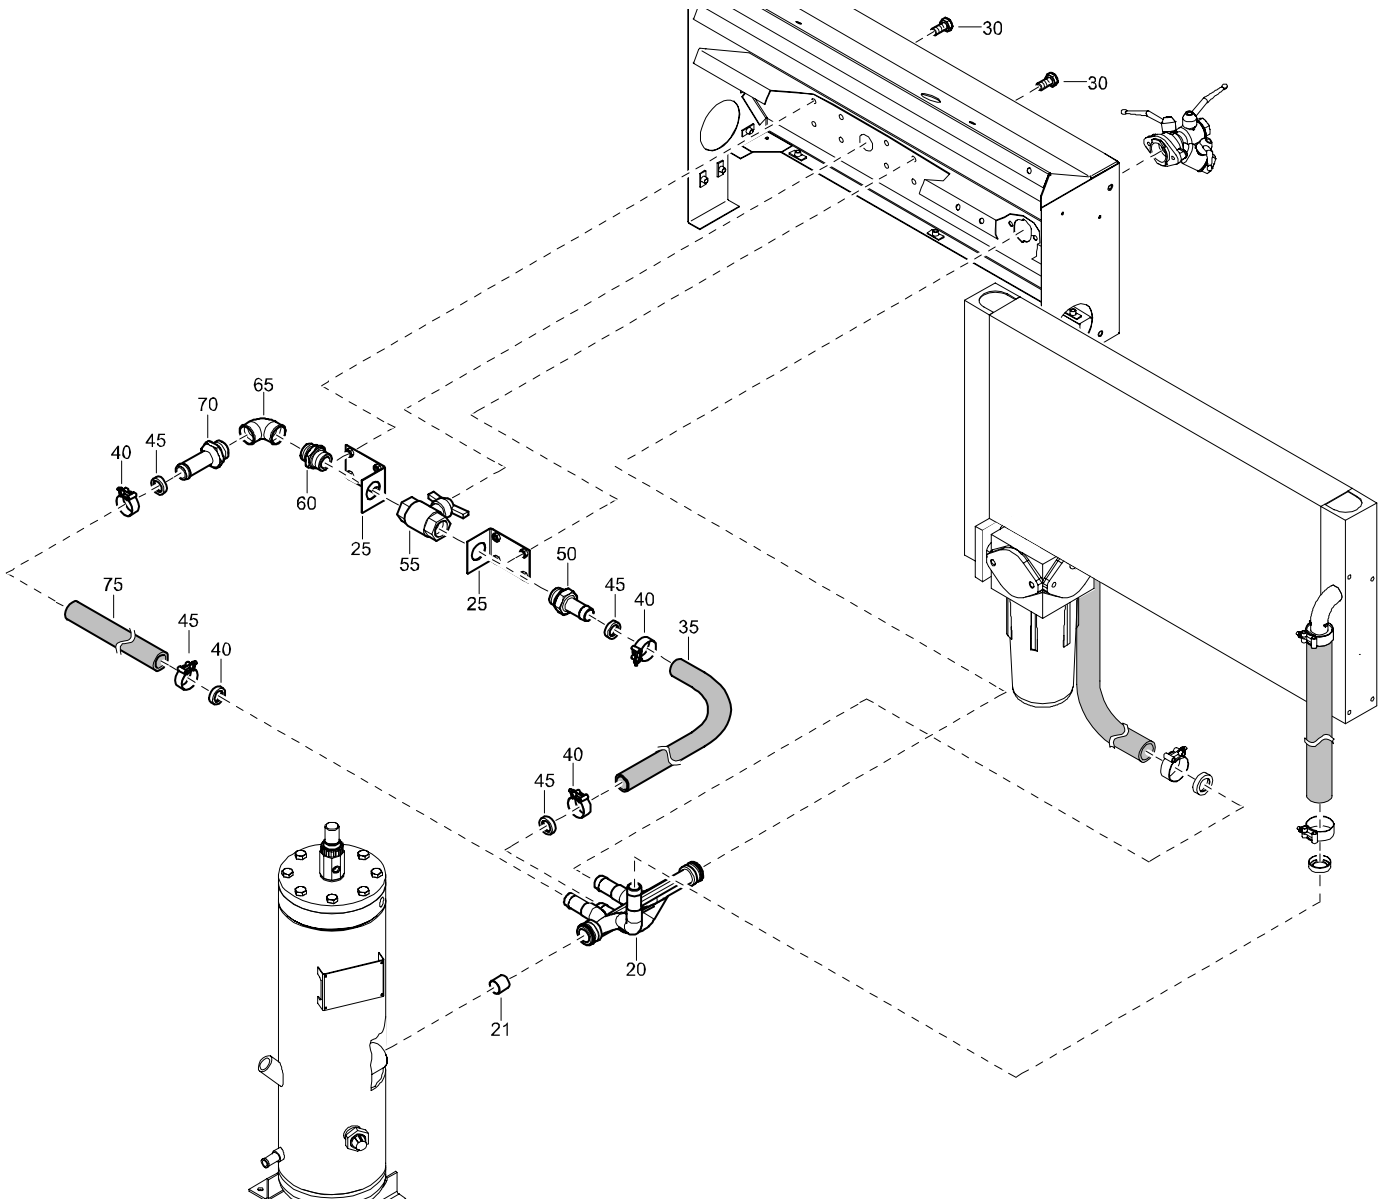

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 5901 00	PIPE	1				
21	1615 8616 01	RESTRICTOR	1				
25	1604 5900 00	BRACKET	2				
30	0147 1322 03	HEX. HEAD SCREW	8				
35	0072 8403 39	HOSE	AR				
40	1079 3471 01	HOSE CLIP	4				
45	1615 8627 00	SLEEVE	4				
50	1626 0874 00	HOSE NIPPLE	1				
55	0852 0010 47	BALL VALVE	1				
60	0571 0035 09	HEXAGON NIPPLE	1				
65	0560 0200 24	ELBOW	1				
70	9000 0246 00	HOSE NIPPLE	1				
75	0072 8403 39	HOSE	AR				

OPTIONS

 
LUBRICATOR FOR HARDHAT

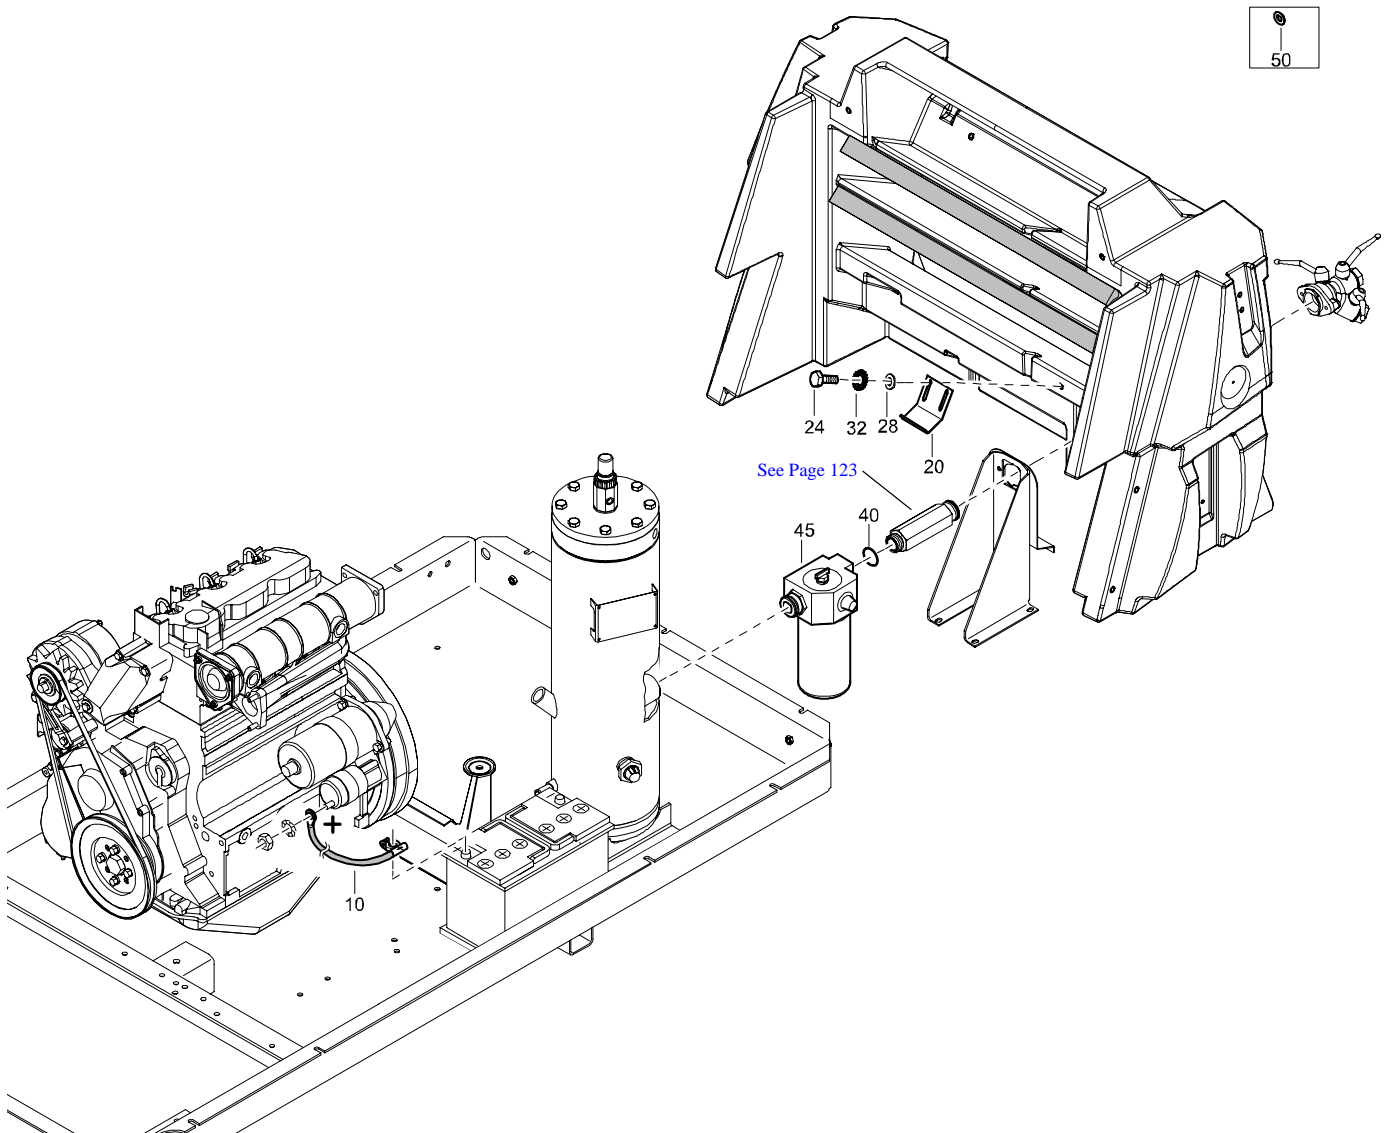

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	1615 7725 01	BATTERY CABLE	1				
20	1604 5759 02	BRACKET	1				
24	0147 1325 03	HEX. HEAD SCREW	1				
28	0301 2335 00	PLAIN WASHER	1				
32	0333 3227 00	LOCK WASHER	1				
40	0663 2108 20	O-RING	1				
45	1615 8584 85	LUBRICATOR ASS'Y	1				
50	0301 2335 00	PLAIN WASHER	2				

OPTIONS

 PIPES AND FITTINGS FOR COMPRESSOR WITH ANTIFROST DEVICE

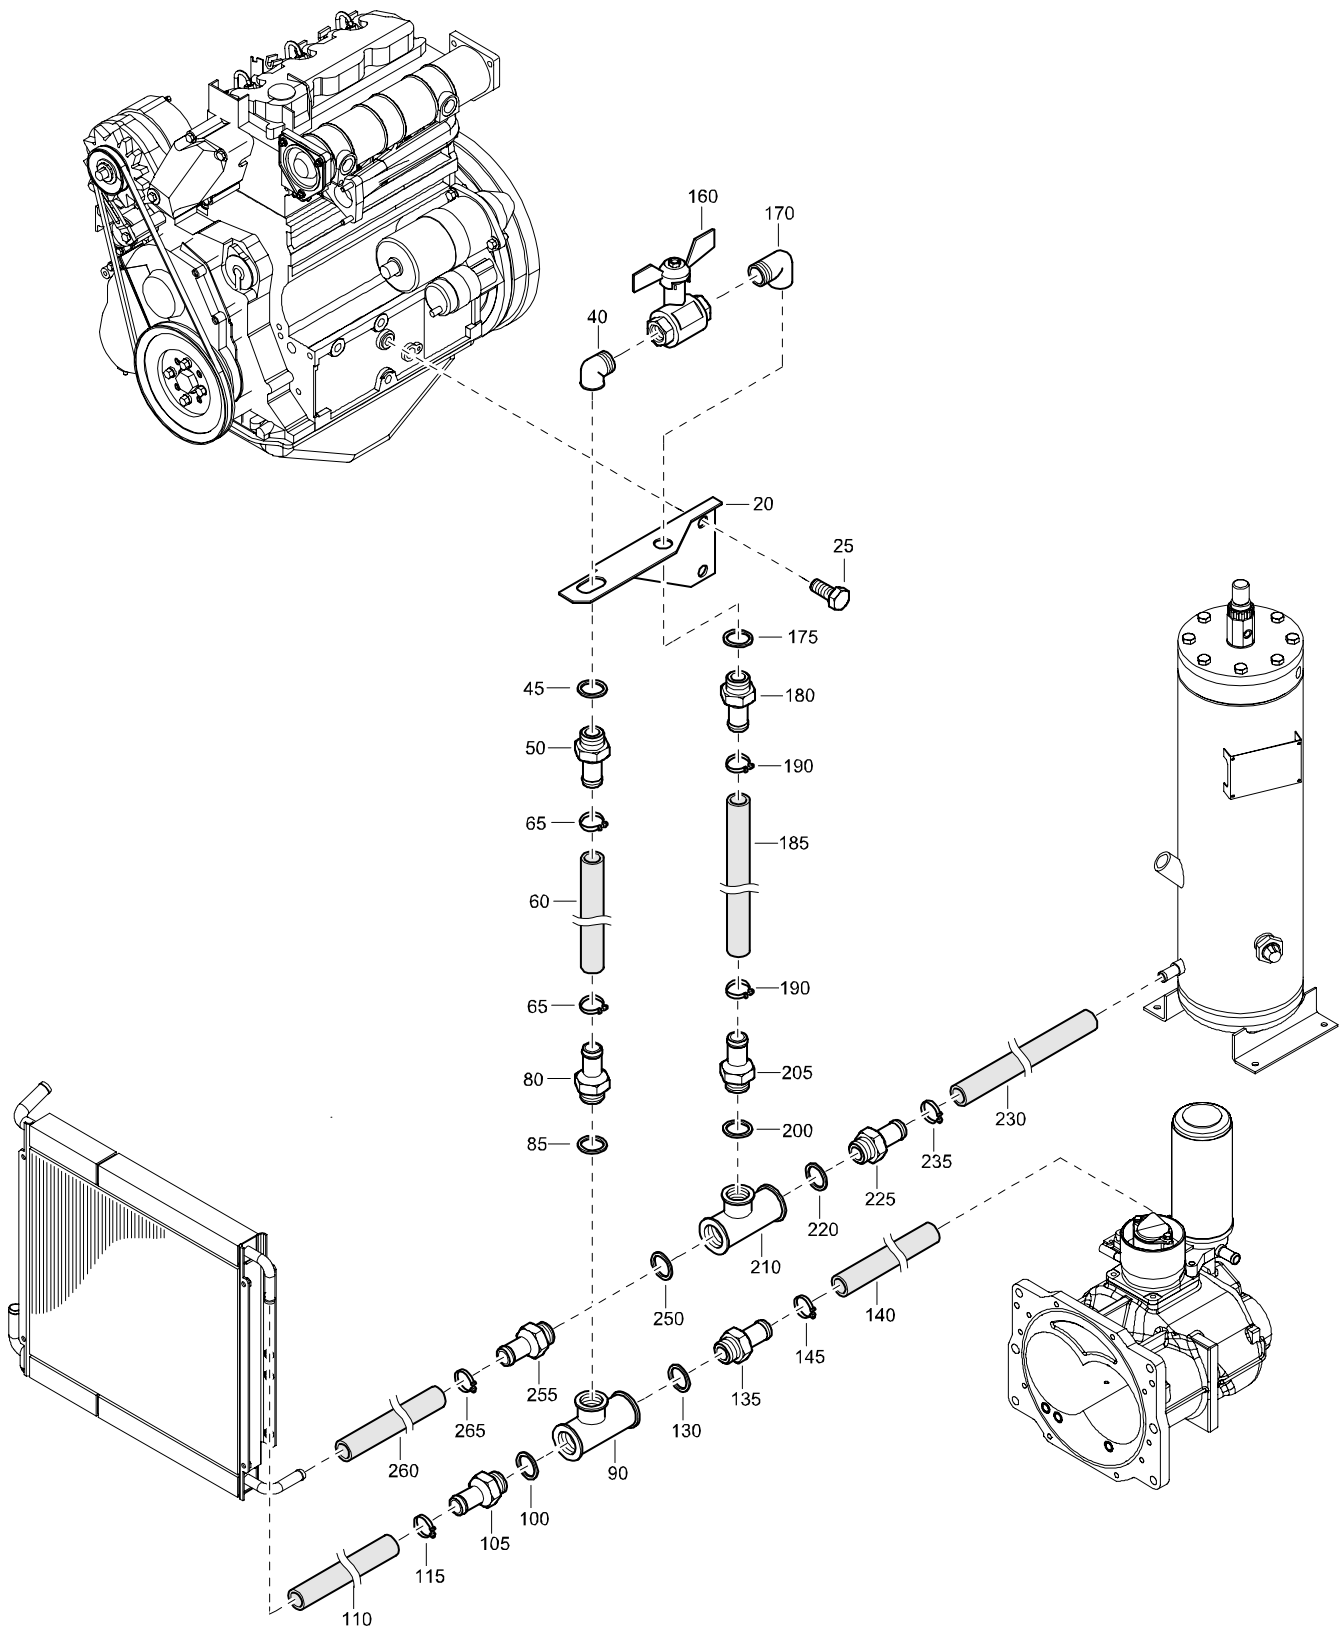


OPTIONS

PIPES AND FITTINGS FOR COMPRESSOR WITH ANTIFROST DEVICE

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 4018 01	BRACKET	1				
25	0147 1437 03	HEX. HEAD SCREW	2				
40	0560 0200 23	ELBOW	1				
45	0661 1033 00	SEALING WASHER	1				
50	1202 8660 00	NIPPLE	1				
60	0072 8403 16	HOSE	AR				
65	1202 8663 06	HOSE CLIP	2				
80	1202 8660 00	NIPPLE	1				
85	0661 1033 00	SEALING WASHER	1				
90	0564 0000 25	TEE	1				
100	0661 1033 00	SEALING WASHER	1				
105	1202 8660 00	NIPPLE	1				
110	0072 8403 16	HOSE	AR				
115	1202 8663 06	HOSE CLIP	1				
130	0661 1033 00	SEALING WASHER	1				
135	1202 8660 00	NIPPLE	1				
140	0072 8403 16	HOSE	AR				
145	1202 8663 06	HOSE CLIP	1				
160	1503 2257 00	STOP VALVE	1				
170	0560 0200 23	ELBOW	1				
175	0661 1033 00	SEALING WASHER	1				
180	1202 8660 00	NIPPLE	1				
185	0072 8403 16	HOSE	AR				
190	1202 8663 06	HOSE CLIP	2				
200	0661 1033 00	SEALING WASHER	1				
205	1202 8660 00	NIPPLE	1				
210	0564 0000 25	TEE	1				
220	0661 1033 00	SEALING WASHER	1				
225	1202 8660 00	NIPPLE	1				
230	0072 8403 16	HOSE	AR				
235	1202 8663 06	HOSE CLIP	1				
250	0661 1033 00	SEALING WASHER	1				
255	1202 8660 00	NIPPLE	1				
260	0072 8403 16	HOSE	AR				
265	1202 8663 06	HOSE CLIP	1				

OPTIONS

 
REHEATER (NOT APPLICABLE FOR HARDHAT)

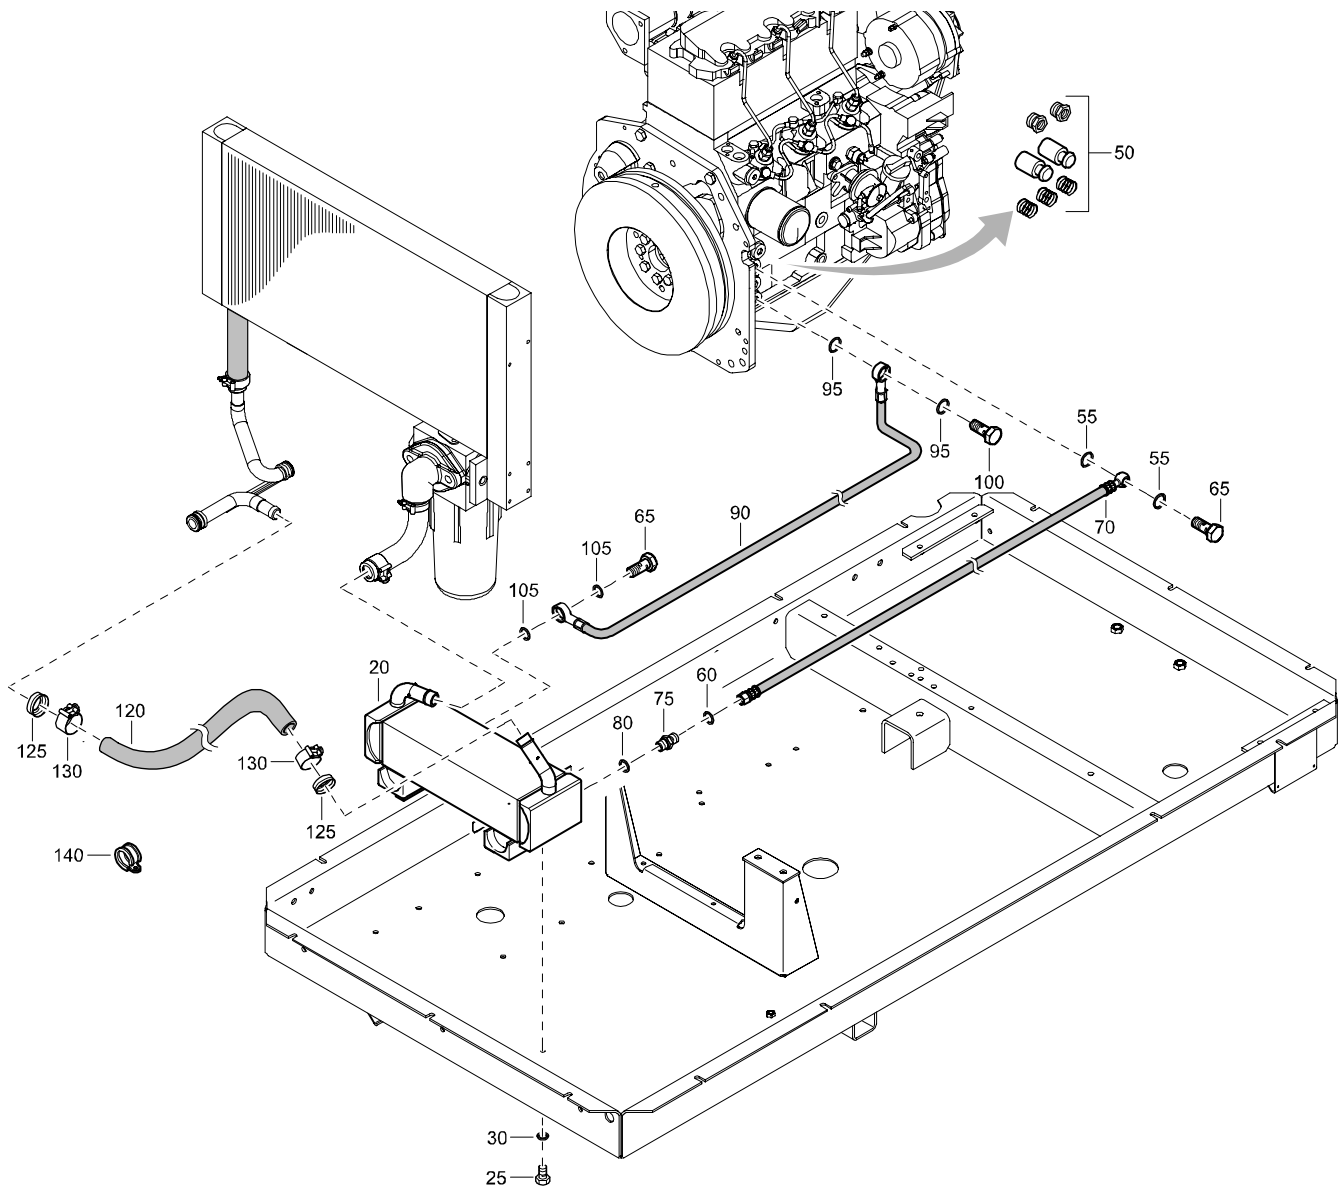

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1615 8582 01	REHEATER	1				
25	0147 1320 03	HEX. HEAD SCREW	4				
30	0653 1046 00	FLAT GASKET	4				
50	1615 8629 00	ENGINE ACCESS.	1				
55	0653 1148 00	FLAT GASKET	2				
60	0653 1115 00	FLAT GASKET	1				
65	0627 4213 00	PRESSURE SCREW	1				
70	1604 5765 00	HOSE	1				
75	2250 9890 00	NIPPLE	1				
80	0653 1115 00	FLAT GASKET	1				
90	1604 5766 00	HOSE	1				
95	0653 1148 00	FLAT GASKET	2				
100	0627 4213 00	PRESSURE SCREW	2				
105	0653 1115 00	FLAT GASKET	2				
120	0072 8403 39	HOSE	AR				
125	1615 8627 00	SLEEVE	2				
130	1079 3471 01	HOSE CLIP	2				
140	0346 1000 15	PIPE CLAMP	1				

OPTIONS

 
WHEELCHOCKS FOR STEEL CANOPY

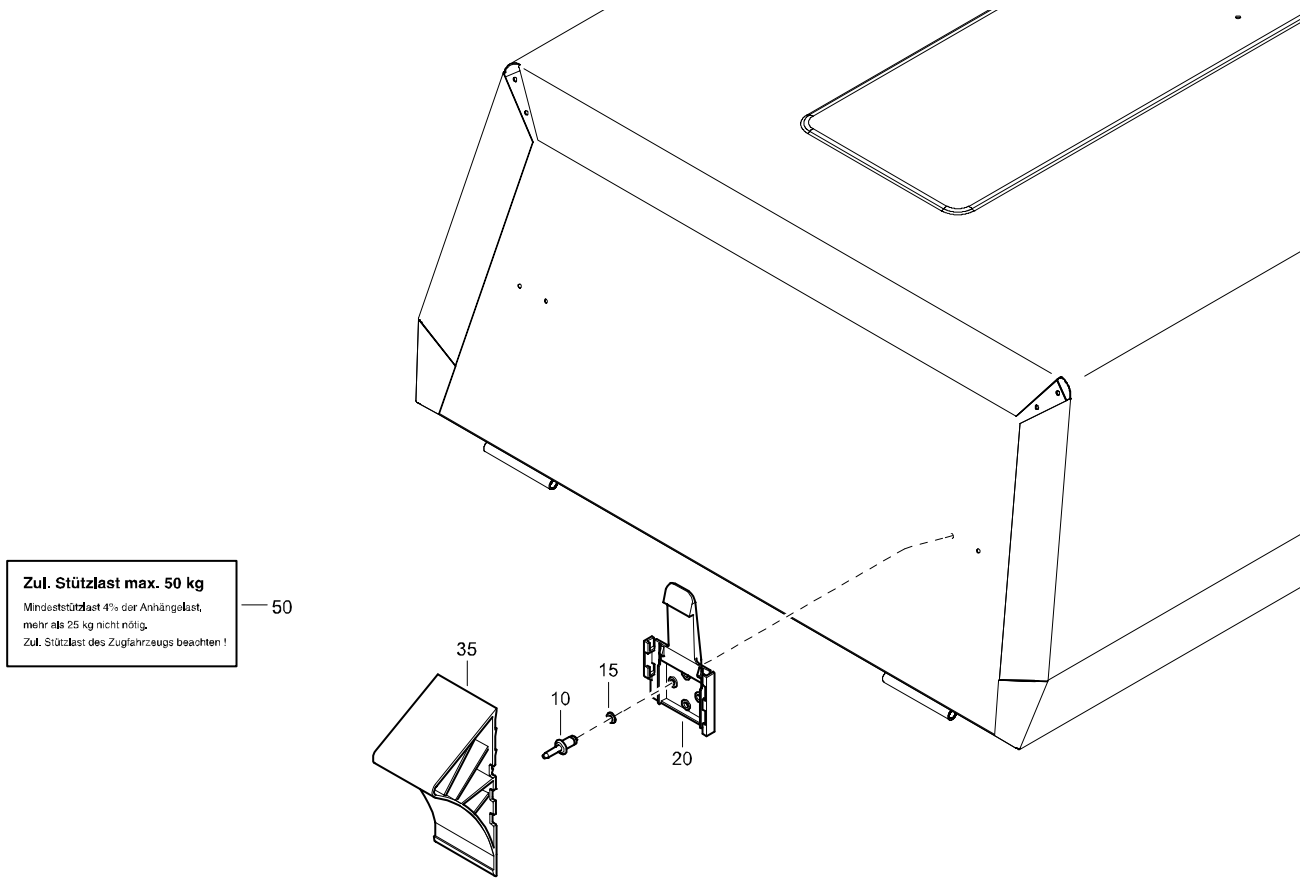

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
10	0129 3177 00	BLIND RIVET	4				
15	0301 2321 00	PLAIN WASHER	4				
20	1613 5440 00	BRACKET	2				
35	1613 5439 00	WHEELCHOCK	2				
50	1079 9902 54	LABEL	1				

OPTIONS

 
WHEELCHOCKS FOR HARDHAT

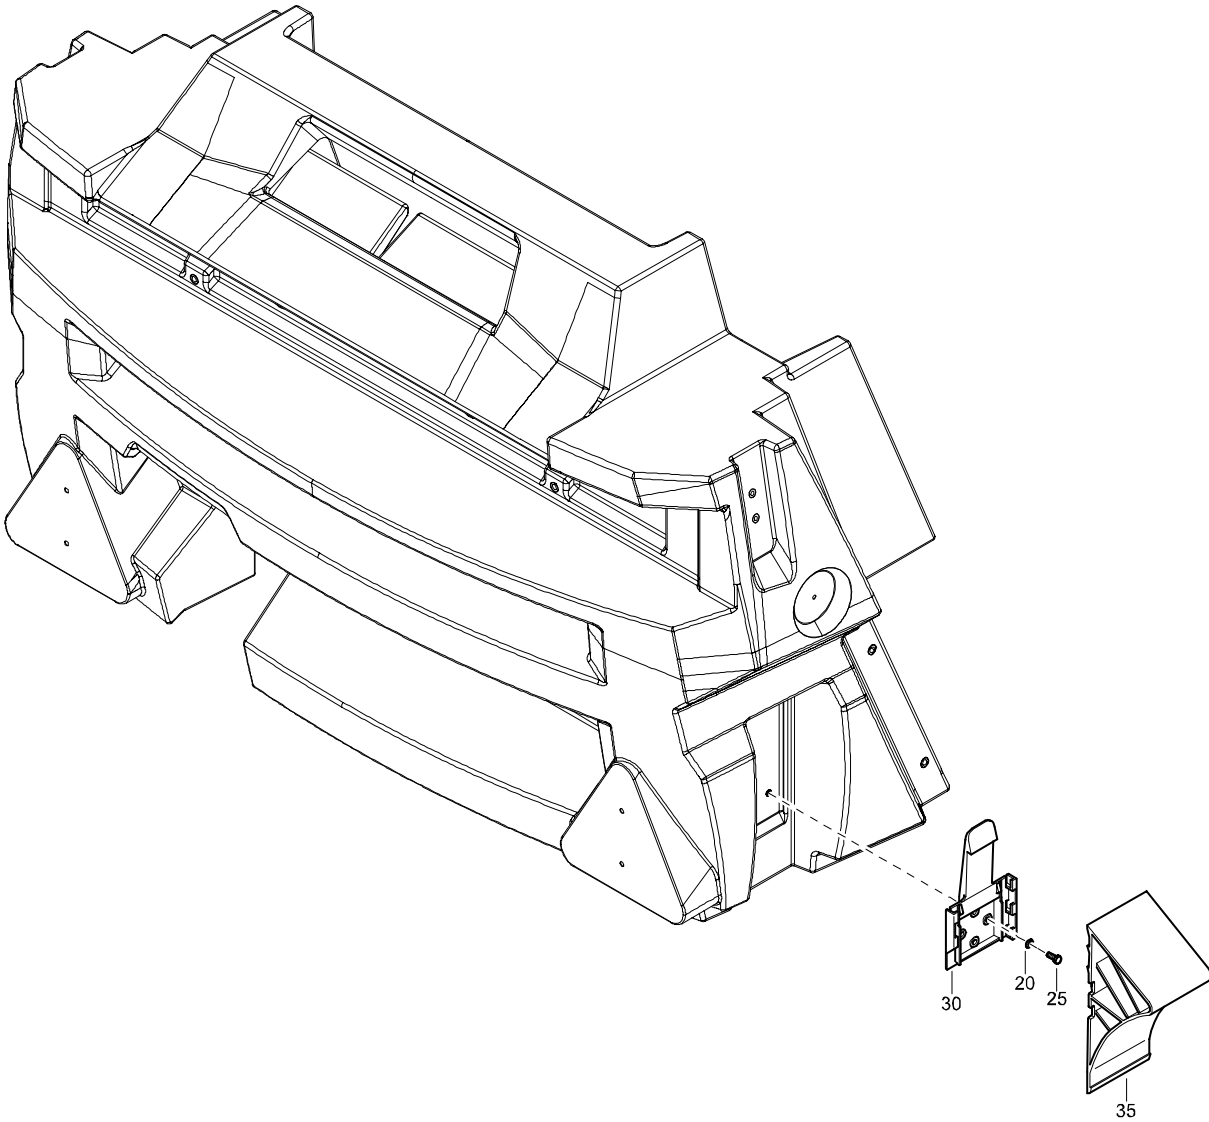

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	0301 2318 00	PLAIN WASHER	4				
25	0147 1205 03	HEX. HEAD SCREW	4				
30	1613 5440 00	BRACKET	2				
35	1613 5439 00	WHEELCHOCK	2				

OPTIONS

 
BALL COUPLING LOOSE

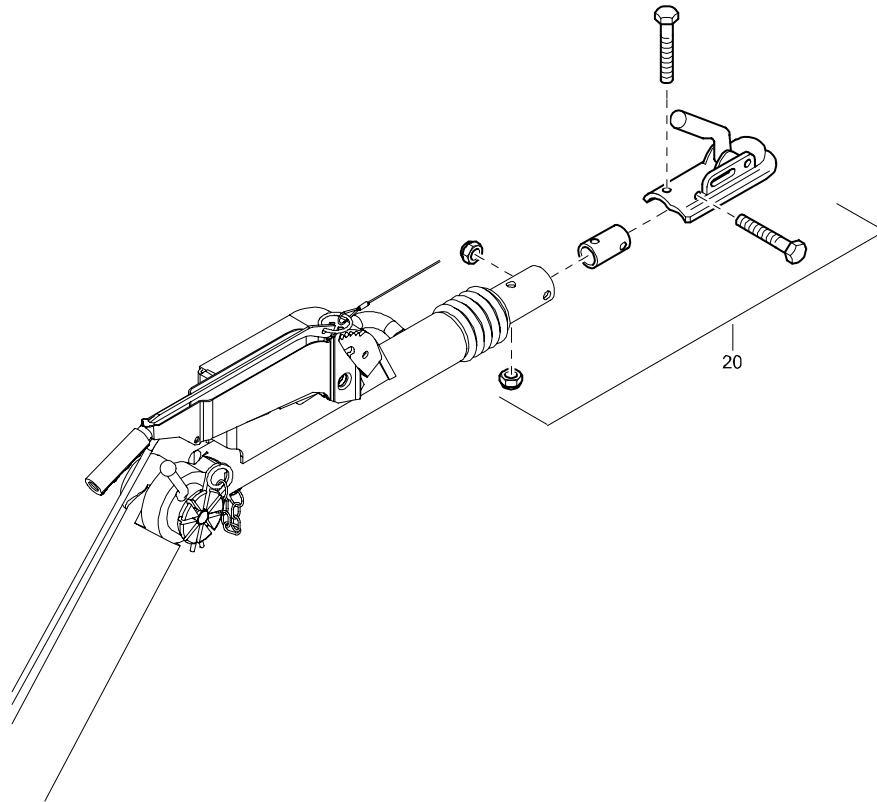

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1619 6826 80	BALL COUPLING	1				

OPTIONS

 GENERATOR KIT 230/400V 6,5KVA AUTOMATIC

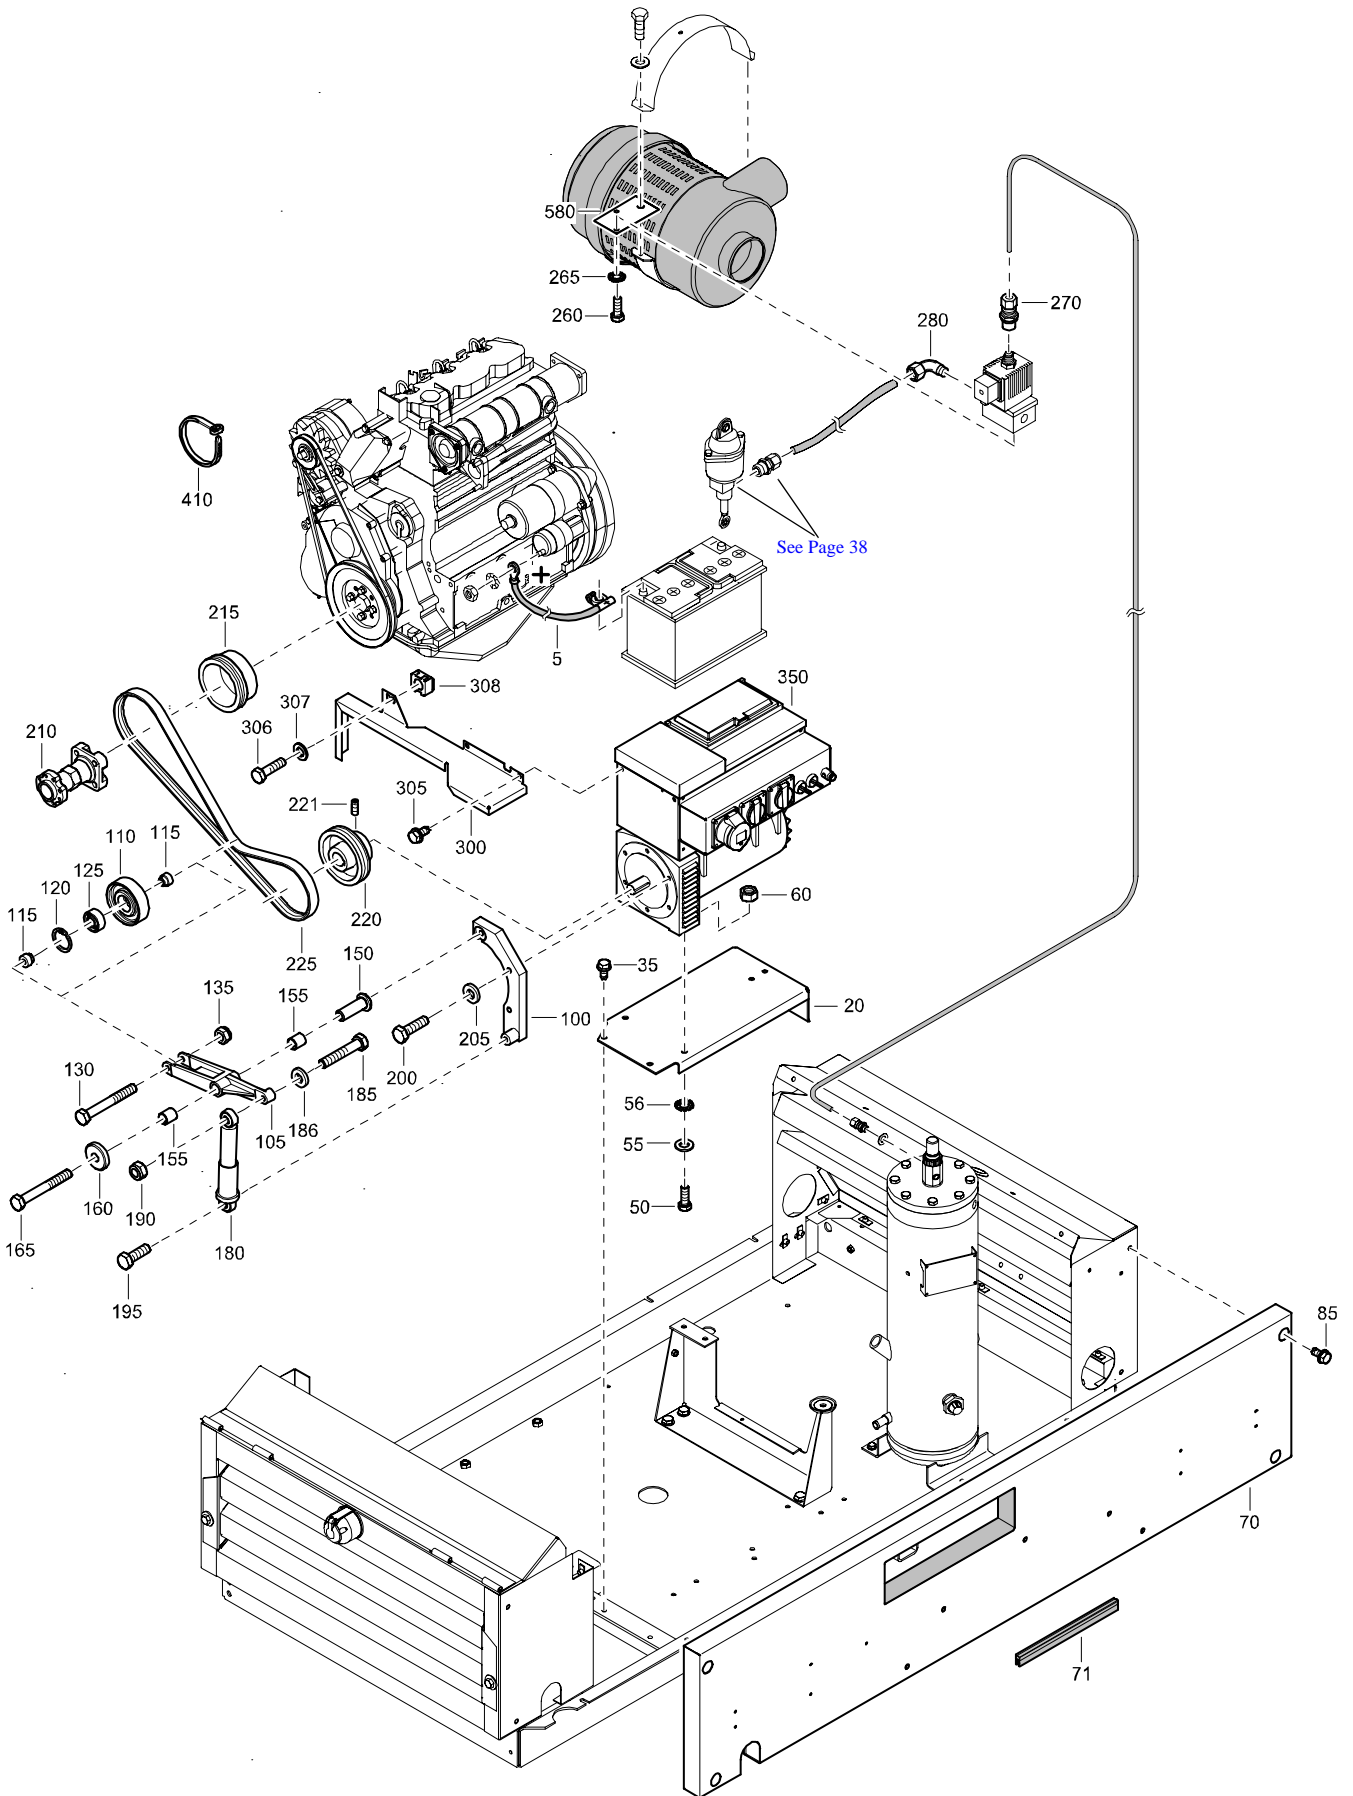


OPTIONS

GENERATOR KIT 230/400V 6,5KVA AUTOMATIC

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
5	1604 9615 00	BATTERY CABLE	1				
20	1604 3992 02	SUPPORT	1				
35	1619 2766 00	HEX. HEAD SCREW	4				
50	0147 1363 03	HEX. HEAD SCREW	3				
55	0301 2344 00	PLAIN WASHER	3				
56	0333 3232 00	LOCK WASHER	3				
60	0266 2111 00	HEXAGON NUT	3				
70	1604 5458 81	SIDE PANEL ASSY	1				
		(For details see page 194)					
71	1202 6584 00	SEAL	AR				
85	1619 2766 00	HEX. HEAD SCREW	8				
100	1604 3903 00	SUPPORT	1				
105	1615 8668 01	LEVER	1				
110	1615 8670 01	PULLEY	1				
115	1615 8669 00	BUSHING	2				
120	0335 2136 00	CIRCLIP	1				
125	0502 1091 38	BALL BEARING	1				
130	0147 1330 03	HEX. HEAD SCREW	1				
135	0291 1110 00	LOCKNUT	1				
150	1615 8667 00	AXLE	1				
155	0500 4510 22	PLAIN BEARING	2				
160	0303 1274 01	PLAIN WASHER	1				
165	0147 1336 03	HEX. HEAD SCREW	1				
180	1615 8671 00	DAMPER	1				
185	0147 1329 03	HEX. HEAD SCREW	1				
186	0300 8019 00	PLAIN WASHER	2				
190	0291 1110 00	LOCKNUT	1				
195	0147 1325 03	HEX. HEAD SCREW	1				
200	0147 1326 03	HEX. HEAD SCREW	2				
205	0301 2335 00	PLAIN WASHER	2				
210	1615 8607 00	FAN ADAPTOR	1				
215	1615 8672 00	PULLEY	1				
220	1615 8677 00	PULLEY	1				
221	0196 1320 00	SET SCREW	1				
225	1604 4076 00	BELT	1				
260	0147 1171 03	HEX. HEAD SCREW	2				
265	0333 3214 00	LOCK WASHER	2				
270	0581 0000 54	STRAIGHT PIPE COUPLING	1				
280	0581 1200 16	ELBOW PIPE COUPLING	1				
300	1604 3902 01	BELT GUARD	1				
305	1619 2766 00	HEX. HEAD SCREW	2				
306	0147 1321 03	HEX. HEAD SCREW	1				
307	0301 2335 00	PLAIN WASHER	1				
308	1079 2901 01	CAGE NUT	1				
350	1604 3995 99	GENERATOR	1				
		(For details see page 185)					
410	1088 1301 03	CABLE STRIP	4				
580	1604 3994 01	BRACKET	1				

OPTIONS

 GENERATOR KIT 55/110V 6 KVA AUTOMATIC

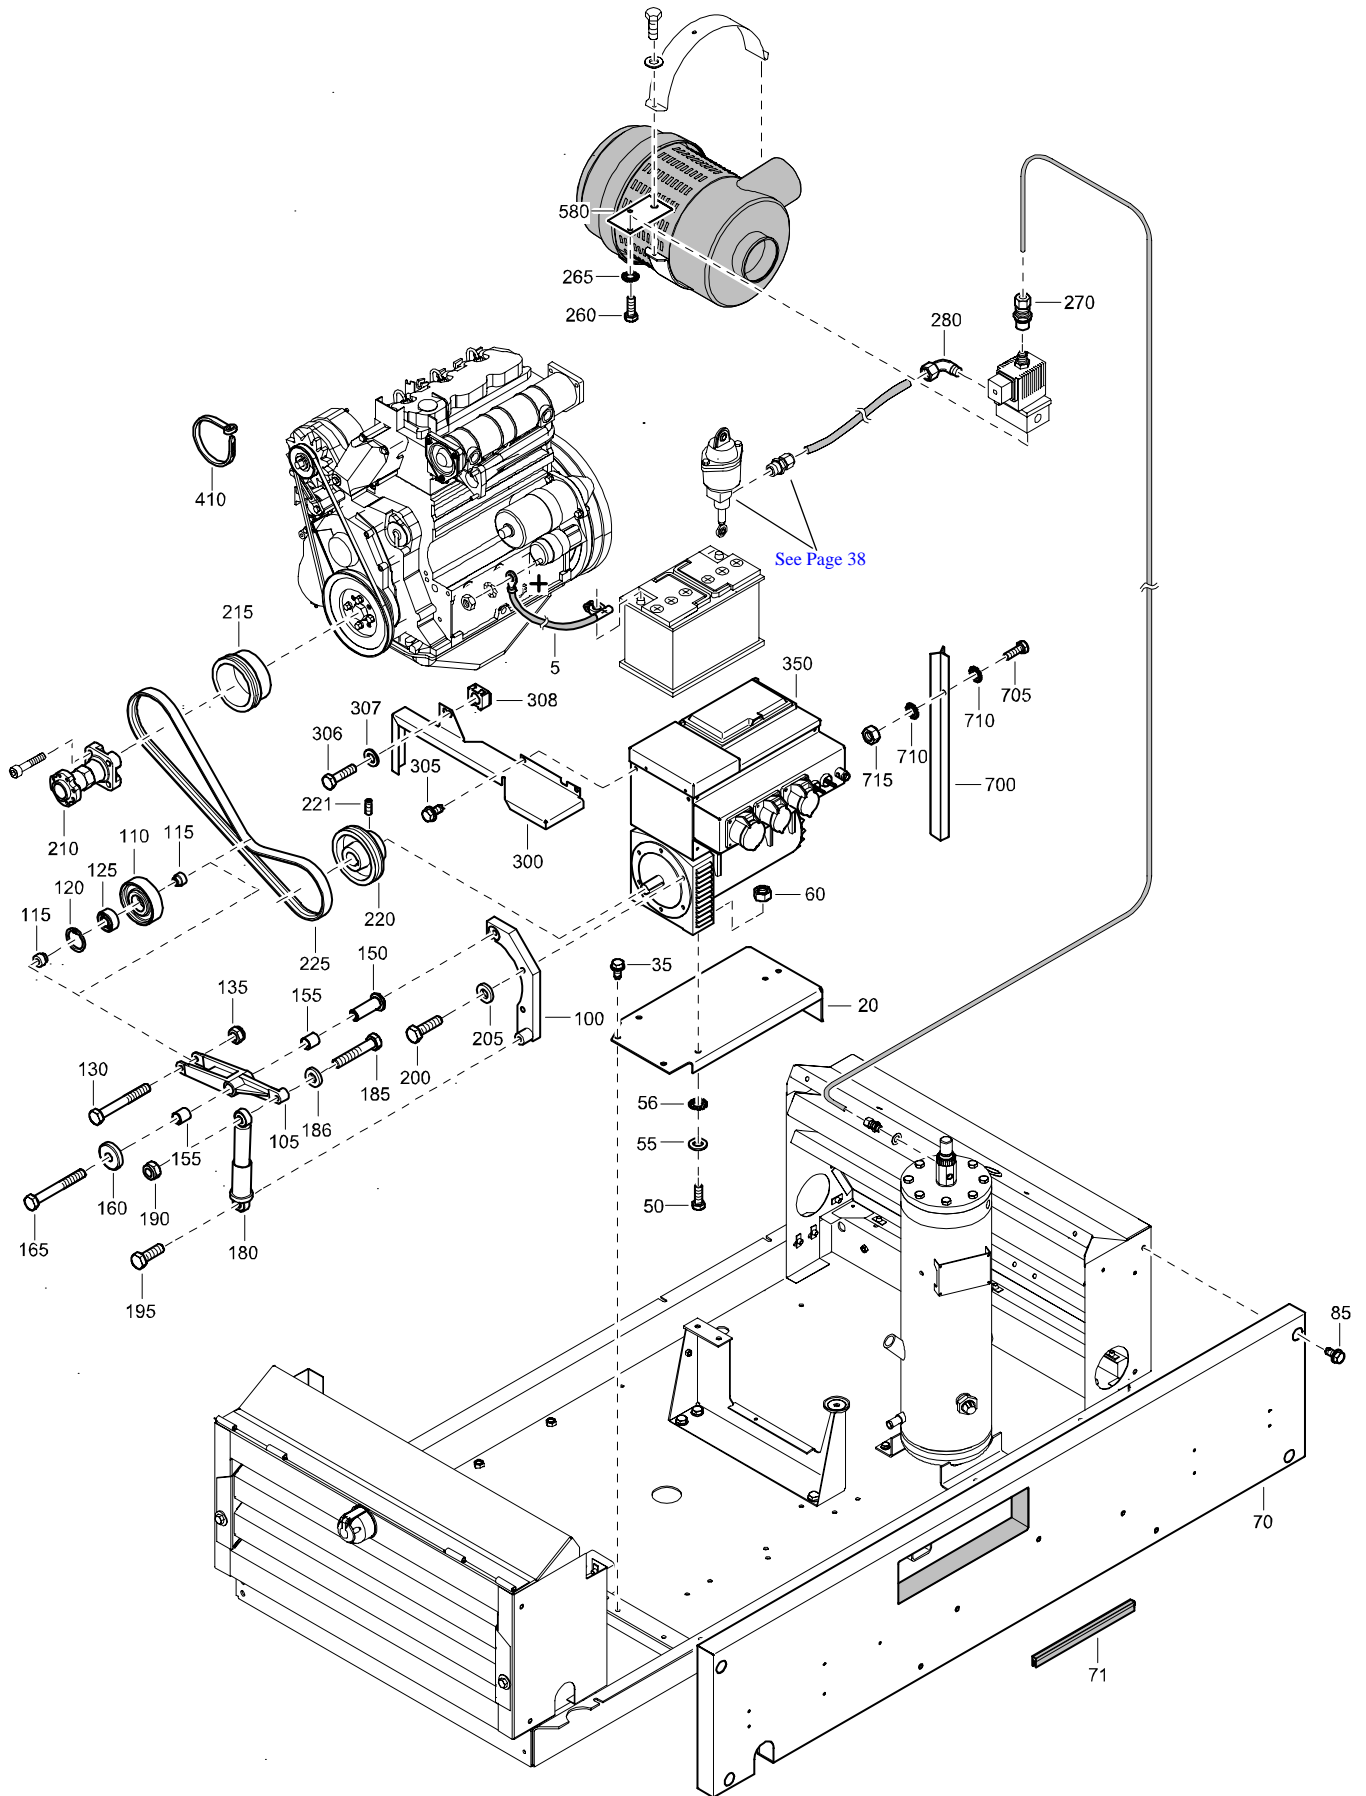


OPTIONS

GENERATOR KIT 55/110V 6 KVA AUTOMATIC

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
5	1604 9615 00	BATTERY CABLE	1				
20	1604 3992 02	SUPPORT	1				
35	1619 2766 00	HEX. HEAD SCREW	4				
50	0147 1363 03	HEX. HEAD SCREW	3				
55	0301 2344 00	PLAIN WASHER	3				
56	0333 3232 00	LOCK WASHER	3				
60	0266 2111 00	HEXAGON NUT	3				
70	1604 5458 81	SIDE PANEL ASSY	1				
		(For details see page 194)					
71	1202 6584 00	SEAL	AR				
85	1619 2766 00	HEX. HEAD SCREW	8				
100	1604 3903 00	SUPPORT	1				
105	1615 8668 01	LEVER	1				
110	1615 8670 01	PULLEY	1				
115	1615 8669 00	BUSHING	2				
120	0335 2136 00	CIRCLIP	1				
125	0502 1091 38	BALL BEARING	1				
130	0147 1330 03	HEX. HEAD SCREW	1				
135	0291 1110 00	LOCKNUT	1				
150	1615 8667 00	AXLE	1				
155	0500 4510 22	PLAIN BEARING	2				
160	0303 1274 01	PLAIN WASHER	1				
165	0147 1336 03	HEX. HEAD SCREW	1				
180	1615 8671 00	DAMPER	1				
185	0147 1329 03	HEX. HEAD SCREW	1				
186	0300 8019 00	PLAIN WASHER	2				
190	0291 1110 00	LOCKNUT	1				
195	0147 1325 03	HEX. HEAD SCREW	1				
200	0147 1326 03	HEX. HEAD SCREW	2				
205	0301 2335 00	PLAIN WASHER	2				
210	1615 8607 00	FAN ADAPTOR	1				
215	1615 8672 00	PULLEY	1				
220	1615 8677 00	PULLEY	1				
221	0196 1320 00	SET SCREW	1				
225	1604 4076 00	BELT	1				
260	0147 1171 03	HEX. HEAD SCREW	2				
265	0333 3214 00	LOCK WASHER	2				
270	0581 0000 54	STRAIGHT PIPE COUPLING	1				
280	0581 1200 16	ELBOW PIPE COUPLING	1				
300	1604 3902 01	BELT GUARD	1				
305	1619 2766 00	HEX. HEAD SCREW	2				
306	0147 1321 03	HEX. HEAD SCREW	1				
307	0301 2335 00	PLAIN WASHER	1				
308	1079 2901 01	CAGE NUT	1				
350	1604 3995 95	GENERATOR	1				
		(For details see page 181)					
410	1088 1301 03	CABLE STRIP	4				
580	1604 3994 01	BRACKET	1				
700	1089 9358 04	EARTH PIN	1				
705	0147 1323 03	HEX. HEAD SCREW	1				
710	0333 3227 00	LOCK WASHER	2				
715	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 GENERATOR KIT 230/400V 12 KVA AUTOMATIC

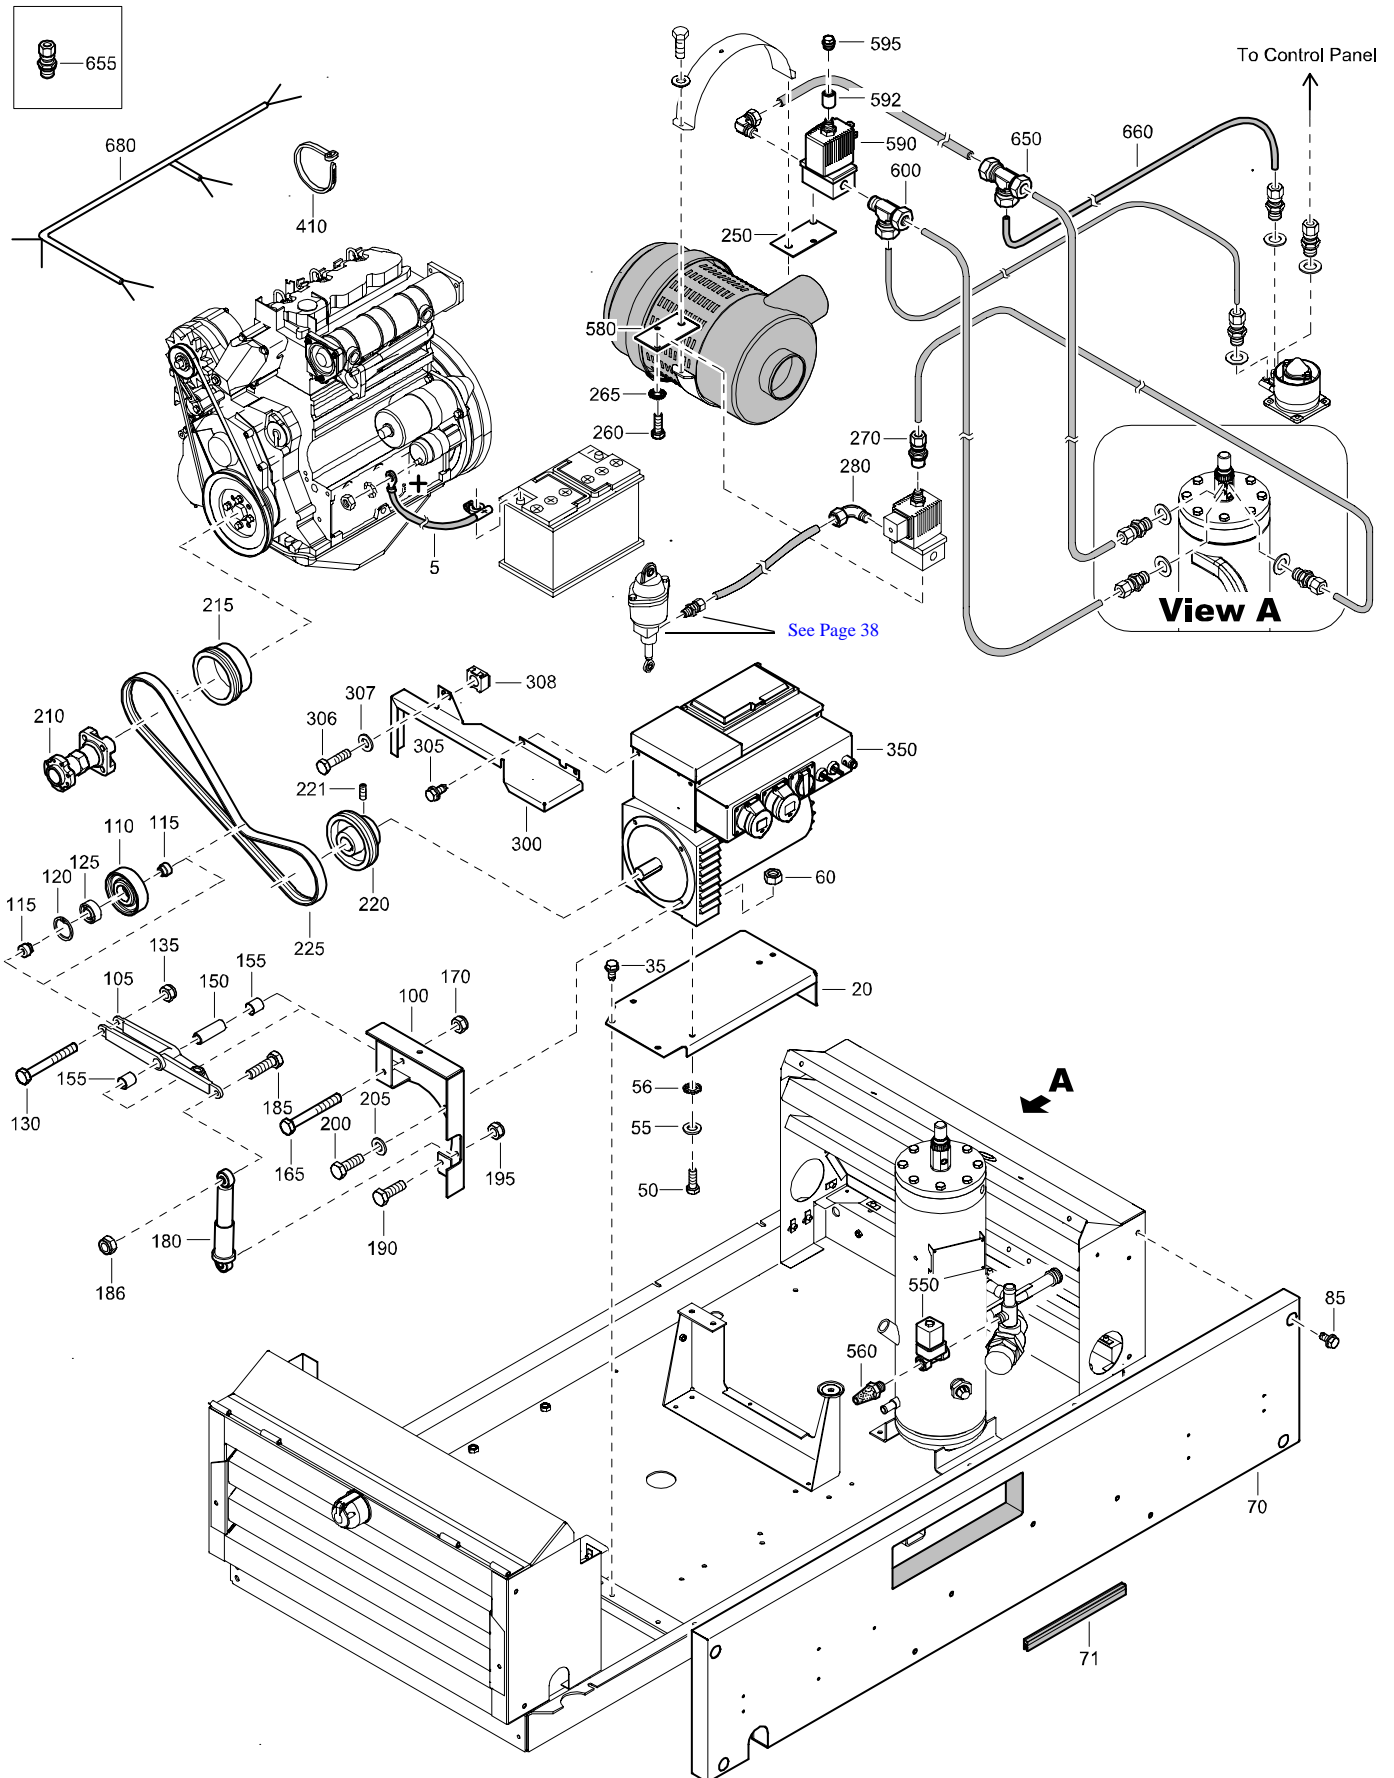


OPTIONS

GENERATOR KIT 230/400V 12 KVA AUTOMATIC

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
5	1604 9615 00	BATTERY CABLE	1				
20	1604 3993 02	SUPPORT	1				
35	1619 2766 00	HEX. HEAD SCREW	4				
50	0147 1363 03	HEX. HEAD SCREW	3				
55	0301 2344 00	PLAIN WASHER	3				
56	0333 3232 00	LOCK WASHER	3				
60	0266 2111 00	HEXAGON NUT	3				
70	1604 5458 81	SIDE PANEL ASSY	1				
		(For details see page 194)					
71	1202 6584 00	SEAL	AR				
85	1619 2766 00	HEX. HEAD SCREW	8				
100	1604 3897 00	SUPPORT	1				
105	1604 0503 02	LEVER	1				
110	1615 8670 01	PULLEY	1				
115	1615 8669 00	BUSHING	2				
120	0335 2136 00	CIRCLIP	1				
125	0502 1091 38	BALL BEARING	1				
130	0147 1330 03	HEX. HEAD SCREW	1				
135	0291 1110 00	LOCKNUT	1				
150	1604 0502 00	BUSHING	1				
155	0500 4510 22	PLAIN BEARING	2				
165	0147 1371 03	HEX. HEAD SCREW	1				
170	0291 1111 00	LOCKNUT	1				
180	1615 8671 00	DAMPER	1				
185	0147 1326 03	HEX. HEAD SCREW	1				
186	0291 1110 00	LOCKNUT	2				
190	0147 1326 03	HEX. HEAD SCREW	1				
195	0291 1110 00	LOCKNUT	1				
200	0147 1362 03	HEX. HEAD SCREW	3				
205	0301 2344 00	PLAIN WASHER	3				
210	1615 8607 00	FAN ADAPTOR	1				
215	1604 3908 00	PULLEY	1				
220	1604 0504 01	PULLEY	1				
221	0196 1320 00	SET SCREW	1				
225	1604 4077 00	BELT	1				
250	1604 3994 01	BRACKET	1				
260	0147 1171 03	HEX. HEAD SCREW	2				
265	0333 3214 00	LOCK WASHER	2				
270	0581 0000 54	STRAIGHT PIPE COUPLING	1				
280	0581 1200 16	ELBOW PIPE COUPLING	1				
300	1604 3902 01	BELT GUARD	1				
305	1619 2766 00	HEX. HEAD SCREW	2				
306	0147 1321 03	HEX. HEAD SCREW	1				
307	0301 2335 00	PLAIN WASHER	1				
308	1079 2901 01	CAGE NUT	1				
350	1604 3997 88	GENERATOR	1				
		(For details see page 188)					
410	1088 1301 03	CABLE STRIP	4				
550	1089 0620 07	SOLENOID VALVE	1				
560	9090 0510 00	SILENCER	1				
580	1604 3994 01	BRACKET	1				
590	1089 0621 71	SOLENOID VALVE	1				
592	0607 2151 02	SOCKET	1				
595	0686 4201 03	HEXAGON PLUG	1				
600	0582 1200 09	TEE PIPE COUPLING	1				
650	0582 1200 12	TEE PIPE COUPLING	1				
655	0582 1200 05	STRAIGHT PIPE COUPLING	1				
660	0070 6002 04	PLASTIC TUBE	AR				
680	1604 5314 00	WIRE HARNESS	1				

OPTIONS

 GENERATOR KIT 230/400V 6,5 KVA

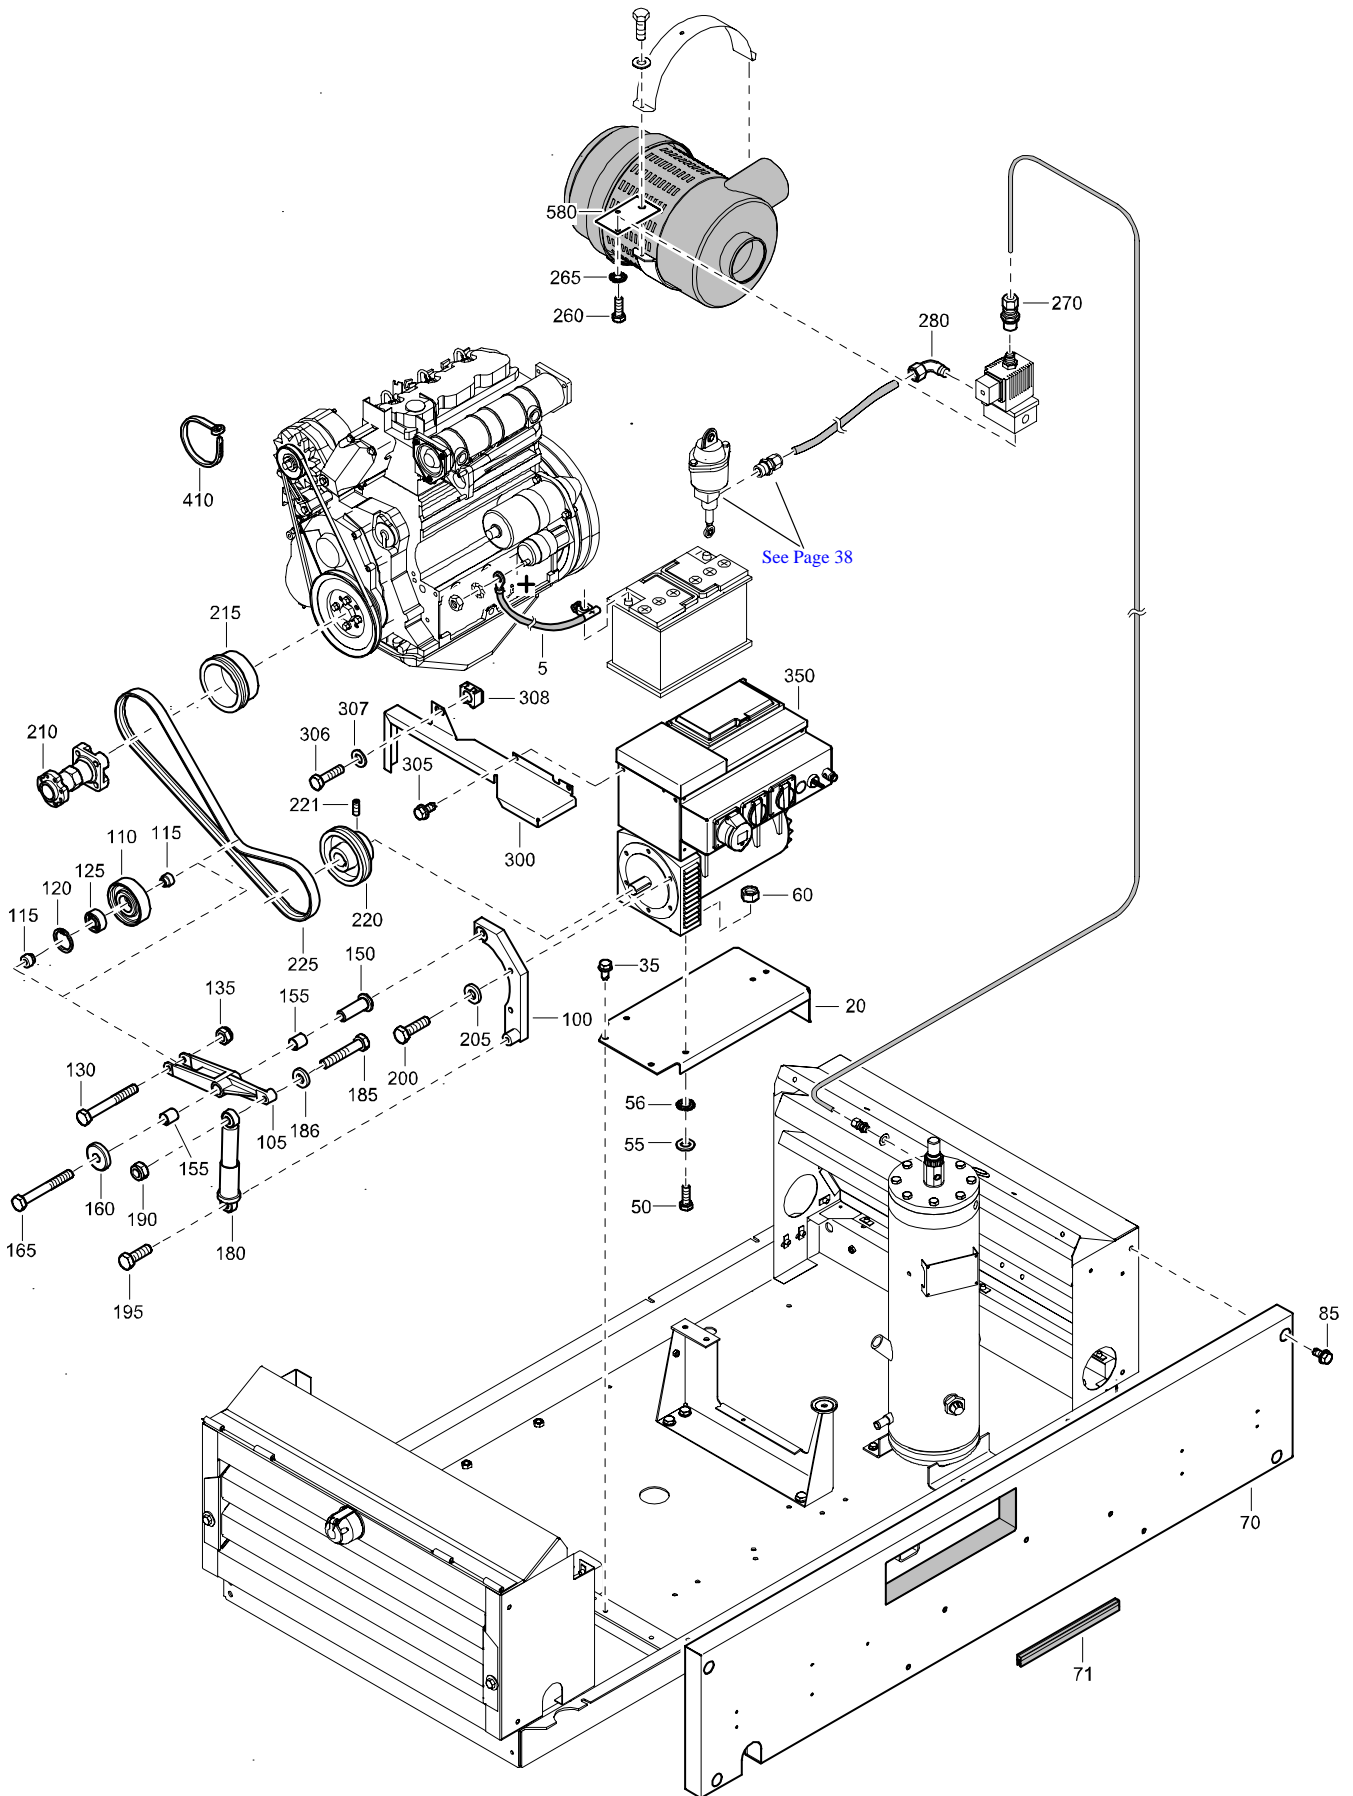


OPTIONS

GENERATOR KIT 230/400V 6,5 KVA

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
5	1604 9615 00	BATTERY CABLE	1				
20	1604 3992 02	SUPPORT	1				
35	1619 2766 00	HEX. HEAD SCREW	4				
50	0147 1363 03	HEX. HEAD SCREW	3				
55	0301 2344 00	PLAIN WASHER	3				
56	0333 3232 00	LOCK WASHER	3				
60	0266 2111 00	HEXAGON NUT	3				
70	1604 5458 81	SIDE PANEL ASSY	1				
		(For details see page 194)					
71	1202 6584 00	SEAL	AR				
85	1619 2766 00	HEX. HEAD SCREW	8				
100	1604 3903 00	SUPPORT	1				
105	1615 8668 01	LEVER	1				
110	1615 8670 01	PULLEY	1				
115	1615 8669 00	BUSHING	2				
120	0335 2136 00	CIRCLIP	1				
125	0502 1091 38	BALL BEARING	1				
130	0147 1330 03	HEX. HEAD SCREW	1				
135	0291 1110 00	LOCKNUT	1				
150	1615 8667 00	AXLE	1				
155	0500 4510 22	PLAIN BEARING	2				
160	0303 1274 01	PLAIN WASHER	1				
165	0147 1336 03	HEX. HEAD SCREW	1				
180	1615 8671 00	DAMPER	1				
185	0147 1329 03	HEX. HEAD SCREW	1				
186	0300 8019 00	PLAIN WASHER	2				
190	0291 1110 00	LOCKNUT	1				
195	0147 1325 03	HEX. HEAD SCREW	1				
200	0147 1326 03	HEX. HEAD SCREW	2				
205	0301 2335 00	PLAIN WASHER	2				
210	1615 8607 00	FAN ADAPTOR	1				
215	1615 8672 00	PULLEY	1				
220	1615 8677 00	PULLEY	1				
221	0196 1320 00	SET SCREW	1				
225	1604 4076 00	BELT	1				
260	0147 1171 03	HEX. HEAD SCREW	2				
265	0333 3214 00	LOCK WASHER	2				
270	0581 0000 54	STRAIGHT PIPE COUPLING	1				
280	0581 1200 16	ELBOW PIPE COUPLING	1				
300	1604 3902 01	BELT GUARD	1				
305	1619 2766 00	HEX. HEAD SCREW	2				
306	0147 1321 03	HEX. HEAD SCREW	1				
307	0301 2335 00	PLAIN WASHER	1				
308	1079 2901 01	CAGE NUT	1				
350	1604 3995 98	GENERATOR	1				
		(For details see page 184)					
410	1088 1301 03	CABLE STRIP	4				
580	1604 3994 01	BRACKET	1				

OPTIONS

 GENERATOR KIT 230 3PH 6,5 KVA

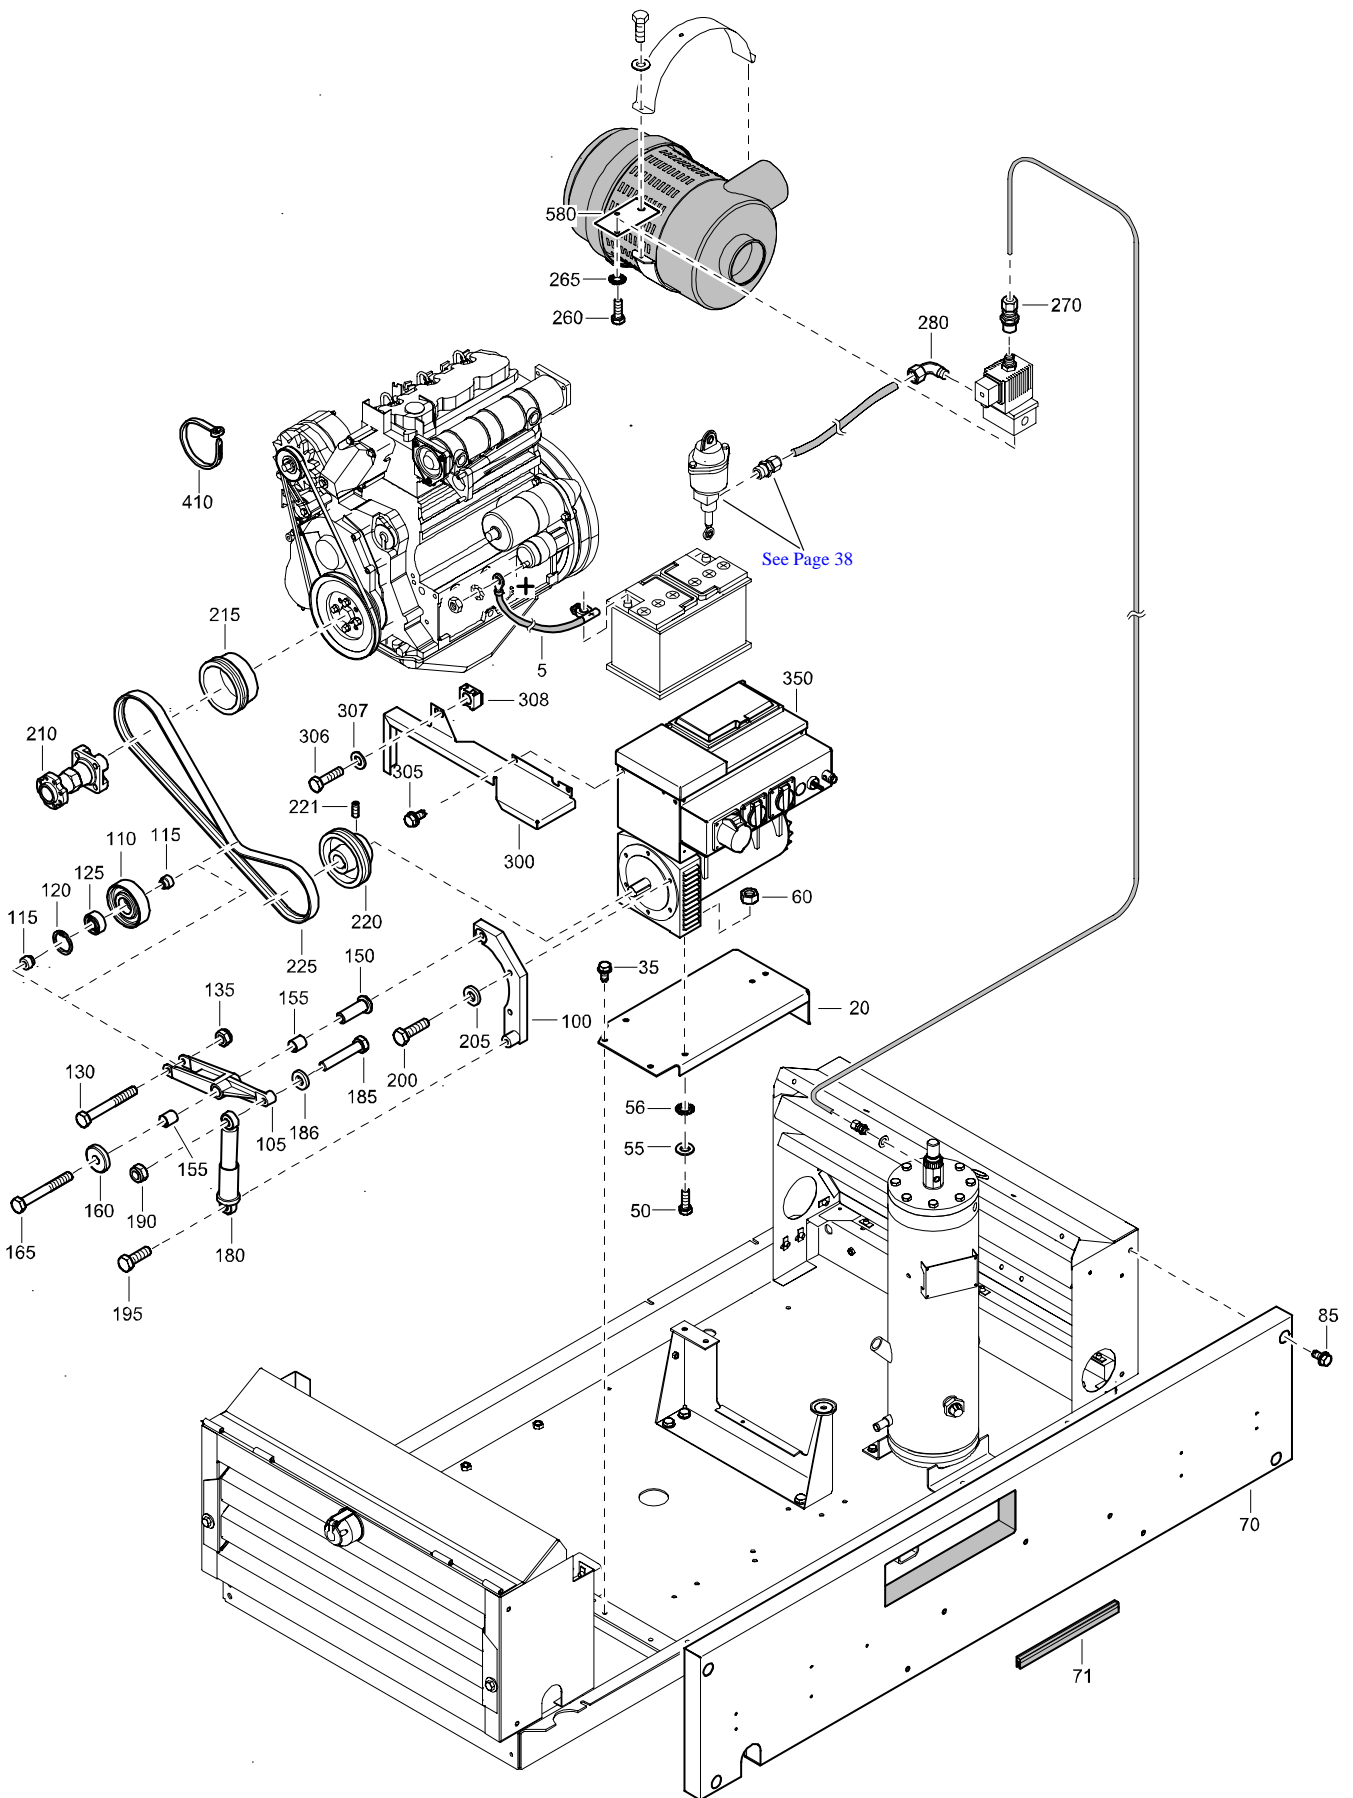


OPTIONS

GENERATOR KIT 230 3PH 6,5 KVA

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
5	1604 9615 00	BATTERY CABLE	1				
20	1604 3992 02	SUPPORT	1				
35	1619 2766 00	HEX. HEAD SCREW	4				
50	0147 1363 03	HEX. HEAD SCREW	3				
55	0301 2344 00	PLAIN WASHER	3				
56	0333 3232 00	LOCK WASHER	3				
60	0266 2111 00	HEXAGON NUT	3				
70	1604 5458 81	SIDE PANEL ASSY	1				
		(For details see page 194)					
71	1202 6584 00	SEAL	AR				
85	1619 2766 00	HEX. HEAD SCREW	8				
100	1604 3903 00	SUPPORT	1				
105	1615 8668 01	LEVER	1				
110	1615 8670 01	PULLEY	1				
115	1615 8669 00	BUSHING	2				
120	0335 2136 00	CIRCLIP	1				
125	0502 1091 38	BALL BEARING	1				
130	0147 1330 03	HEX. HEAD SCREW	1				
135	0291 1110 00	LOCKNUT	1				
150	1615 8667 00	AXLE	1				
155	0500 4510 22	PLAIN BEARING	2				
160	0303 1274 01	PLAIN WASHER	1				
165	0147 1336 03	HEX. HEAD SCREW	1				
180	1615 8671 00	DAMPER	1				
185	0147 1329 03	HEX. HEAD SCREW	1				
186	0300 8019 00	PLAIN WASHER	2				
190	0291 1110 00	LOCKNUT	1				
195	0147 1325 03	HEX. HEAD SCREW	1				
200	0147 1326 03	HEX. HEAD SCREW	2				
205	0301 2335 00	PLAIN WASHER	2				
210	1615 8607 00	FAN ADAPTOR	1				
215	1615 8672 00	PULLEY	1				
220	1615 8677 00	PULLEY	1				
221	0196 1320 00	SET SCREW	1				
225	1604 4076 00	BELT	1				
260	0147 1171 03	HEX. HEAD SCREW	2				
265	0333 3214 00	LOCK WASHER	2				
270	0581 0000 54	STRAIGHT PIPE COUPLING	1				
280	0581 1200 16	ELBOW PIPE COUPLING	1				
300	1604 3902 01	BELT GUARD	1				
305	1619 2766 00	HEX. HEAD SCREW	2				
306	0147 1321 03	HEX. HEAD SCREW	1				
307	0301 2335 00	PLAIN WASHER	1				
308	1079 2901 01	CAGE NUT	1				
350	1604 3995 97	GENERATOR	1				
		(For details see page 183)					
410	1088 1301 03	CABLE STRIP	4				
580	1604 3994 01	BRACKET	1				

OPTIONS

 GENERATOR KIT 55/110V 6 KVA

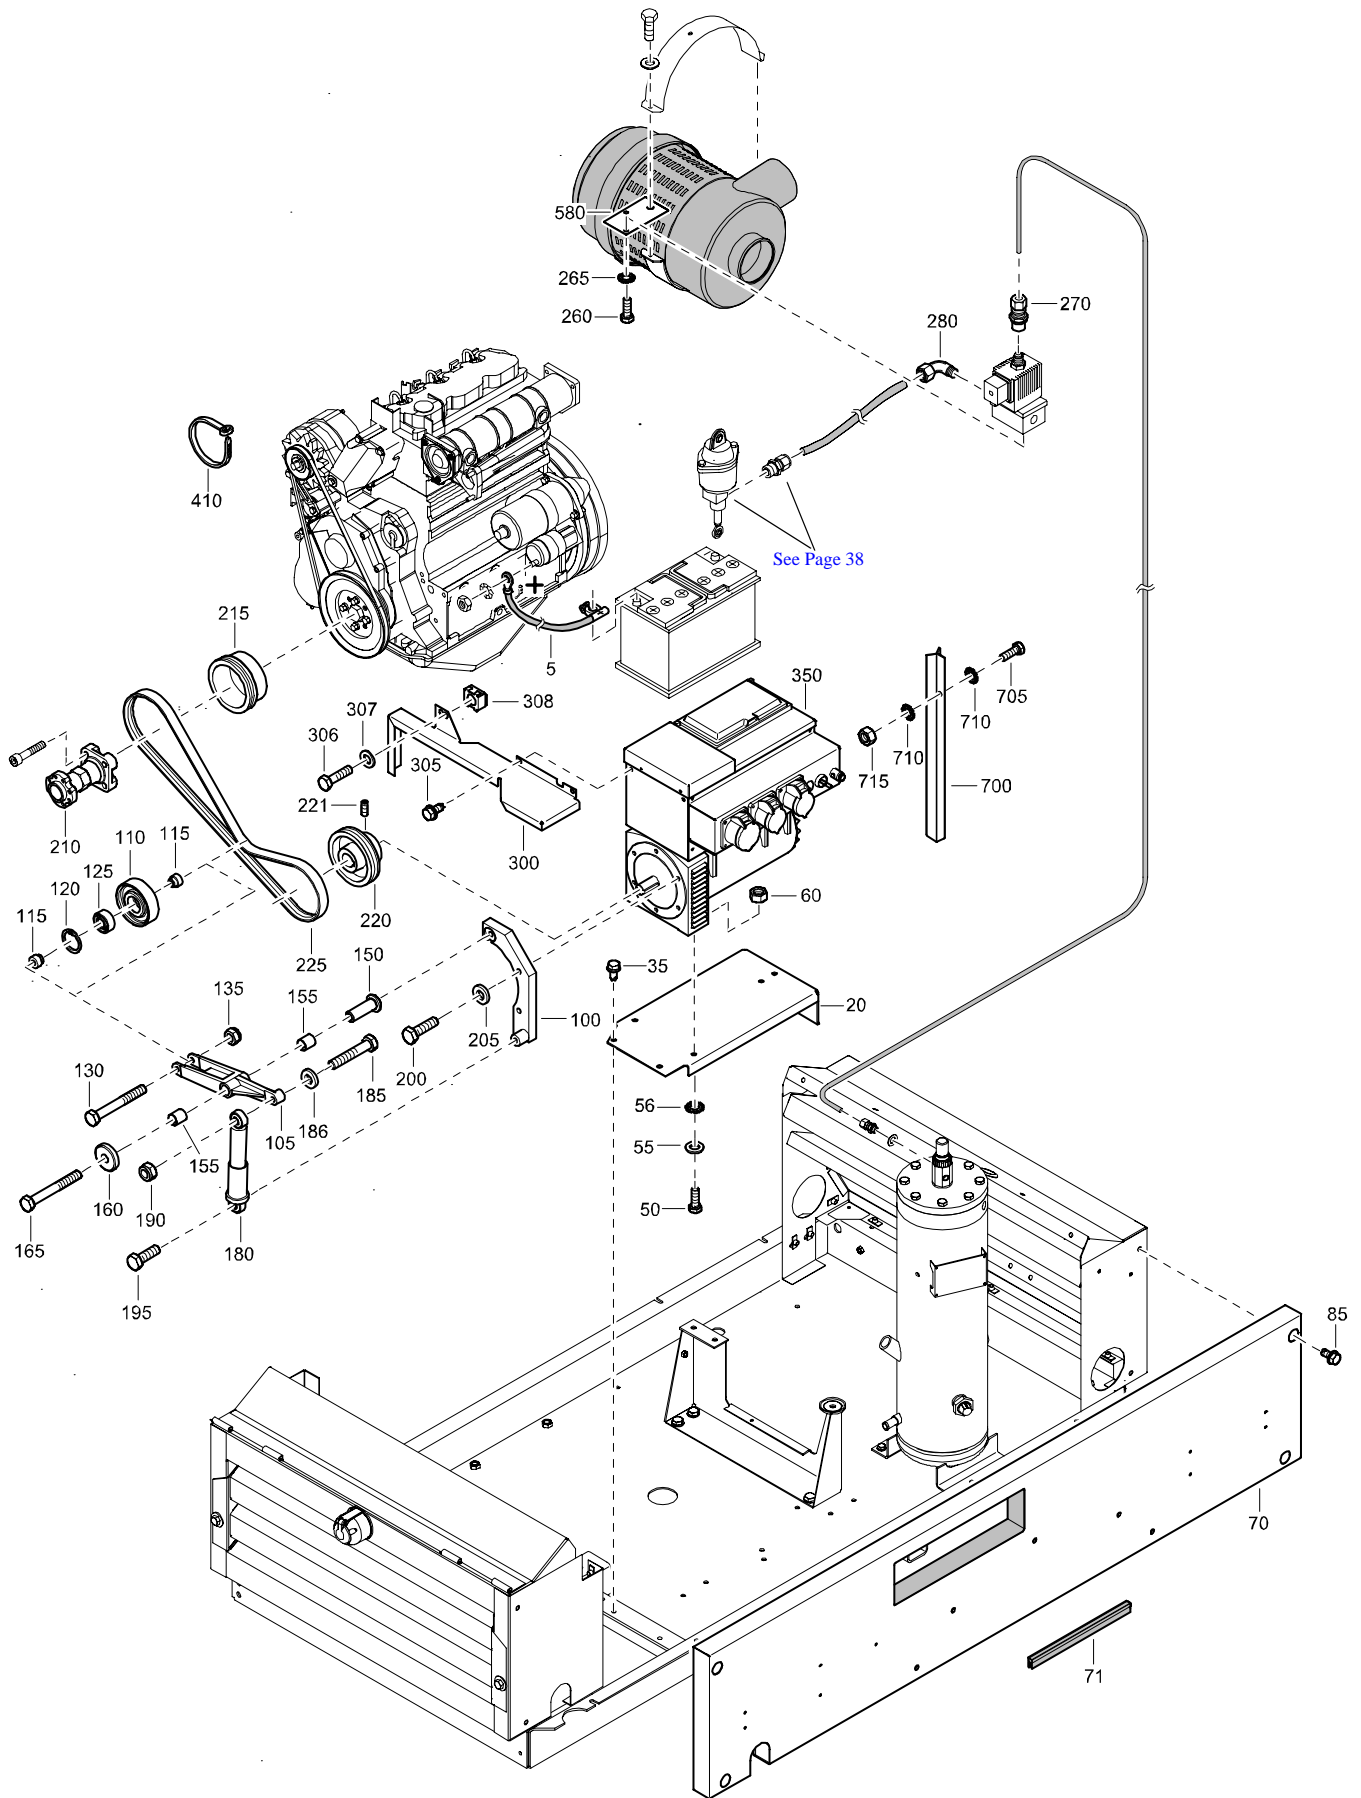


OPTIONS

GENERATOR KIT 55/110V 6 KVA

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
5	1604 9615 00	BATTERY CABLE	1				
20	1604 3992 02	SUPPORT	1				
35	1619 2766 00	HEX. HEAD SCREW	4				
50	0147 1363 03	HEX. HEAD SCREW	3				
55	0301 2344 00	PLAIN WASHER	3				
56	0333 3232 00	LOCK WASHER	3				
60	0266 2111 00	HEXAGON NUT	3				
70	1604 5458 81	SIDE PANEL ASSY	1				
		(For details see page 194)					
71	1202 6584 00	SEAL	AR				
85	1619 2766 00	HEX. HEAD SCREW	8				
100	1604 3903 00	SUPPORT	1				
105	1615 8668 01	LEVER	1				
110	1615 8670 01	PULLEY	1				
115	1615 8669 00	BUSHING	2				
120	0335 2136 00	CIRCLIP	1				
125	0502 1091 38	BALL BEARING	1				
130	0147 1330 03	HEX. HEAD SCREW	1				
135	0291 1110 00	LOCKNUT	1				
150	1615 8667 00	AXLE	1				
155	0500 4510 22	PLAIN BEARING	2				
160	0303 1274 01	PLAIN WASHER	1				
165	0147 1336 03	HEX. HEAD SCREW	1				
180	1615 8671 00	DAMPER	1				
185	0147 1329 03	HEX. HEAD SCREW	1				
186	0300 8019 00	PLAIN WASHER	2				
190	0291 1110 00	LOCKNUT	1				
195	0147 1325 03	HEX. HEAD SCREW	1				
200	0147 1326 03	HEX. HEAD SCREW	2				
205	0301 2335 00	PLAIN WASHER	2				
210	1615 8607 00	FAN ADAPTOR	1				
215	1615 8672 00	PULLEY	1				
220	1615 8677 00	PULLEY	1				
221	0196 1320 00	SET SCREW	1				
225	1604 4076 00	BELT	1				
260	0147 1171 03	HEX. HEAD SCREW	2				
265	0333 3214 00	LOCK WASHER	2				
270	0581 0000 54	STRAIGHT PIPE COUPLING	1				
280	0581 1200 16	ELBOW PIPE COUPLING	1				
300	1604 3902 01	BELT GUARD	1				
305	1619 2766 00	HEX. HEAD SCREW	2				
306	0147 1321 03	HEX. HEAD SCREW	1				
307	0301 2335 00	PLAIN WASHER	1				
308	1079 2901 01	CAGE NUT	1				
350	1604 3995 96	GENERATOR	1				
		(For details see page 182)					
410	1088 1301 03	CABLE STRIP	4				
580	1604 3994 01	BRACKET	1				
700	1089 9358 04	EARTH PIN	1				
705	0147 1323 03	HEX. HEAD SCREW	1				
710	0333 3227 00	LOCK WASHER	2				
715	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 GENERATOR KIT 230/400V 12 KVA

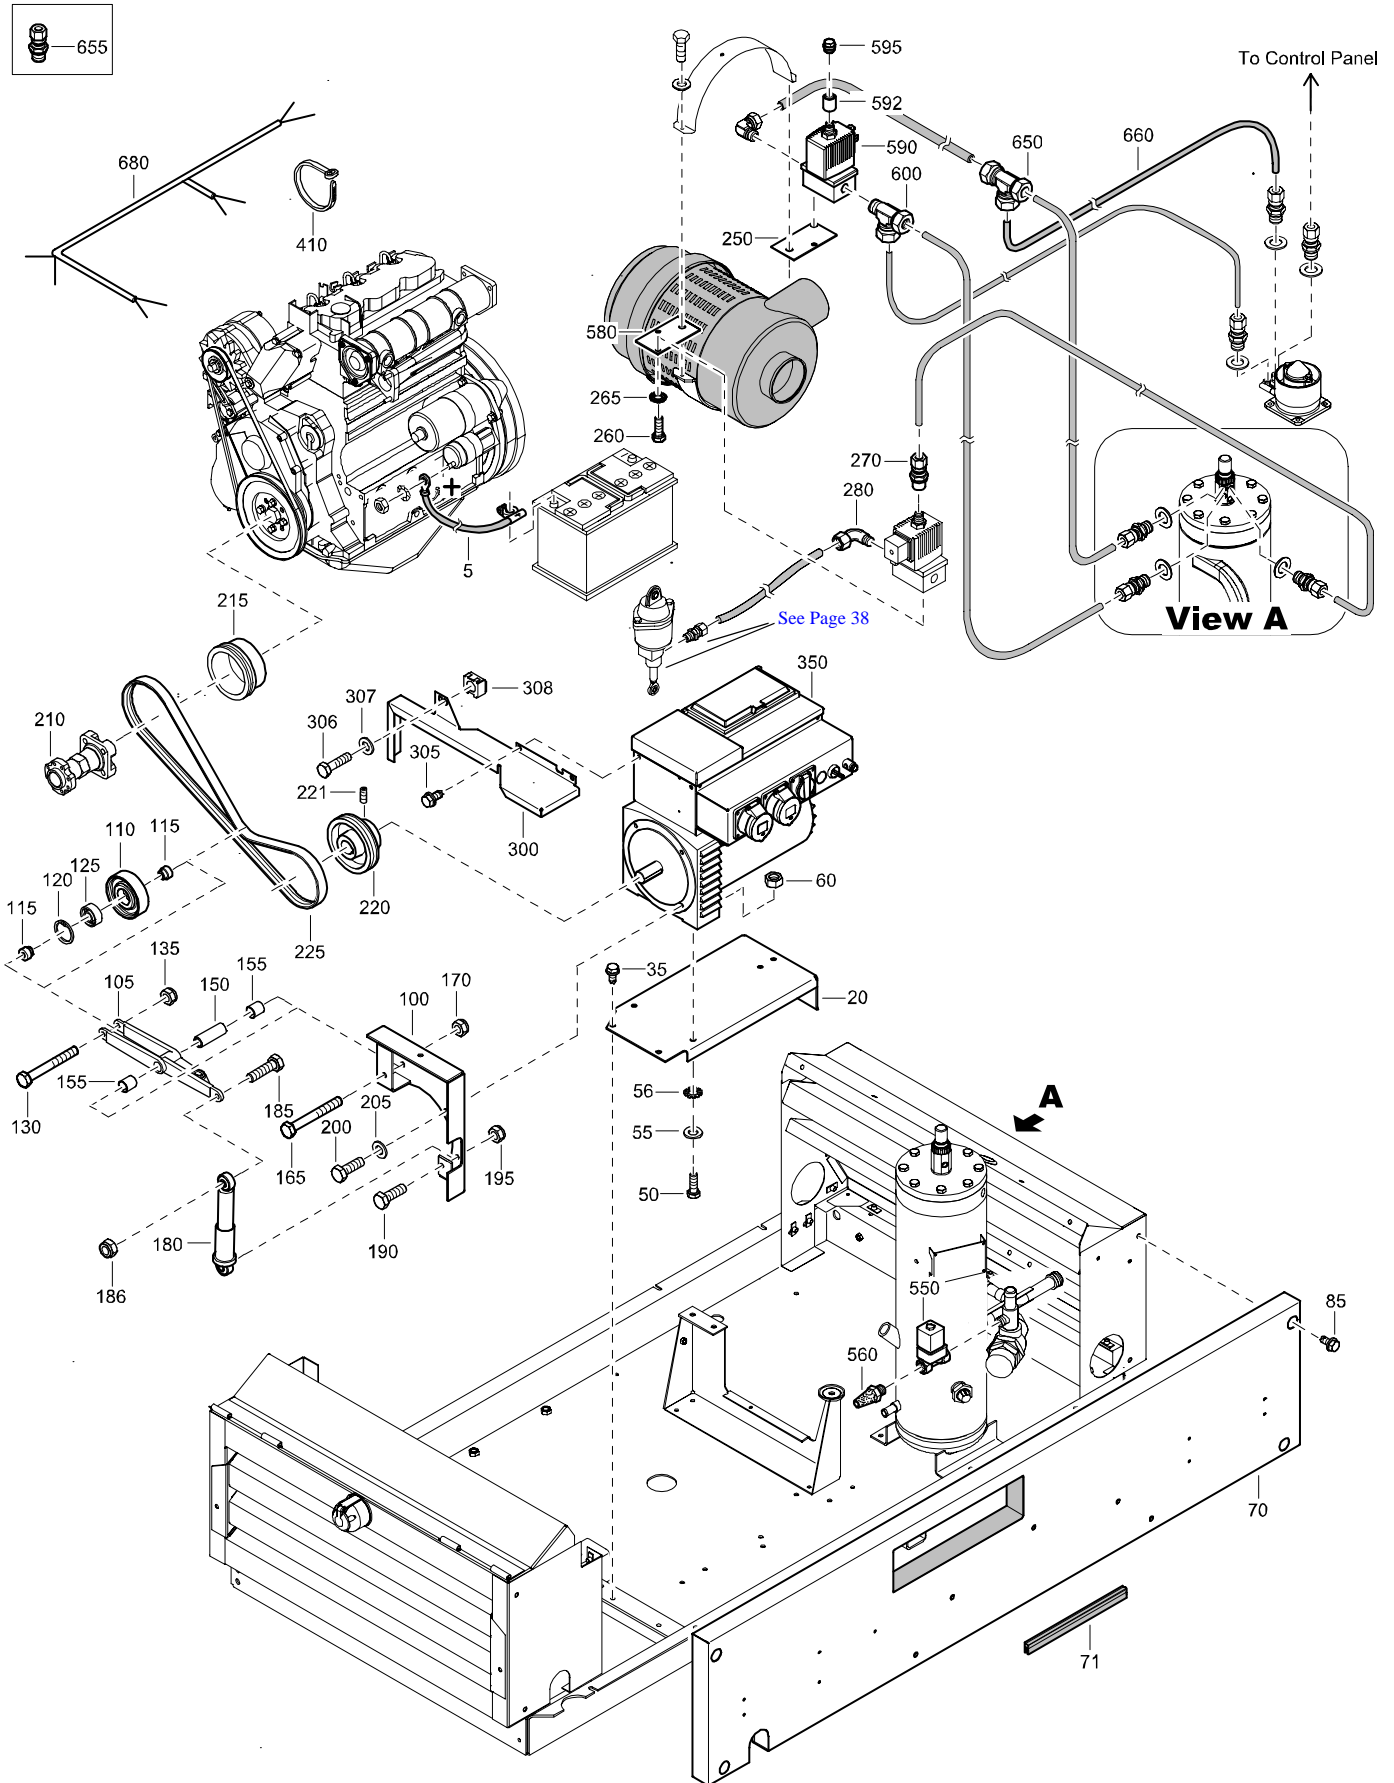


OPTIONS

GENERATOR KIT 230/400V 12 KVA

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
5	1604 9615 00	BATTERY CABLE	1				
20	1604 3993 02	SUPPORT	1				
35	1619 2766 00	HEX. HEAD SCREW	4				
50	0147 1363 03	HEX. HEAD SCREW	3				
55	0301 2344 00	PLAIN WASHER	3				
56	0333 3232 00	LOCK WASHER	3				
60	0266 2111 00	HEXAGON NUT	3				
70	1604 5458 81	SIDE PANEL ASSY	1				
		(For details see page 194)					
71	1202 6584 00	SEAL	AR				
85	1619 2766 00	HEX. HEAD SCREW	8				
100	1604 3897 00	SUPPORT	1				
105	1604 0503 02	LEVER	1				
110	1615 8670 01	PULLEY	1				
115	1615 8669 00	BUSHING	2				
120	0335 2136 00	CIRCLIP	1				
125	0502 1091 38	BALL BEARING	1				
130	0147 1330 03	HEX. HEAD SCREW	1				
135	0291 1110 00	LOCKNUT	1				
150	1604 0502 00	BUSHING	1				
155	0500 4510 22	PLAIN BEARING	2				
165	0147 1371 03	HEX. HEAD SCREW	1				
170	0291 1111 00	LOCKNUT	1				
180	1615 8671 00	DAMPER	1				
185	0147 1326 03	HEX. HEAD SCREW	1				
186	0291 1110 00	LOCKNUT	2				
190	0147 1326 03	HEX. HEAD SCREW	1				
195	0291 1110 00	LOCKNUT	1				
200	0147 1362 03	HEX. HEAD SCREW	3				
205	0301 2344 00	PLAIN WASHER	3				
210	1615 8607 00	FAN ADAPTOR	1				
215	1604 3908 00	PULLEY	1				
220	1604 0504 01	PULLEY	1				
221	0196 1320 00	SET SCREW	1				
225	1604 4077 00	BELT	1				
250	1604 3994 01	BRACKET	1				
260	0147 1171 03	HEX. HEAD SCREW	2				
265	0333 3214 00	LOCK WASHER	2				
270	0581 0000 54	STRAIGHT PIPE COUPLING	1				
280	0581 1200 16	ELBOW PIPE COUPLING	1				
300	1604 3902 01	BELT GUARD	1				
305	1619 2766 00	HEX. HEAD SCREW	2				
306	0147 1321 03	HEX. HEAD SCREW	1				
307	0301 2335 00	PLAIN WASHER	1				
308	1079 2901 01	CAGE NUT	1				
350	1604 3997 87	GENERATOR	1				
		(For details see page 187)					
410	1088 1301 03	CABLE STRIP	4				
550	1089 0620 07	SOLENOID VALVE	1				
560	9090 0510 00	SILENCER	1				
580	1604 3994 01	BRACKET	1				
590	1089 0621 71	SOLENOID VALVE	1				
592	0607 2151 02	SOCKET	1				
595	0686 4201 03	HEXAGON PLUG	1				
600	0582 1200 09	TEE PIPE COUPLING	1				
650	0582 1200 12	TEE PIPE COUPLING	1				
655	0582 1200 05	STRAIGHT PIPE COUPLING	1				
660	0070 6002 04	PLASTIC TUBE	AR				
680	1604 5314 00	WIRE HARNESS	1				

OPTIONS

 GENERATOR KIT 230 3PH 12 KVA

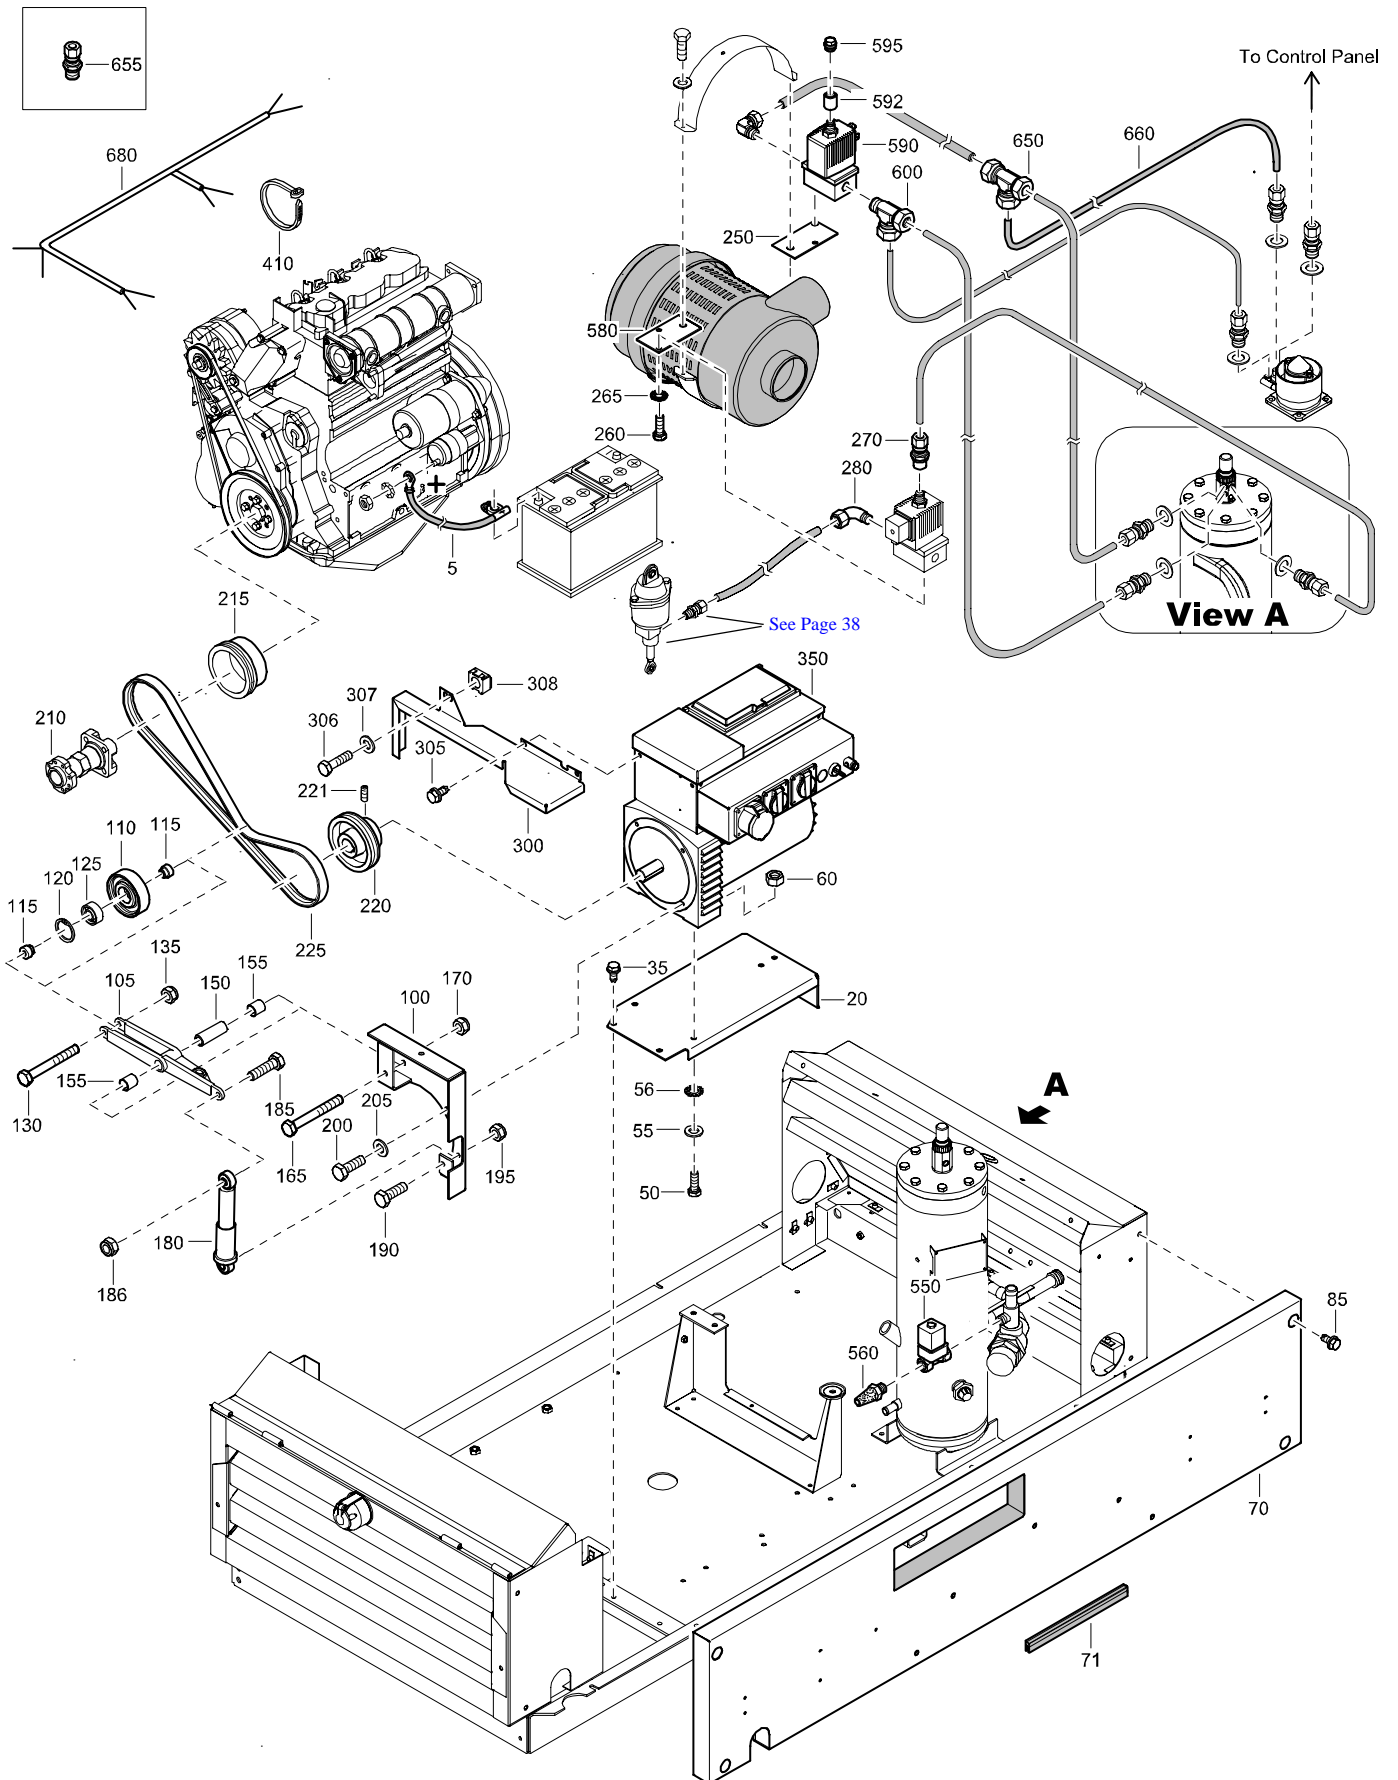


OPTIONS

GENERATOR KIT 230 3PH 12 KVA

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
5	1604 9615 00	BATTERY CABLE	1				
20	1604 3993 02	SUPPORT	1				
35	1619 2766 00	HEX. HEAD SCREW	4				
50	0147 1363 03	HEX. HEAD SCREW	3				
55	0301 2344 00	PLAIN WASHER	3				
56	0333 3232 00	LOCK WASHER	3				
60	0266 2111 00	HEXAGON NUT	3				
70	1604 5458 81	SIDE PANEL ASSY	1				
		(For details see page 194)					
71	1202 6584 00	SEAL	AR				
75	1604 5452 81	SIDE PANEL ASSY	1				
		(For details see page 191)					
85	1619 2766 00	HEX. HEAD SCREW	8				
100	1604 3897 00	SUPPORT	1				
105	1604 0503 02	LEVER	1				
110	1615 8670 01	PULLEY	1				
115	1615 8669 00	BUSHING	2				
120	0335 2136 00	CIRCLIP	1				
125	0502 1091 38	BALL BEARING	1				
130	0147 1330 03	HEX. HEAD SCREW	1				
135	0291 1110 00	LOCKNUT	1				
150	1604 0502 00	BUSHING	1				
155	0500 4510 22	PLAIN BEARING	2				
165	0147 1371 03	HEX. HEAD SCREW	1				
170	0291 1111 00	LOCKNUT	1				
180	1615 8671 00	DAMPER	1				
185	0147 1326 03	HEX. HEAD SCREW	1				
186	0291 1110 00	LOCKNUT	2				
190	0147 1326 03	HEX. HEAD SCREW	1				
195	0291 1110 00	LOCKNUT	1				
200	0147 1362 03	HEX. HEAD SCREW	3				
205	0301 2344 00	PLAIN WASHER	3				
210	1615 8607 00	FAN ADAPTOR	1				
215	1604 3908 00	PULLEY	1				
220	1604 0504 01	PULLEY	1				
221	0196 1320 00	SET SCREW	1				
225	1604 4077 00	BELT	1				
250	1604 3994 01	BRACKET	1				
260	0147 1171 03	HEX. HEAD SCREW	2				
265	0333 3214 00	LOCK WASHER	2				
270	0581 0000 54	STRAIGHT PIPE COUPLING	1				
280	0581 1200 16	ELBOW PIPE COUPLING	1				
300	1604 3902 01	BELT GUARD	1				
305	1619 2766 00	HEX. HEAD SCREW	2				
306	0147 1321 03	HEX. HEAD SCREW	1				
307	0301 2335 00	PLAIN WASHER	1				
308	1079 2901 01	CAGE NUT	1				
350	1604 3997 86	GENERATOR	1				
		(For details see page 186)					
410	1088 1301 03	CABLE STRIP	4				
550	1089 0620 07	SOLENOID VALVE	1				
560	9090 0510 00	SILENCER	1				
580	1604 3994 01	BRACKET	1				
590	1089 0621 71	SOLENOID VALVE	1				
592	0607 2151 02	SOCKET	1				
595	0686 4201 03	HEXAGON PLUG	1				
600	0582 1200 09	TEE PIPE COUPLING	1				
650	0582 1200 12	TEE PIPE COUPLING	1				
655	0582 1200 05	STRAIGHT PIPE COUPLING	1				
660	0070 6002 04	PLASTIC TUBE	AR				
680	1604 5314 00	WIRE HARNESS	1				

OPTIONS

 
BATTERY AND VESSEL FOR COMPRESSOR WITH COLD WEATHER EQUIPMENT

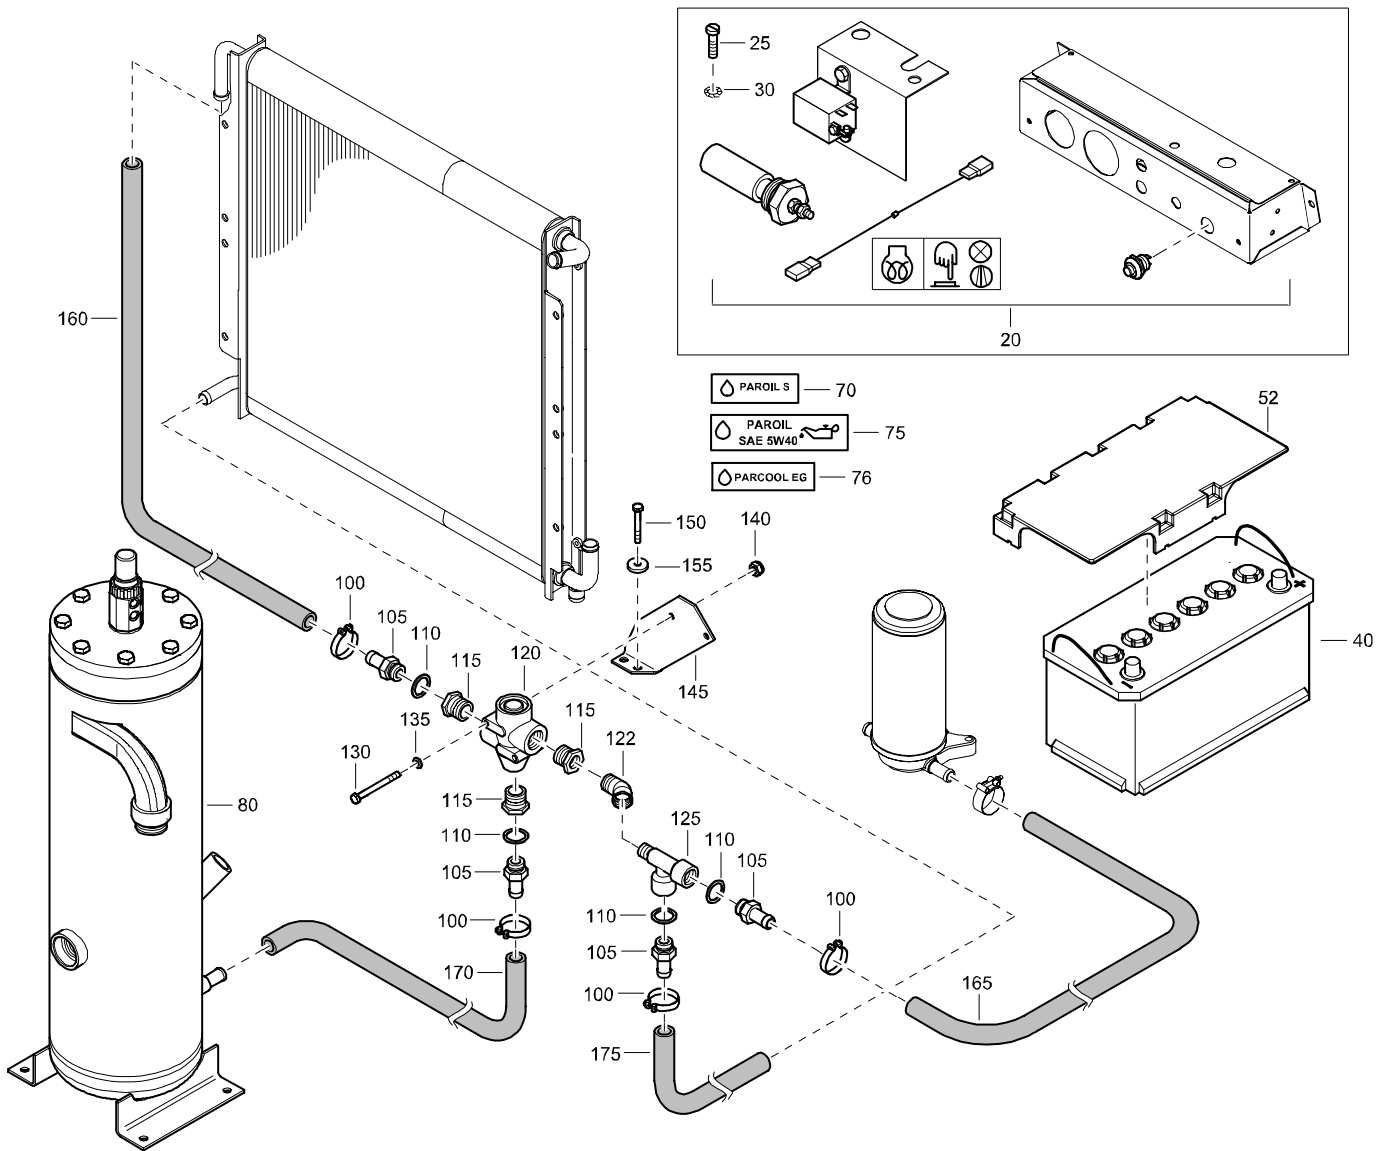

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1615 9107 84	COLD START ASSY (For details see page 195)	1	140	0291 1108 00	LOCKNUT	2
25	0160 6062 00	SLOTTED SCREW	2	145	1604 5763 02	BRACKET	1
30	0333 3215 00	LOCK WASHER	2	150	0147 1252 03	HEX. HEAD SCREW	2
40	0975 8300 15	BATTERY	1	155	0303 1274 04	PLAIN WASHER	2
52	1604 7824 00	BATTERY COVER	1	160	0072 8403 16	HOSE	AR
70	1079 9920 00	INFORMATION LABEL	1	165	0072 8403 16	HOSE	AR
75	1079 9920 45	INFORMATION LABEL	1	170	0072 8403 16	HOSE	AR
76	1079 9924 44	INFORMATION LABEL	1	175	0072 8403 16	HOSE	AR
80	1604 4022 88	VESSEL ASSY ASME/EC (For details see page 77)	1				
100	1202 8663 06	HOSE CLIP	4				
105	1202 8660 00	NIPPLE	4				
110	0661 1033 00	SEALING WASHER	4				
115	0605 8300 50	BUSHING	3				
120	1612 4230 00	THERMOSTATIC VALVE	1				
122	0560 0200 34	ELBOW	1				
125	0560 4400 86	TEE	1				
130	0147 1256 03	HEX. HEAD SCREW	2				
135	0301 2321 00	PLAIN WASHER	2				

OPTIONS

 
EARTH PIN FOR COMPRESSOR WITH GENERATOR KIT

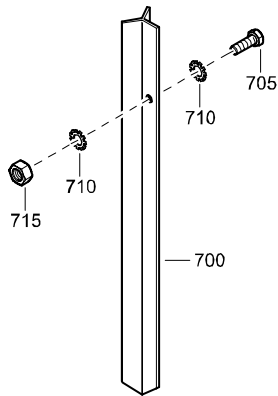

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
700	1089 9358 04	EARTH PIN	1				
705	0147 1323 03	HEX. HEAD SCREW	1				
710	0333 3227 00	LOCK WASHER	2				
715	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 
EPA ENGINE

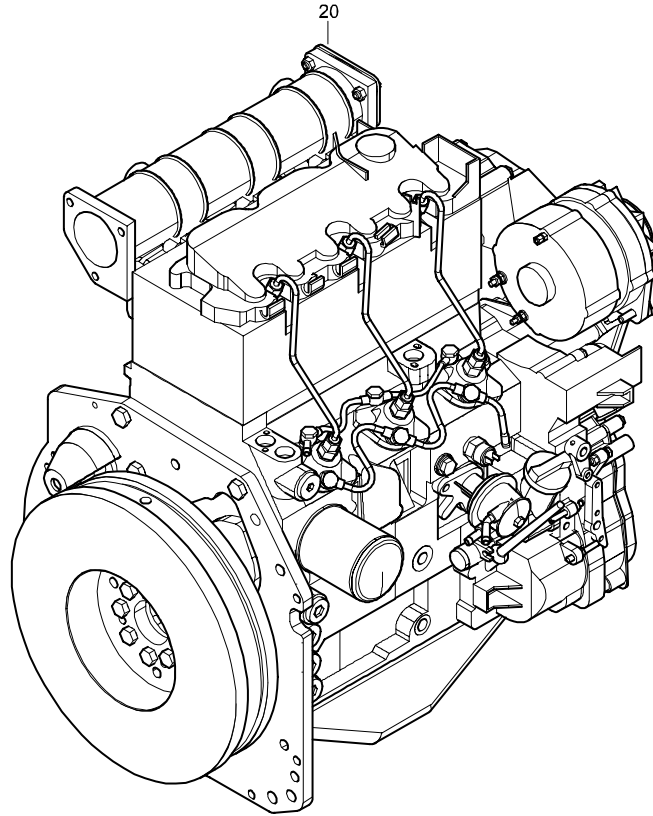

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 6092 01	ENGINE F3M2011-EPAII	1				

OPTIONS

 
HOSE REEL (NOT APPLICABLE FOR HARDHAT)

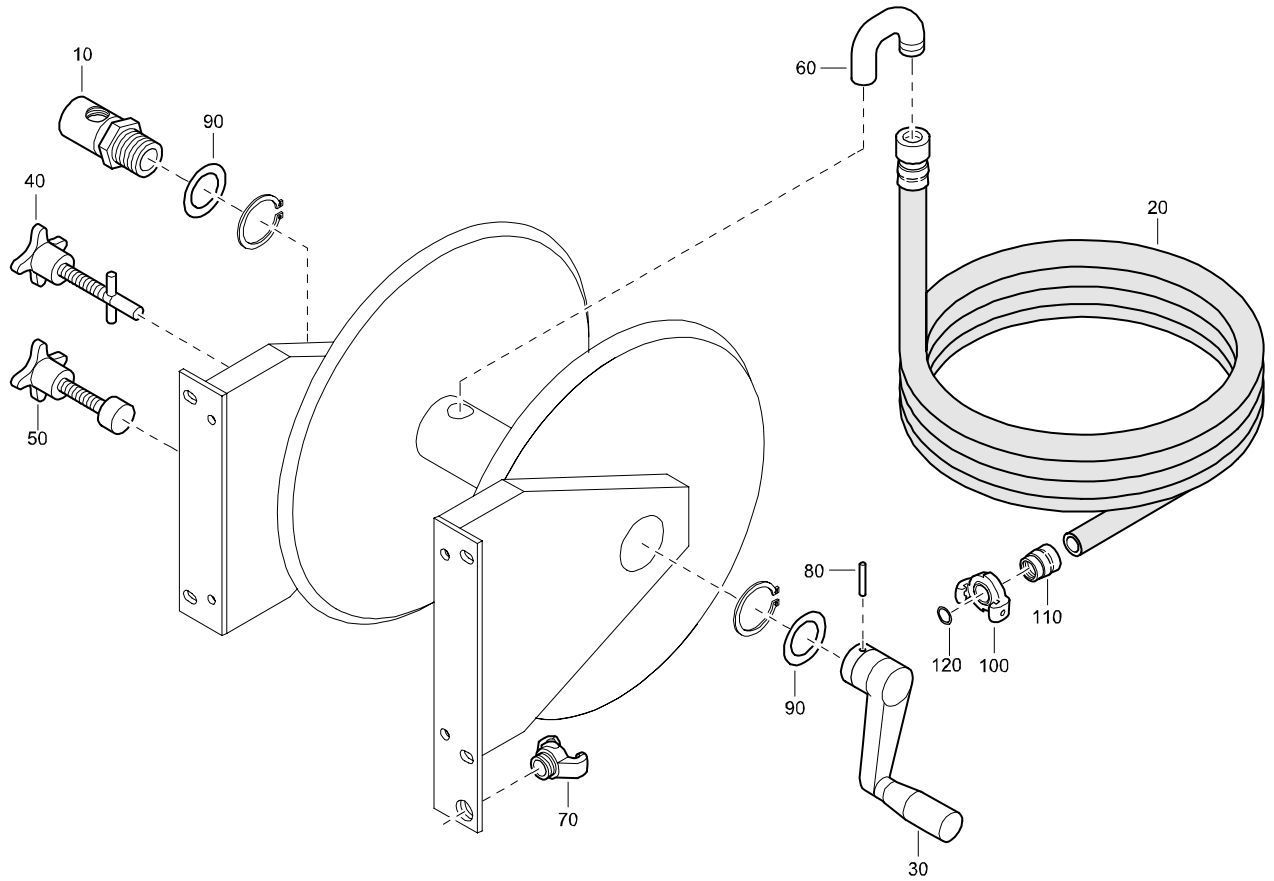

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 1430 01	HOSE REEL	(From page 127)				
•10	2914 8186 00	CONNECTION	1				
•20	2914 8187 00	HOSE+COUPLING	1				
•30	2914 8188 00	HANDLE	1				
•40	2914 8189 00	FUSE	1				
•50	2914 8190 00	BREMSE	1				
•60	2914 8191 00	CONNECTION ELBOW	1				
•70	2914 8192 00	PIPE COUPLING	1				
•80	2914 8241 00	PIN	2				
•90	2914 8242 00	WASHER	4				
•100	2914 8289 00	PIPE COUPLING	1				
•110	2914 8290 00	BUSH	1				
•120	2914 8291 00	SEAL	1				

OPTIONS

 
AXLE FOR NO BRAKES

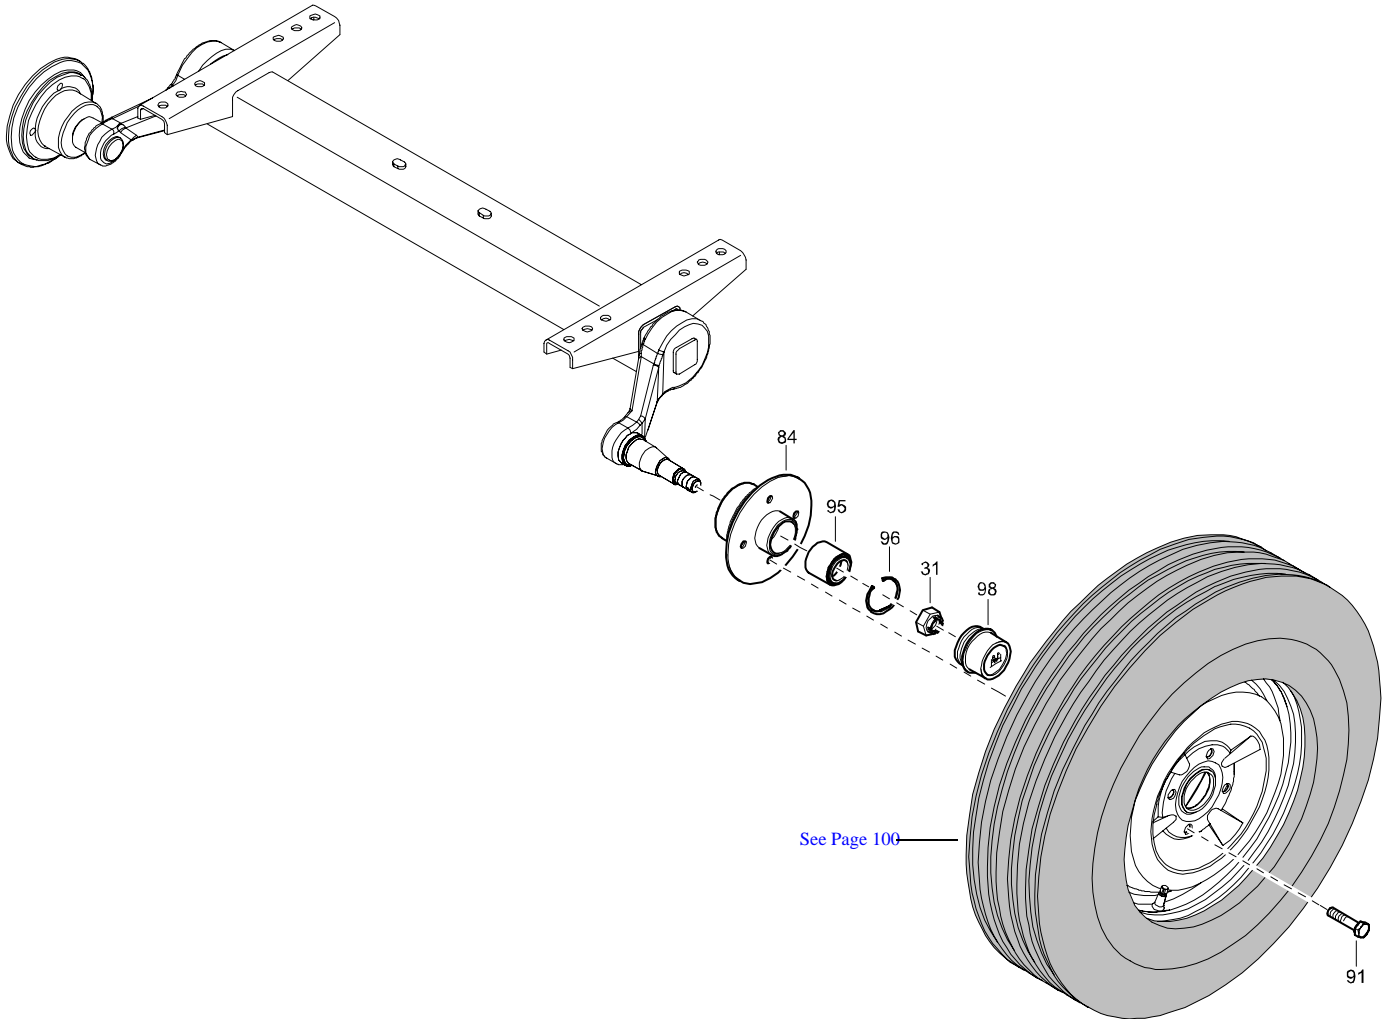

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3802 00	AXLE	(From page 100)				
•31	2914 0373 00	NUT	2				
•84	2914 0154 00	STEERING ROD	2				
•91	2914 0119 00	BOLT	8				
•95	2914 0129 00	BEARING	2				
•96	2914 0125 00	CIRCLIPS	2				
•98	2914 0130 00	CAP	2				

OPTIONS

 
AXLE FOR BRAKES

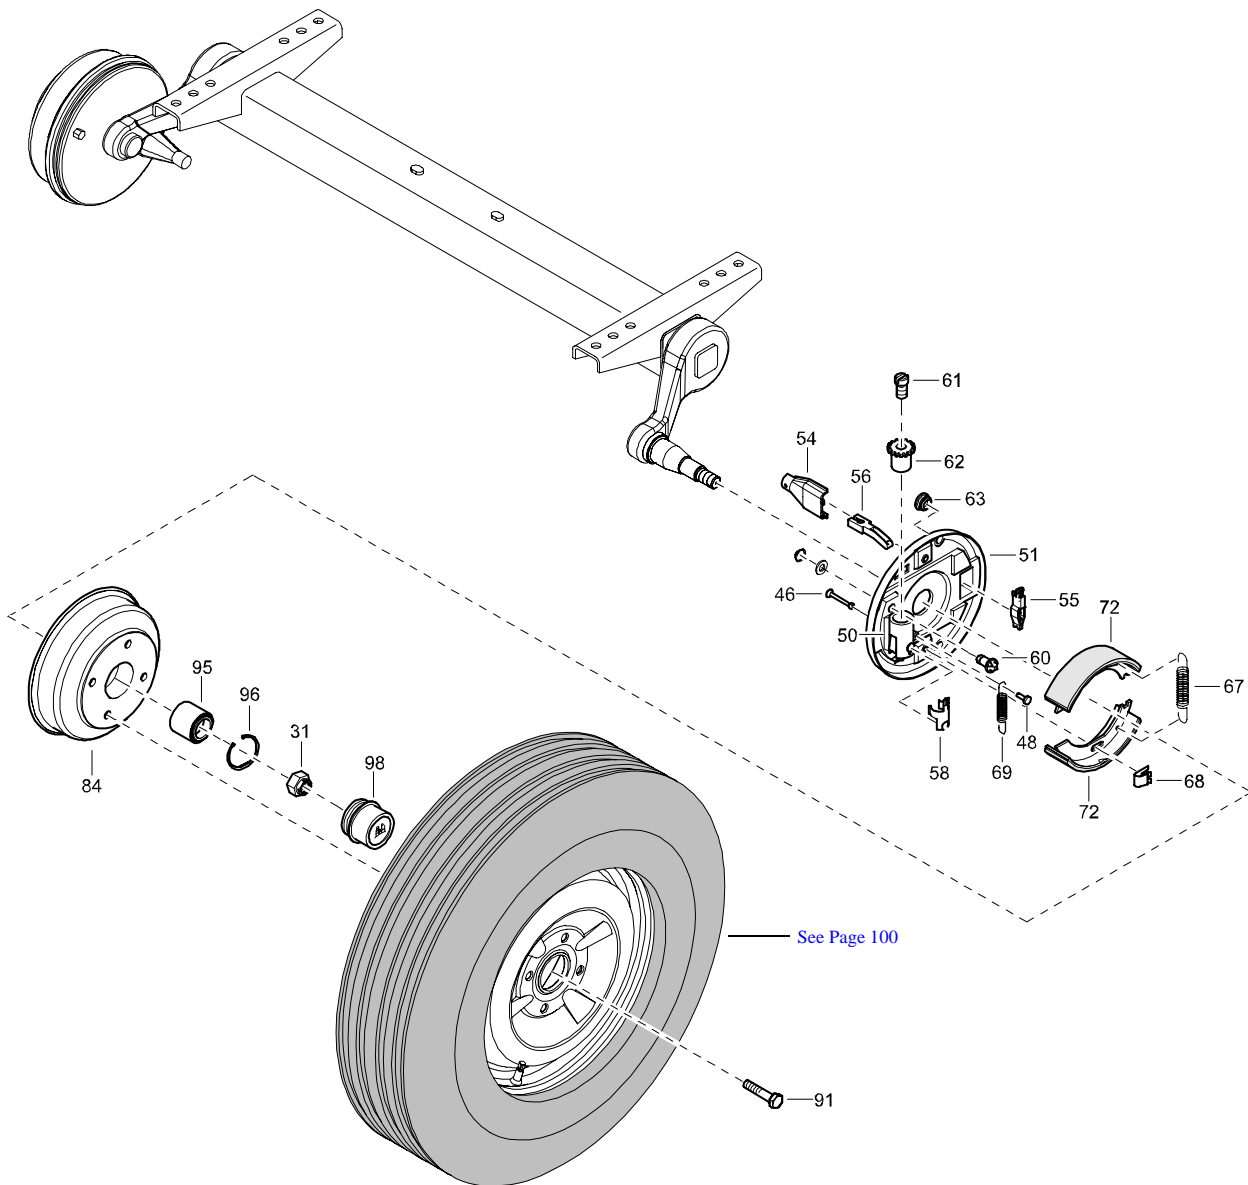

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3803 00	AXLE		•95	2914 0129 00	BEARING	2
•31	2914 0373 00	NUT	2	•96	2914 0125 00	CIRCLIPS	2
•46	-	PIN	4	•98	2914 0130 00	CAP	2
		(Part of service kit, see page 27)					
•48	2914 0376 00	BOLT	2				
•50	2914 0377 00	PLATE	1				
•51	2914 8256 00	PART OF BRAKE	1				
•54	2914 2208 00	RETAINER	2				
•55	2914 0183 00	CLASP	2				
•56	2914 0184 00	SHACKLE	2				
•58	2914 0185 00	RETAINER	2				
•60	2914 0372 00	ADJUSTING BOLT	2				
•61	2914 0187 00	SCREW	2				
•62	2914 0188 00	ADJUSTING SCREW	2				
•63	2914 0190 00	BUSHING	2				
•67	-	SPRING	2				
		(Part of service kit, see page 27)					
•68	-	SPRING	4				
		(Part of service kit, see page 27)					
•69	2914 0178 00	SPRING	2				
•72	2914 0179 00	BRAKE SHOE	4				
•84	2914 0378 00	DRUM	2				
•91	2914 0119 00	BOLT	8				

OPTIONS

 
TOWBAR FIXED WITHOUT BRAKES

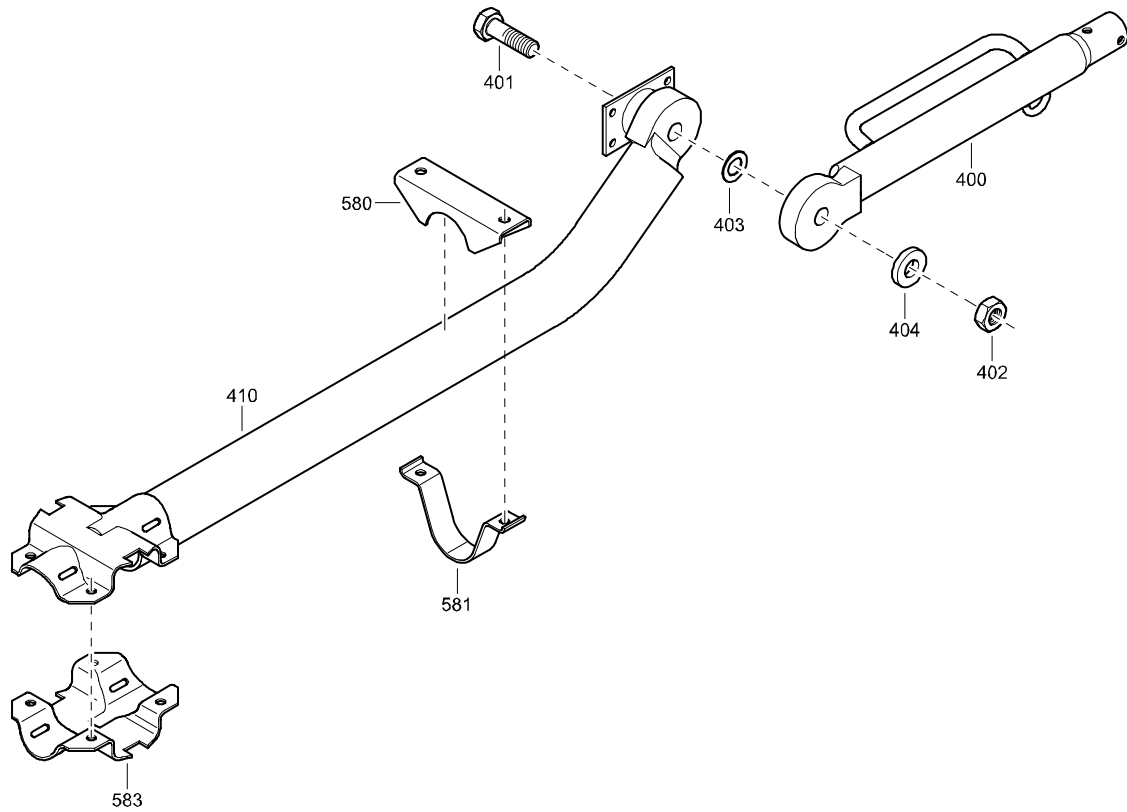

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3804 09	TOWBAR FIXED NO BRAKES(From page 100)					
•400	2914 2359 00	HOUSING	1				
•401	2914 2342 00	BOLT	1				
•402	2914 2289 00	TOMMY NUT	1				
•403	2914 2345 00	RING	1				
•404	2900 0836 00	CLIP	1				
•410	2914 2375 00	TOWBAR	1				
•580	2914 2361 00	CLAMP	1				
•581	2914 2357 00	CLAMP	1				
•583	2914 2363 00	CLAMP	1				

OPTIONS

 
TOWBAR FIXED WITH BRAKES

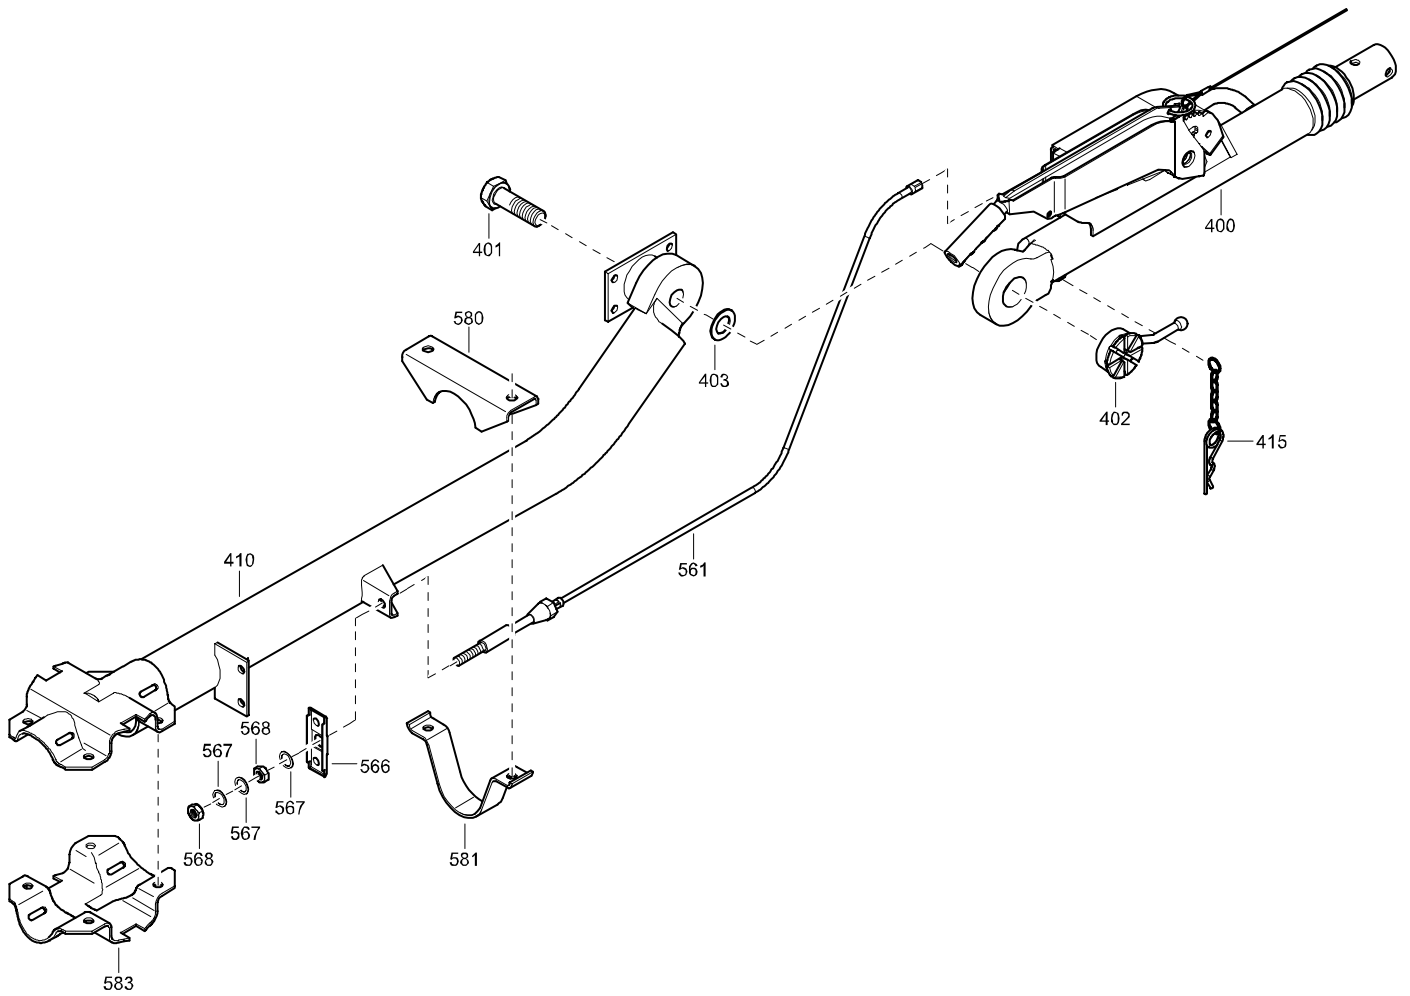

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3806 13	TOWBAR FIXED WITH BRAKES(From page 102)					
•400	2914 2371 00	TOWBAR (For details see page 197)	1				
•401	2914 2342 00	BOLT	1				
•402	2914 2289 00	TOMMY NUT	1				
•403	2914 2345 00	RING	1				
•410	2914 2373 00	TOWBAR	1				
•415	2900 0836 00	CLIP	1				
•561	2914 2355 00	BRAKE CABLE	1				
•566	2914 2202 00	EQUALIZER	1				
•567	2914 2045 00	RING	3				
•568	2900 0729 00	NUT	2				
•580	2914 2356 00	CLAMP	1				
•581	2914 2357 00	CLAMP	1				
•583	2914 2358 00	CLAMP	1				

OPTIONS

 
TOWBAR ADJUSTABLE WITH BRAKES

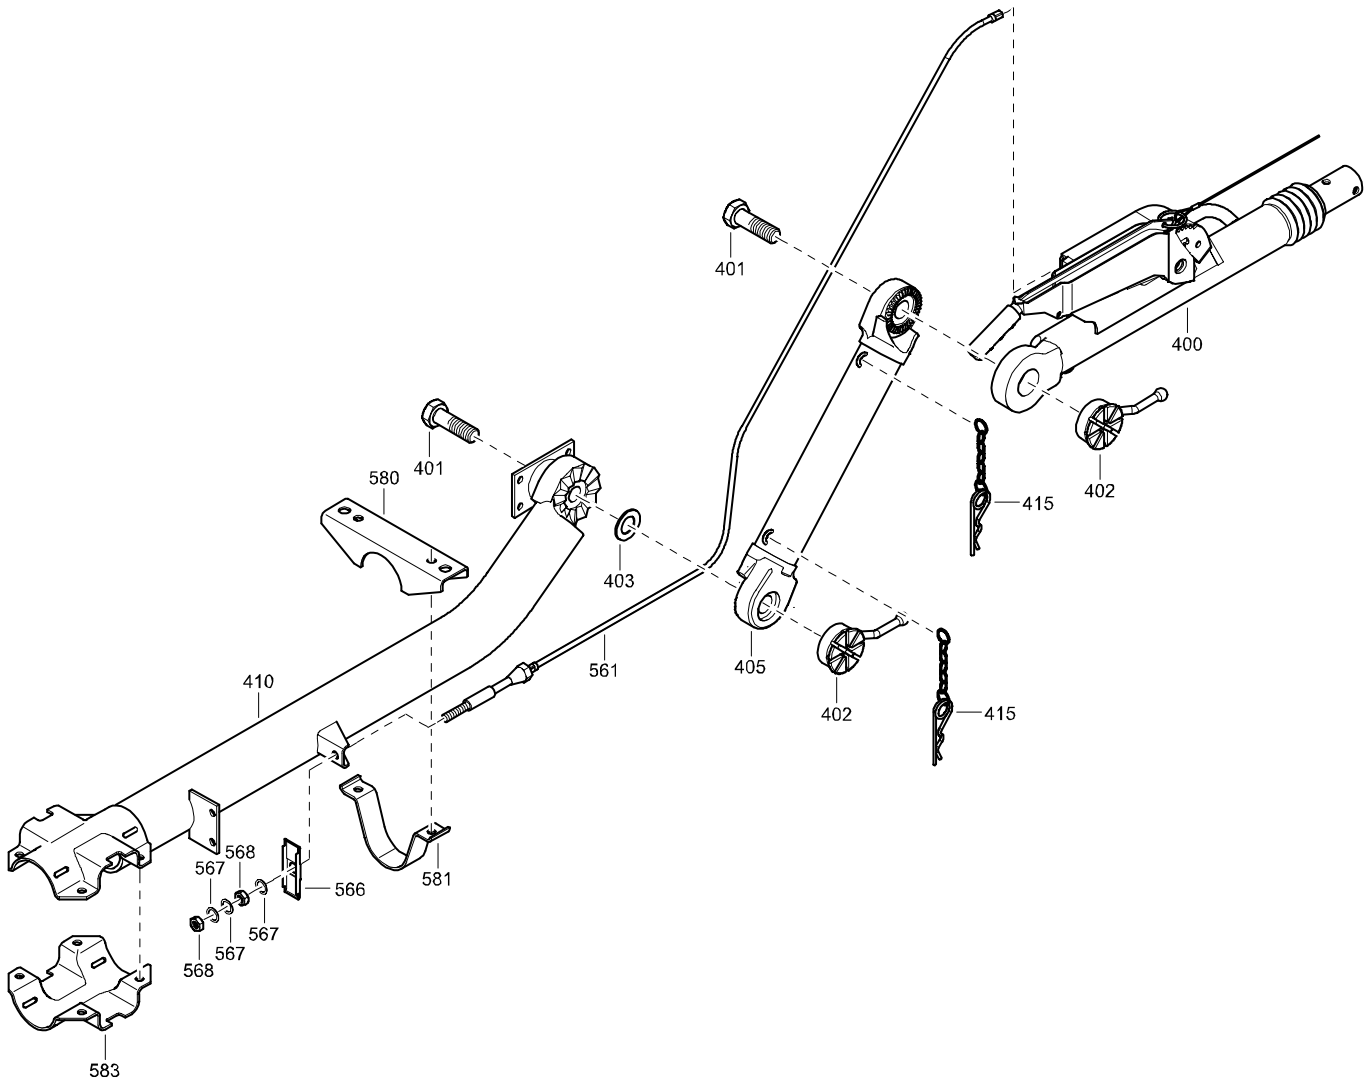

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3807 06	TOWBAR	(From page 104)				
•400	2914 2371 00	TOWBAR	1				
		(For details see page 197)					
•401	2914 2342 00	BOLT	2				
•402	2914 2289 00	TOMMY NUT	2				
•403	2914 2345 00	RING	1				
•405	2914 2346 00	ROD	1				
•410	2914 2376 00	HOUSING	1				
•415	2900 0836 00	CLIP	2				
•561	2914 2352 00	BRAKE CABLE	1				
•566	2914 2202 00	EQUALIZER	1				
•567	2914 2045 00	RING	3				
•568	2900 0729 00	NUT	2				
•580	2914 2353 00	CLAMP	1				
•581	1202 8960 00	CLAMP	1				
•583	1202 8953 00	CLAMP	1				

OPTIONS

 
**GENERATOR
6 KVA 110V**

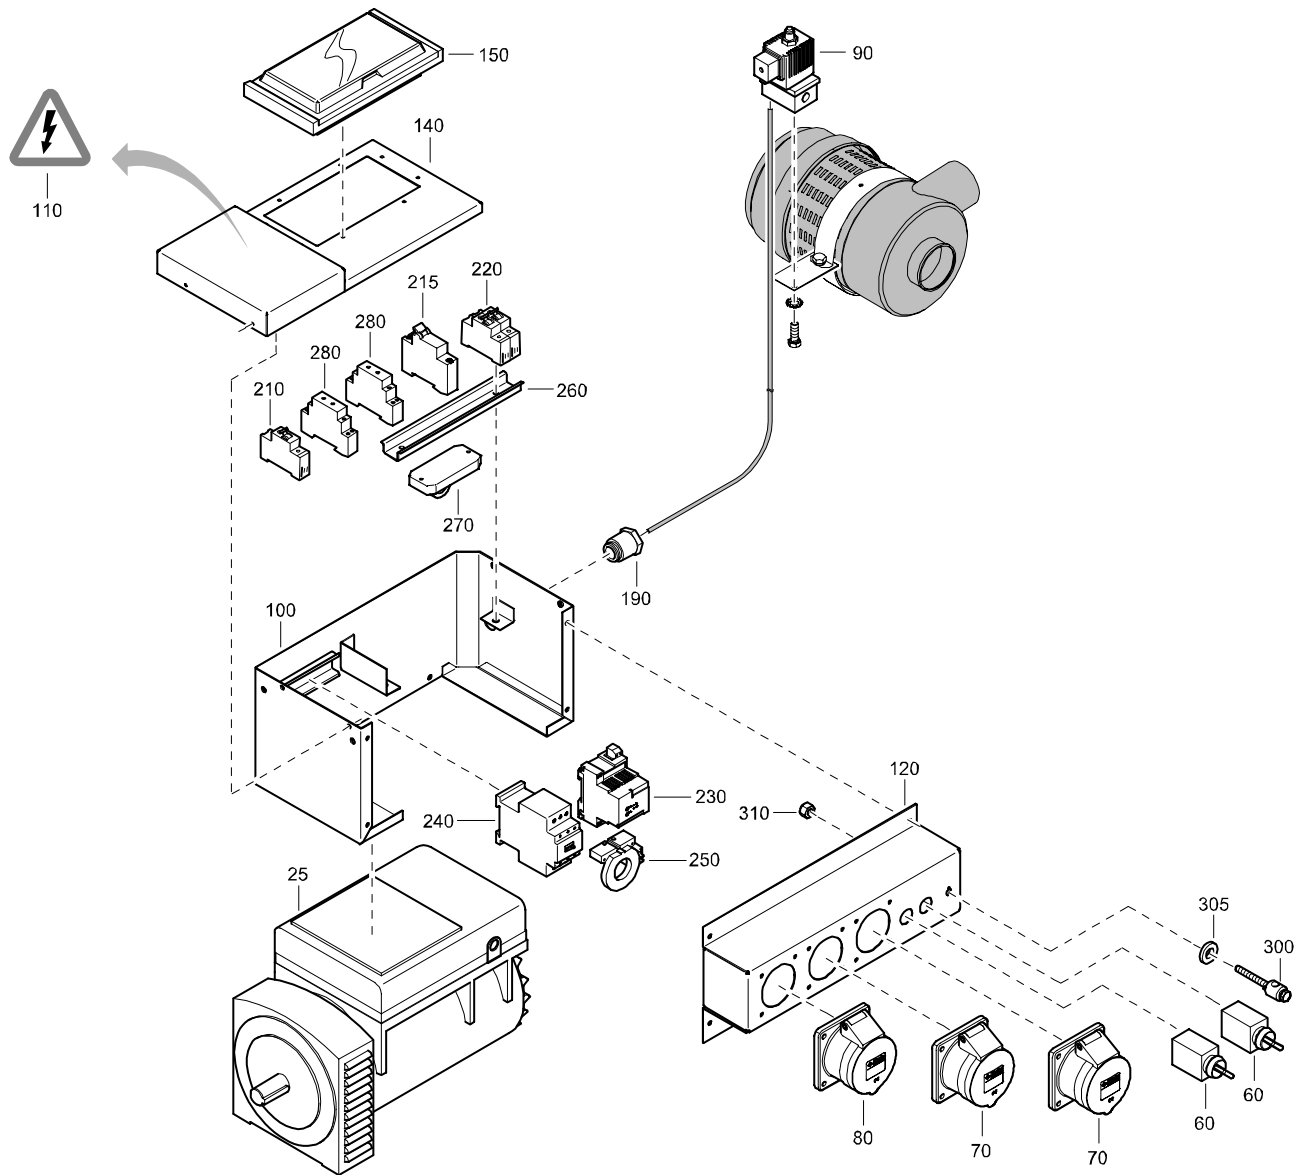

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3995 95	GENERATOR	(From page 158)				
•25	1604 7984 00	ALTERNATOR	1				
•60	1089 0263 46	KNOB	2				
•70	1089 0662 14	SOCKET OUTLET	2				
•80	1089 0662 15	SOCKET OUTLET	1				
•90	1089 0621 44	SOLENOID VALVE	1				
•100	1604 3995 04	CUBICLE	1				
•110	1088 1001 01	WARNING MARK	1				
•120	1604 3996 04	PANEL	1				
•140	1604 3893 02	PLATE	1				
•150	1615 8429 00	DOOR	1				
•190	0698 6125 64	CONDUIT FITTING	1				
•210	1089 9472 05	CIRCUIT BREAKER	1				
•215	1089 9472 15	CIRCUIT BRAKER	1				
•220	1089 9472 03	CIRCUIT BREAKER	2				
•230	1089 9473 54	EARTH RELAY	1				
•240	1089 9578 30	CONTACTOR	1				
•250	1089 9473 55	TORUS	1				
•260	0090 1400 02	RAIL	AR				
•270	1604 5807 00	RELAY	1				
•280	1089 9537 01	TIME RELAY	2				
•300	1615 7280 00	TERMINAL	1				
•305	0300 0274 11	WASHER	1				
•310	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 
GENERATOR 6KVA 110V

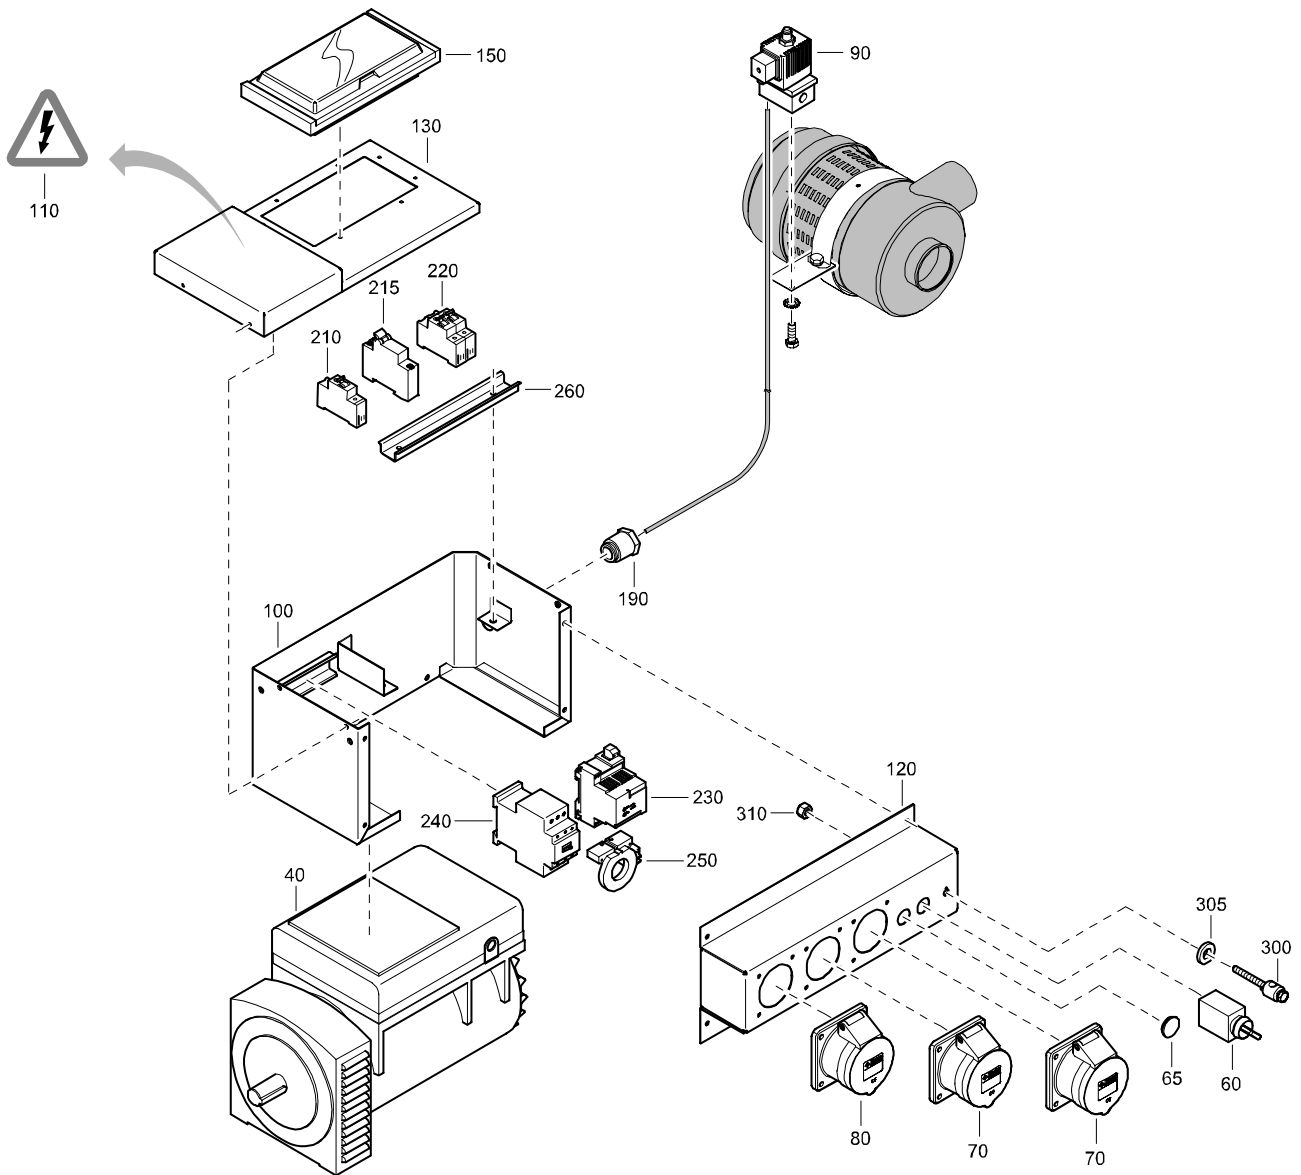

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3995 96	GENERATOR	(From page 166)				
•40	1604 7984 00	ALTERNATOR	1				
•60	1089 0263 46	KNOB	1				
•65	1089 0362 59	PLUG	1				
•70	1089 0662 14	SOCKET OUTLET	2				
•80	1089 0662 15	SOCKET OUTLET	1				
•90	1089 0621 44	SOLENOID VALVE	1				
•100	1604 3995 04	CUBICLE	1				
•110	1088 1001 01	WARNING MARK	1				
•120	1604 3996 04	PANEL	1				
•130	1604 3893 02	PLATE	1				
•150	1615 8429 00	DOOR	1				
•190	0698 6125 64	CONDUIT FITTING	1				
•210	1089 9472 05	CIRCUIT BREAKER	1				
•215	1089 9472 15	CIRCUIT BRAKER	1				
•220	1089 9472 03	CIRCUIT BREAKER	2				
•230	1089 9473 54	EARTH RELAY	1				
•240	1089 9578 30	CONTACTOR	1				
•250	1089 9473 55	TORUS	1				
•260	0090 1400 02	RAIL	AR				
•300	1615 7280 00	TERMINAL	1				
•305	0300 0274 11	WASHER	1				
•310	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 
**GENERATOR
6KVA 230V**

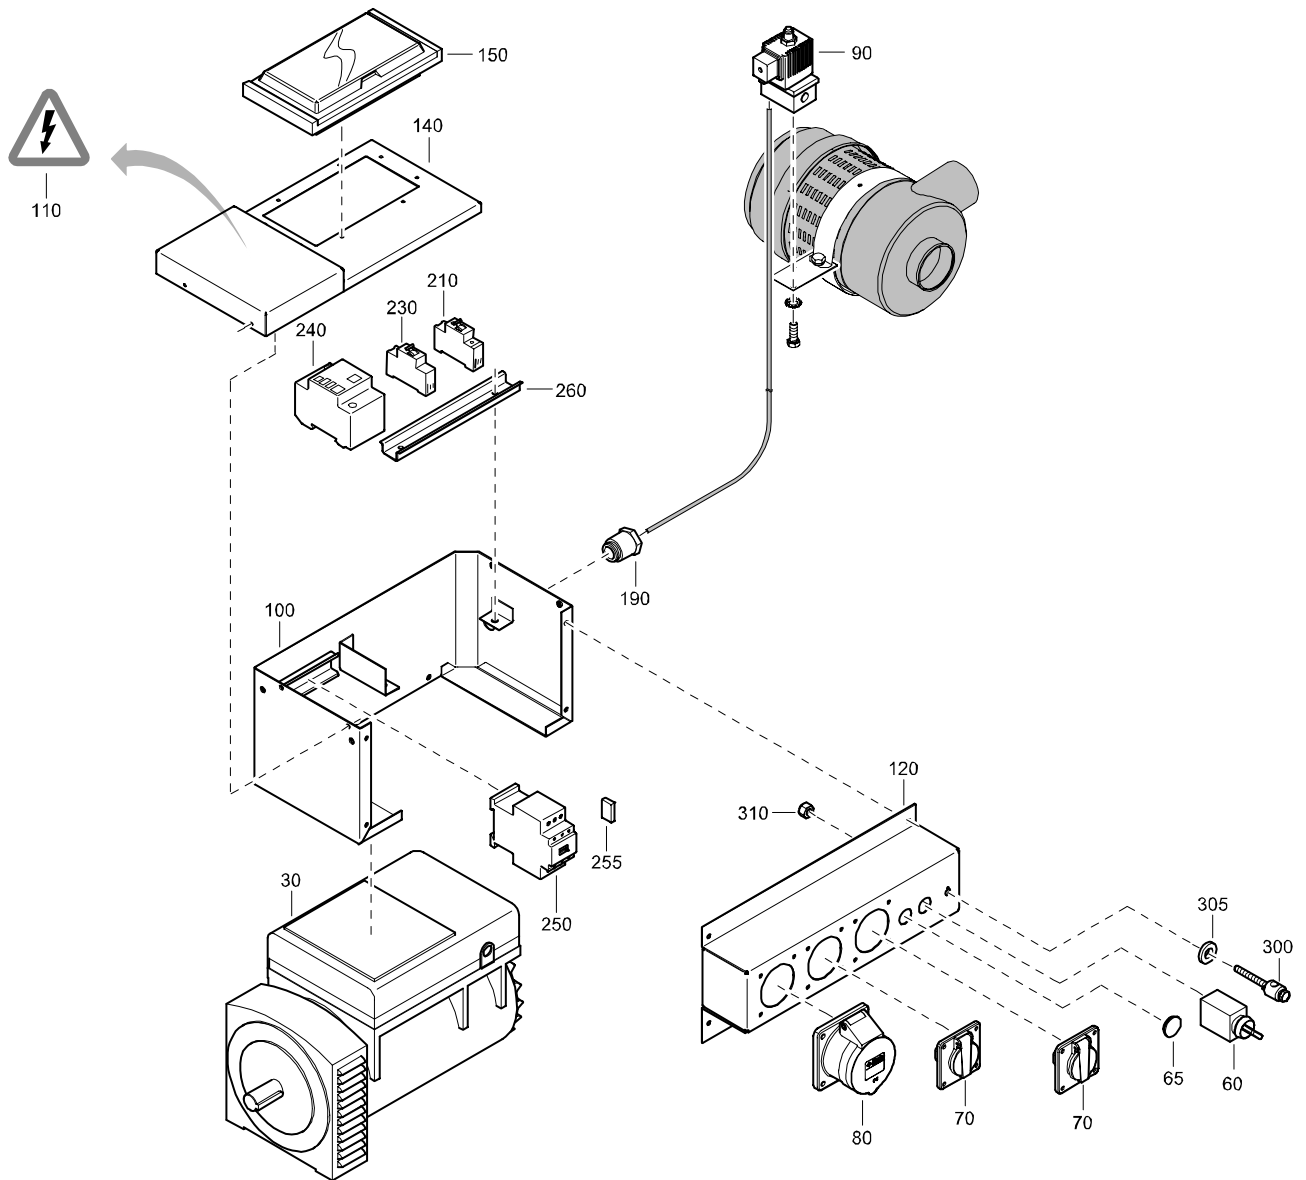

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3995 97	GENERATOR	(From page 164)				
•30	1604 7985 00	ALTERNATOR	1				
•60	1089 0263 46	KNOB	1				
•65	1089 0362 59	PLUG	1				
•70	1089 0662 01	SOCKET OUTLET	2				
•80	1089 0662 13	SOCKET OUTLET	1				
•90	1089 0621 44	SOLENOID VALVE	1				
•100	1604 3995 04	CUBICLE	1				
•110	1088 1001 01	WARNING MARK	1				
•120	1604 3996 04	PANEL	1				
•140	1604 3893 02	PLATE	1				
•150	1615 8429 00	DOOR	1				
•190	0698 6125 64	CONDUIT FITTING	1				
•210	1089 9472 07	CIRCUIT BREAKER	1				
•230	1089 9473 11	SHUNT TRIP COIL	1				
•240	1089 9450 01	INSUL.MON.RELAY	1				
•250	1089 9578 31	CONTACTOR	1				
•255	1089 9578 29	DIODE	1				
•260	0090 1400 02	RAIL	AR				
•300	1615 7280 00	TERMINAL	1				
•305	0300 0274 11	WASHER	1				
•310	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 
GENERATOR 6KVA 230/400V

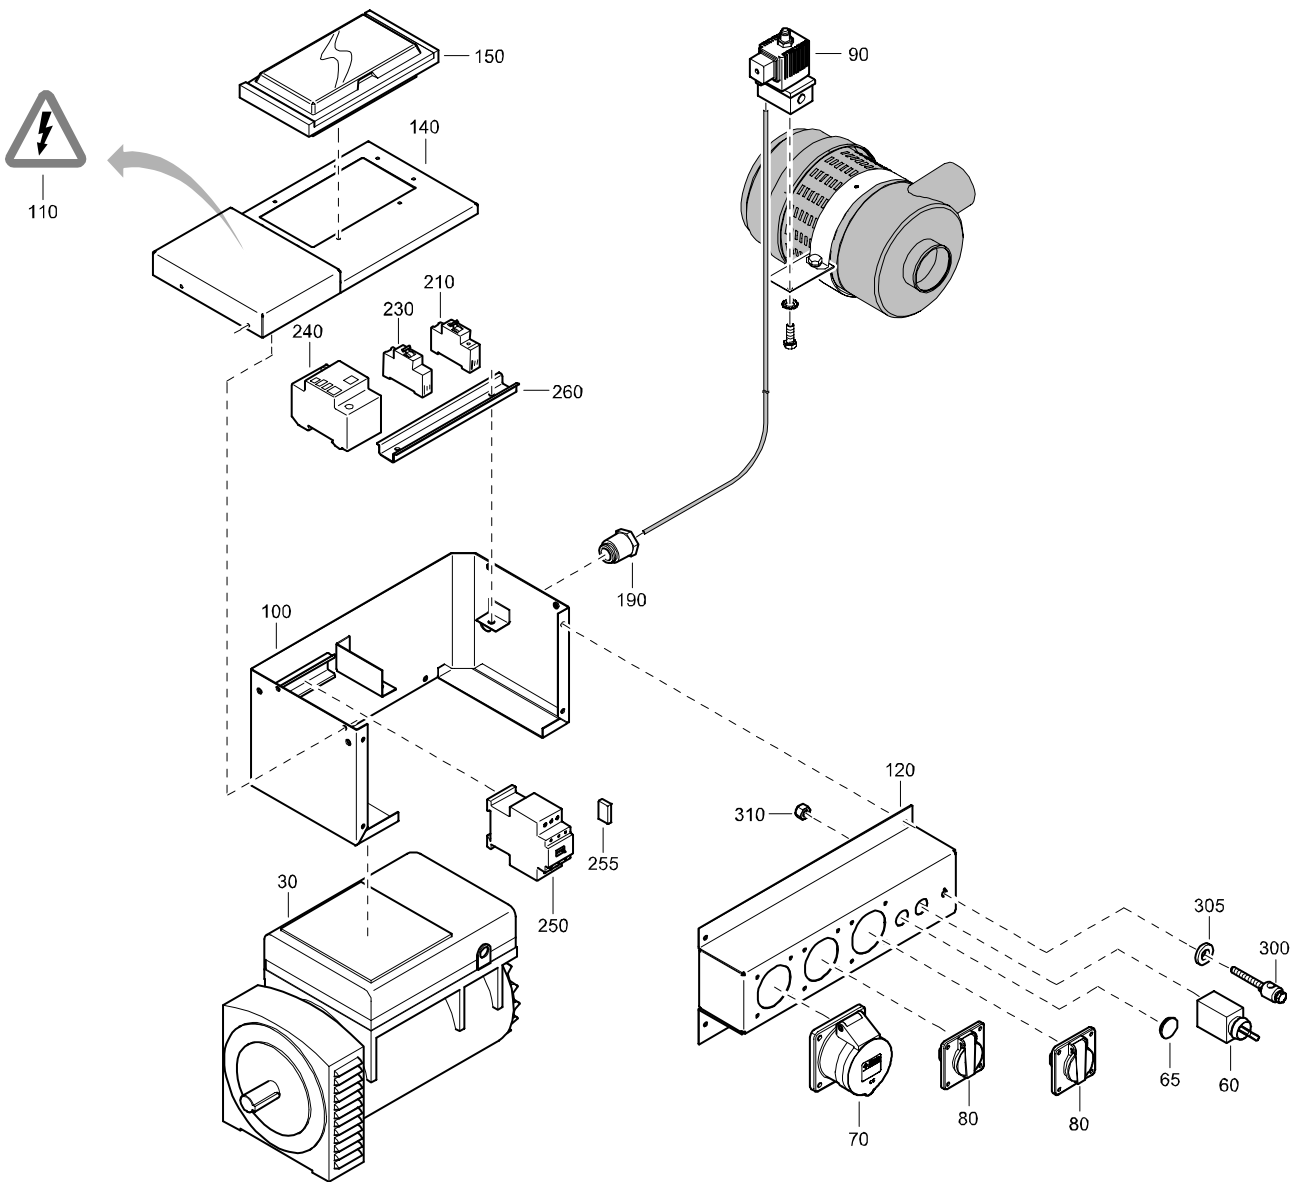

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3995 98	GENERATOR	(From page 162)				
•30	1604 7985 00	ALTERNATOR	1				
•60	1089 0263 46	KNOB	1				
•65	1089 0362 59	PLUG	1				
•70	1089 0662 12	SOCKET OUTLET	1				
•80	1089 0662 01	SOCKET OUTLET	2				
•90	1089 0621 44	SOLENOID VALVE	1				
•100	1604 3995 04	CUBICLE	1				
•110	1088 1001 01	WARNING MARK	1				
•120	1604 3996 04	PANEL	1				
•140	1604 3893 02	PLATE	1				
•150	1615 8429 00	DOOR	1				
•190	0698 6125 64	CONDUIT FITTING	1				
•210	1089 9472 19	CIRCUIT BREAKER	1				
•230	1089 9473 11	SHUNT TRIP COIL	1				
•240	1089 9450 01	INSUL.MON.RELAY	1				
•250	1089 9578 31	CONTACTOR	1				
•255	1089 9578 29	DIODE	1				
•260	0090 1400 02	RAIL	AR				
•300	1615 7280 00	TERMINAL	1				
•305	0300 0274 11	WASHER	1				
•310	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 
**GENERATOR
6KVA 230/400V**

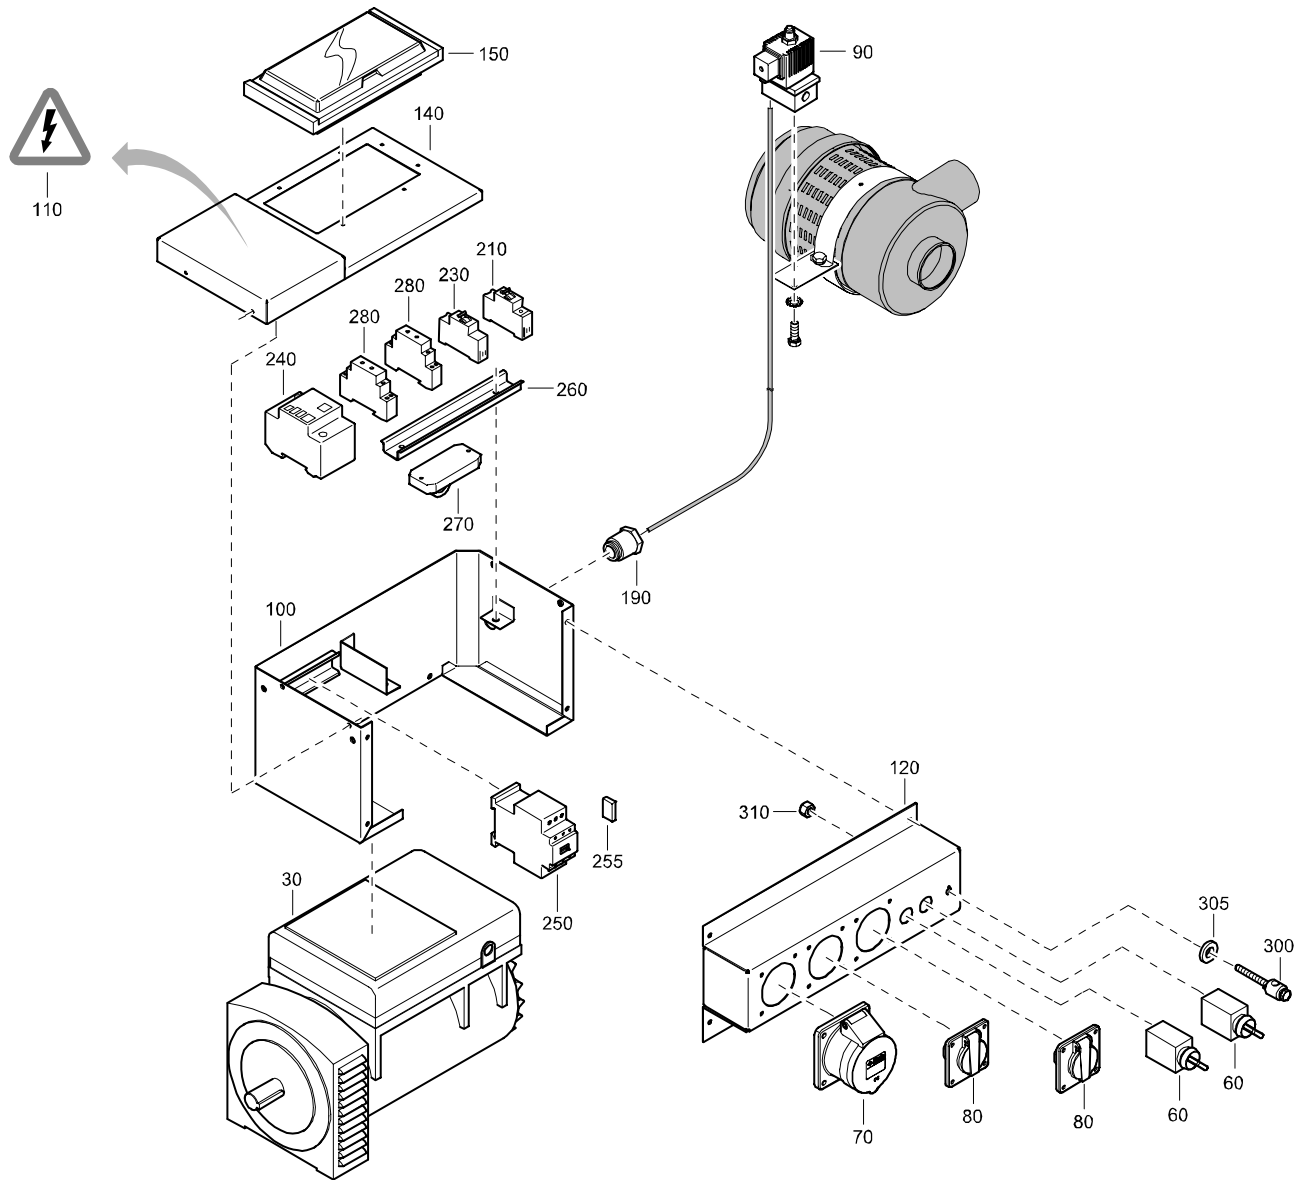

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3995 99	GENERATOR	(From page 156)				
•30	1604 7985 00	ALTERNATOR	1				
•60	1089 0263 46	KNOB	2				
•70	1089 0662 12	SOCKET OUTLET	1				
•80	1089 0662 01	SOCKET OUTLET	2				
•90	1089 0621 44	SOLENOID VALVE	1				
•100	1604 3995 04	CUBICLE	1				
•110	1088 1001 01	WARNING MARK	1				
•120	1604 3996 04	PANEL	1				
•140	1604 3893 02	PLATE	1				
•150	1615 8429 00	DOOR	1				
•190	0698 6125 64	CONDUIT FITTING	1				
•210	1089 9472 19	CIRCUIT BREAKER	1				
•230	1089 9473 11	SHUNT TRIP COIL	1				
•240	1089 9450 01	INSUL.MON.RELAY	1				
•250	1089 9578 31	CONTACTOR	1				
•255	1089 9578 29	DIODE	1				
•260	0090 1400 02	RAIL	AR				
•270	1604 5807 00	RELAY	1				
•280	1089 9537 01	TIME RELAY	2				
•300	1615 7280 00	TERMINAL	1				
•305	0300 0274 11	WASHER	1				
•310	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 
**GENERATOR
12 KVA 230 V**

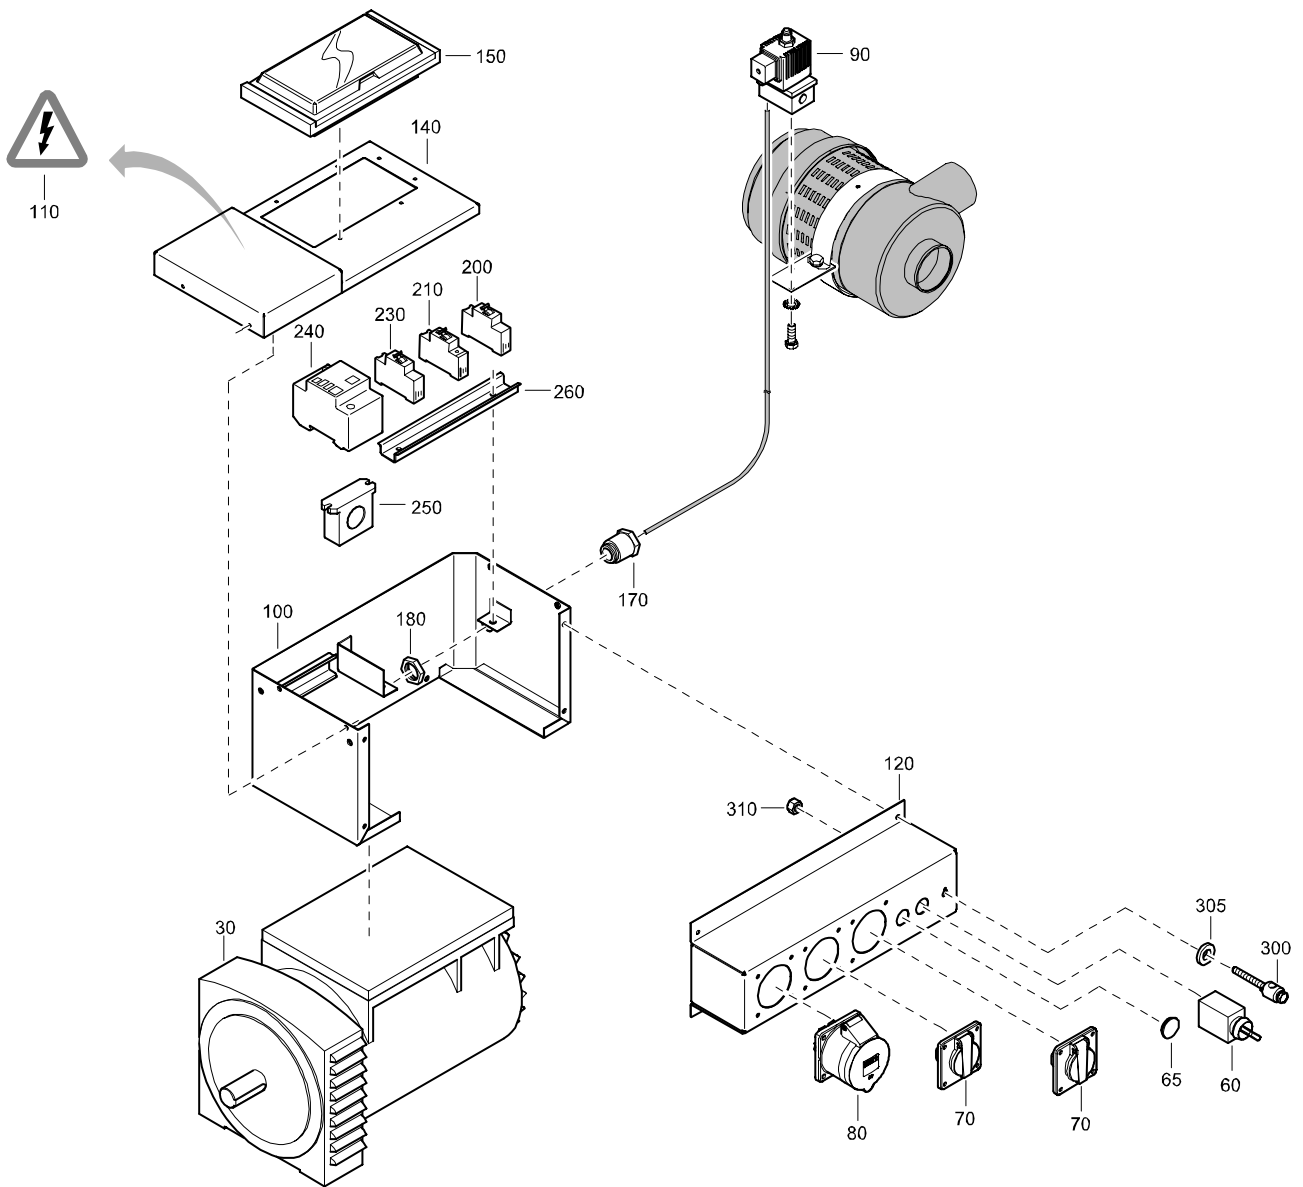

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3997 86	GENERATOR	(From page 170)				
•30	1604 7986 00	ALTERNATOR	1				
•60	1089 0263 46	KNOB	1				
•65	1089 0362 59	PLUG	1				
•70	1089 0662 01	SOCKET OUTLET	2				
•80	1089 0662 16	SOCKET OUTLET	1				
•90	1089 0621 44	SOLENOID VALVE	1				
•100	1604 3997 05	CUBICLE	1				
•110	1088 1001 01	WARNING MARK	1				
•120	1604 3998 06	PANEL	1				
•140	1604 3893 02	PLATE	1				
•150	1615 8429 00	DOOR	1				
•170	0698 6125 64	CONDUIT FITTING	1				
•180	1088 0302 04	NUT	1				
•200	1089 9472 03	CIRCUIT BREAKER	1				
•210	1089 9472 27	CIRCUIT BREAKER	1				
•230	1089 9473 11	SHUNT TRIP COIL	1				
•240	1089 9450 01	INSUL.MON.RELAY	1				
•250	1089 9578 07	CONTACTOR	1				
•260	0090 1400 02	RAIL	AR				
•300	1615 7280 00	TERMINAL	1				
•305	0300 0274 11	WASHER	1				
•310	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 
GENERATOR 12 KVA 230 / 400 V

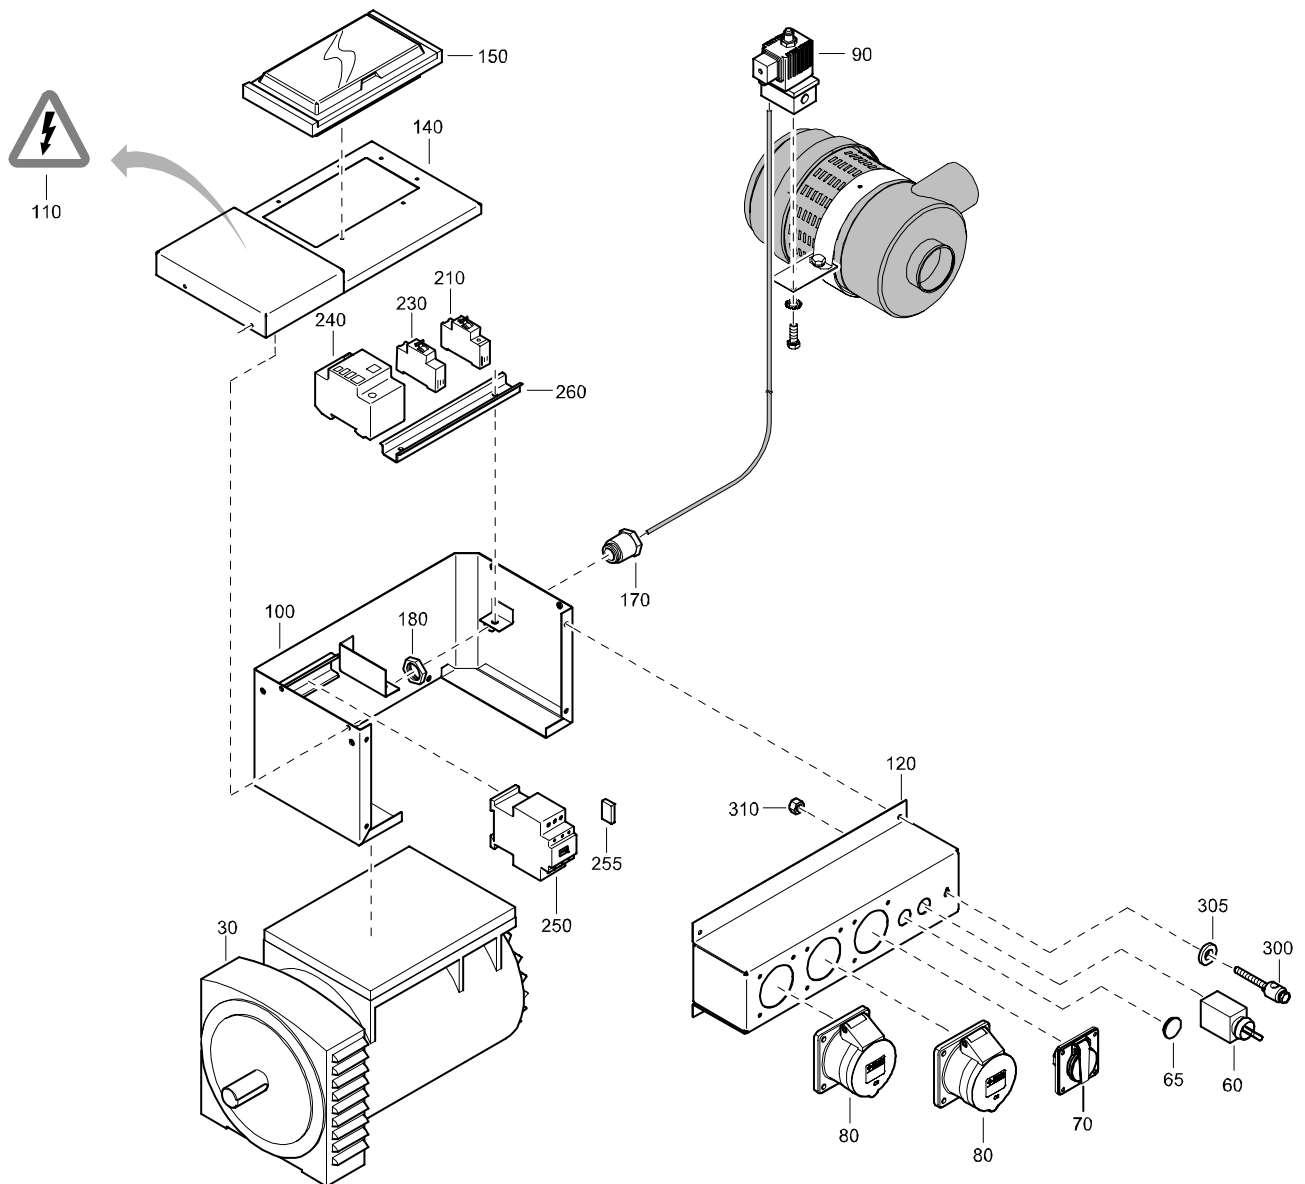

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3997 87	GENERATOR	(From page 168)				
•30	1604 7986 00	ALTERNATOR	1				
•60	1089 0263 46	KNOB	1				
•65	1089 0362 59	PLUG	1				
•70	1089 0662 01	SOCKET OUTLET	1				
•80	1089 0662 12	SOCKET OUTLET	2				
•90	1089 0621 44	SOLENOID VALVE	1				
•100	1604 3997 05	CUBICLE	1				
•110	1088 1001 01	WARNING MARK	1				
•120	1604 3998 06	PANEL	1				
•140	1604 3893 02	PLATE	1				
•150	1615 8429 00	DOOR	1				
•170	0698 6125 64	CONDUIT FITTING	1				
•180	1088 0302 04	NUT	1				
•210	1089 9472 08	CIRCUIT BREAKER	1				
•230	1089 9473 11	SHUNT TRIP COIL	1				
•240	1089 9450 01	INSUL.MON.RELAY	1				
•250	1089 9578 31	CONTACTOR	1				
•255	1089 9578 29	DIODE	1				
•260	0090 1400 02	RAIL	AR				
•300	1615 7280 00	TERMINAL	1				
•305	0300 0274 11	WASHER	1				
•310	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 
GENERATOR
12 KVA 230 / 400 V

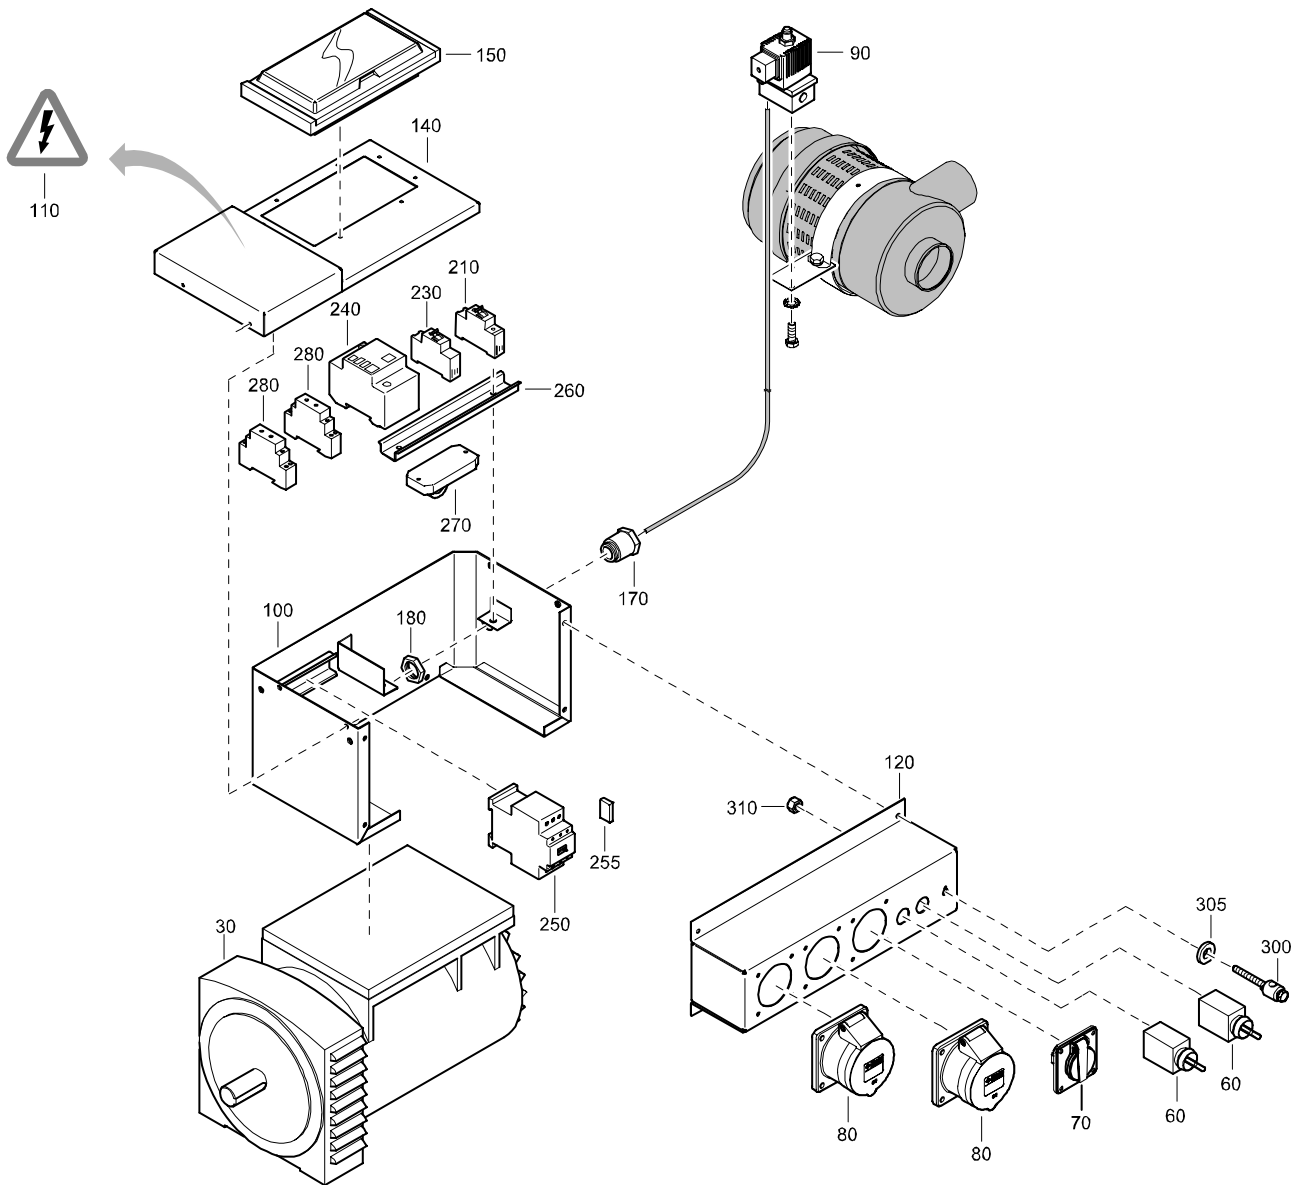

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3997 88	GENERATOR	(From page 160)				
•30	1604 7986 00	ALTERNATOR	1				
•60	1089 0263 46	KNOB	2				
•70	1089 0662 01	SOCKET OUTLET	1				
•80	1089 0662 12	SOCKET OUTLET	2				
•90	1089 0621 44	SOLENOID VALVE	1				
•100	1604 3997 05	CUBICLE	1				
•110	1088 1001 01	WARNING MARK	1				
•120	1604 3998 06	PANEL	1				
•140	1604 3893 02	PLATE	1				
•150	1615 8429 00	DOOR	1				
•170	0698 6125 64	CONDUIT FITTING	1				
•180	1088 0302 04	NUT	1				
•210	1089 9472 08	CIRCUIT BREAKER	1				
•230	1089 9473 11	SHUNT TRIP COIL	1				
•240	1089 9450 01	INSUL.MON.RELAY	1				
•250	1089 9578 31	CONTACTOR	1				
•255	1089 9578 29	DIODE	1				
•260	0090 1400 02	RAIL	AR				
•270	1604 5807 00	RELAY	1				
•280	1089 9537 01	TIME RELAY	2				
•300	1615 7280 00	TERMINAL	1				
•305	0300 0274 11	WASHER	1				
•310	0266 2110 00	HEXAGON NUT	1				

OPTIONS

 FRAME SPILLAGE FREE

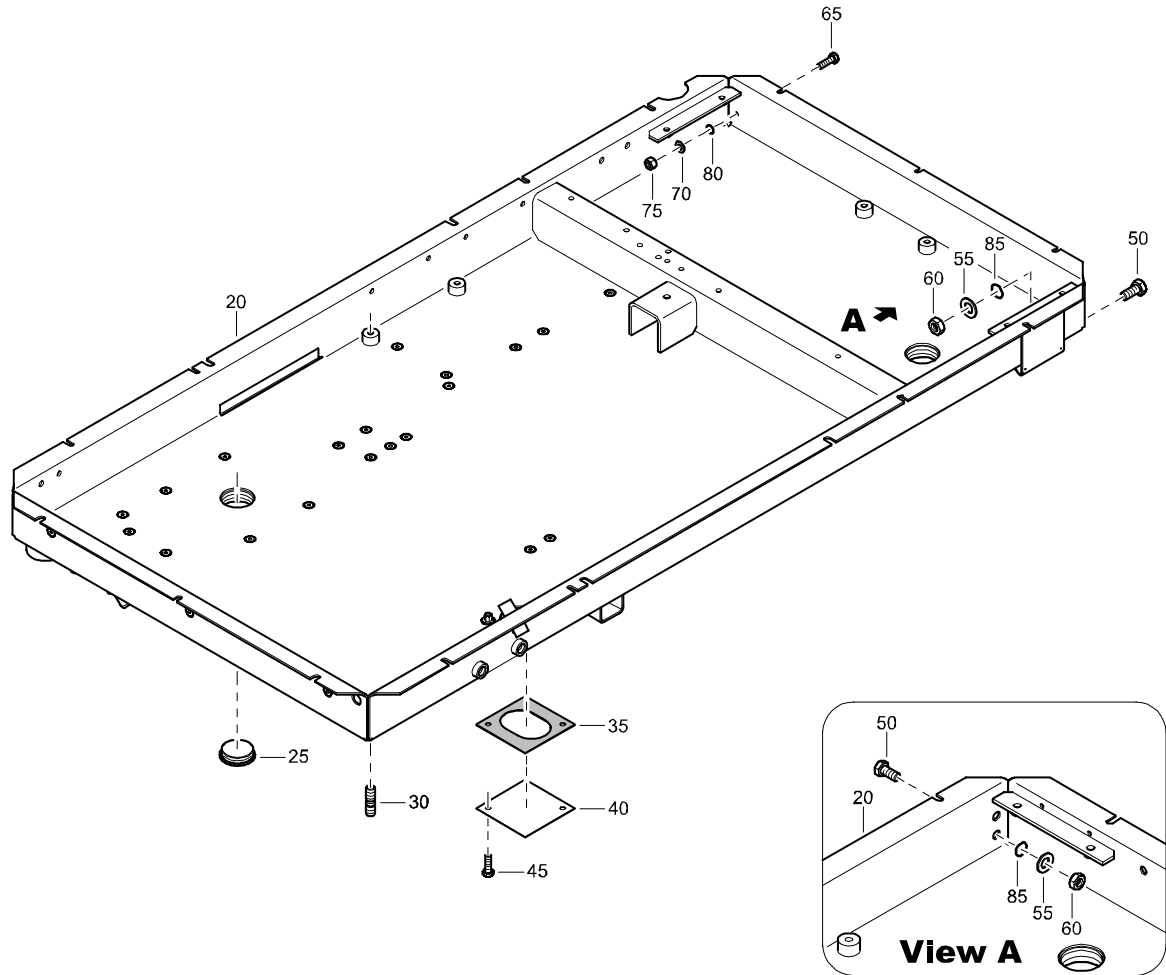


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5417 86	FRAME	(From page 112)				
•	20	1604 5417 35	FRAME				1
•	25	1613 2655 00	PLUG				3
•	30	0246 1956 57	STUD				4
•	35	1626 0162 00	SEAL				1
•	40	1604 5419 02	COVER				1
•	45	0147 1962 72	BOLT				2
•	50	0147 1400 03	HEX. HEAD SCREW				2
•	55	0301 2371 00	PLAIN WASHER				2
•	60	0266 2112 00	HEXAGON NUT				2
•	65	0147 1325 03	HEX. HEAD SCREW				5
•	70	0301 2335 00	PLAIN WASHER				5
•	75	0266 2110 00	HEXAGON NUT				5
•	80	0663 2104 63	O-RING				5
•	85	0663 2122 00	O-RING				2

OPTIONS


BUMPER ASSEMBLY

REF	PART NUMBER	DESIGNATION	QTY
-	1604 5445 84	BUMPER ASSY RS	(From page 130)
•20	1604 5445 31	BUMPER	1
•25	1604 2228 00	LIGHT (LEFT)	1
•30	1604 2229 00	LIGHT (RIGHT)	1
•35	1604 3857 01	WIRE HARNESS	1
•70	1088 1301 01	CABLE STRIP	3

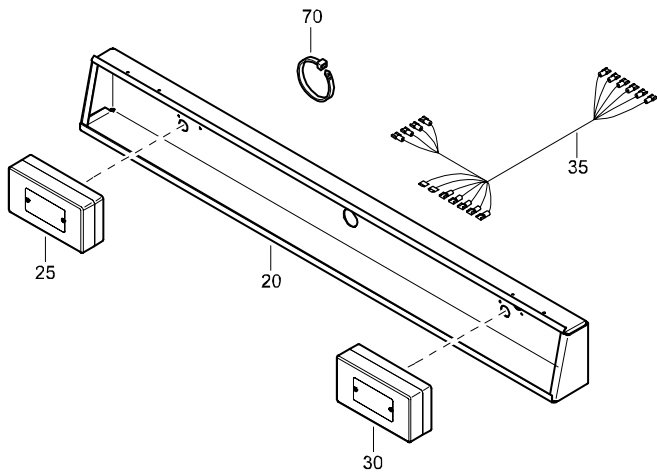 

1604 5445 84/00


REF	PART NUMBER	DESIGNATION	QTY
-	1604 5445 85	BUMPER	(From page 129, 131)
•20	1604 5445 31	BUMPER	1

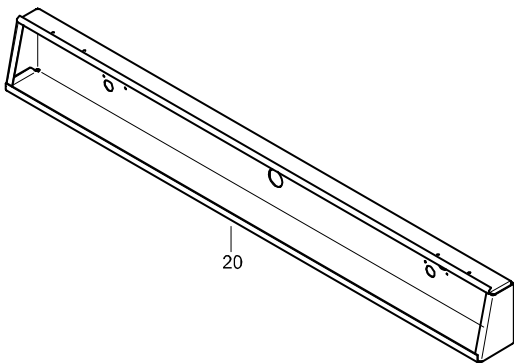 

1604 5445 85/00

OPTIONS

 
SIDE PANEL ASSEMBLY FOR COMPRESSOR WITHOUT GENERATOR KIT

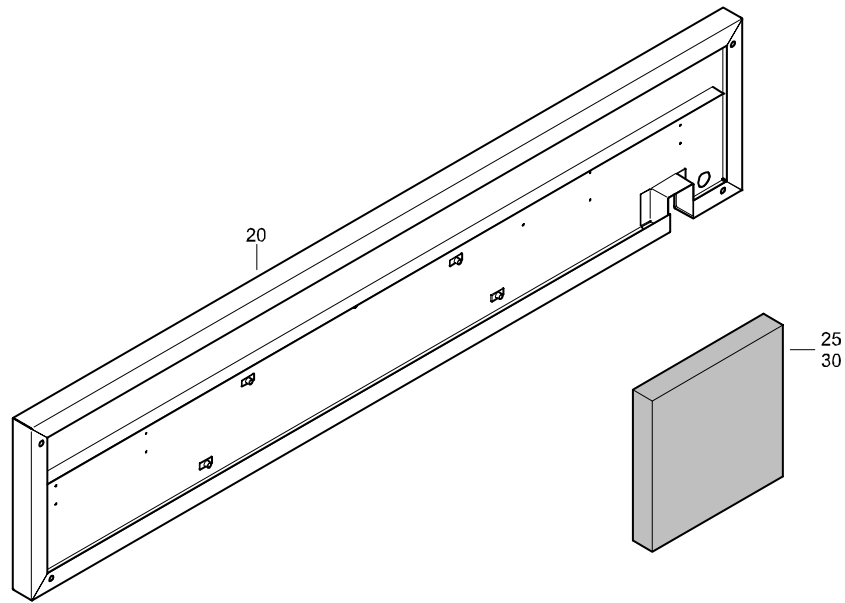

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5452 81	SIDE PANEL ASSY	(From page 170)				
•20	1604 5452 31	PANEL	1				
•25	-	SILENCING FOAM (50 mm)	1				
•30	-	SILENCING FOAM (50 mm)	1				
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

OPTIONS

 
REFLECTOR ASSEMBLY FOR ROAD LIGHT SYSTEM

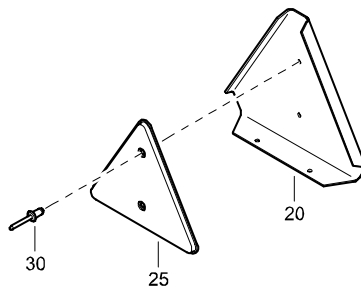

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5446 84	REFLECTOR ASSY	(From page 130)				
•20	1604 5446 02	BRACKET	1				
•25	1202 9402 01	REFLECTOR	1				
•30	0129 3177 00	BLIND RIVET	2				

OPTIONS

 
REFLECTOR ASSEMBLY FOR SEMI ROAD LIGHT SYSTEM

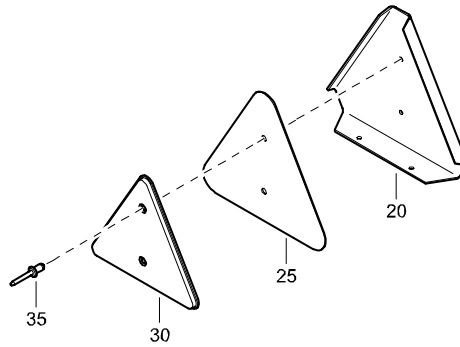

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5446 85	REFLECTOR ASSY	(From page 129)				
•20	1604 5446 02	BRACKET	1				
•25	1202 9666 00	PLATE	1				
•30	1202 9402 01	REFLECTOR	1				
•35	0129 3177 00	BLIND RIVET	2				

OPTIONS

 
SIDE PANEL ASSEMBLY FOR COMPRESSOR WITH GENERATOR KIT

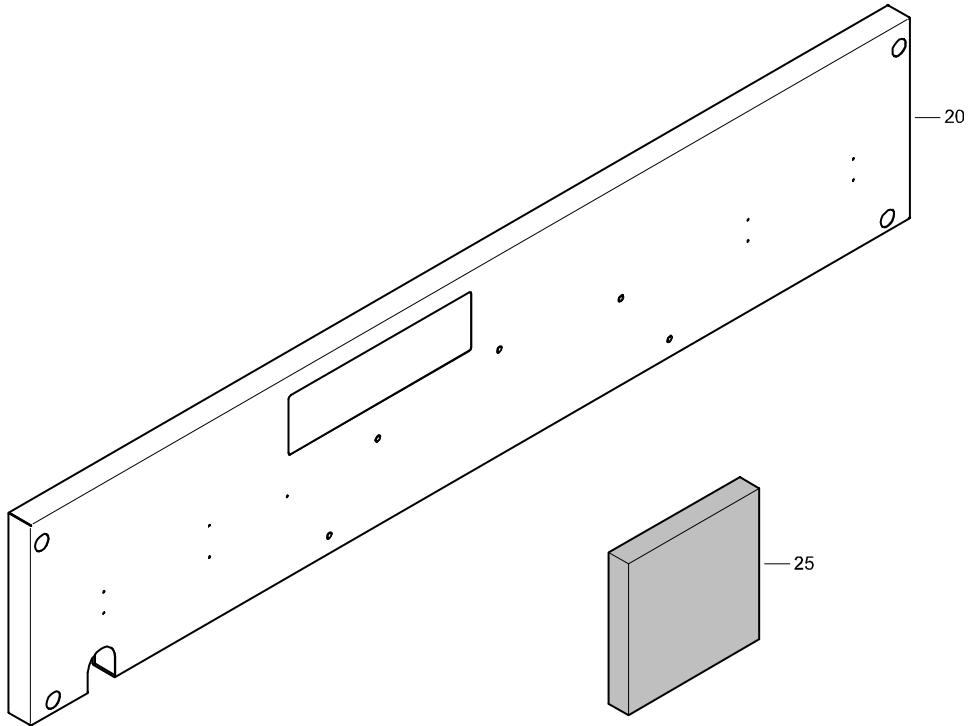

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 5458 81	SIDE PANEL ASSY <i>(From page 156, 158, 160, 162, 164, 166, 168, 170)</i>					
•20	1604 5458 01	SIDE PANEL	1				
•25	-	SILENCING FOAM (50 mm)	1				
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

OPTIONS

 
COLD WEATHER EQUIPMENT

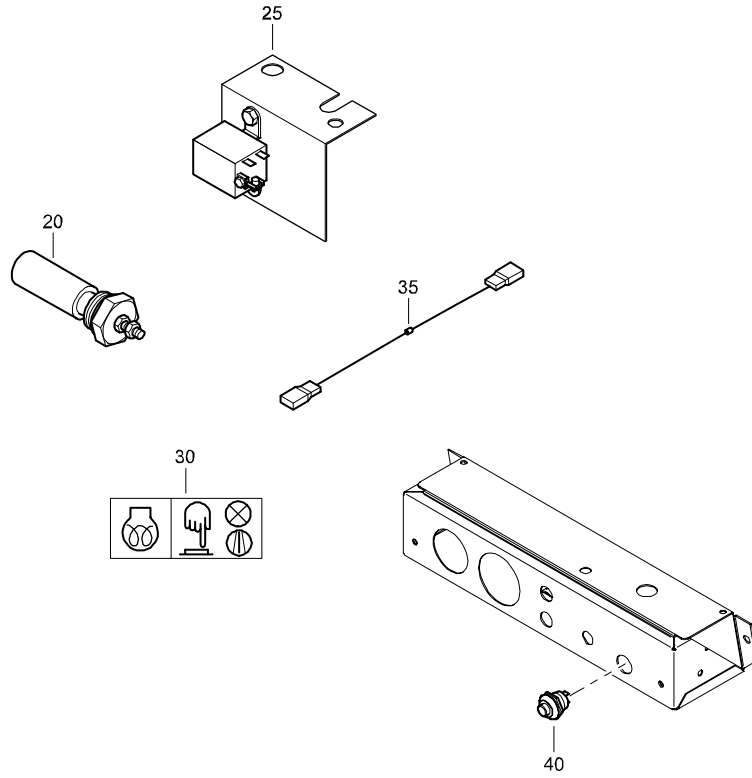

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1615 9107 84	COLD START ASSEMBLY (From page 172)					
•20	1310 0313 76	HEATER PLUG	1				
•25	1604 0856 81	RELAY ASSY (For details see page 196)	1				
•30	1079 9919 98	INFORMATION LABEL	1				
•35	1604 5836 00	WIRING	1				
•40	1089 9326 01	PUSH BUTTON	1				

OPTIONS

 
RELAY ASSEMBLY

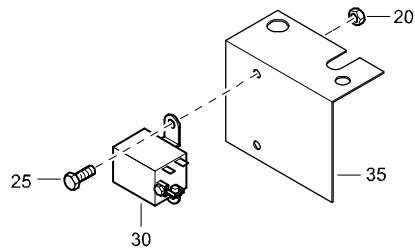

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 0856 81	RELAY ASSEMBLY	(From page 195)				
•20	0266 2107 00	HEXAGON NUT	2				
•25	0160 6059 00	SLOTTED SCREW	2				
•30	1089 0585 01	RELAY	1				
•35	1604 0856 00	PLATE	1				

OPTIONS

 
TOWBAR

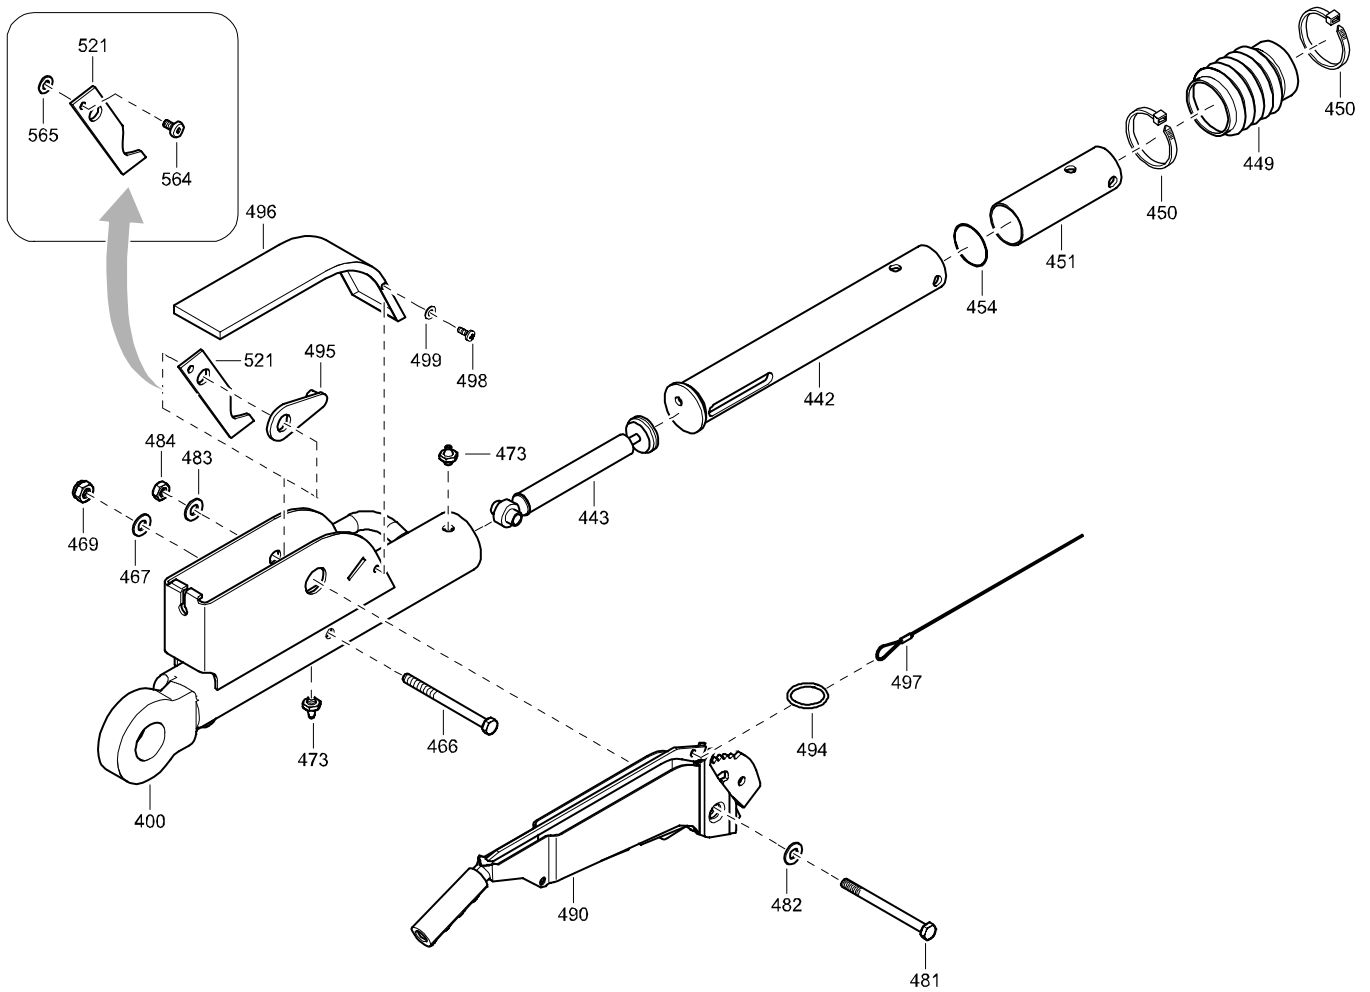

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	2914 2371 00	TOWBAR	(From page 179, 180)	•564	2914 2114 00	BOLT	1
•400	2914 2372 00	HOUSING	1	•565	2914 2115 00	CLASP	1
•442	1202 8621 00	EYE HOUSING	1				
•443	2914 2377 00	ABSORBER	1				
•449	2900 0448 00	BELLOWS	1				
•450	1088 1301 03	CABLE STRIP	2				
•451	2914 2348 00	BUSH	1				
•454	1202 9251 00	RING	1				
•466	1202 8619 00	BOLT	1				
•467	0301 2344 00	PLAIN WASHER					
•469	0291 1111 00	LOCKNUT	1				
•473	0544 2108 00	LUBRICATING NIPPLE	2				
•481	2914 2094 00	BOLT	1				
•482	2914 2199 00	WASHER	1				
•483	2914 2349 00	WASHER	1				
•484	2914 2176 00	LOCK NUT	1				
•490	2914 2096 00	LEVER	1				
•494	2900 0424 00	RING	1				
•495	2914 2098 00	LEVER	1				
•496	2914 2138 00	PLATE	1				
•497	2900 0814 00	CABLE	1				
•498	2914 2350 00	BOLT	2				
•499	2914 2351 00	WASHER	2				
•521	2914 2099 00	LEVER	1				

PARTS FROM SERVICE PAK

 (ACTUAL SIZE)

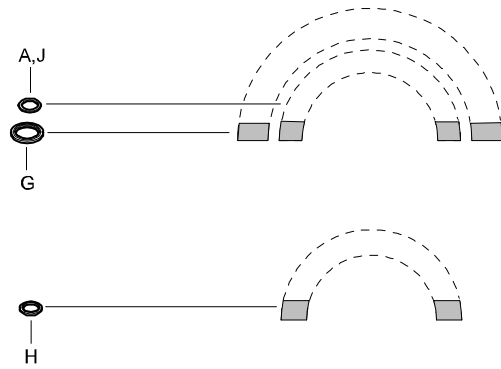

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	-	PARTS FROM SERVICE PAK	(From page 19)				
•A	-	FLAT GASKET					
•G	-	SEALING WASHER					
•H	-	SEALING WASHER					
•J	-	FLAT GASKET					



www.atlascopco.com

Printed in Belgium 10/2007 - 2955 1350 00