

Parts List
for Portable Generators
English

QAS 80 Pd

Engine 1104C-44TAG1

QAS 80 Pd

Engine 1104C-44TAG1

Parts Index	5
Warranty and Liability	7
Safety Precautions for Portable Generators	9
Ordering Spare Parts	13
Parts Lists	18

PARTS INDEX

PART	PAGE	PART	PAGE	PART	PAGE
A		CORNER ASSEMBLY	32, 40, 44, 45	FUEL TANK	42, 56, 85
ACTUATOR	31, 39	COSMOS	68, 69	FUSE	31, 39
AFR EYE	61	COSMOS MODULE	68, 69	FUSE HOLDER	31, 39
AIR FILTER	24	COSMOS WIRING	68, 69		
AIR FILTER ELEMENT	24	COUPLING	57	H	
AIR FILTER SAFETY CARTRIDGE	24	COVER	32, 34, 38, 64	HANDLE	49, 51, 52, 54
AIR INLET	24, 25	COVER COOLER	46	HEXAGON PLUG	23, 34
ALTERNATOR AND ACCESSORIES	29	CUBICLE	38, 39, 72, 73, 76, 77	HINGE	40, 43, 44, 45, 49, 51, 52, 54
AMPEREMETER	78, 79	CURRENT TRANSFORMER	31, 39	HOLDER (DOCUMENT)	32
ANTENNA	68, 69			HOSE	23, 70
ANTI VIBRATION PAD	29	D		HOSE CLAMP	24, 70
ASSEMBLY	58, 82	DIN EYE	60	HOSE CLIP	23, 34, 56, 58, 85
		DIODE	78, 79	HOUSE MARK	44, 45
B		DOOR	32, 49, 51, 52, 54	HOUSING	31, 39
BAFFLE	53	DOOR CUBICLE	32, 51, 72, 73, 75, 76, 77		
BAFFLE ASSEMBLY	32, 53			I	
BALL COUPLING	60	E		INDICATOR	24
BATTERY	38, 64	EARTH LEAKAGE RELAY	80	INFORMATION LABEL	41, 63
BATTERY CHARGER	62	EARTH RAIL ASSEMBLY	31, 39	INSULATION MONITORING RELAY	81
BATTERY SWITCH	64	EARTH RELAY	80	ISOLATOR	31, 39
BEAM	32, 47, 48	EDF TERMINAL BOARD	73	ITA EYE	61
BEAM ASSEMBLY	32	ELBOW	70, 82		
BODY	75	ELECTRICAL SYSTEM	38, 64, 65	K	
BODYWORK	32, 33	ENGINE AND ACCESSORIES	23	KEY	32
BULB	78, 79	ENGINE COOLANT	22	KEY SWITCH	39
		ENGINE OIL	20, 21		
C		EXHAUST COVER	28, 66	L	
CABLE	38, 64	EXHAUST SYSTEM	28, 66	LABEL	36
CABLE GLAND	70	EXTERNAL FUEL TANK CONNECTION	58, 59	LABEL NOISE	36
CABLE STRIP	23, 32, 57, 70	EYE	60, 61	LIFTING BEAM ASSEMBLY	47, 48
CAP	32			LINK	73
CATCH	40	F			
CIRCUIT BREAKER	31, 39, 75, 76, 77, 78, 79	FITTING	82	M	
CLAMP	24, 38, 55, 64, 84	FLANGE	55, 56, 84, 85	MALE CONTACT	78, 79
CLIP	41, 46	FRAME	42, 55, 84	MALE INSERT	78, 79
CONTACT	31, 39	FRAME AND MOUNTS	30, 42, 67, 83	MANIFOLD	56, 85
CONTROL PANEL	78, 79	FRAME ASSEMBLY	67, 83, 84	MARKINGS	36, 37
CONTROLLER	78, 79	FUEL HOSE	34, 56, 58, 85	MUFFLER	28, 66
CONVERTOR	68, 69	FUEL SYSTEM	34, 35		
COOLANT HEATER	70, 71	FUEL FILTER (WATERSEP.)	34		
COOLING SYSTEM	26, 27	FUEL TANK ASSEMBLY	85		
CORNER	44, 45				

PARTS INDEX

PART	PAGE	PART	PAGE	PART	PAGE
N		SERVICE PAK	18, 19		
NATO EYE	60	SHUNT TRIP COIL	31		
NECK FILLER	34	SOCKET	74, 78, 79		
		SOCKET OUTLET	74, 75, 76, 77		
O		SOCKET SET	75		
OIL PRESSURE SWITCH	38, 64	SPACER	47, 48		
OILPRESSURE SENSOR	38, 64	SPARK ARRESTER	66		
		SPINDLE LOCK	31, 39		
P		SUPPORT	24, 29, 32, 31, 38, 39, 42, 55, 64, 70, 82, 83, 84		
PANEL	32, 40, 43, 50, 72, 73, 75, 76, 77, 78, 79	SUPPORT ENGINE	42, 83		
PANEL ASSY. FUEL FUNNEL	32, 43	SWITCH	80		
PANELLIGHT	78, 79	SWITCH SELECTOR	31, 39		
PARCOOL	22	SWITCH TEMP	38, 64		
PAROIL	20, 21				
PIPE CLAMP	23, 66	T			
PIPE EXHAUST	28, 66	TAPE	72, 73, 75, 76, 77, 78, 79		
PLASTIC BAG	32, 57	TEE	70		
PLASTIC TUBE	70	TEMPERATURE SENSOR	38, 64		
PLATE	26, 31, 39, 55, 72, 73, 76, 77, 84	TERMINAL	72, 73, 75, 76, 77		
PLATE BACK	72, 73, 76, 77	TERMINAL BOARD	72, 73, 75, 76, 77		
PLATE BOTTOM	55, 84	TORUS	80		
POTMETER	39	TOWING EYE	60, 61		
Q		U			
QUICK COUPLING	57, 82	UNDERCARRIAGE	63		
R		V			
RAIL	31, 39, 62, 80	VALVE	70, 82		
RELAY	38, 64, 78, 79	VALVE ASSEMBLY	82		
RESISTOR	78, 79	VIBR .DAMPER	29		
ROOF	41, 46	VOLTAGE SWITCH	78, 79		
ROOF ALTERNATOR	32, 41	VOLTMETER	78, 79		
ROOF ENGINE	32, 46				
RUBBER BUFFER	23	W			
RUBBER RING	43	WARNING LABEL	36, 63		
		WIRE HARNESS	38, 39, 64		
S		WIRING	68, 69		
SELECTOR SWITCH	78, 79				
SENSOR LEVEL	30, 67				
SERVICE LABEL	36				

INSTRUCTION MANUAL

Warranty and Liability Limitation

Use only authorized parts.

Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.

The manufacturer does not accept any liability for any damage arising from modifications, additions or conversions made without the manufacturer's approval in writing.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

Any unauthorized use or copying of the contents or any part thereof is prohibited.

This applies in particular to trademarks, model denominations, part numbers and drawings

Garantie- en aansprakelijkheidsbepalingen

Gebruik alleen originele onderdelen.

Beschadigingen of defecten die het gevolg zijn van het gebruik van niet originele onderdelen vallen niet onder garantie of productaansprakelijkheid.

De producent is niet aansprakelijk voor enige schade veroorzaakt door modificatie, toevoeging of ombouw, gemaakt zonder de schriftelijke toestemming van de fabrikant.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, België.

Het is niet toegestaan om zonder toestemming de inhoud geheel of gedeeltelijk te kopiëren of anderszins te gebruiken.

Dit betreft vooral trademarks, modelbenamingen, onderdeelnummers en tekeningen.

Limitation de garantie et de responsabilité

Utiliser uniquement les pièces homologuées.

Tout dommage ou mauvais fonctionnement dû à l'utilisation de pièces non homologuées n'est pas couvert par la garantie ou la responsabilité des produits défectueux. Le fabricant décline toute responsabilité en cas de dommage faisant suite à des modifications, des ajouts ou des conversions effectués sans l'accord écrit du fabricant.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgique.

Toute utilisation ou copie du contenu, ou d'une partie de celui-ci, non autorisée est interdite.

Cette interdiction s'applique en particulier aux marques de commerce, aux dénominations des modèles, aux numéros des pièces et aux schémas.

Garantie- und Haftungseinschränkungen

Nur zugelassene Teile verwenden.

Jede Beschädigung oder Fehlfunktion, die durch die Verwendung von nicht zugelassenen Teilen verursacht wurde, ist nicht durch die Garantie oder Produkthaftung abgedeckt.

Der Hersteller übernimmt keine Haftung für Schäden, die durch Modifizierungen, Ergänzungen oder Funktionsänderungen entstehen, die ohne schriftliche Zustimmung des Herstellers erfolgt sind.

Urheberrecht 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.

Jede nicht genehmigte Verwendung oder Kopie des Inhaltes oder von Teilen ist untersagt.

Das bezieht sich im Einzelnen auf Warenzeichen, Modellbezeichnungen, Teilenummern und Zeichnungen

Limitación de garantía y responsabilidad

Use sólo piezas autorizadas.

La garantía o responsabilidad del producto no cubre ningún daño o funcionamiento defectuoso provocado por el uso de piezas no autorizadas.

El fabricante no acepta ninguna responsabilidad por los daños provocados por modificaciones, adiciones o conversiones realizadas sin la aprobación por escrito del fabricante.

Derechos de reproducción 2004, Atlas Copco Airpower n.v., Amberes, Bélgica.

Está prohibida toda utilización o reproducción total o parcial no autorizada de estos contenidos,

en especial de las marcas registradas, denominaciones de modelos, números de piezas y planos

Begränsningar av garanti och ansvarsskyldighet

Använd endast godkända delar.

Den skada eller funktionsoduglighet som förorsakats av att ej godkända delar har använts, täcks inte av garantin eller produktansvaret.

Tillverkaren accepterar ingen ansvarsskyldighet för skador som uppstår efter att ändringar, tillägg eller ombyggnader gjorts utan skriftligt tillstånd från tillverkaren.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.

Ej auktoriserad användning eller kopiering av innehållet, eller delar av det, är förbjuden.

Detta gäller speciellt varumärken, modellbeteckningar, reservdelnummer och ritningar.

Limitazione di Garanzia e di Responsabilità

Usare solo componenti autorizzati.

Qualsiasi danno o malfunzione causati dall'uso di componenti non autorizzati non è coperto dalla Garanzia o dalla Responsabilità sul Prodotto.

Il fabbricante non accetta alcuna responsabilità per danni derivanti da modifiche, aggiunte o trasformazioni effettuate senza l'approvazione scritta del fabbricante.

Copyright 2004, Atlas Copco Airpower n.v., Anversa, Belgio.

Sono vietati ogni uso o copia non autorizzati del contenuto o di qualsiasi parte dello stesso.

Ciò si applica in particolare ai marchi, alle denominazioni dei modelli, ai numeri dei componenti ed ai disegni

Garanti- og ansvarsbegrænsning

Brug kun tilladte reservedele.

Enhver skade eller fejlfunktion, forårsaget af brug af ikke tilladte reservedele, omfattes ikke af garantien eller produktansvaret.

Fabrikanten kan ikke drages til ansvar for nogen skade som følge af ændringer, udvidelser eller ombygninger, der er blevet udført uden fabrikantens skriftlige samtykke.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.

Enhver uautoriseret brug eller kopiering af indholdet eller dele deraf er forbudt.

Dette gælder især varemærker, modelbenævnelser, delnumre og tegninger.

Εγγύηση και Περιορισμός Ευθύνης

Χρησιμοποιήστε μόνο εγκεκριμένα εξαρτήματα.

Οποιαδήποτε ζημιά ή δυσλειτουργία προκληθεί από τη χρήση μη εγκεκριμένων εξαρτημάτων δεν καλύπτεται από την εγγύηση και την ευθύνη για το προϊόν.

Ο κατασκευαστής δεν αποδέχεται καμία ευθύνη για ζημιές που προκύπτουν από τροποποιήσεις, προσθήκες ή μετατροπές που έγιναν χωρίς τη γραπτή έγκριση του κατασκευαστή.

Copyright 2004, Atlas Copco Airpower n.v., Αμβέρσα, Βέλγιο.

Απαγορεύεται οποιαδήποτε χρήση ή αντιγραφή του περιεχόμενου ή οποιουδήποτε τμήματος του παρόντος χωρίς εξουσιοδότηση.

Αυτό ισχύει συγκεκριμένα για εμπορικά σήματα, ονομασίες μοντέλων, κωδικούς εξαρτημάτων και σχέδια.

Garanti og ansvarsbegrænsning

Brug kun autoriserede deler.

Enhver skade eller funktionsfejl som skyldes brug af uautoriserede deler dækkes ikke af garanti eller produktansvar.

Fabrikanten aksepterer intet ansvar for nogen skade som opstår på grund af modifikationer, tilføjelser eller forandringer som er gjort uden fabrikantens skriftlige tilladelse.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgia.

All uautoriseret brug eller kopiering af indholdet eller en del af det er forbudt.

Dette gælder særlig varemærker, modellbenevnelser, delenumre og tegninger.

Takuun ja vastuuvollisuuden rajoitus

Käytä vain valmistajan hyväksymiä varaosia.

Takuu ja tuotevastuu eivät kata vahinkoja tai toimintahäiriöitä, joiden syynä on muiden kuin hyväksytyjen varaosien käyttö.

Valmistaja ei vastaa vahingoista, jotka aiheutuvat ilman valmistajan kirjallista lupaa tehdyistä muutoksista tai lisäyksistä.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgia.

Sisällön osittainenkin käyttö tai kopiointi ilman lupaa on kielletty.

Tämä koskee erityisesti tavaramerkkejä, mallien nimiä, osanumeroita ja piirustuksia.

Garantijas un atbildības ierobežojumi

Izmantot tikai ieteiktās rezerves daļas.

Īdi garantija nesedz bojājumus vai disfunkciju, kuri ir radušies neatļautu rezerves daļu izmantošanas rezultātā.

Raģotājs nepieņem pretenzijas par bojājumiem, kas izriet no modifikācijām, papildinājumiem vai pārveidojumiem bez raģotāja rakstiskas piekrišanas.

Autortiesības 2004, Atlas Copco Airpower n.v., Antverpene, Beļģija.

Jebkura neatļautā īdi satura izmantošana vai kopēšana ir aizliegta. Tas konkrēti attiecas uz tirdzniecības markām, modeļu denominācijām, daļu numuriem un rāšņumiem.

QAS 80 Pd

Limites de Garantia e Responsabilidade

Utilize apenas peças autorizadas.

Avarias ou defeitos de funcionamento que sejam causados pelo uso de sobresselentes ou componentes não autorizados não serão cobertos pela Garantia ou pela Responsabilidade de Produto.

O fabricante não aceita qualquer responsabilidade por quaisquer danos resultantes de modificações, adições ou conversões efectuadas sem a aprovação escrita do fabricante.

Copyright 2004, Atlas Copco Airpower n.v., Antuérpia, Bélgica.

Qualquer uso não autorizado ou cópia do conteúdo ou de qualquer parte dele é proibida.

Isto aplica-se em particular a marcas registadas, denominações de modelos, números de peças e desenhos.

有限担保和责任

只允许使用经认可的零件。

因使用未经认可的零件而导致的任何损坏或故障不在本担保或产品责任所保障的范围之内。

未经制造商书面许可，制造商概不负责因擅自对设备进行改动、添加附件或改造而导致的设备损坏。

版权 2004，比利时安特卫普 Atlas Copco Airpower n.v.。

未经许可，禁止使用或复制本手册中所含的全部或任何一部分内容。

本公告特别适用于本手册所含的商标、型号名称、零件代号和图纸。

A garancia és felelősség korlátozása

Csak jóváhagyott alkatrészeket használjon!

A nem jóváhagyott alkatrészek használatából adódó sérülésekre és üzembavarra nem terjed ki a garancia és a termékfelelősség.

A gyártó semminemű felelősséget nem vállal a gyártó írásos jóváhagyása nélkül végzett bármilyen módosításokból, kiegészítésekéből vagy átalakításokból adódó sérülésekért.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

A kézikönyv tartalma vagy annak egy részének engedély nélküli felhasználása vagy másolása tilos.
Ez vonatkozik különösen a védjegyekre, a típusjelölésekre, cikkszámokra és rajzokra.

Záruka a obmedzenia zodpovednosti výrobcu

Používajte len schválené súčiastky.

Akákoľvek škoda alebo porucha spôsobená použitím neschválených súčiastok nie je zahrnutá v záruke ani zodpovednosti výrobcu za škodu.

Výrobca nepripúšťa žiadnu zodpovednosť za akékoľvek škody vzniknuté úpravou, pridaním alebo prerobením, ktoré boli vykonané bez predchádzajúceho písomného súhlasu výrobcu.

Autorské práva 2004, Atlas Copco Airpower n.v., Antverpy, Belgicko.

Akákoľvek neoprávnené použitie alebo kopírovanie obsahu, alebo jeho časti je zakázané.

Toto sa vzťahuje najmä na obchodné značky, modelové označenia, čísla súčiastok a nákresy.

Garantii ja piiratud vastutus

Kasutage ainult valmistaja poolt aktsepteeritud varuosi.

Mis tahes vigastus või rike, mille on põhjustanud valmistaja poolt aktsepteerimata varuosa kasutamine, ei kuulu toote garantii või tootja vastutuse alla.

Valmistaja ei aktsepteeri ühtegi riket, mis on tekkinud toote modifitseerimisest, lisandustest või ümberehitamisest, mida valmistaja ei ole kirjallikult heaks kiitnud.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

Käesoleva juhendi mistahes loata kasutamine või kopeerimine on keelatud.

See kehtib nii kaubamärkide, mudeli nimetuste, varuosade numbrite kui ka jooniste kohta.

Ограничение гарантии и ответственности

Используйте компоненты только авторизованных поставщиков.

Не распространяется гарантия и ответственность за продукцию при любых повреждениях или неисправностях в результате использования неавторизованных компонентов.

Производитель не несет никакой ответственности за любые повреждения, возникшие в результате модификации, дополнения или изменения, выполненные без письменного утверждения производителя.

Copyright 2004, Atlas Copco Airpower n.v., Антверпен, Бельгия.

Запрещается любое несанкционированное использование или копирование содержания этих материалов или их части.
В особенности это относится к торговым маркам, обозначениям моделей, номерам деталей и чертежам.

Gwarancja i ograniczenie odpowiedzialności

Stosować jedynie oryginalne części zamienne.

Jakiegokolwiek uszkodzenia lub niesprawności spowodowane stosowaniem niezaaprobowanych części zamiennych nie są objęte gwarancją lub odpowiedzialnością za produkt.

Producent nie będzie ponosił żadnej odpowiedzialności za jakiegokolwiek szkody spowodowane modyfikacjami, dodatkami lub zmianami wykonanymi bez pisemnej zgody producenta.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpia, Belgia.

Wszelkie stosowanie lub kopiowanie zawartości lub jakiegokolwiek części publikacji bez zezwolenia jest zabronione.

Dotyczy to szczególnie znaków handlowych, oznaczeń modeli, numerów części oraz rysunków.

Omezení záruky a odpovědnosti

Používejte pouze takové součásti, které jsou schválené výrobcem zařízení. Jakékoliv poškození nebo závady způsobené použitím součástí, které nebyly schválené výrobcem zařízení, nejsou kryty zárukou, nebo odpovědností za výrobek.

Výrobce nepřijímá žádnou odpovědnost za jakékoliv škody, způsobené modifikacemi, doplňky nebo přestavbami zařízení provedenými bez předchozího písemného svolení.

Copyright 2004, Atlas Copco Airpower n.v., Antverpy, Belgie.

Jakékoliv neoprávněné použití nebo kopírování obsahu tohoto dokumentu nebo kterékoliv jeho části je zakázáno.

Toto platí obzvláště pro obchodní známky, označení modelů, čísla součástí a výkresovou dokumentaci.

Garancijski pogoji in omejitve

Uporabljajte samo odobrene dele.

Garancija proizvajalca ni veljavna pri poškodbah ali motnjah v delovanju, ki so posledica uporabe neodobrenih delov.

Proizvajalec ne prevzema nikakršne odgovornosti za poškodbe, ki so nastale zaradi sprememb, dodatkov ali prilagoditev na izdelku, ki so bile izvedene brez pisne odobritve proizvajalca.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

Brez pisnega dovoljenja ni dovoljeno uporabljati ali razmnoževati nobenega dela dokumenta.

To velja še posebej za blagovne znamke, označbe modelov, številke izdelkov in risbe.

Garantijos ir atsakomybės galiojimas

Naudokite tik originalias dalis.

Garantija nebus taikoma tuo atveju, jeigu įala ar sutrikimas atsiranda naudojant neoriginalias dalis.

Gamintojas neprisiima jokios atsakomybės dėl įalos, susijusios su modifikacija, papildymu ar perdirbimu, atliktu be raštiško gamintojo sutikimo.

Autorstēs teisē 2004, “Atlas Copco Airpower n.v.”, Antverpenas, Belgija.

Neteisētas viso teksto ar kurios nors jo dalies panaudojimas ar kopijavimas yra draudpiamas.

Visø pirma ūi sailyga taikoma prekiniams ōenklams, modeliø pavadinimams, daliø numeriams ir brēpijimams.

SAFETY PRECAUTIONS FOR PORTABLE GENERATORS

To be read attentively and acted accordingly before towing, lifting, operating, performing maintenance or repairing the generator

0.1 INTRODUCTION

The policy of Atlas Copco is to provide the users of their equipment with safe, reliable and efficient products. Factors taken into account are among others:

- the intended and predictable future use of the products, and the environments in which they are expected to operate,
- applicable rules, codes and regulations,
- the expected useful product life, assuming proper service and maintenance,
- providing the manual with up-to-date information.

Before handling any product, take time to read the relevant instruction manual. Besides giving detailed operating instructions, it also gives specific information about safety, preventive maintenance, etc. Keep the manual always at the unit location, easy accessible to the operating personnel.

See also the safety precautions of the engine and possible other equipment, which are separately sent along or are mentioned on the equipment or parts of the unit.

These safety precautions are general and some statements will therefore not always apply to a particular unit.

Only people that have the right skills should be allowed to operate, adjust, perform maintenance or repair on Atlas Copco equipment. It is the responsibility of management to appoint operators with the appropriate training and skill for each category of job.

Skill level 1: Operator

An operator is trained in all aspects of operating the unit with the push-buttons, and is trained to know the safety aspects.

Skill level 2: Mechanical technician

A mechanical technician is trained to operate the unit the same as the operator. In addition, the mechanical technician is also trained to perform maintenance and repair, as described in the instruction manual, and is allowed to change settings of the control and safety system. A mechanical technician does not work on live electrical components.

Skill level 3: Electrical technician

An electrical technician is trained and has the same qualifications as both the operator and the mechanical technician. In addition, the electrical technician may carry out electrical repairs within the various enclosures of the unit. This includes work on live electrical components.

Skill level 4: Specialist from the manufacturer

This is a skilled specialist sent by the manufacturer or its agent to perform complex repairs or modifications to the equipment.

In general it is recommended that not more than two people operate the unit, more operators could lead to unsafe operating conditions. Take necessary steps to keep unauthorized persons away from the unit and

eliminate all possible sources of danger at the unit.

When handling, operating, overhauling and/or performing maintenance or repair on Atlas Copco equipment, the mechanics are expected to use safe engineering practices and to observe all relevant local safety requirements and ordinances. The following list is a reminder of special safety directives and precautions mainly applicable to Atlas Copco equipment.

Neglecting the safety precautions may endanger people as well as environment and machinery:

- endanger people due to electrical, mechanical or chemical influences,
- endanger the environment due to leakage of oil, solvents or other substances,
- endanger the machinery due to function failures.

All responsibility for any damage or injury resulting from neglecting these precautions or by non-observance of ordinary caution and due care required in handling, operating, maintenance or repair, also if not expressly mentioned in this instruction manual, is disclaimed by Atlas Copco.

The manufacturer does not accept any liability for any damage arising from the use of non-original parts and for modifications, additions or conversions made without the manufacturer's approval in writing.

If any statement in this manual does not comply with local legislation, the stricter of the two shall be applied.

Statements in these safety precautions should not be interpreted as suggestions, recommendations or inducements that it should be used in violation of any applicable laws or regulations.

0.2 GENERAL SAFETY PRECAUTIONS

- 1 The owner is responsible for maintaining the unit in a safe operating condition. Unit parts and accessories must be replaced if missing or unsuitable for safe operation.
- 2 The supervisor, or the responsible person, shall at all times make sure that all instructions regarding machinery and equipment operation and maintenance are strictly followed and that the machines with all accessories and safety devices, as well as the consuming devices, are in good repair, free of abnormal wear or abuse, and are not tampered with.
- 3 Whenever there is an indication or any suspicion that an internal part of a machine is overheated, the machine shall be stopped but no inspection covers shall be opened before sufficient cooling time has elapsed; this to avoid the risk of spontaneous ignition of oil vapour when air is admitted.
- 4 Normal ratings (pressures, temperatures, speeds, etc.) shall be durably marked.
- 5 Operate the unit only for the intended purpose and within its rated

limits (pressure, temperature, speeds, etc.).

- 6 The machinery and equipment shall be kept clean, i.e. as free as possible from oil, dust or other deposits.
- 7 To prevent an increase in working temperature, inspect and clean heat transfer surfaces (cooler fins, intercoolers, water jackets, etc.) regularly. See the maintenance schedule.
- 8 All regulating and safety devices shall be maintained with due care to ensure that they function properly. They may not be put out of action.
- 9 Pressure and temperature gauges shall be checked regularly with regard to their accuracy. They shall be replaced whenever outside acceptable tolerances.
- 10 Safety devices shall be tested as described in the maintenance schedule of the instruction manual to determine that they are in good operating condition.
- 11 Mind the markings and information labels on the unit.
- 12 In the event the safety labels are damaged or destroyed, they must be replaced to ensure operator safety.
- 13 Keep the work area neat. Lack of order will increase the risk of accidents.
- 14 When working on the unit, wear safety clothing. Depending on the kind of activities these are: safety glasses, ear protection, safety helmet (including visor), safety gloves, protective clothing, safety shoes. Do not wear the hair long and loose (protect long hair with a hairnet), or wear loose clothing or jewelry.
- 15 Take precautions against fire. Handle fuel, oil and anti-freeze with care because they are inflammable substances. Do not smoke or approach with naked flame when handling such substances. Keep a fire-extinguisher in the vicinity.
- 16a **Portable generators (with earthing pin):**
Earth the generator as well as the load properly.
- 16b **Portable generators IT:**
Note: This generator is built to supply a sheer alternating current IT network.
Earth the load properly.

0.3 SAFETY DURING TRANSPORT AND INSTALLATION

To lift a unit, all loose or pivoting parts, e.g. doors and towbar, shall first be securely fastened.

Do not attach cables, chains or ropes directly to the lifting eye; apply a crane hook or lifting shackle meeting local safety regulations. Never allow sharp bends in lifting cables, chains or ropes.

Helicopter lifting is not allowed.

It is strictly forbidden to dwell or stay in the risk zone under a lifted load. Never lift the unit over people or residential areas. Lifting acceleration and retardation shall be kept within safe limits.

- 1 Before towing the unit:
 - check the towbar, the brake system and the towing eye. Also check the coupling of the towing vehicle,
 - check the towing and brake capability of the towing vehicle,
 - check that the towbar, jockey wheel or stand leg is safely locked in the raised position,
 - ascertain that the towing eye can swivel freely on the hook,
 - check that the wheels are secure and that the tyres are in good condition and inflated correctly,
 - connect the signalisation cable, check all lights and connect the pneumatic brake couplers,
 - attach the safety break-away cable or safety chain to the towing vehicle,
 - remove wheel chocks, if applied, and disengage the parking brake.
- 2 To tow a unit use a towing vehicle of ample capacity. Refer to the documentation of the towing vehicle.
- 3 If the unit is to be backed up by the towing vehicle, disengage the overrun brake mechanism (if it is not an automatic mechanism).
- 4 Never exceed the maximum towing speed of the unit (mind the local regulations).
- 5 Place the unit on level ground and apply the parking brake before disconnecting the unit from the towing vehicle. Unclip the safety break-away cable or safety chain. If the unit has no parking brake or jockey wheel, immobilize the unit by placing chocks in front of and/or behind the wheels. When the towbar can be positioned vertically, the locking device must be applied and kept in good order.
- 6 To lift heavy parts, a hoist of ample capacity, tested and approved according to local safety regulations, shall be used.
- 7 Lifting hooks, eyes, shackles, etc., shall never be bent and shall only have stress in line with their design load axis. The capacity of a lifting device diminishes when the lifting force is applied at an angle to its load axis.
- 8 For maximum safety and efficiency of the lifting apparatus all lifting members shall be applied as near to perpendicular as possible. If

required, a lifting beam shall be applied between hoist and load.

- 9 Never leave a load hanging on a hoist.
- 10 A hoist has to be installed in such a way that the object will be lifted perpendicular. If that is not possible, the necessary precautions must be taken to prevent load-swinging, e.g. by using two hoists, each at approximately the same angle not exceeding 30° from the vertical.
- 11 Locate the unit away from walls. Take all precautions to ensure that hot air exhausted from the engine and driven machine cooling systems cannot be recirculated. If such hot air is taken in by the engine or driven machine cooling fan, this may cause overheating of the unit; if taken in for combustion, the engine power will be reduced.
- 12 Generators shall be stalled on an even, solid floor, in a clean location with sufficient ventilation. If the floor is not level or can vary in inclination, consult Atlas Copco.
- 13 The electrical connections shall correspond to local codes. The machines shall be earthed and protected against short circuits by fuses or circuit breakers.
- 14 Never connect the generator outlets to an installation which is also connected to a public mains.
- 15 Before connecting a load, switch off the corresponding circuit breaker, and check whether frequency, voltage, current and power factor comply with the ratings of the generator.

0.4 SAFETY DURING USE AND OPERATION

- 1 When the unit has to operate in a fire-hazardous environment, each engine exhaust has to be provided with a spark arrestor to trap incendiary sparks.
- 2 The exhaust contains carbon monoxide which is a lethal gas. When the unit is used in a confined space, conduct the engine exhaust to the outside atmosphere by a pipe of sufficient diameter; do this in such a way that no extra back pressure is created for the engine. If necessary, install an extractor. Observe any existing local regulations. Make sure that the unit has sufficient air intake for operation. If necessary, install extra air intake ducts.
- 3 When operating in a dust-laden atmosphere, place the unit so that dust is not carried towards it by the wind. Operation in clean surroundings considerably extends the intervals for cleaning the air intake filters and the cores of the coolers.
- 4 Never remove a filler cap of the cooling water system of a hot engine. Wait until the engine has sufficiently cooled down.
- 5 Never refill fuel while the unit is running, unless otherwise stated in the Atlas Copco Instruction Book (AIB). Keep fuel away from hot parts such as air outlet pipes or the engine exhaust. Do not smoke

when fuelling. When fuelling from an automatic pump, an earthing cable should be connected to the unit to discharge static electricity. Never spill nor leave oil, fuel, coolant or cleansing agent in or around the unit.

- 6 All doors shall be shut during operation so as not to disturb the cooling air flow inside the bodywork and/or render the silencing less effective. A door should be kept open for a short period only e.g. for inspection or adjustment.
- 7 Periodically carry out maintenance works according to the maintenance schedule.
- 8 Stationary housing guards are provided on all rotating or reciprocating parts not otherwise protected and which may be hazardous to personnel. Machinery shall never be put into operation, when such guards have been removed, before the guards are securely reinstalled.
- 9 Noise, even at reasonable levels, can cause irritation and disturbance which, over a long period of time, may cause severe injuries to the nervous system of human beings.
When the sound pressure level, at any point where personnel normally has to attend, is:
 - below 70 dB(A): no action needs to be taken,
 - above 70 dB(A): noise-protective devices should be provided for people continuously being present in the room,
 - below 85 dB(A): no action needs to be taken for occasional visitors staying a limited time only,
 - above 85 dB(A): room to be classified as a noise-hazardous area and an obvious warning shall be placed permanently at each entrance to alert people entering the room, for even relatively short times, about the need to wear ear protectors,
 - above 95 dB(A): the warning(s) at the entrance(s) shall be completed with the recommendation that also occasional visitors shall wear ear protectors,
 - above 105 dB(A): special ear protectors that are adequate for this noise level and the spectral composition of the noise shall be provided and a special warning to that effect shall be placed at each entrance.
- 10 Insulation or safety guards of parts the temperature of which can be in excess of 80 °C (175 °F) and which may be accidentally touched by personnel shall not be removed before the parts have cooled to room temperature.
- 11 Never operate the unit in surroundings where there is a possibility of taking in flammable or toxic fumes.
- 12 If the working process produces fumes, dust or vibration hazards, etc., take the necessary steps to eliminate the risk of personnel injury.

- 13 When using compressed air or inert gas to clean down equipment, do so with caution and use the appropriate protection, at least safety glasses, for the operator as well as for any bystander. Do not apply compressed air or inert gas to your skin or direct an air or gas stream at people. Never use it to clean dirt from your clothes.
- 14 When washing parts in or with a cleaning solvent, provide the required ventilation and use appropriate protection such as a breathing filter, safety glasses, rubber apron and gloves, etc.
- 15 Safety shoes should be compulsory in any workshop and if there is a risk, however small, of falling objects, wearing of a safety helmet should be included.
- 16 If there is a risk of inhaling hazardous gases, fumes or dust, the respiratory organs must be protected and depending on the nature of the hazard, so must the eyes and skin.
- 17 Remember that where there is visible dust, the finer, invisible particles will almost certainly be present too; but the fact that no dust can be seen is not a reliable indication that dangerous, invisible dust is not present in the air.
- 18 Never operate the generator in excess of its limits as indicated in the technical specifications and avoid long no-load sequences.
- 19 Never operate the generator in a humid atmosphere. Excessive moisture causes worsening of the generator insulation.
- 20 Do not open electrical cabinets, cubicles or other equipment while voltage is supplied. If such cannot be avoided, e.g. for measurements, tests or adjustments, have the action carried out by a qualified electrician only, with appropriate tools, and ascertain that the required bodily protection against electrical hazards is applied.
- 21 Never touch the power terminals during operation of the machine.
- 22 Whenever an abnormal condition arises, e.g. excessive vibration, noise, odour, etc., switch the circuit breakers to OFF and stop the engine. Correct the faulty condition before restarting.
- 23 Check the electric cables regularly. Damaged cables and insufficient lightening of connections may cause electric shocks. Whenever damaged wires or dangerous conditions are observed, switch the circuit breakers to OFF and stop the engine. Replace the damaged wires or correct the dangerous condition before restarting. Make sure that all electric connections are securely tightened.
- 24 Avoid overloading the generator. The generator is provided with circuit breakers for overload protection. When a breaker has tripped, reduce the concerned load before restarting.
- 25 If the generator is used as stand-by for the mains supply, it must not be operated without control system which automatically disconnects the generator from the mains when the mains supply is restored.
- 26 Never remove the cover of the output terminals during operation. Before connecting or disconnecting wires, switch off the load and the circuit breakers, stop the machine and make sure that the machine

cannot be started inadvertently or there is any residual voltage on the power circuit.

- 27 Running the generator at low load for long periods will reduce the lifetime of the engine.

0.5 SAFETY DURING MAINTENANCE AND REPAIR

Maintenance, overhaul and repair work shall only be carried out by adequately trained personnel; if required, under supervision of someone qualified for the job.

- 1 Use only the correct tools for maintenance and repair work, and only tools which are in good condition.
- 2 Parts shall only be replaced by genuine Atlas Copco replacement parts.
- 3 All maintenance work, other than routine attention, shall only be undertaken when the unit is stopped. Steps shall be taken to prevent inadvertent starting. In addition, a warning sign bearing a legend such as "work in progress; do not start" shall be attached to the starting equipment.
On engine-driven units the battery shall be disconnected and removed or the terminals covered by insulating caps.
On electrically driven units the main switch shall be locked in open position and the fuses shall be taken out. A warning sign bearing a legend such as "work in progress; do not supply voltage" shall be attached to the fuse box or main switch.
- 4 Prior to stripping an engine or other machine or undertaking major overhaul on it, prevent all movable parts from rolling over or moving.
- 5 Make sure that no tools, loose parts or rags are left in or on the machine. Never leave rags or loose clothing near the engine air intake.
- 6 Never use flammable solvents for cleaning (fire-risk).
- 7 Take safety precautions against toxic vapours of cleaning liquids.
- 8 Never use machine parts as a climbing aid.
- 9 Observe scrupulous cleanliness during maintenance and repair. Keep away dirt, cover the parts and exposed openings with a clean cloth, paper or tape.
- 10 Never weld on or perform any operation involving heat near the fuel or oil systems. Fuel and oil tanks must be completely purged, e.g. by steam-cleaning, before carrying out such operations. Never weld on, or in any way modify, pressure vessels. Disconnect the alternator cables during arc welding on the unit.
- 11 Support the towbar and the axle(s) securely if working underneath the unit or when removing a wheel. Do not rely on jacks.
- 12 Do not remove any of, or tamper with, the sound-damping material. Keep the material free of dirt and liquids such as fuel, oil and cleansing

agents. If any sound-damping material is damaged, replace it to prevent the sound pressure level from increasing.

- 13 Use only lubricating oils and greases recommended or approved by Atlas Copco or the machine manufacturer. Ascertain that the selected lubricants comply with all applicable safety regulations, especially with regard to explosion or fire-risk and the possibility of decomposition or generation of hazardous gases. Never mix synthetic with mineral oil.
- 14 Protect the engine, alternator, air intake filter, electrical and regulating components, etc., to prevent moisture ingress, e.g. when steam-cleaning.
- 15 When performing any operation involving heat, flames or sparks on a machine, the surrounding components shall first be screened with non-flammable material.
- 16 Never use a light source with open flame for inspecting the interior of a machine.
- 17 When repair has been completed, the machine shall be barred over at least one revolution for reciprocating machines, several revolutions for rotary ones to ensure that there is no mechanical interference within the machine or driver. Check the direction of rotation of electric motors when starting up the machine initially and after any alteration to the electrical connection(s) or switch gear, to check that the oil pump and the fan function properly.
- 18 Maintenance and repair work should be recorded in an operator's logbook for all machinery. Frequency and nature of repairs can reveal unsafe conditions.
- 19 When hot parts have to be handled, e.g. shrink fitting, special heat-resistant gloves shall be used and, if required, other body protection shall be applied.
- 20 When using cartridge type breathing filter equipment, ascertain that the correct type of cartridge is used and that its useful service life is not surpassed.
- 21 Make sure that oil, solvents and other substances likely to pollute the environment are properly disposed of.
- 22 Before clearing the generator for use after maintenance or overhaul, submit it to a testrun, check that the AC power performance is correct and that the control and shutdown devices function correctly.

0.6 TOOL APPLICATIONS SAFETY

Apply the proper tool for each job. With the knowledge of correct tool use and knowing the limitations of tools, along with some common sense, many accidents can be prevented.

Special service tools are available for specific jobs and should be used when recommended. The use of these tools will save time and prevent damage to parts.

0.7 SPECIFIC SAFETY PRECAUTIONS

Batteries

When servicing batteries, always wear protecting clothing and glasses.

- 1 The electrolyte in batteries is a sulphuric acid solution which is fatal if it hits your eyes, and which can cause burns if it contacts your skin. Therefore, be careful when handling batteries, e.g. when checking the charge condition.
- 2 Install a sign prohibiting fire, open flame and smoking at the post where batteries are being charged.
- 3 When batteries are being charged, an explosive gas mixture forms in the cells and might escape through the vent holes in the plugs. Thus an explosive atmosphere may form around the battery if ventilation is poor, and can remain in and around the battery for several hours after it has been charged. Therefore:
 - never smoke near batteries being, or having recently been, charged,
 - never break live circuits at battery terminals, because a spark usually occurs.
- 4 When connecting an auxiliary battery (AB) in parallel to the unit battery (CB) with booster cables: connect the + pole of AB to the + pole of CB, then connect the - pole of CB to the mass of the unit. Disconnect in the reverse order.

ORDERING SPARE PARTS

ORDERING SPARE PARTS

Always quote the part number, the designation and the quantity of the parts required, as well as the type and the serial number of the machine.

EXPLANATION OF THE COLUMNS

REF : REFERENCE CODE

Establishes the connection between a part in the list and a part in the illustration.

"—" means that the part is not shown in the illustration.

PART NUMBER

If no part number is given, the part cannot be obtained as a spare part. Parts marked with a dot are part of the assembly listed right above them.

DESIGNATION

Usually this is the name of the part. For standard parts, in addition to the name, a number of characteristics are given.

QTY : QUANTITY

Indicates the quantity of the part concerned. "AR" stands for "As Required".

BESTELLEN VAN ONDERDELEN

Vermeld steeds het onderdeelnummer, de benaming en het aantal van de gewenste stukken, evenals het type en het serienummer van de machine.

TOELICHTING BIJ DE KOLOMMEN

REF : REFERENTIECODE

Legt het verband tussen een onderdeel uit de lijst en een onderdeel op de tekening. "—" betekent dat het onderdeel niet is getekend.

PART NUMBER : ONDERDEELNUMMER

Indien niet opgegeven is het onderdeel niet als wisselstuk beschikbaar. Onderdelen aangeduid met een stip maken deel uit van het geheel dat boven de betreffende onderdelen staat.

DESIGNATION : BENAMING

Meestal de benaming van het onderdeel. In het geval van standaard onderdelen worden naast de benaming een aantal karakteristieken opgegeven.

QTY : AANTAL

Geeft de hoeveelheid van het betreffende onderdeel weer. De aanduiding "AR" betekent "As Required" (zoals vereist).

COMMANDE DE PIÈCES DETACHEES

Toujours indiquer le numéro de pièce, la désignation, la quantité désirée ainsi que le type et le numéro de série du groupe.

EXPLICATION DES INTITULES DES COLONNES

REF : CODE DE REFERENCE

Réfère à la pièce détachée spécifiée dans la liste et sur l'illustration. "—" implique que la pièce n'est pas indiquée sur l'illustration.

PART NUMBER : NUMERO DE PIECE DETACHEE

Si le numéro n'est pas indiqué, la pièce n'est pas disponible en tant que pièce de rechange.

Les pièces indiquées par un point gras font partie de l'ensemble se trouvant au-dessus des pièces détachées correspondantes.

DESIGNATION

En général, le nom de la pièce. S'il s'agit de pièces standard, outre la désignation, un certain nombre de caractéristiques sont indiquées.

QTY : QUANTITE

Indique la quantité de la pièce détachée. "AR" indique "As required", c'est-à-dire la quantité à déterminer selon le cas.

BESTELLUNG VON ERSATZTEILEN

Stets die Teilenummer, die Bezeichnung, und die Anzahl der gewünschten Teile sowie den Typ und die Seriennummer der Maschine angeben.

INFORMATION ZU DEN SPALTEN

REF : REFERENZCODE

Stellt die Verbindung zwischen einem Teil in der Liste und einem Teil auf der Zeichnung her. "—" bedeutet, daß das Teil nicht in der Zeichnung dargestellt ist.

PART NUMBER : TEILENUMMER

Wenn keine Teilenummer angegeben ist, ist das Teil nicht als Ersatzteil erhältlich.

Mit einem Punkt markierte Teile gehören zu der Einheit, die über den jeweiligen Teilen aufgeführt ist.

DESIGNATION : BEZEICHNUNG

Meistens die Bezeichnung des Teils. Bei Standardteilen werden neben der Bezeichnung einige technische Daten angegeben.

QTY : ANZAHL

Gibt die Anzahl des betreffenden Teils an. Die Angabe "AR" steht für "As Required" (wie erforderlich).

PEDIDO DE PARTES

Siempre comunicar el número de parte, la designación y la cantidad deseada así como el tipo y el número de serie de la máquina.

INFORMACIONES SOBRE LAS COLUMNAS

REF : CODIGO DE REFERENCIA

Establece la conexión entre una parte en la lista y una parte en la ilustración.

"—" quiere decir que la parte no está ilustrada.

PART NUMBER : NUMERO DE PARTE

Si no se da ningún número, quiere decir que la parte no está disponible como parte de recambio.

Partes marcadas con un punto son partes del conjunto indicado más arriba.

DESIGNATION : DESIGNACION

Principalmente el nombre de la parte. En caso de partes estándares, el nombre es seguido por especificaciones.

QTY : CANTIDAD

Indica la cantidad de la parte correspondiente. La indicación "AR" significa "As Required" (como sea requerido).

BESTÄLLNING AV RESERVDELAR

Ange alltid reservdelsnummer, benämning och kvantitet för varje önskad detalj samt maskinens typ och tillverkningsnummer.

TÖRKLARING AV SPALTER

REF : REFERENSNUMMER

Identifierar motsvarande detaljer i listan och illustrationen. "—" betyder att detaljen inte visas i illustrationen.

PART NUMBER : RESERVDELNUMMER

Om inget reservdelsnummer anges, kan detaljen inte erhållas som reservdel. Detaljer som anges med en punkt ingår i den monteringsatts som listas ovanför dessa.

DESIGNATION : BENÄMNING

Detta är vanligen namnet på detaljen. För standarddetaljer anges förutom namnet ett antal specifikationer.

QTY : KVANTITET

Anger den ifrågakvarande detaljens kvantitet. "AR" (As Required) betyder enligt behov.

ORDERING SPARE PARTS

ORDINAZIONE DI PARTI DI RICAMBIO

Menzionare sempre il numero della parte, la denominazione e il numero de pezzi desiderati, nonché il tipo e il numero di serie della macchina.

SPIEGAZIONE DELLE COLONNE

REF : CODICE DI RIFERIMENTO

Stabilisce il nesso tra un pezzo nell'elenco e un pezzo nell'illustrazione. "—" signifca che il pezzo non è presente nell'illustrazione.

PART NUMBER : NUMERO DELLA PARTE

Nel caso non sia fornito il numerom di parte, il pezzo non può essere ordinato come parte di ricambio.

Il componenti indicati con un puntino fanno parte del gruppo elencato immediatamente sopra di essi.

DESIGNATION : DENOMNAZIONE

Generalmente si tratta della denominazione della parte. Per i pezzi standard oltre alla denominazione sono fornite alcune caratteristiche.

QTY : QUANTITA'

Indica la quantità dei pezzi in questione. "AR" significa "As Required" (Come richiesto).

BESTÄLLNING AV RESERVDLAR

Ange alltid reservdelsnummer, benämning och kvantitet för varje önskad detalj samt maskinens typ och tillverkningsnummer.

TÖRKLARING AV SPALTER

REF : REFERENSNUMMER

Identifiar motsvarande detaljer i listan och illustrationen. "—" betyder att detaljen inte visas i illustrationen.

PART NUMBER : RESERVDLSNUMMER

Om inget reservdelsnummer anges, kan detaljen inte erhållas som reservdel. Detaljer som anges med en punkt ingår i den monteringsatts som listas ovanför dessa.

DESIGNATION : BENÄMNING

Detta är vanligen namnet på detaljen. För standarddetaljer anges förutom namnet ett antal specifikationer.

QTY : KVANTITET

Anger den ifrågavarande detaljens kvantitet. "AR" (As Required) betyder enligt behov.

BESTILLING AV RESERVEDELER

Oppgi alltid delenummer, betegnelse og antall på de delene du trenger, samt maskintype og serienummer.

FORKLARING TIL SPALTENE

REF: REFERANSEKODE

Viser hvor en del i listen er vist på illustrasjonen. "—" betyr at delen ikke er vist på illustrasjonen.

DELENUMMER

Hvis delenummer ikke er oppgitt, kan delen ikke bestilles som reservedel. Deler merket med en prikk er del av enheten som er oppgitt like ovenfor de aktuelle delene.

BETEGNELSE

Dette er vanligvis delens navn. Ved standarddeler blir enkelte karakteristika oppgitt i tillegg til navnet.

QTY: ANTALL

Oppgir antallet av den aktuelle delen. "EB" betyr "Etter behov".

ΠΑΡΑΓΓΕΛΙΑ ΑΝΤΑΛΛΑΚΤΙΚΩΝ

Πάντοτε σημειώνετε τον κωδικό, τον προσδιορισμό και την ποσότητα των απαιτούμενων ανταλλακτικών, καθώς επίσης τον τύπο και τον αύξοντα κωδικό αριθμό παραγωγής του μηχανήματος.

ΕΞΗΓΗΣΗ ΤΩΝ ΣΤΗΛΩΝ

REF : ΚΩΔΙΚΟΣ ΑΝΑΦΟΡΑΣ

Παρουσιάζει τη σχέση μεταξύ ενός εξαρτήματος στη λίστα και ενός εξαρτήματος στη φωτογραφία. Το "—" σημαίνει ότι το εξάρτημα δεν εμφανίζεται στη φωτογραφία.

PART NUMBER : ΚΩΔΙΚΟΣ ΑΡΙΘΜΟΣ

Αν δεν δίνεται κάποιος κωδικός αριθμός, τότε το εξάρτημα δεν μπορεί να ληφθεί ως ανταλλακτικό.

Τα εξαρτήματα που έχουν μαρκιαρισθεί με μία τελεία είναι τμήματα του συλλογικού που παρουσιάζεται ακριβώς πάνω από αυτά.

DESIGNATION : ΠΡΟΣΔΙΟΡΙΣΜΟΣ

Συνήθως αυτό είναι το όνομα του εξαρτήματος. Για τα βασικά εξαρτήματα, επιπροσθέτα στην ονομασία, δίνεται και ένας αριθμός χαρακτηριστικών.

QTY : ΠΟΣΟΤΗΤΑ

Δηλώνει την ποσότητα του υπόψη εξαρτήματος. "AR" σημαίνει "Ως απαιτείται". Για τα βασικά εξαρτήματα, η ποσότητα δίνεται στη φωτογραφία παρά στη λίστα.

ENCOMENDA DE PEÇAS

Refira sempre o número da peça, a designação e a quantidade das peças que pretende encomendar, assim como o tipo e o número de série do aparelho.

EXPLICAÇÃO DAS COLUNAS

REF : CÓDIGO DE REFERÊNCIA

Estabeleça a ligação entre a peça na lista e a peça no desenho. "—" significa que a peça não vem no desenho.

PART NUMBER : NÚMERO DA PEÇA

Se não vier referido o número da peça, a peça não pode ser adquirida como peça sobressalente.

As peças marcadas com pontos são peças de um conjunto listado acima dessa peça.

DESIGNATION : DESIGNAÇÃO

Geralmente é o nome da peça. Para peças normalizadas, além do nome da peça, vem também referido um número.

QTY : QUANTIDADE

Indica a quantidade da peça em questão. "AR" (As Required) quer dizer "Como solicitado".

VARAOSIEN TILAAMINEN

Tilauksessa tulee aina mainita osanumero, nimike ja määrä sekä kompressorin tyyppi ja sarjanumero.

SARAKKEIDEN SELITYKSET

REF: VIITE: VIITEKODI

Viitekoodi yhdistää luettelossa mainitun osan kuvassa olevaan. "—" tarkoittaa, että osaa ei ole merkitty kuvaan.

PART NUMBER: OSANUMERO

Ellei osanumeroa ole mainittu, osaa ei ole saatavana varaosana. Pisteellä merkityt osat kuuluvat niiden edellä mainittuun asennelmaan.

DESIGNATION: NIMIKE

Nimikkeenä käytetään tavallisesti osan nimeä. Vakio-osien ollessa kyseessä mainitaan nimen lisäksi osan joitakin ominaisuuksia.

QTY: MÄÄRÄ

Tarkoittaa kyseisten osien lukumäärää. "AR" tarkoittaa "tarpeen mukaan".

ORDERING SPARE PARTS

ZAMAWIANIE CZĘŚCI ZAMIENNYCH

Należy zawsze podawać numery, nazwy i ilości potrzebnych części, a także typ i numer seryjny maszyny.

WYJAŚNIENIE PRZEZNACZENIA KOLUMN

REF: KOD REFERENCYJNY

Kojarzy część na liście z częścią na ilustracji.
Symbol “-” oznacza, że część nie jest przedstawiona na ilustracji.

PART NUMBER (NUMER CZĘŚCI)

Brak numeru oznacza, że dana część nie jest dostępna jako część zamienna. Części oznaczone kropką należą do zespołu wymienionego bezpośrednio nad nimi.

DESIGNATION (NAZWA)

Zwykle jest to nazwa części. W przypadku części standardowych oprócz nazwy podano szereg właściwości.

QTY (IL.): ILOŚĆ

Ilość części danego rodzaju. “AR” (“OP”) oznacza “odpowiednio do potrzeb”.

Заказ запасных частей

Необходимо всегда указывать номер детали, наименование и количество заказываемых запчастей, а также тип и серийный номер устройства.

Расшифровка столбцов

ИЛЛ. : код сноски

Показывает ссылку детали в списке на ее соответствующую иллюстрацию.

“-” означает, что к данной детали нет иллюстраций.

НОМЕР ДЕТАЛИ

Отсутствие номера детали означает, что данная деталь как запчасть не поставляется.

Детали, помеченные точкой, являются частями сборного механизма, который указан над этими деталями.

НАИМЕНОВАНИЕ

Обычно, название детали. К стандартным деталям, кроме названия, могут быть даны некоторые их характеристики.

КОЛ-ВО: Количество

Показывает количество деталей. «По тр.» означает «по требованию».

OBJEDNÁVÁNÍ NÁHRADNÍCH DÍLŮ

V objednávce vždy uveďte číslo dílu, jeho označení a požadované množství. Rovněž tak udejte typ a výrobní číslo zařízení.

VYSVĚTLIVKY K JEDNOTLIVÝM SLOUPCŮM

REF : REFERENČNÍ KÓD

Udává spojitost mezi dílem v seznamu a dílem na obrázku.
“-” znamená, že díl není na obrázku uveden.

ČÍSLO DÍLU

Pokud není číslo dílu uvedeno, nelze tuto součást objednat jako náhradní díl.
Díly označené tečkami jsou součástí konstrukčního celku, který je uveden přímo nad nimi.

OZNAČENÍ

Ve sloupci označení bývá obvykle uveden název dílu. U standardních součástí je vedle názvu uváděna též řada dalších charakteristik.

POĚET : MNOŽSTVÍ

Označuje množství uvedených dílů. Zkratka “PP” znamená “Podle požadavku”.

PÓTALKAKTRÉSZ-RENDELÉS

Mindig jelezze a szükséges alkatrész számát, megnevezését és mennyiségét, valamint a gép típusát és sorozatszámát.

AZ OSZLOPOK MAGYARÁZATA

REF: REFERENCIAKÓD

Ez teremt kapcsolatot a listán szereplő alkatrész és az ábrán látható alkatrész között.

“-”: azt jelenti, hogy az adott alkatrész nem szerepel az ábrán.

ALKATRÉSZ-SZÁM

Ha nincsen megadva alkatrész-szám, akkor az adott alkatrész nem rendelhető meg pótalkatrészként.

A ponttal jelölt alkatrészek a közvetlenül fölöttük felsorolt szerelvény részét képezik.

MEGNEVEZÉS

Rendszerint ez az alkatrész neve. Az alapfelszereltséghez tartozó alkatrészek esetében a név mellett néhány jellemző adat is szerepel.

QTY: MENNYISÉG

Az adott alkatrész mennyiségét jelzi. “SZ” jelentése “Szükség szerint”

订购备件

请务必提供所需部件的部件号、名称和数量，以及设备型号和序列号。

表格各列说明

REF: 参考代码

确立列表内部件与插图内部件间的联系。
“-”表示插图内未显示此部件。

部件号

如果未给出部件号，则表明无法通过备件方式购买此部件。
标有圆点的部件是其上一行所列配件的一部分。

名称

通常为部件的名称。对于标准件，除了名称外，还会列出它的一些特性。

QTY: 数量

表明可供部件的数量。“AR”代表“根据需要”

OBJEDNÁVANIE NÁHRADNÝCH SÚČIASTOK

Uvádzajte vždy číslo súčiastky, označenie a množstvo požadovaných súčiastok, ako aj typ a výrobné číslo stroja.

VYSVETLENIE STĺPCOV

REF : REFERENČNÝ KÓD

Stanovuje spojitost' medzi súčiastkou v zozname a súčiastkou na obrázku.
“-” znamená, že súčiastka nie je zobrazená na obrázku.

ČÍSLO SÚČIASTKY

Ak nie je uvedené žiadne číslo súčiastky, táto súčiastka nie je k dispozícii ako náhradná.

Súčiastky označené bodkou sú časťou zostavy uvedenej hneď nad nimi.

OZNAČENIE

Obvyčajne je to názov súčiastky. U normalizovaných súčiastok sa okrem názvu uvádza aj niekoľko charakteristík

QTY : MNOŽSTVO

Označuje množstvo danej súčiastky. “AR” je skratka pre “Podľa potreby”.

ORDERING SPARE PARTS

NAROČEVANJE NADOMESTNIH DELOV

Zmeraj navedite številko nadomestnega dela, označbo in količino potrebnih delov ter tip in serijsko številko stroja.

RAZLAGA STOLPCEV

REF : REFERENČNA ŠIFRA

Predstavlja povezavo med delom na seznamu in delom na ilustraciji. “-” predstavlja del, ki ni prikazan na ilustraciji.

ŠTEVILKA DELA

Če številka dela ni podana potem je ne morete dobiti kot nadomestni del. Deli označeni s piko so sestavni del montaže, navedene nad njimi.

OSNAČBA

Običajno je to ime nadomestnega dela. Pri standardnih delih je poleg imena podano še število značilnosti.

QTY : KOLIČINA

Označuje količino nadomestnih delov. “AR” pomeni “kot je bilo zahtevano”.

ATSARGINIØ DALIØ UÞSAKYMAS

Visuomet nurodykite dalies numerá, pavadinimà ir reikiamà daliø kieká, taip pat ir maðinos tipà bei serijinà numerá.

STULPELIØ PAAIÞKINIMAI

NRD.: NUORODOS KODAS

Susieja sàraðe nurodytà dalá su jos atvaizdu iliustracijoje. “-” reiðkia, jog dalis iliustracijoje nepavaizduota.

DALIES NUMERIS

Jei numerio nenurodyta, detalës negalima ásigyti kaip atsarginës dalies. Taðku paþymëtos dalys yra prieð jas sàraðe nurodyto mazgo sudëtinë dalis.

PAVADINIMAS

Paprastai tai dalies pavadinimas. Standartinëms dalims kartu su pavadinimu nurodomos ir kelios charakteristikos.

KIEK.: KIEKIS

Nurodo susijusio daliø kieká. “AR” reiðkia “As required” (pagal poreiká).

VARUOSADE TELLIMINE

Alati viidake osa numbrile, tähisele ja vajalikule osade kogusele, samuti masina tüübile ja seerianumbrile.

SELGITUS VEERGUDE KOHTA

REF : VIITENUMBER

Loob seose nimekirjas toodud osa ja illustratsioonil esitatud osa vahel. “-” tähendab, et illustratsioonil ei ole seda osa kujutatud.

OSA NUMBER

Kui osa numbrit ei ole toodud, pole seda osa võimalik varuosana soetada. Punktiga tähistatud osad on nende kohal toodud koostu osaks.

TÄHIS

Tavaliselt on see osa nimetus. Standardosadel on lisaks nimetusele toodud ka tunnusnumber.

QTY : KOGUS

Osutab vastava osa kogusele. “AR” tähendab vajadusel (“As Required”).

REZERVES DAĪU PASŪTĪDANA

Vienmçr miniet daĭas numuru, apzĭmçjumu un nepiecieðamo detaĭu daudzumu, kâ arī maðinas tipu un sçrijas numuru.

AIĻU IZSKAIDROJUMS

REF : ATSAUKSMES KODS

Izveido saikni starp detaĭu sarakstâ un detaĭu uz attçla. “-” nozĭmç, ka detaĭa nav attçlota ilustrâcijâ.

DETAĪĀS NUMURS


Ja detaĭas numurs nav minçts, tad detaĭu nevar iegūt kâ rezerves daĭu. Ar punktu apzĭmçtâs detaĭas ir mezgla sastâvdaĭas, kurð ir attçlots tieði virs tām.

APZĪMÇJUMS

Parasti tas ir detaĭas nosaukums. Standarta detaĭâm, papildus nosaukumam, tiek minçta virkne raksturojumu \ specifikâciju.

QTY : DAUDZUMS

Norâda domâtâs detaĭas daudzumu. “AR” nozĭmç “As Required” – “kâ nepiecieðams”.

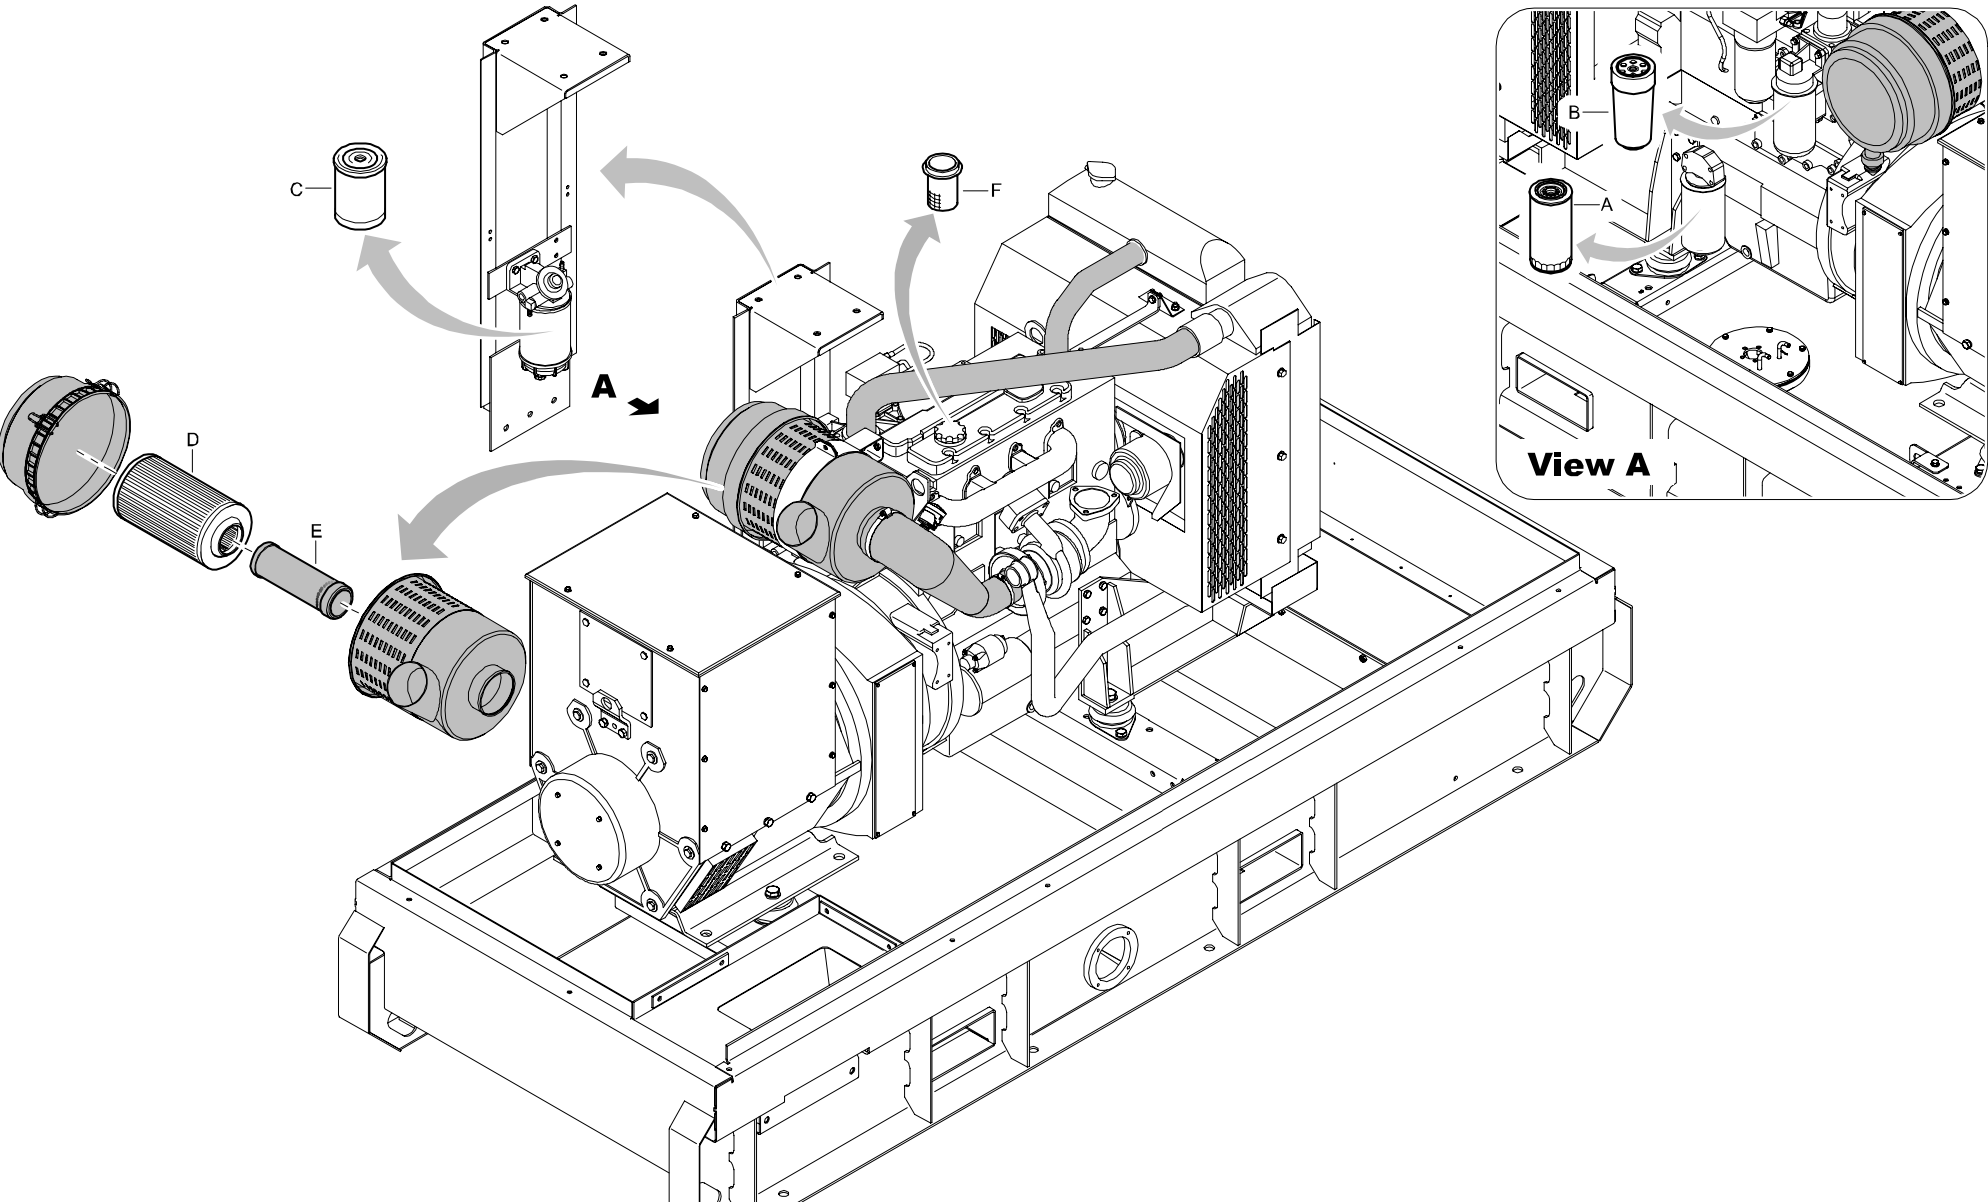


SERVICE PAK

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	2912 4412 05	SERVICE PAK 500H OR YEARLY									
•A	-	OIL FILTER	1								
•B	-	FUEL FILTER	1								
•C	-	FUEL FILTER EL	1								
•D	-	AIR FILTER ELEMENT	1								
•E	-	SAFETY CARTRIDGE	1								
•F	-	CLOSED BREATHER FILTER	1								


ENGINE OIL - PAROIL 5W40

REF	PART NUMBER	DESIGNATION	QTY
A	1604 6060 01	PAROIL 5W40 5 LITER CAN	1
B	1604 6059 01	PAROIL 5W40 20 LITER CAN	1

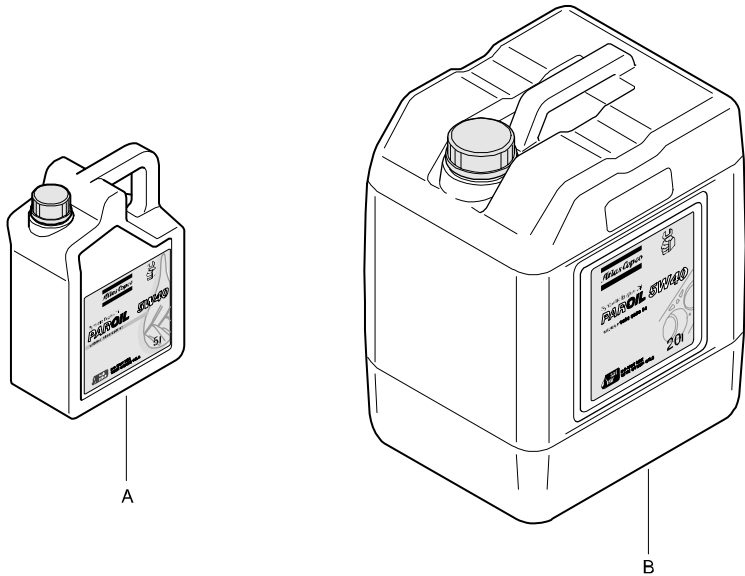


ENGINE OIL - PAROIL 15W40

REF	PART NUMBER	DESIGNATION	QTY
A	1615 5953 00	PAROIL 15W40 5 LITER CAN	1
B	1615 5954 00	PAROIL 15W40 20 LITER CAN	1
C	1615 5955 00	PAROIL 15W40 210 LITER BARREL	1

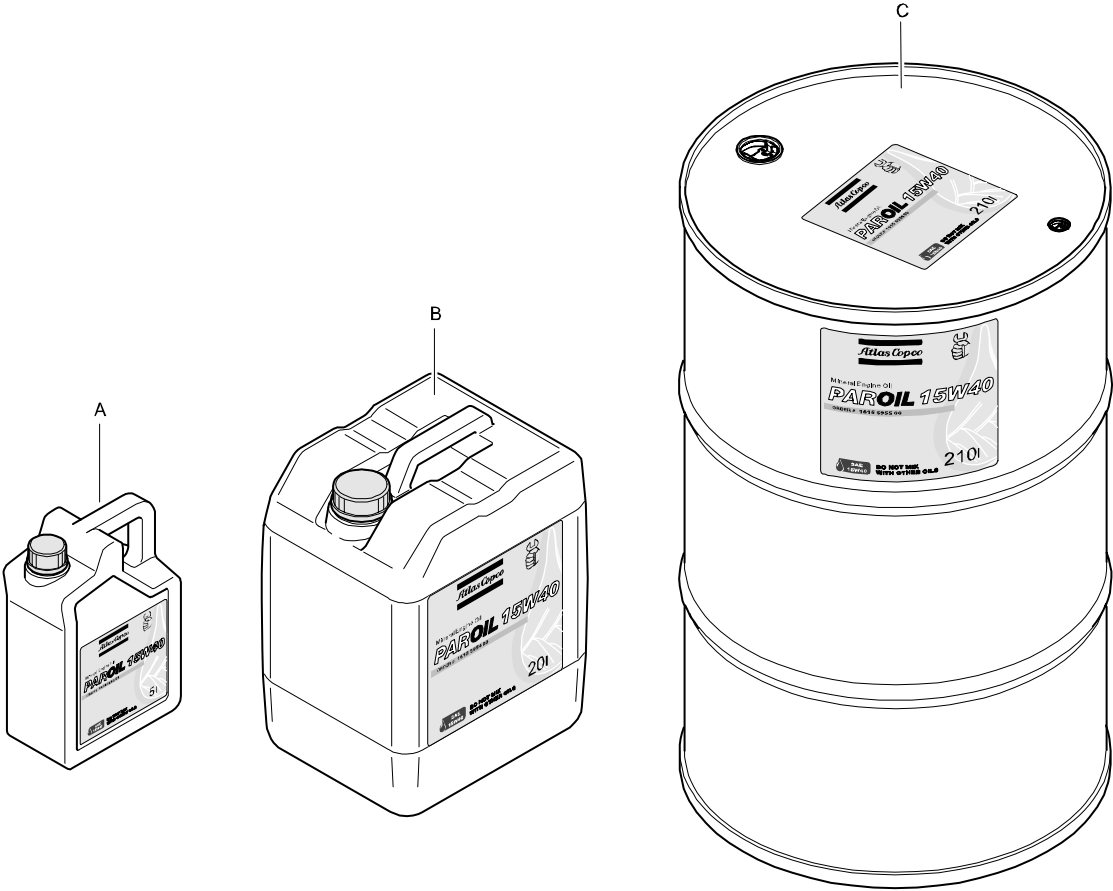


ENGINE COOLANT - PARCOOL EG

REF	PART NUMBER	DESIGNATION	QTY
A	1604 5308 00	PARCOOL EG 5 LITER CAN	1
B	1604 5307 01	PARCOOL EG 20 LITER CAN	1
C	1604 5306 00	PARCOOL EG 210 LITER BARREL	1
D	1604 8159 00	PARCOOL EG CONCENTRATE 5 LITER CAN	1

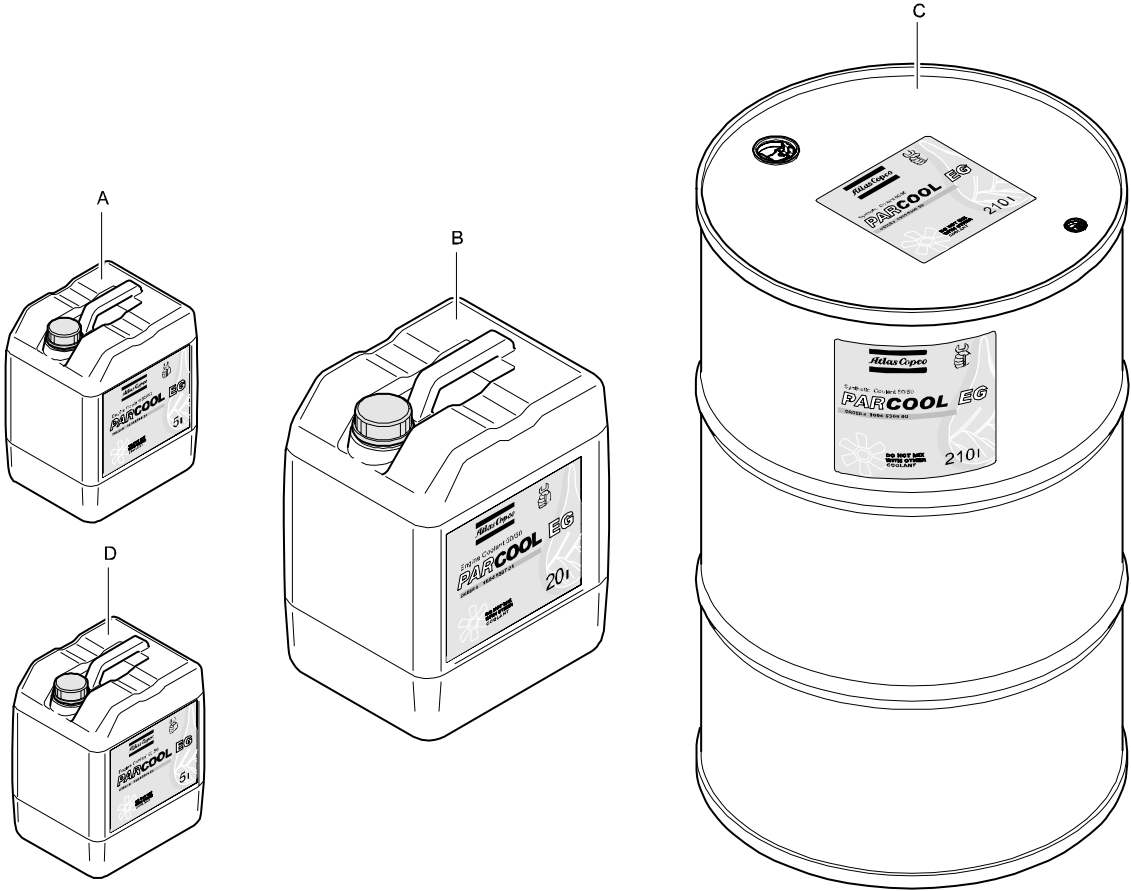


ENGINE AND ACCESSORIES - STANDARD

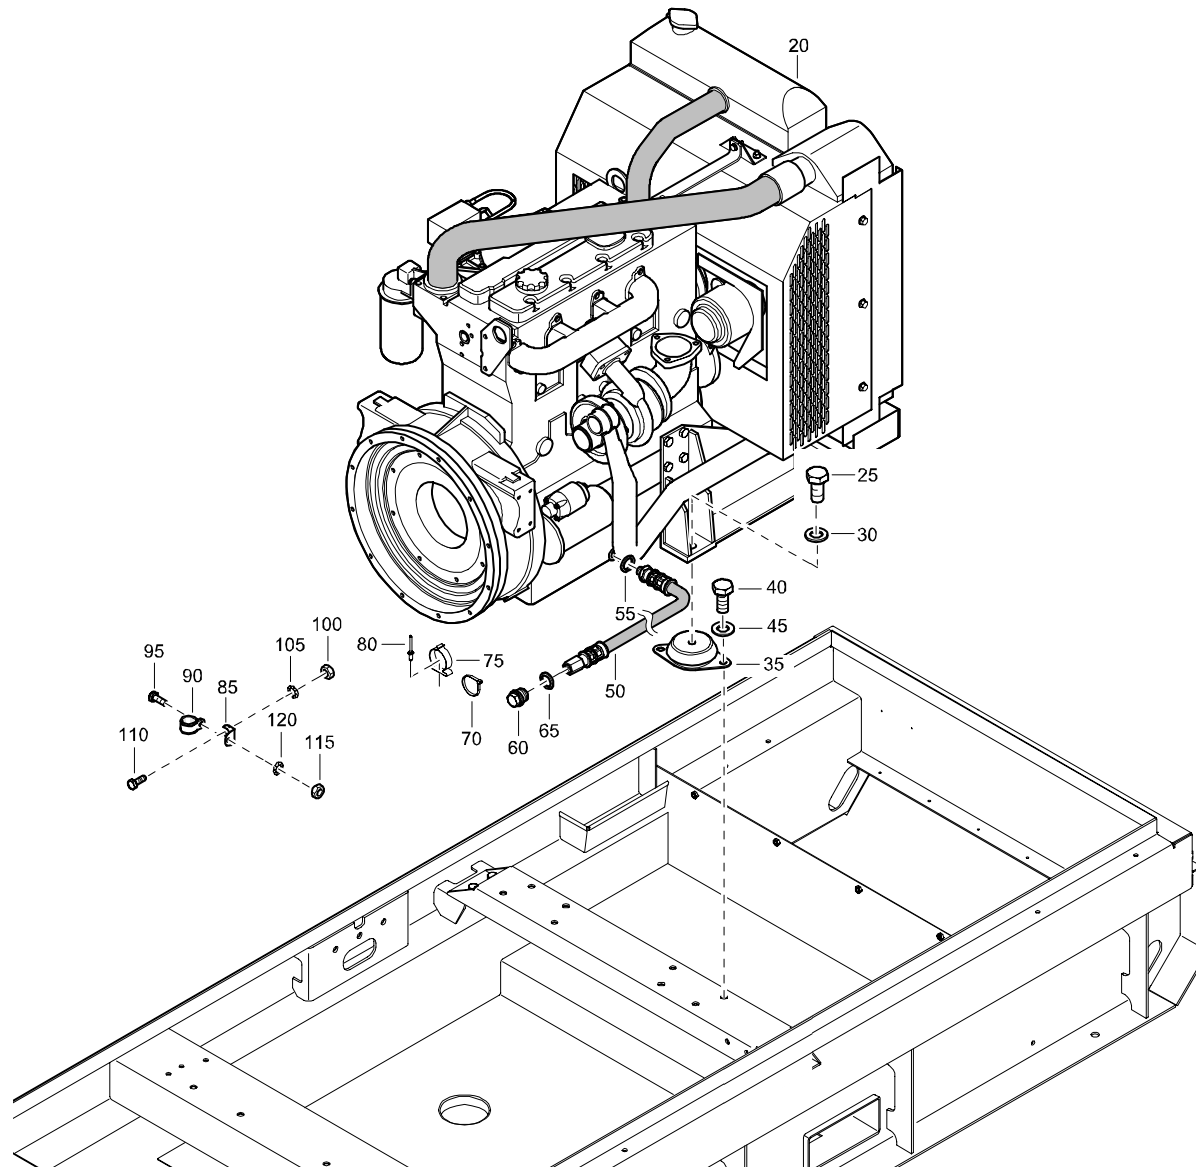


REF	PART NUMBER	DESIGNATION	QTY
20	1626 0955 00	ENGINE	1
25	0147 1958 96	HEX. HEAD SCREW	2
30	0301 2378 00	PLAIN WASHER	2
35	1619 6517 01	RUBBER BUFFER	2
40	0147 1958 75	HEX. HEAD SCREW	4
45	0301 2358 00	PLAIN WASHER	4
50	1626 2877 00	HOSE	1
55	0661 1030 00	SEALING WASHER	1
60	0686 3716 02	HEXAGON PLUG	1
65	0661 1033 00	SEALING WASHER	1
70	1088 1301 02	CABLE STRIP	1
75	1079 3461 02	HOSE CLIP	1
80	0129 3108 00	BLIND RIVET	1
85	1613 0809 00	BRACKET	1
90	0346 1000 22	PIPE CLAMP	1
95	0147 1246 03	HEX. HEAD SCREW	1
100	0266 2108 00	HEXAGON NUT	1
105	0333 3220 00	LOCK WASHER	1
110	0147 1246 03	HEX. HEAD SCREW	1
115	0266 2108 00	HEXAGON NUT	1
120	0333 3220 00	LOCK WASHER	1

AIR INLET - STANDARD

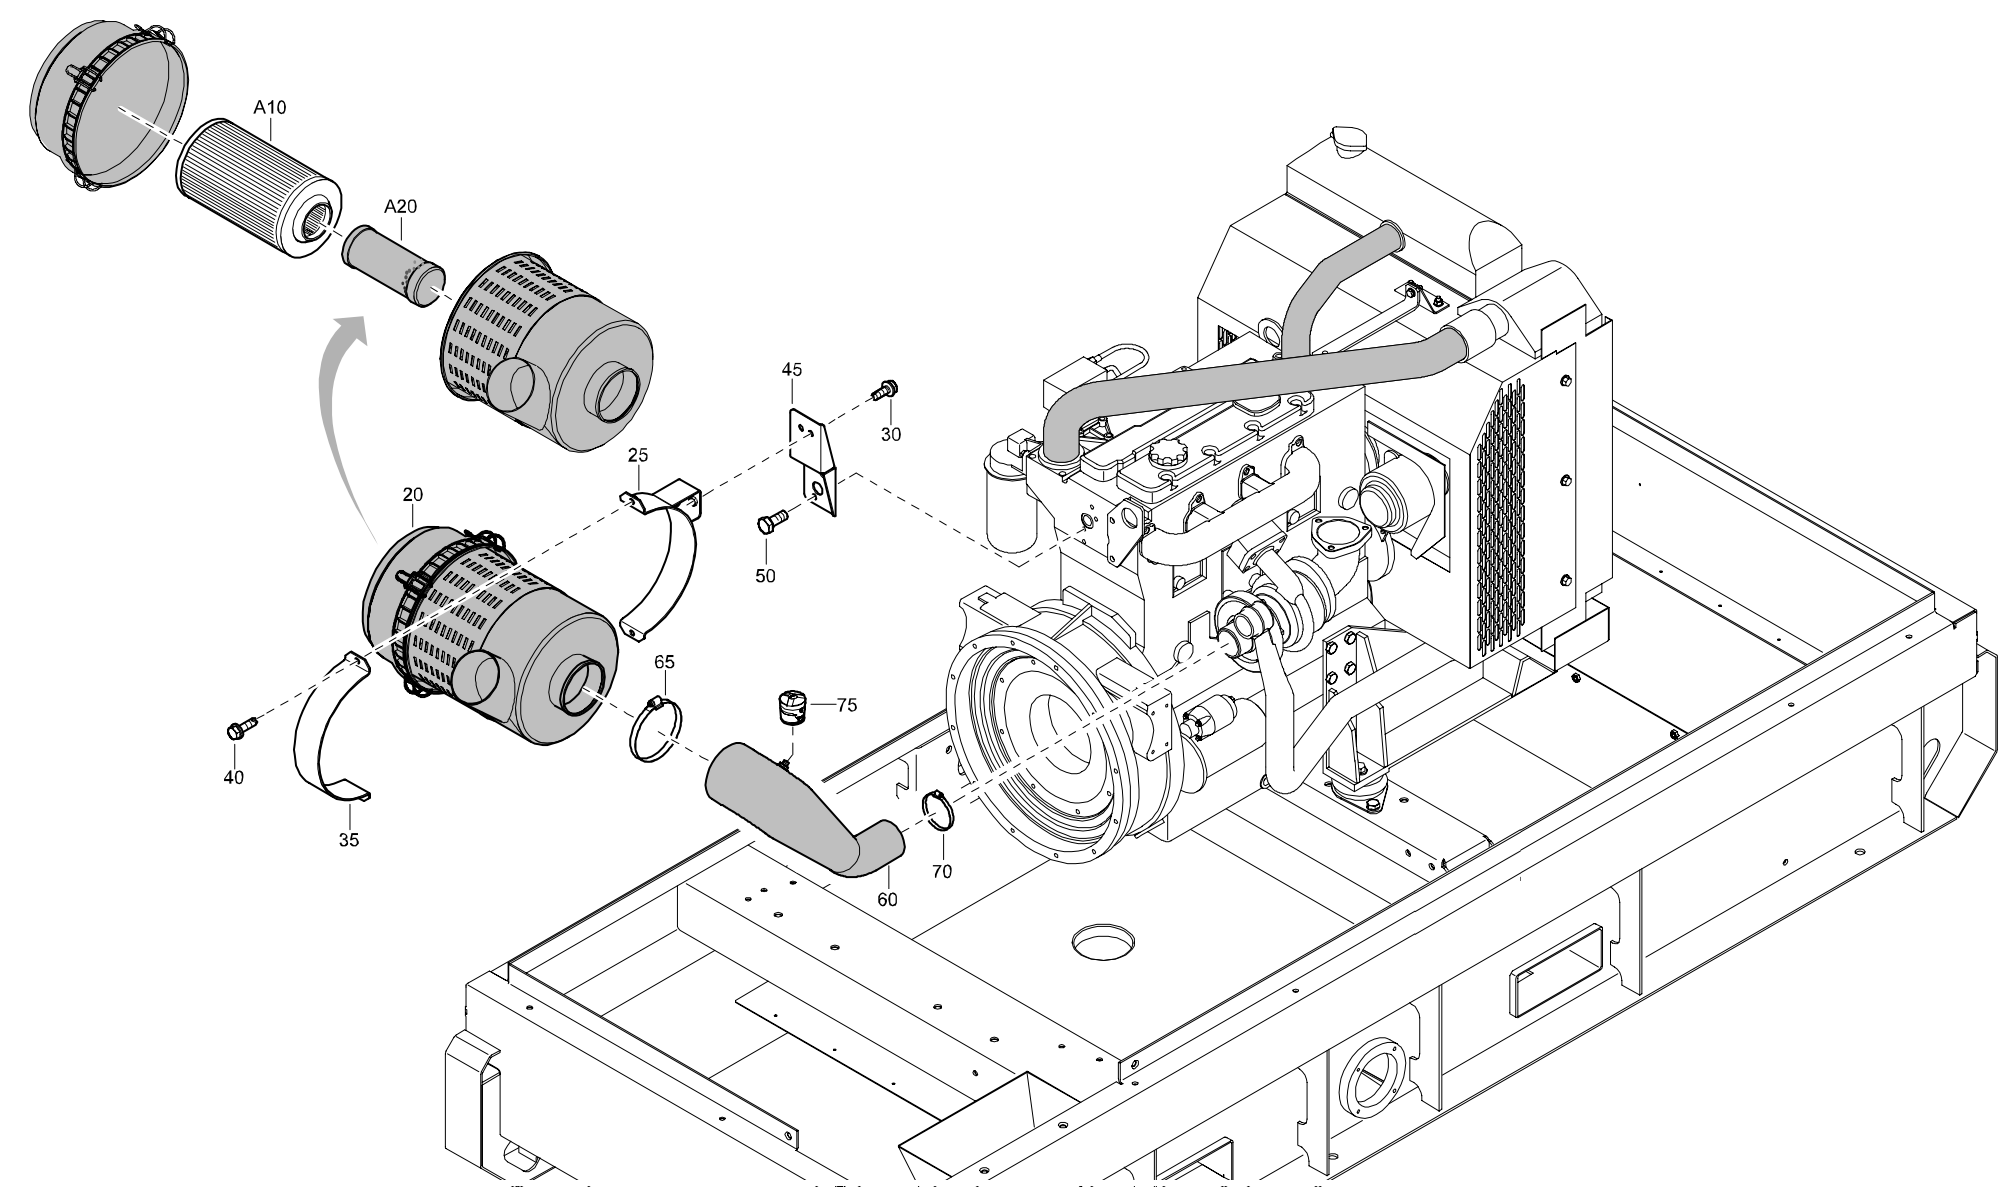

AIR INLET - STANDARD


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 0854 00	FILTER AIR	1								
•A10	1613 7408 00	AIR FILTER ELEMENT	1								
•A20	1615 8928 00	FILTER ELEMENT	1								
25	1604 5017 00	SUPPORT	1								
30	1619 2766 00	HEX. HEAD SCREW	2								
35	1604 5070 00	CLAMP	1								
40	1619 5337 01	HEX. HEAD SCREW	2								
45	1626 2195 00	SUPPORT	1								
50	0147 1360 03	HEX. HEAD SCREW	2								
60	1626 2277 00	AIR INLET	1								
65	0347 6115 00	HOSE CLAMP	1								
70	0347 6100 04	HOSE CLAMP	1								
75	1613 7912 03	INDICATOR	1								

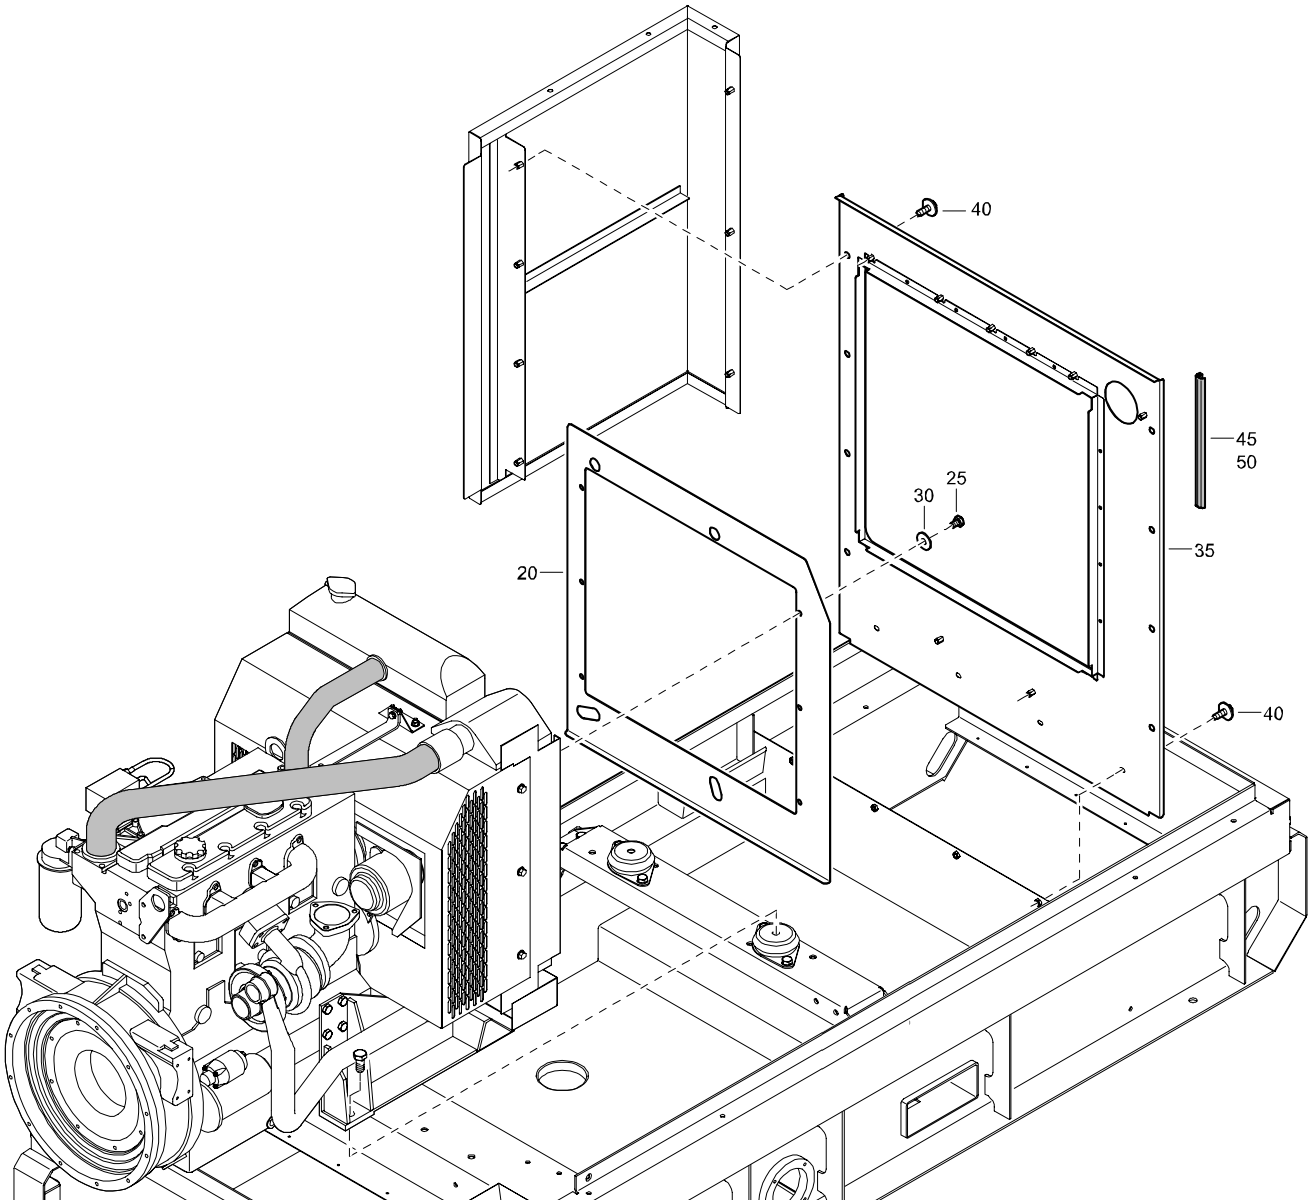

COOLING SYSTEM - STANDARD


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 1739 01	PLATE	1								
25	0147 1319 03	HEX. HEAD SCREW	6								
30	0300 8019 00	PLAIN WASHER	6								
35	1626 1778 01	PLATE	1								
40	1615 5664 00	HEX. HEAD SCREW	12								
45	1619 2665 00	SEAL	AR								
50	1619 2665 00	SEAL	AR								

EXHAUST SYSTEM - WITHOUT SPARK ARRESTOR - STANDARD

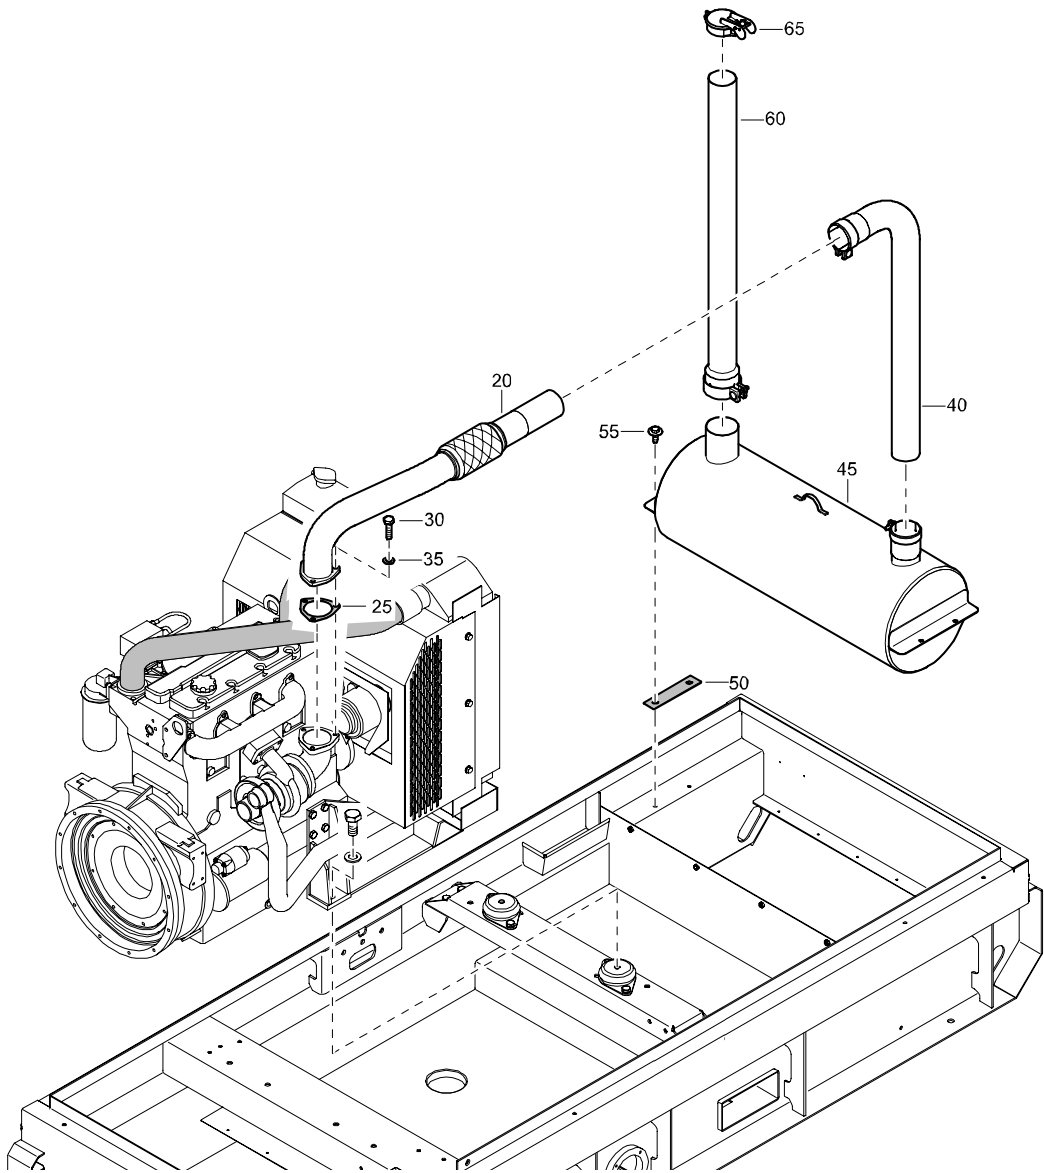

REF	PART NUMBER	DESIGNATION	QTY
20	1626 2355 01	PIPE EXHAUST	1
25	1604 6990 00	GASKET	1
30	0147 1363 03	HEX. HEAD SCREW	3
35	0301 2344 00	PLAIN WASHER	3
40	1626 1766 00	PIPE EXHAUST	1
45	1626 1794 00	MUFFLER	1
50	1626 2404 00	GASKET	2
55	1615 5664 00	HEX. HEAD SCREW	4
60	1626 1793 00	PIPE EXHAUST	1
65	1615 7214 00	EXHAUST COVER	1


ALTERNATOR AND ACCESSORIES - STANDARD

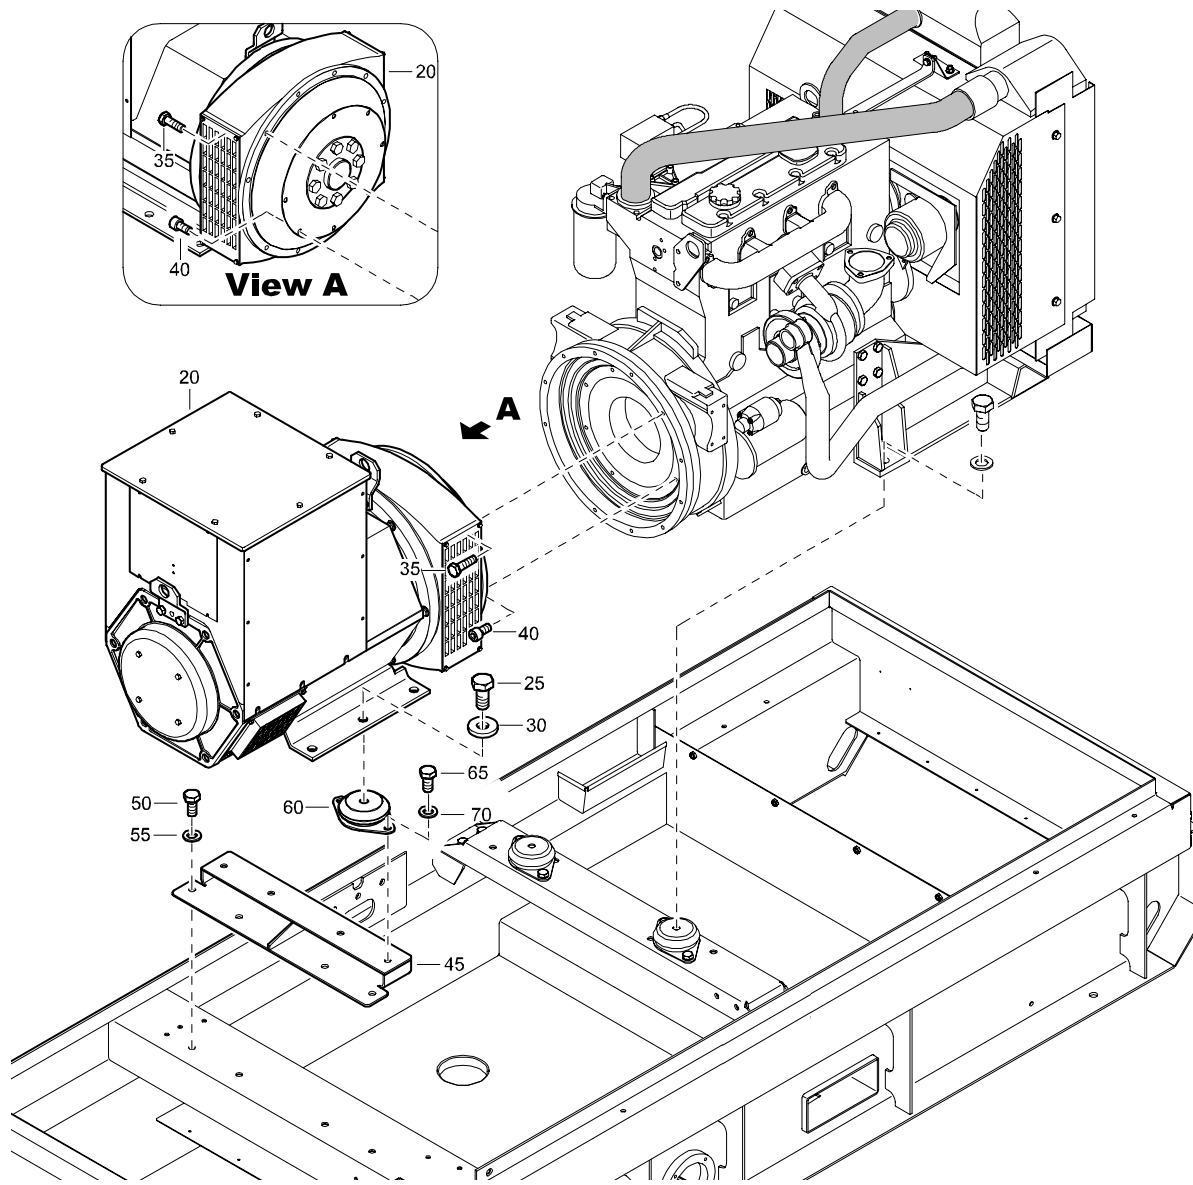


REF	PART NUMBER	DESIGNATION	QTY
20	1626 2289 00	ALTERNATOR	1
25	0147 1958 96	HEX. HEAD SCREW	2
30	0300 0276 23	PLAIN WASHER	2
35	0147 1363 03	HEX. HEAD SCREW	12
40	0211 1360 03	HEX SOCK. SCREW	8
45	1626 2544 00	SUPPORT	1
50	0147 1958 75	HEX. HEAD SCREW	4
55	0301 2358 00	PLAIN WASHER	2
60	1619 5044 00	VIBR. DAMPER	2
65	0147 1958 75	HEX. HEAD SCREW	4
70	0301 2358 00	PLAIN WASHER	4

FRAME AND MOUNTS - STANDARD


REF	PART NUMBER	DESIGNATION	QTY
20	1626 1413 90	FRAME & MOUNTS (For details see page 42)	1
25	1089 0659 09	SENSOR LEVEL	1
27	0147 1213 00	SCREW	5

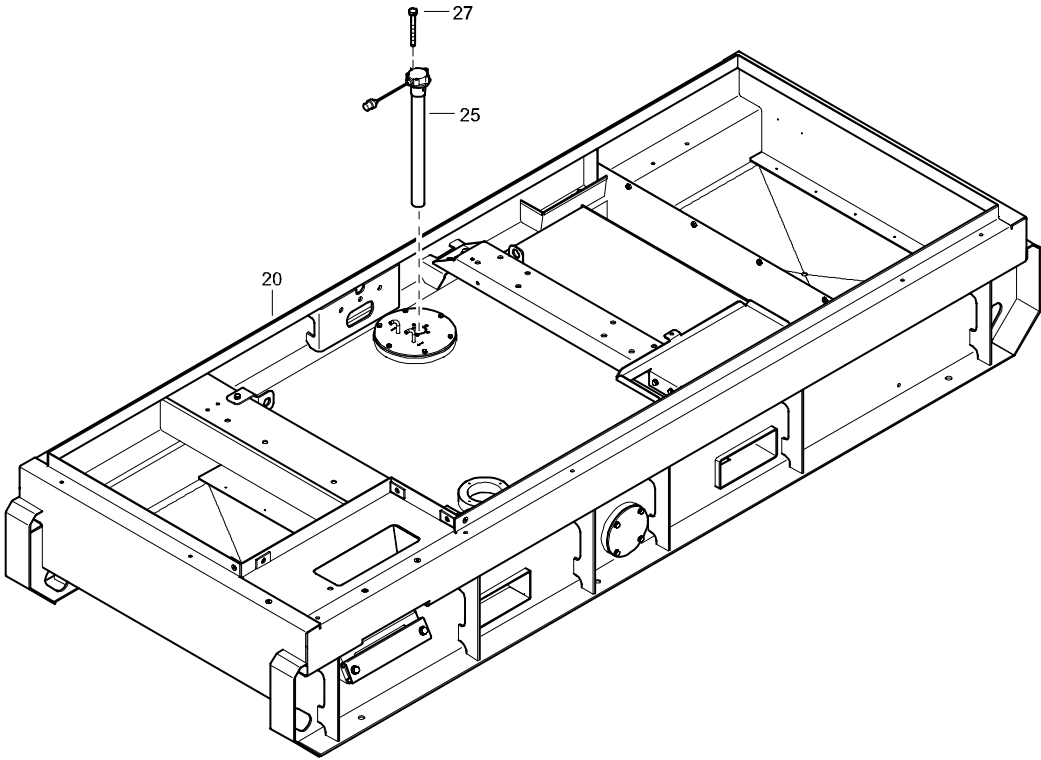

CUBICLE - 400V, 50HZ - STANDARD

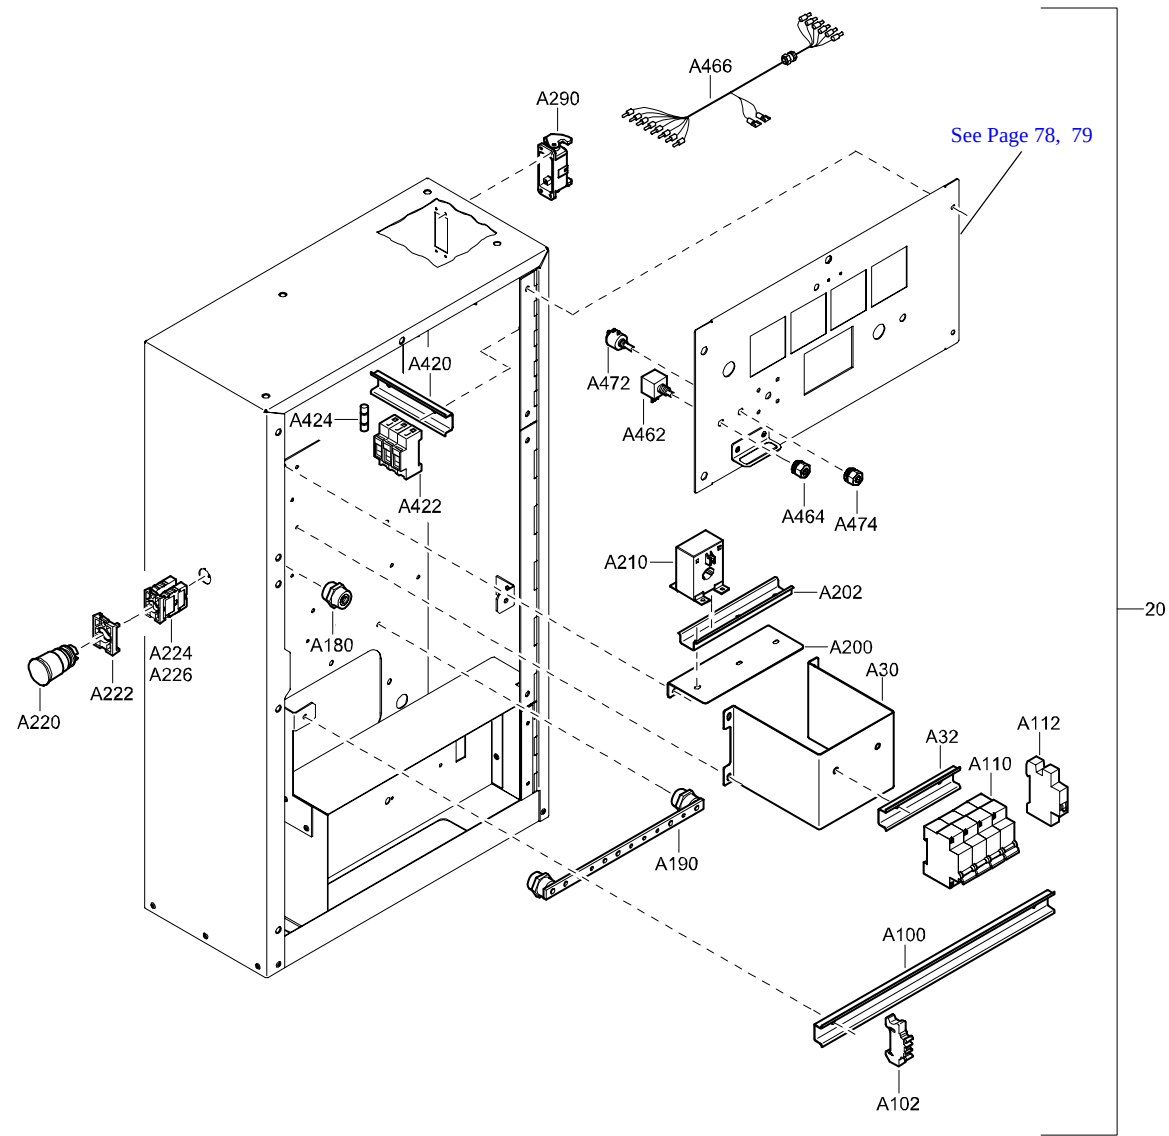



REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 10	CUBICLE QAS80	1
•A30	1626 2482 00	SUPPORT	1
•A32	0090 1400 02	RAIL	AR
•A100	0090 1400 02	RAIL	AR
•A102	1089 0577 82	PLATE	6
•A110	1089 9472 65	CIRCUIT BREAKER	1
•A112	1089 9473 13	SHUNT TRIP COIL	1
•A180	1089 9385 02	ISOLATOR	1
•A190	1604 2283 00	EARTH RAIL ASS'Y	1
•A200	1626 2486 00	SUPPORT	1
•A202	0090 1400 02	RAIL	AR
•A210	1089 9357 61	CURRENT TRANSFORMER	3
•A220	1089 9622 09	ACTUATOR	1
•A222	1089 9622 04	SWITCH SELECTOR	1
•A224	1089 9622 05	CONTACT	1
•A226	1089 9622 08	CONTACT	1
•A290	1088 0029 50	HOUSING	1
•A420	0090 1400 02	RAIL	AR
•A422	1089 9333 04	FUSE HOLDER	1
•A424	1089 9332 01	FUSE	1
•A462	1089 9371 05	POTMETER	1
•A464	1089 9371 50	SPINDLE LOCK	1
•A466	1604 6024 02	WIRE HARNESS	1
•A472	1089 9371 21	POTMETER	1
•A474	1089 9371 50	SPINDLE LOCK	1

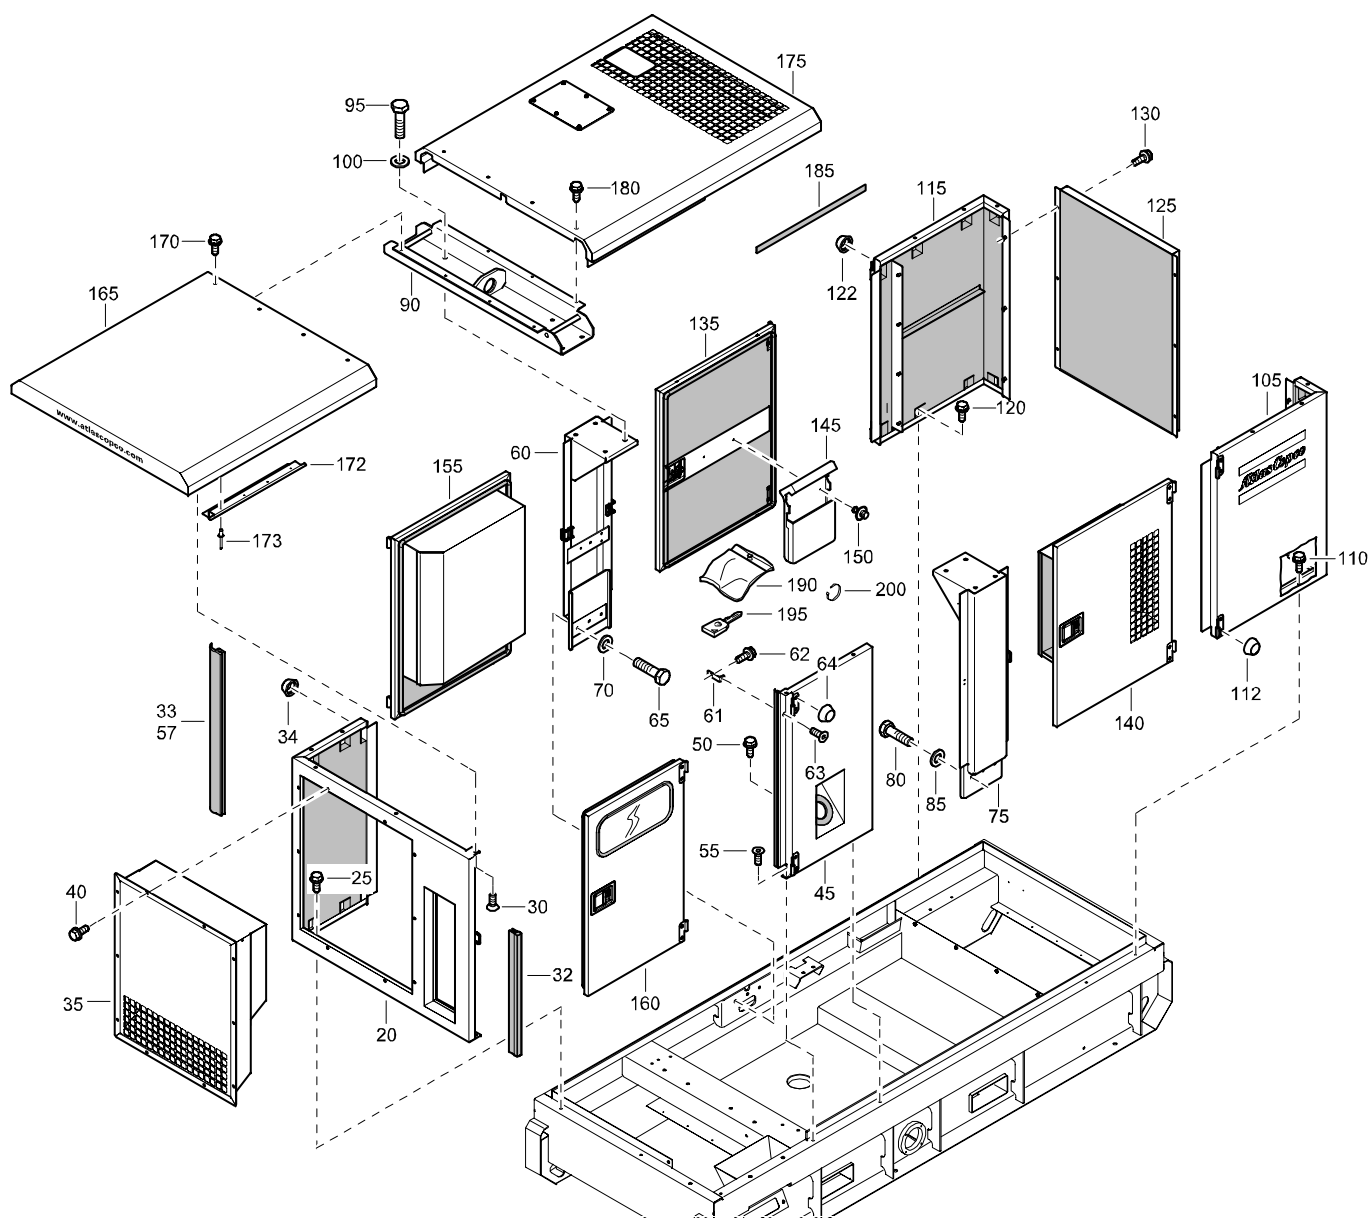

BODYWORK - STANDARD

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 0840 81	CORNER CUBICLE ASSY (For details see page 40)	1	135	1626 2310 81	DOOR LEFT (PLAIN) (For details see page 49)	1				
25	1619 2766 00	HEX. HEAD SCREW	8	140	1626 2317 81	DOOR RH (AIR INLET) (For details see page 52)	1				
30	0216 1324 03	HEX SOCK. SCREW	2	145	1604 2206 00	HOLDER (DOCUMENT)	1				
32	1202 6584 00	SEAL	AR	150	1615 5556 00	RIVET	2				
33	1604 4318 00	SEAL	AR	155	1626 2405 81	DOOR LH (AIR INLET) (For details see page 54)	1				
34	1613 3672 00	CAP	2	160	1626 2316 81	DOOR CUBICLE (For details see page 51)	1				
35	1626 2326 81	BAFFLE ASSY(AIR INLET) (For details see page 53)	1	165	1626 0879 81	ROOF ALTERNATOR (For details see page 41)	1				
40	1619 2766 00	HEX. HEAD SCREW	10	170	1619 2766 00	HEX. HEAD SCREW	4				
45	1626 1728 81	PANEL ASSY. FUEL FUNNEL (For details see page 43)	1	172	1626 2298 00	COVER	1				
50	1619 2766 00	HEX. HEAD SCREW	3	173	0129 3172 01	BLIND RIVET	4				
55	0216 1324 03	HEX SOCK. SCREW	2	175	1626 1736 81	ROOF ENGINE (For details see page 46)	1				
57	1604 4318 00	SEAL	AR	180	1619 2766 00	HEX. HEAD SCREW	4				
60	1626 1966 81	BEAM ASSY LEFT (LIFTING) (For details see page 47)	1	185	1615 7057 00	SEAL	AR				
61	1626 3026 00	SUPPORT	1	190	0017 9861 53	PLASTIC BAG	1				
62	1619 2766 00	HEX. HEAD SCREW	1	195	1615 7271 00	KEY	2				
63	0216 1324 03	HEX SOCK. SCREW	1	200	1088 1301 03	CABLE STRIP	1				
64	1613 3672 00	CAP	2								
65	0147 1403 03	HEX. HEAD SCREW	3								
70	0301 2358 00	PLAIN WASHER	3								
75	1626 1966 91	BEAM ASSY RIGHT (LIFTING) (For details see page 48)	1								
80	0147 1403 03	HEX. HEAD SCREW	3								
85	0301 2358 00	PLAIN WASHER	3								
90	1626 0842 00	BEAM	1								
95	0147 1403 03	HEX. HEAD SCREW	8								
100	0301 2358 00	PLAIN WASHER	8								
105	1626 1729 81	CORNER ASSY. RIGHT (For details see page 44)	1								
110	1619 2766 00	HEX. HEAD SCREW	6								
112	1613 3672 00	CAP	2								
115	1626 1729 91	CORNER ASSY. LEFT (For details see page 45)	1								
120	1619 2766 00	HEX. HEAD SCREW	6								
122	1613 3672 00	CAP	2								
125	1626 2314 80	PANEL (For details see page 50)	1								
130	1619 2766 00	HEX. HEAD SCREW	6								

FUEL SYSTEM - STANDARD

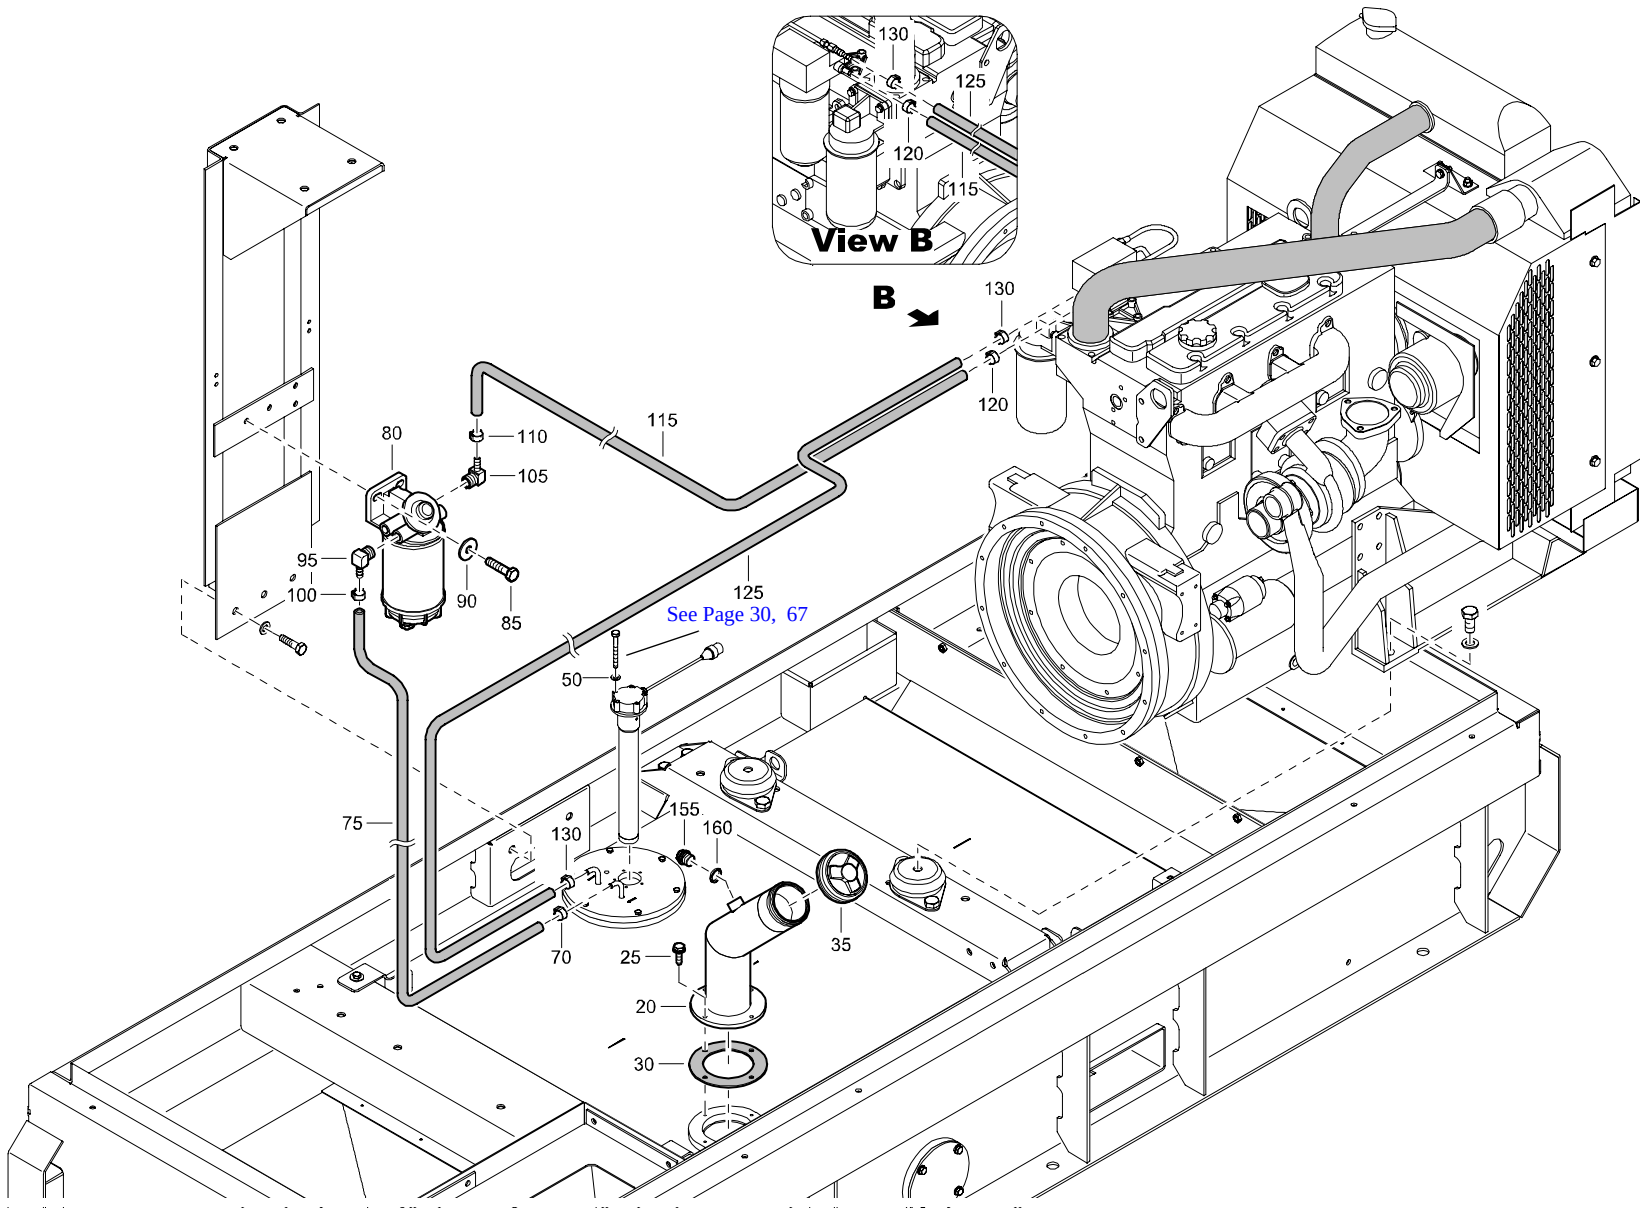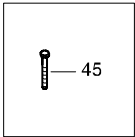

FUEL SYSTEM - STANDARD

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 2344 01	NECK FILLER	1								
25	1619 5898 01	HEX. HEAD SCREW	4								
30	1604 2780 02	GASKET	1								
35	1615 6947 00	COVER	1								
45	0147 1213 00	SCREW	5								
50	0301 2318 00	PLAIN WASHER	5								
70	1604 4137 00	HOSE CLIP	1								
75	0075 4005 55	FUEL HOSE	AR								
80	1615 7397 00	FUELFILTER (WATERSEP.)	1								
85	0147 1326 03	HEX. HEAD SCREW	2								
90	0300 8019 00	PLAIN WASHER	2								
95	1615 8933 00	HOSE NIPPLE	1								
100	1604 4137 00	HOSE CLIP	1								
105	1615 8933 00	HOSE NIPPLE	1								
110	1604 4137 00	HOSE CLIP	1								
115	0075 4005 55	FUEL HOSE	AR								
120	1604 4137 00	HOSE CLIP	1								
125	0075 4005 55	FUEL HOSE	AR								
130	1604 4137 00	HOSE CLIP	2								
155	0686 3716 02	HEXAGON PLUG	1								
160	0661 1033 00	SEALING WASHER	1								


Atlas Copco



MARKINGS - STANDARD


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1079 9901 87	LABEL	1								
25	-	PLATE DATA (Not available separately)	1								
30	0129 3270 34	BLIND RIVET	4								
35	1079 9902 58	WARNING LABEL	1								
40	1079 9903 61	LABEL	1								
45	1079 9927 35	SERVICE LABEL	1								
55	1604 6073 00	LABEL	2								
60	1604 3317 11	LABEL NOISE	1								

ELECTRICAL SYSTEM - WITHOUT BATTERY SWITCH - STANDARD

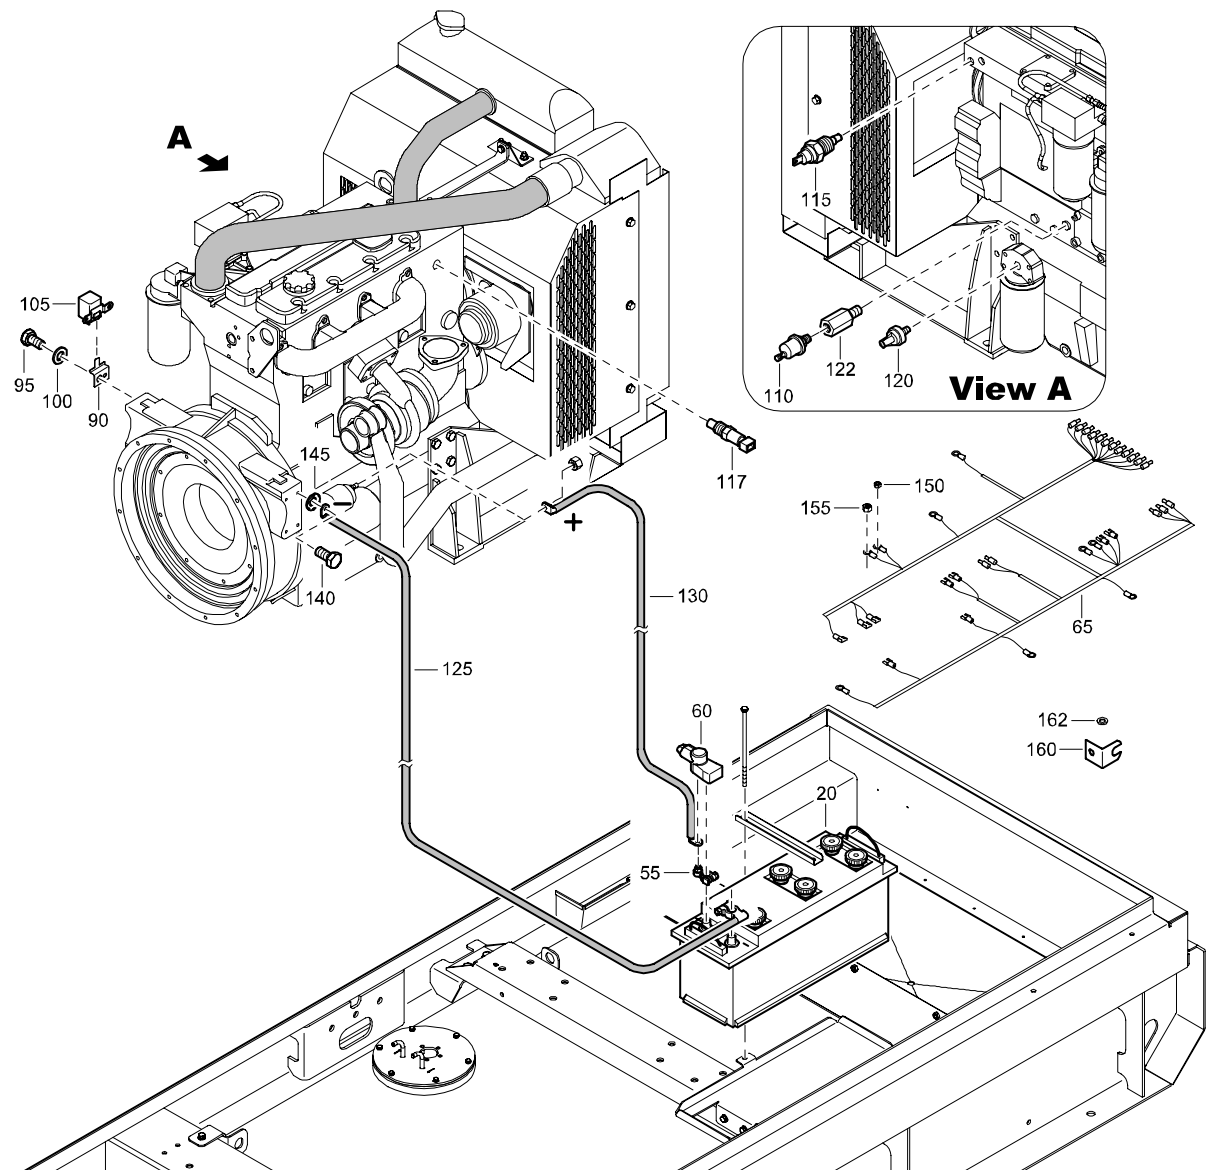


REF	PART NUMBER	DESIGNATION	QTY
20	0975 8300 17	BATTERY	1
55	1604 5043 00	CLAMP	1
60	1604 7216 00	COVER	1
65	1604 5042 05	WIRE HARNESS	1
90	1615 9849 00	SUPPORT	1
95	0147 1398 03	HEX. HEAD SCREW	1
100	0301 2358 00	PLAIN WASHER	1
105	1089 0585 01	RELAY	1
110	1089 0565 13	OILPRESSURE SENSOR	1
115	1089 0567 14	TEMPERATURE SENSOR	1
117	1089 0655 10	SWITCH TEMP.	1
120	1089 0579 51	OIL PRESS.SWITCH+PROT.BOOT	1
122	1604 4489 00	NIPPLE	1
125	1626 3079 00	CABLE	1
130	1626 2639 00	CABLE	1
140	0147 1398 03	HEX. HEAD SCREW	1
145	1088 0019 03	CONTACT WASHER	1
150	0266 2107 00	HEXAGON NUT	1
155	0266 2108 00	HEXAGON NUT	1
160	1613 0809 00	BRACKET	5
162	0301 2358 00	PLAIN WASHER	2

CUBICLE - 400/480V - DUAL FREQUENCY - STANDARD

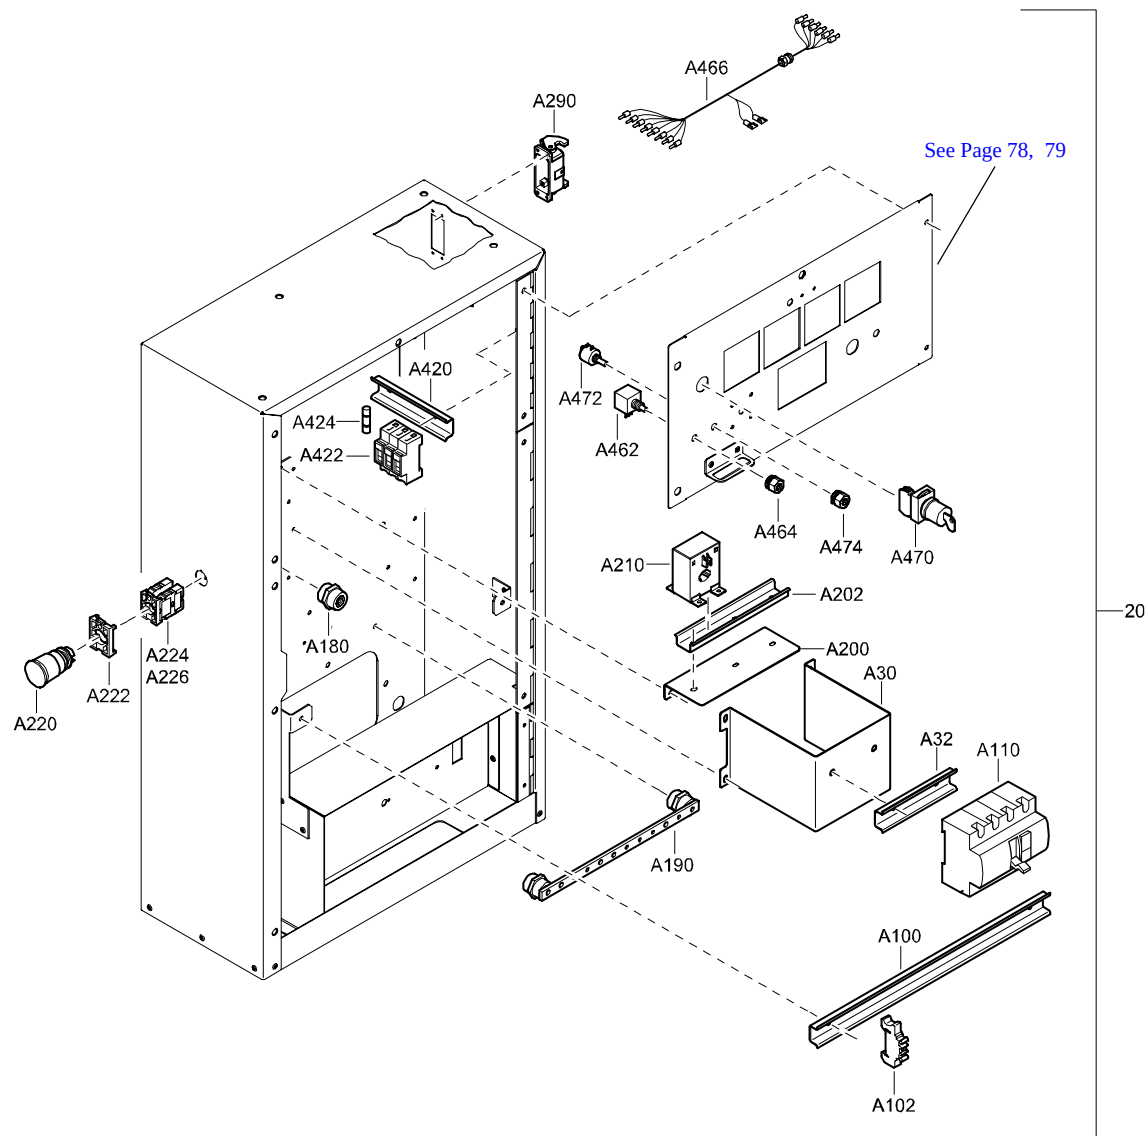


REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 11	CUBICLE QAS80	1
•A30	1626 2482 00	SUPPORT	1
•A32	0090 1400 02	RAIL	AR
•A100	0090 1400 02	RAIL	AR
•A102	1089 0577 82	PLATE	6
•A110	1089 9472 75	CIRCUIT BREAKER	1
•A180	1089 9385 02	ISOLATOR	1
•A190	1604 2283 00	EARTH RAIL ASS'Y	1
•A200	1626 2486 00	SUPPORT	1
•A202	0090 1400 02	RAIL	AR
•A210	1089 9357 61	CURRENT TRANSFORMER	3
•A220	1089 9622 09	ACTUATOR	1
•A222	1089 9622 04	SWITCH SELECTOR	1
•A224	1089 9622 05	CONTACT	1
•A226	1089 9622 08	CONTACT	1
•A290	1088 0029 50	HOUSING	1
•A420	0090 1400 02	RAIL	AR
•A422	1089 9333 04	FUSE HOLDER	1
•A424	1089 9332 01	FUSE	1
•A462	1089 9371 05	POTMETER	1
•A464	1089 9371 50	SPINDLE LOCK	1
•A466	1604 6024 02	WIRE HARNESS	1
•A470	1089 9422 04	KEY SWITCH	1
•A472	1089 9371 21	POTMETER	1
•A474	1089 9371 50	SPINDLE LOCK	1

CORNER ASSEMBLY - CUBICLE - STANDARD

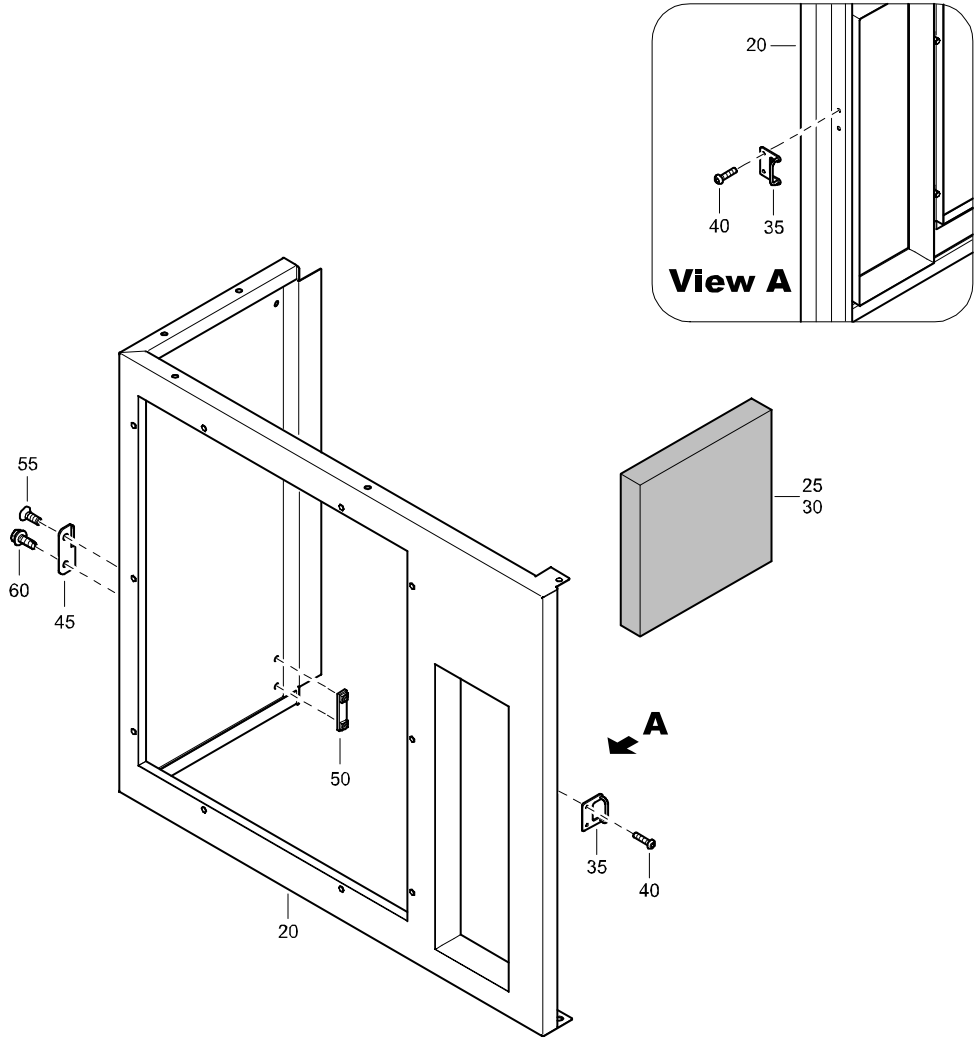


REF	PART NUMBER	DESIGNATION	QTY
-	1626 0840 81	CORNER ASSY CUBICLE (From page 32)	
•20	1626 0840 01	PANEL	1
•25	-	SILENCING FOAM (30 mm)	1
•30	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•35	1626 3025 00	CATCH	1
•40	0215 0003 89	SCREW	2
•45	1604 3430 00	HINGE	2
•50	1615 5684 00	BRACKET	2
•55	0216 1324 03	HEX SOCK. SCREW	2
•60	1619 2766 00	HEX. HEAD SCREW	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	

ROOF - ALTERNATOR - STANDARD

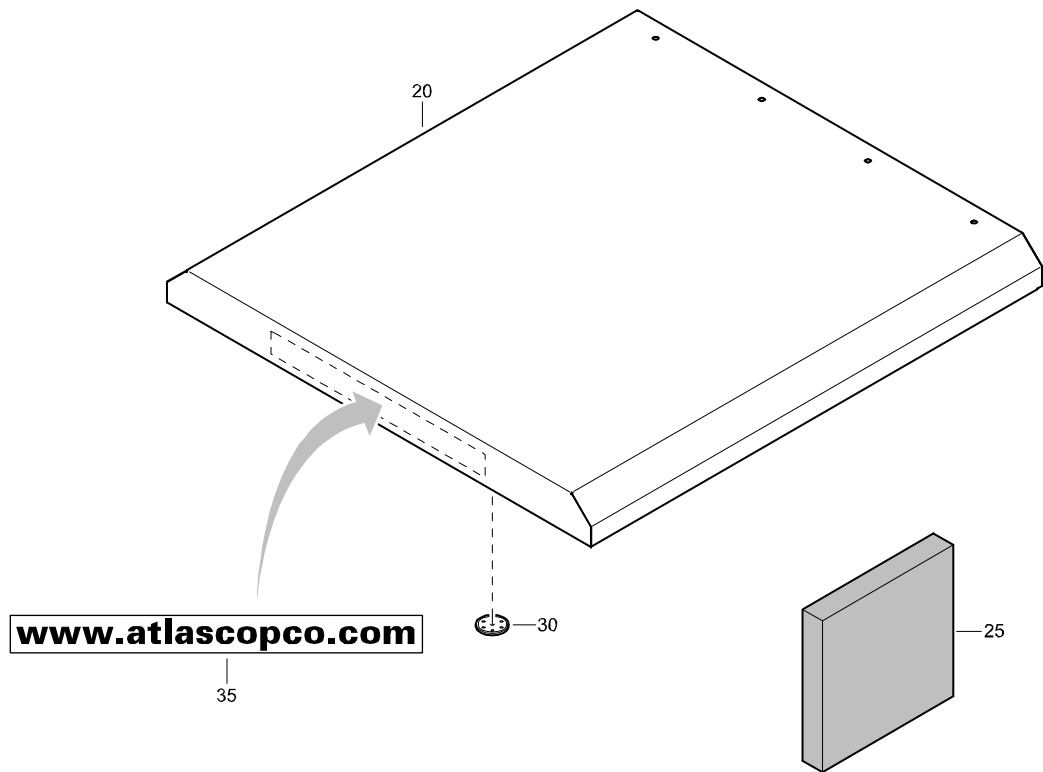


REF	PART NUMBER	DESIGNATION	QTY
-	1626 0879 81	ROOF ALTERNATOR (From page 32)	
•20	1626 0879 01	ROOF	1
•25	-	INSULATION SILENCING FOAM (30 mm)	2
•30	1615 7884 00	CLIP	16
•35	1079 9921 03	INFORMATION LABEL	1
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	

FRAME AND MOUNTS - STANDARD

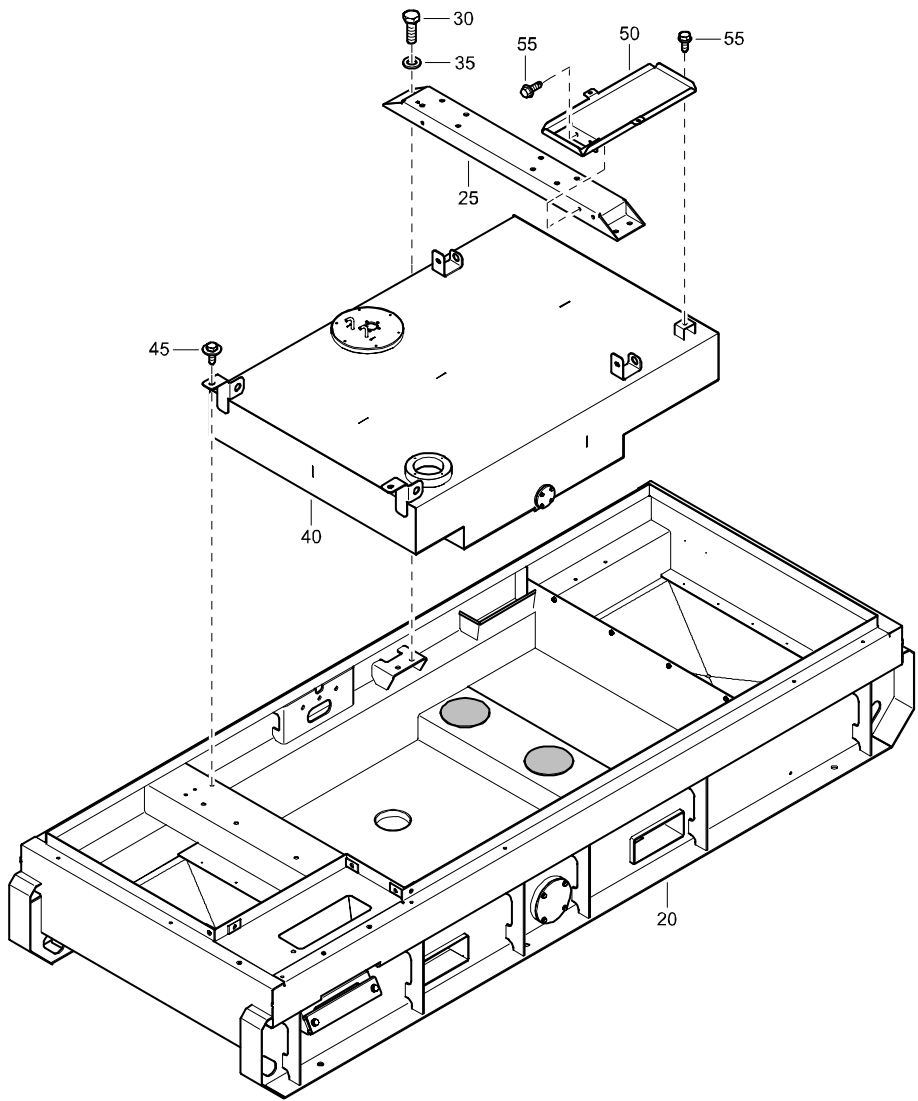


REF	PART NUMBER	DESIGNATION	QTY
-	1626 1413 90	FRAME AND MOUNTS(From page 30)	
•20	1626 1413 81	FRAME	1
		(For details see page 55)	
•25	1626 1700 01	SUPPORT ENGINE	1
•30	0147 1401 03	HEX. HEAD SCREW	4
•35	0301 2358 00	PLAIN WASHER	4
•40	1626 2343 81	TANK FUEL	1
		(For details see page 56)	
•45	1615 5664 00	HEX. HEAD SCREW	4
•50	1626 2194 01	SUPPORT	1
•55	1619 2766 00	HEX. HEAD SCREW	3

PANEL ASSEMBLY - FUEL FUNNEL - STANDARD

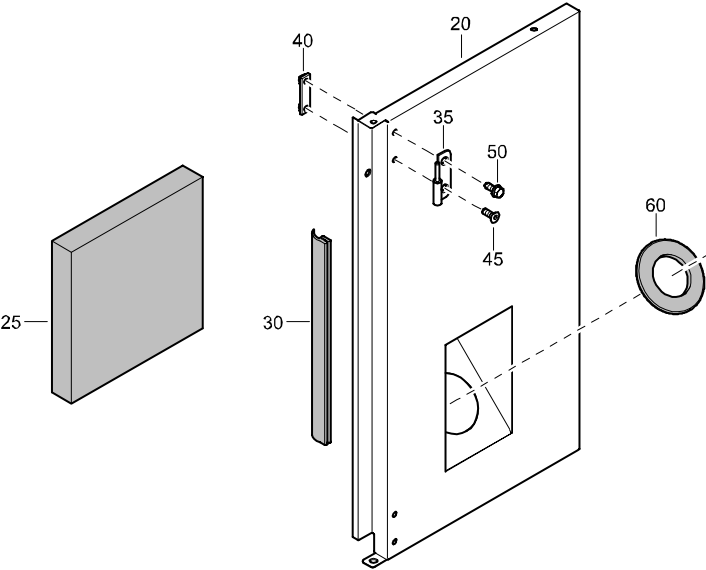


REF	PART NUMBER	DESIGNATION	QTY
-	1626 1728 81	PANEL ASSY. FUEL FUNNEL (From page 32)	
•20	1626 1728 01	PANEL	1
•25	-	INSULATION	1
		SILENCING FOAM 50 mm)	
•30	1604 4318 00	SEAL	AR
•35	1604 3430 00	HINGE	2
•40	1615 5684 00	BRACKET	2
•45	0216 1324 03	HEX SOCK. SCREW	2
•50	1619 2766 00	HEX. HEAD SCREW	2
•60	1604 0248 00	RUBBER RING	1
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

CORNER ASSEMBLY - RIGHT - STANDARD

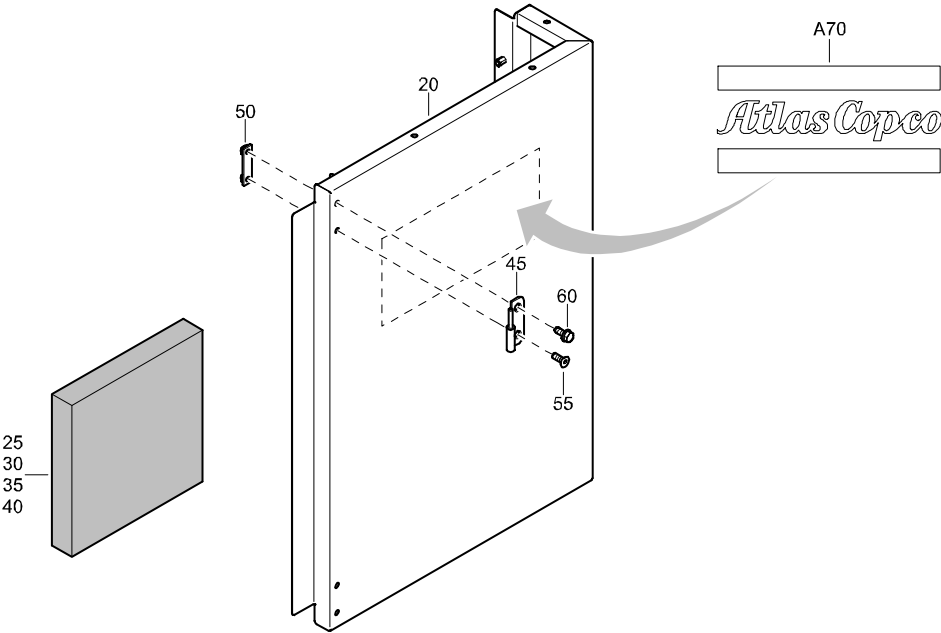


REF	PART NUMBER	DESIGNATION	QTY
-	1626 1729 81	CORNER ASSY. RIGHT(From page 32)	
•20	1626 1729 01	CORNER	1
••A70	0690 1140 01	HOUSE MARK	1
•25	-	INSULATION	1
		SILENCING FOAM (50 mm)	
•30	-	INSULATION	1
		SILENCING FOAM (50 mm)	
•35	-	INSULATION	1
		SILENCING FOAM (50 mm)	
•40	-	INSULATION	1
		SILENCING FOAM (50 mm)	
•45	1604 3430 00	HINGE	2
•50	1615 5684 00	BRACKET	2
•55	0216 1324 03	HEX SOCK. SCREW	2
•60	1619 2766 00	HEX. HEAD SCREW	2
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

CORNER ASSEMBLY - LEFT - STANDARD

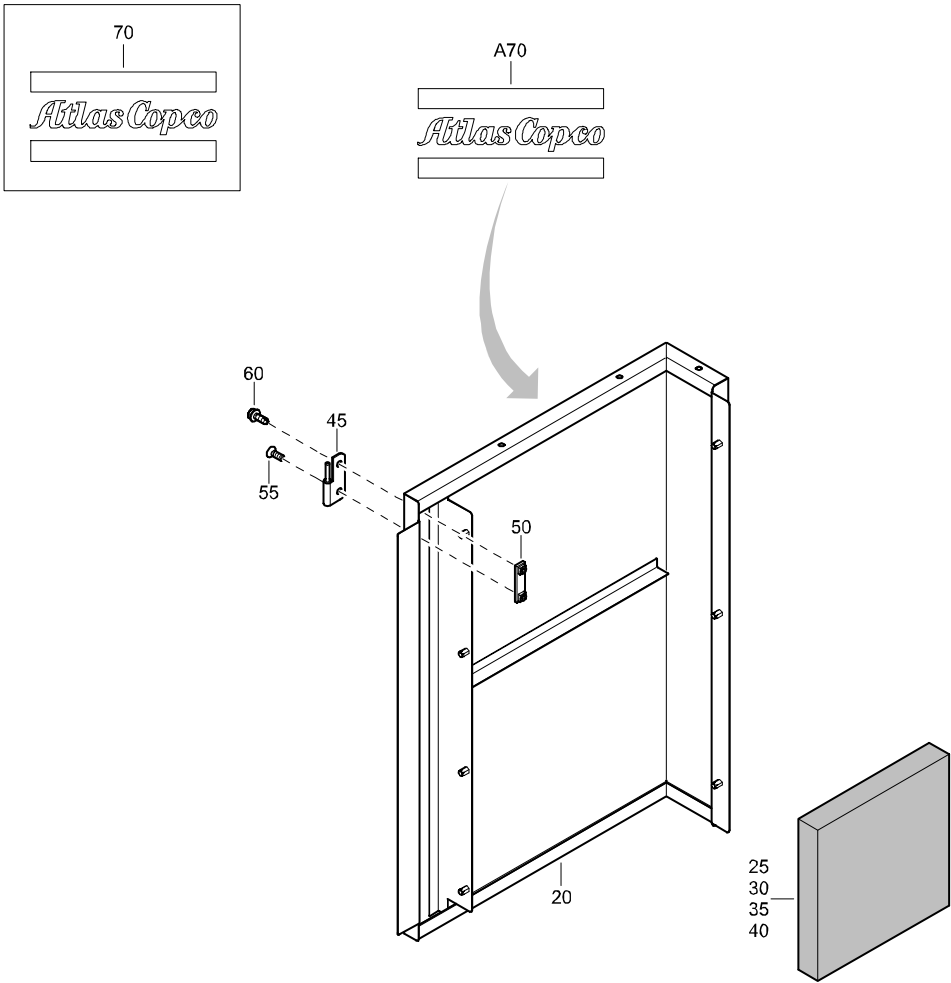

REF	PART NUMBER	DESIGNATION	QTY
-	1626 1729 91	CORNER ASSY. LEFT (From page 32)	
•20	1626 1729 01	CORNER	1
••A70	0690 1140 01	HOUSE MARK	1
•25	-	INSULATION	1
		SILENCING FOAM (50 mm)	
•30	-	INSULATION	1
		SILENCING FOAM (50 mm)	
•35	-	INSULATION	1
		SILENCING FOAM (50 mm)	
•40	-	INSULATION	1
		SILENCING FOAM (50 mm)	
•45	1604 3428 00	HINGE	2
•50	1615 5684 00	BRACKET	2
•55	0216 1324 03	HEX SOCK. SCREW	2
•60	1619 2766 00	HEX. HEAD SCREW	2
•70	0690 1140 01	HOUSE MARK	1
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	


ROOF - ENGINE - STANDARD

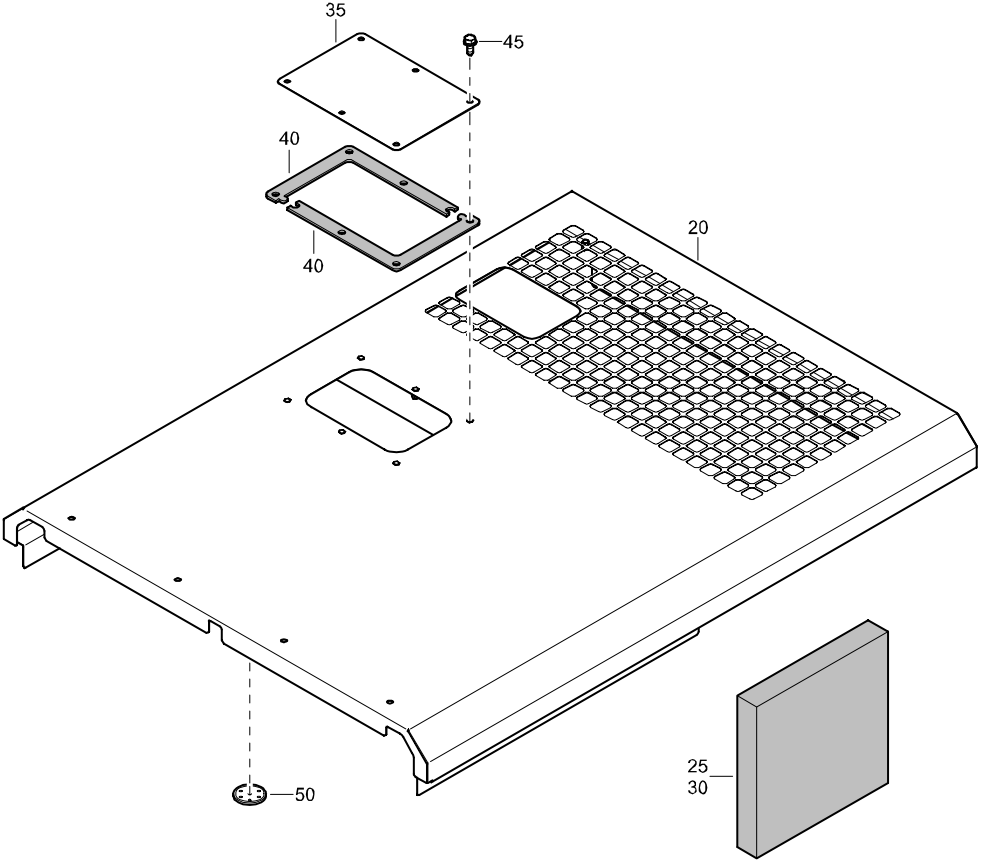

REF	PART NUMBER	DESIGNATION	QTY
-	1626 1736 81	ROOF ENGINE (From page 32)	
•20	1626 1736 01	ROOF	1
•25	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•30	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•35	1626 2196 00	COVER COOLER	1
•40	1626 2197 00	SEAL GASKET	2
•45	1619 2766 00	HEX. HEAD SCREW	6
•50	1615 7884 00	CLIP	15
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	


LIFTING BEAM ASSEMBLY - LEFT - STANDARD

REF	PART NUMBER	DESIGNATION	QTY
-	1626 1966 81	BEAM ASSY LEFT (From page 32)	
•20	1626 1966 01	BEAM	1
•25	1604 5031 00	BRACKET	2
•30	1604 5079 00	SPACER	2
•35	0215 0003 89	SCREW	4
•40	0301 2321 00	PLAIN WASHER	4
•45	0291 1108 00	LOCKNUT	4

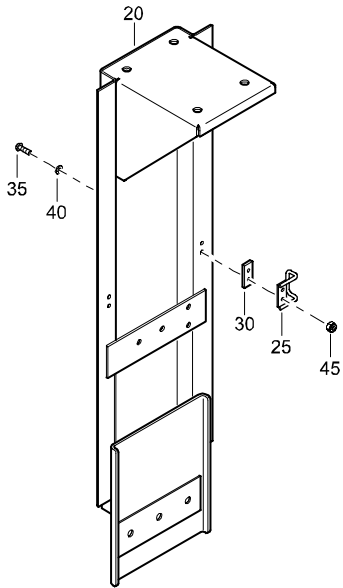


LIFTING BEAM ASSEMBLY - RIGHT - STANDARD

REF	PART NUMBER	DESIGNATION	QTY
-	1626 1966 91	BEAM ASSY RIGHT (From page 32)	
•20	1626 1966 01	BEAM	1
•25	1604 5031 00	BRACKET	1
•30	1604 5079 00	SPACER	1
•35	0215 0003 89	SCREW	2
•40	0301 2321 00	PLAIN WASHER	2
•45	0291 1108 00	LOCKNUT	2

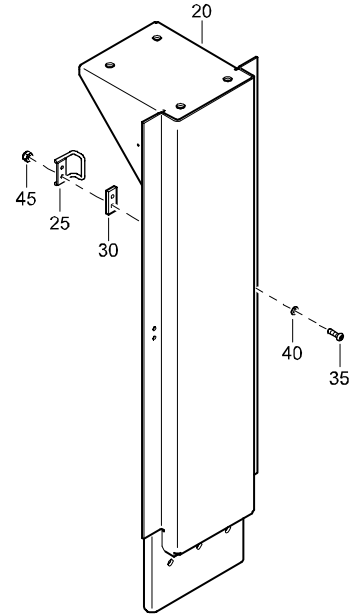


DOOR - LEFT - STANDARD

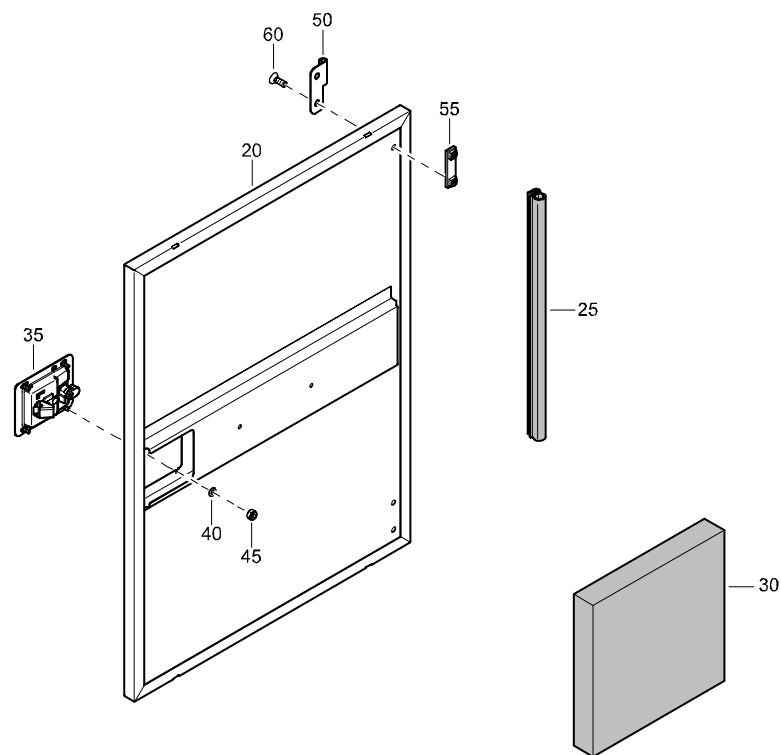


REF	PART NUMBER	DESIGNATION	QTY
-	1626 2310 81	DOOR LEFT (From page 32)	
•20	1626 2310 01	DOOR	1
•25	1604 4317 00	SEAL	AR
•30	-	INSULATION	2
		SILENCING FOAM (30 mm)	
•35	1615 6967 03	HANDLE	1
•40	0301 2321 00	PLAIN WASHER	4
•45	0291 1108 00	LOCKNUT	4
•50	1604 3429 00	HINGE	2
•55	1615 5684 00	BRACKET	2
•60	0216 1324 03	HEX SOCK. SCREW	4
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	

PANEL - STANDARD

REF	PART NUMBER	DESIGNATION	QTY
-	1626 2314 80	PANEL (From page 32)	
•20	1626 2314 00	PANEL	1
•25	-	INSULATION	1
		SILENCING FOAM (50 mm)	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

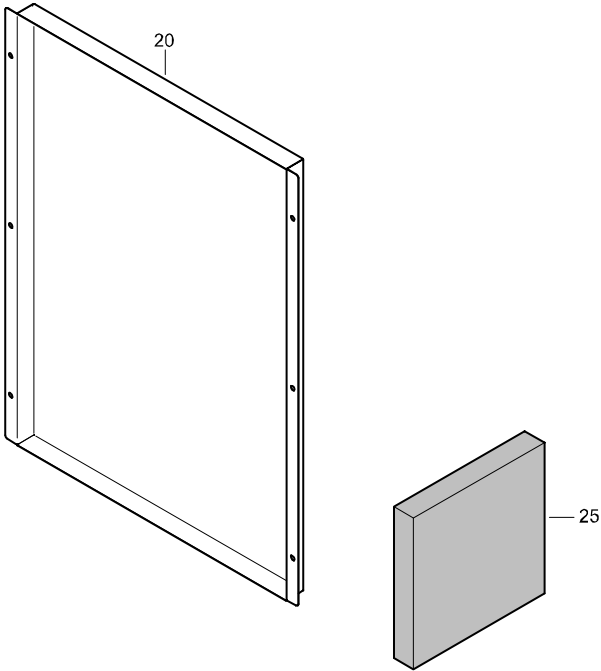


DOOR CUBICLE - STANDARD

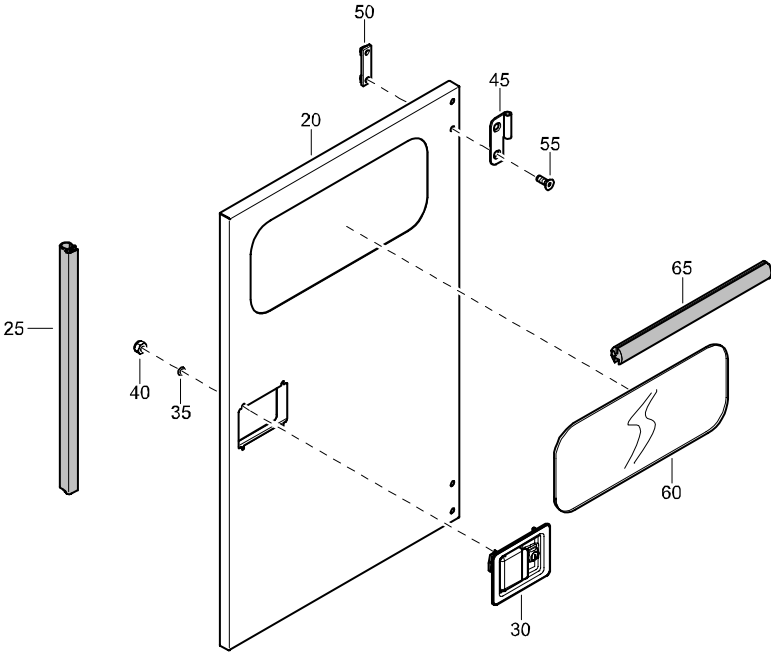


REF	PART NUMBER	DESIGNATION	QTY
-	1626 2316 81	DOOR CUBICLE	(From page 32)
•20	1626 2316 01	DOOR	1
•25	1604 4317 00	SEAL	AR
•30	1615 6967 03	HANDLE	1
•35	0301 2321 00	PLAIN WASHER	4
•40	0291 1108 00	LOCKNUT	4
•45	1604 3431 00	HINGE	2
•50	1615 5684 00	BRACKET	2
•55	0216 1324 03	HEX SOCK. SCREW	4
•60	1604 4922 00	WINDOW	1
•65	1604 4541 00	SEAL	AR

DOOR - RIGHT- STANDARD

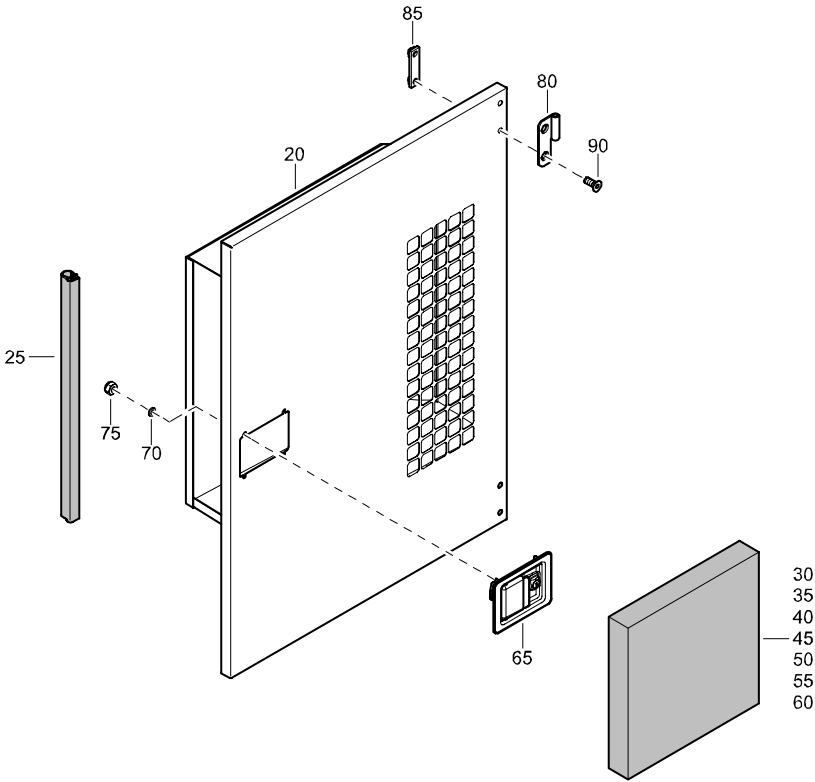



REF	PART NUMBER	DESIGNATION	QTY
-	1626 2317 81	DOOR RIGHT (From page 32)	
•20	1626 2317 01	DOOR	1
•25	1604 4317 00	SEAL	AR
•30	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•35	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•40	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•45	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•50	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•55	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•60	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•65	1615 6967 03	HANDLE	1
•70	0301 2321 00	PLAIN WASHER	4
•75	0291 1108 00	LOCKNUT	4
•80	1604 3431 00	HINGE	2
•85	1615 5684 00	BRACKET	2
•90	0216 1324 03	HEX SOCK. SCREW	4
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	

BAFFLE ASSEMBLY - AIR INLET - STANDARD

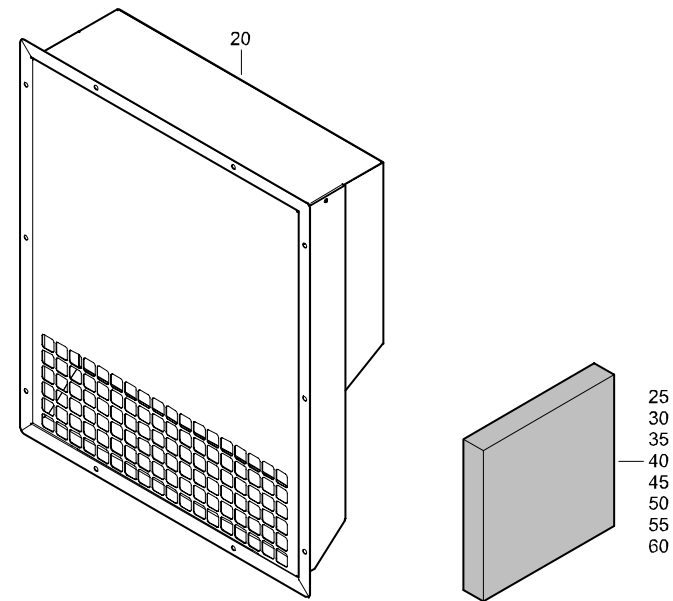


REF	PART NUMBER	DESIGNATION	QTY
-	1626 2326 81	BAFFLE ASSY(AIR INLET) (From page 32)	
•20	1626 2326 01	BAFFLE	1
•25	-	INSULATION SILENCING FOAM (30 mm)	1
•30	-	INSULATION SILENCING FOAM (30 mm)	1
•35	-	INSULATION SILENCING FOAM (30 mm)	1
•40	-	INSULATION SILENCING FOAM (30 mm)	1
•45	-	INSULATION SILENCING FOAM (30 mm)	1
•50	-	INSULATION SILENCING FOAM (30 mm)	1
•55	-	INSULATION SILENCING FOAM (30 mm)	1
•60	-	INSULATION SILENCING FOAM (30 mm)	1
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	

DOOR - LEFT - STANDARD

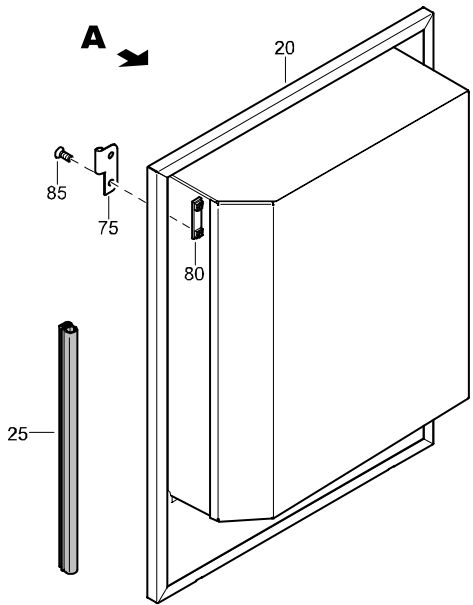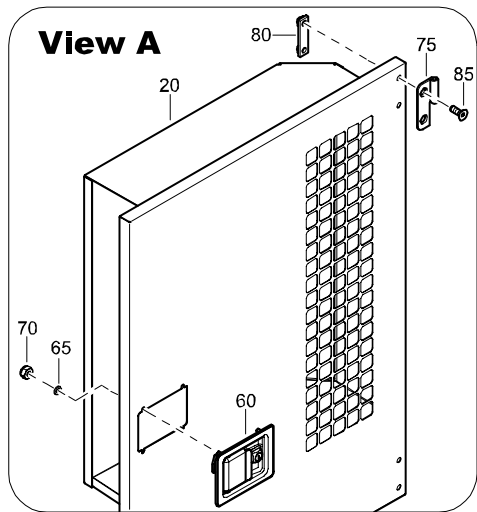

REF	PART NUMBER	DESIGNATION	QTY
-	1626 2405 81	DOOR LH (From page 32)	
•20	1626 2405 01	DOOR	1
•25	1604 4317 00	SEAL	AR
•30	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•35	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•40	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•45	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•50	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•55	-	INSULATION	1
		SILENCING FOAM (30 mm)	
•60	1615 6967 03	HANDLE	1
•65	0301 2321 00	PLAIN WASHER	4
•70	0291 1108 00	LOCKNUT	4
•75	1604 3431 00	HINGE	2
•80	1615 5684 00	BRACKET	2
•85	0216 1324 03	HEX SOCK. SCREW	4
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	

FRAME - STANDARD

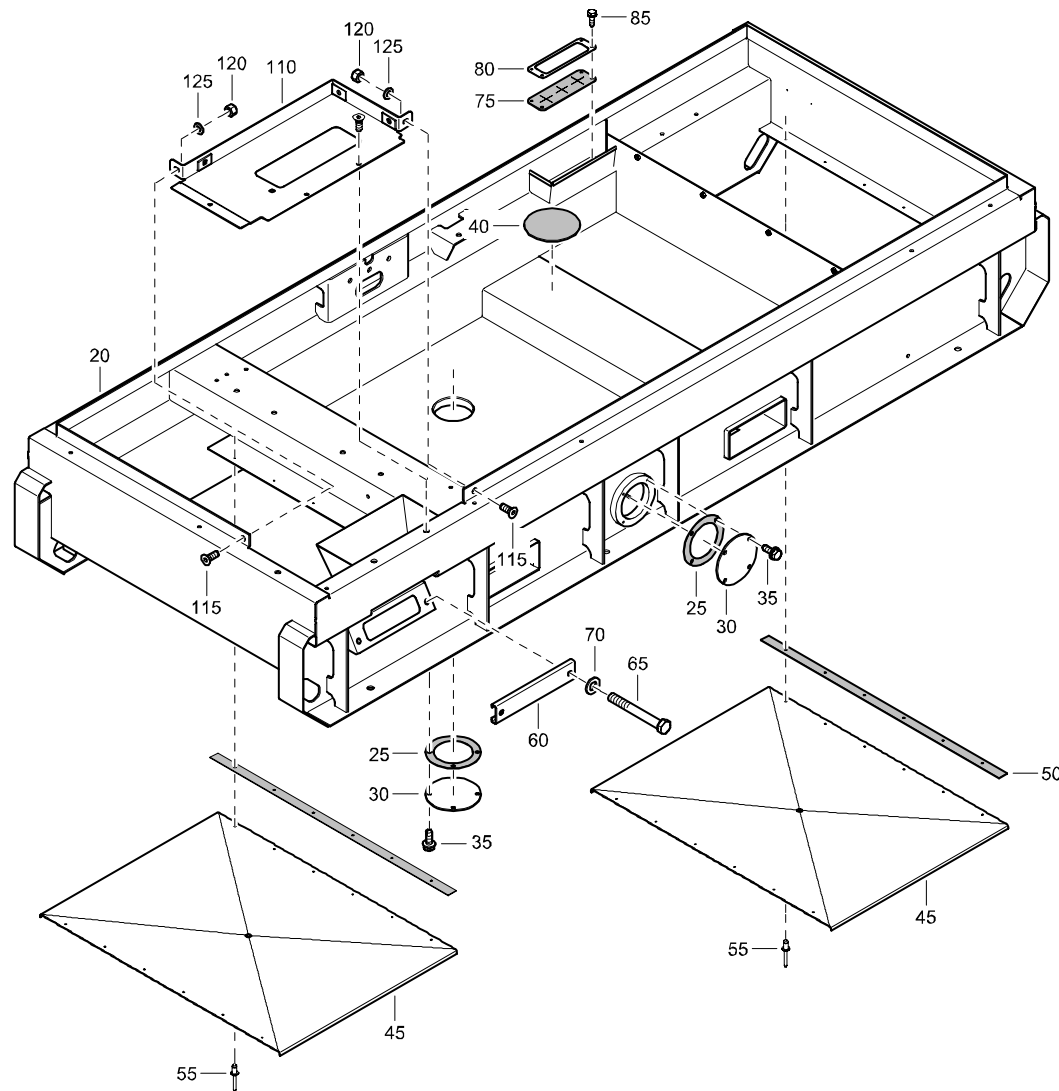


REF	PART NUMBER	DESIGNATION	QTY
-	1626 1413 81	FRAME (From page 42)	
•20	1626 1413 01	FRAME	1
•25	1604 6550 00	GASKET	2
•30	1604 6551 00	FLANGE	2
•35	1619 2766 00	HEX. HEAD SCREW	8
•40	1626 1805 00	SEAL	6
•45	1626 1702 00	PLATE BOTTOM	2
•50	1626 2391 00	SEAL	2
•55	0129 3172 01	BLIND RIVET	24
•60	1626 0593 00	CLAMP	1
•65	0147 1413 03	HEX. HEAD SCREW	2
•70	0301 2358 00	PLAIN WASHER	2
•75	1626 1967 01	SEAL GASKET	1
•80	1626 1968 01	PLATE	1
•85	1619 5898 01	HEX. HEAD SCREW	4
•110	1626 2727 00	SUPPORT	1
•115	0216 1324 03	HEX SOCK. SCREW	3
•120	0266 2110 00	HEXAGON NUT	2
•125	0301 2335 00	PLAIN WASHER	2

Atlas Copco


1626 2343 81/01

QUICK COUPLING - FOR EXTERNAL FUEL TANK CONNECTION - OPTIONS

REF	PART NUMBER	DESIGNATION	QTY
20	1604 6132 00	COUPLING	1
25	1604 6133 00	COUPLING	1
30	0017 9861 53	PLASTIC BAG	1
35	1088 1301 02	CABLE STRIP	1

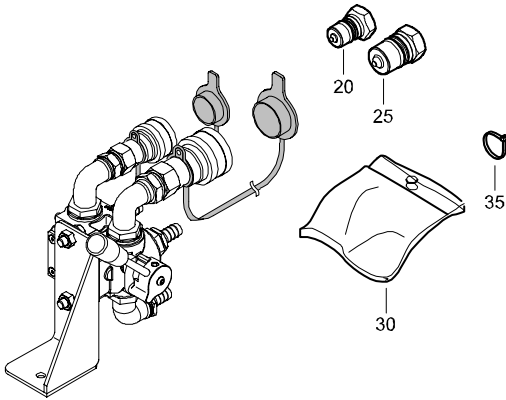

EXTERNAL FUEL TANK CONNECTION - OPTIONS

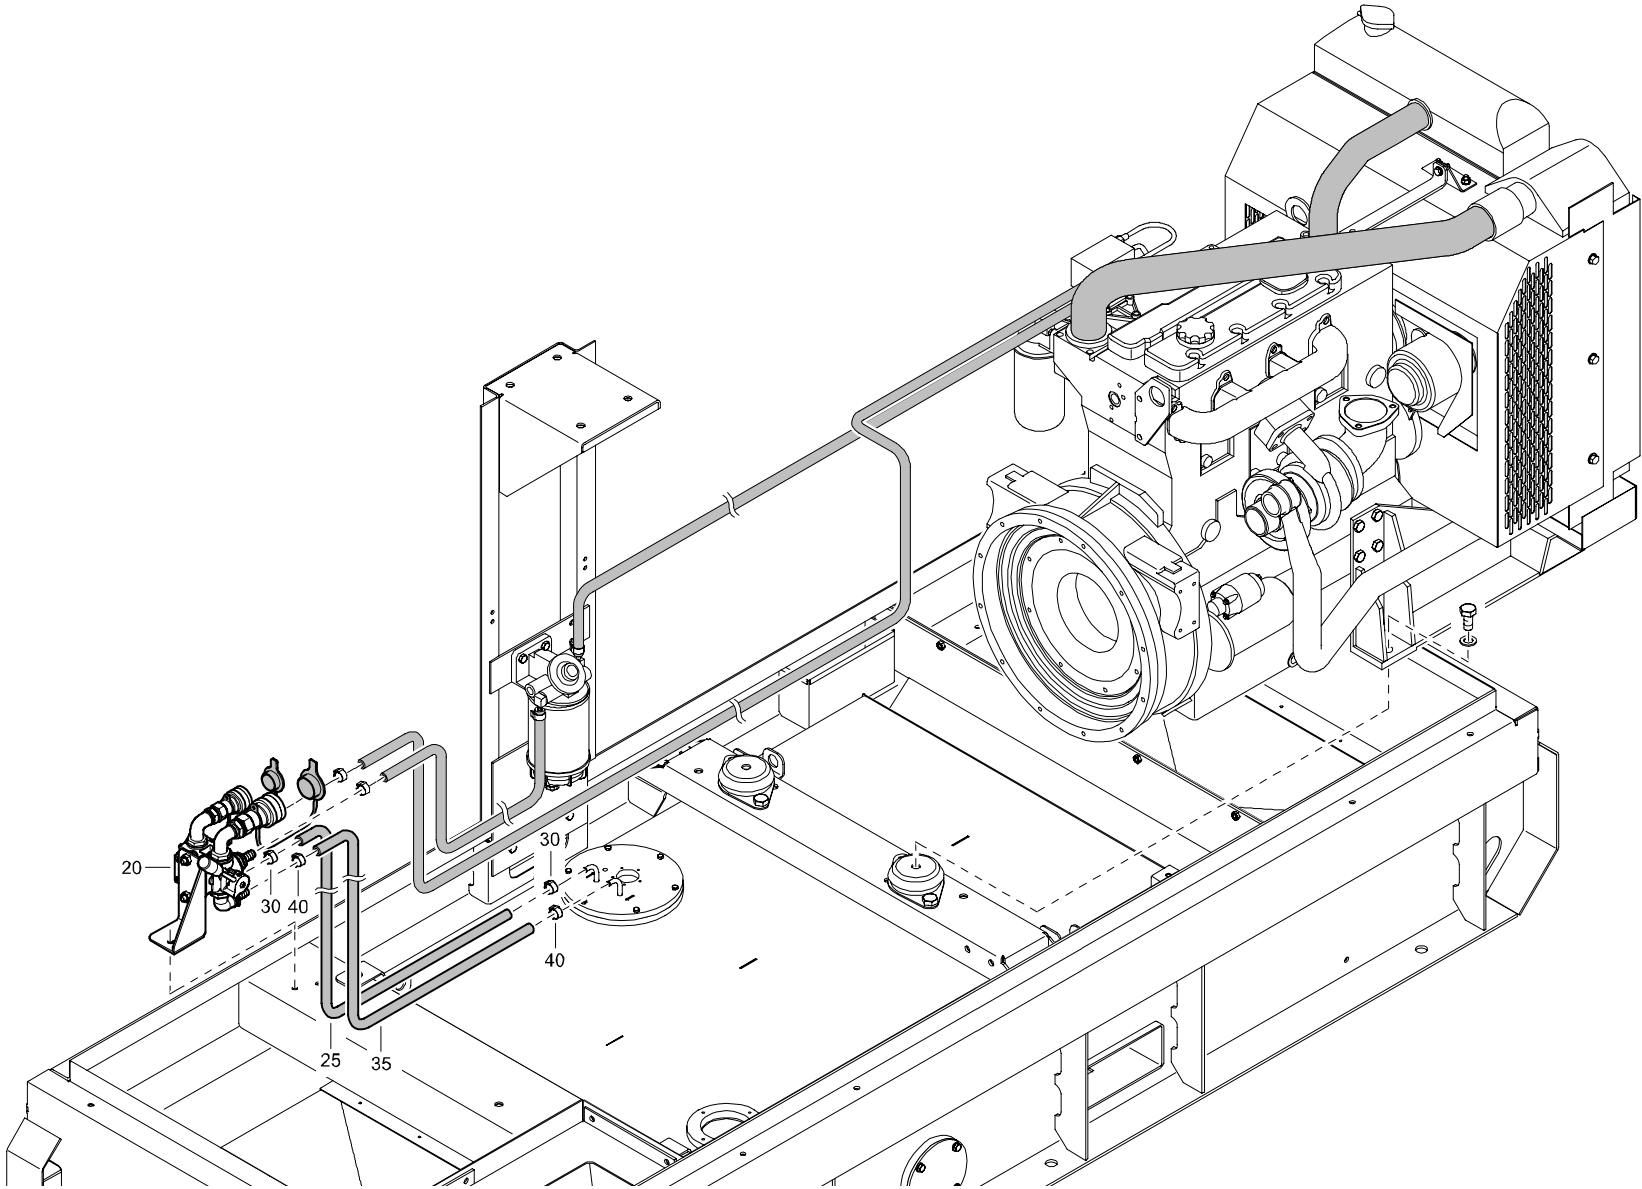


EXTERNAL FUEL TANK CONNECTION - OPTIONS

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 2503 81	ASSEMBLY - EFT (For details see page 82)	1								
25	0075 4005 55	FUEL HOSE	AR								
30	1604 4137 00	HOSE CLIP	2								
35	0075 4005 55	FUEL HOSE	AR								
40	1604 4137 00	HOSE CLIP	2								

TOWING EYE - DIN EYE LT, NATO EYE LT, BALL COUPLING LT - OPTIONS


DIN EYE LT

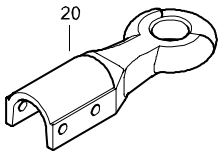

REF	PART NUMBER	DESIGNATION	QTY
DIN EYE LT			
20	1615 8944 01	EYE	1

1611 7204 85/01


NATO EYE LT

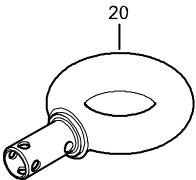

NATO EYE LT			
20	1615 8946 01	EYE	1

1611 7205 85/01

BALL COUPLING LT

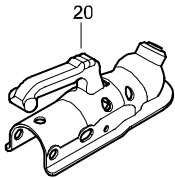


BALL COUPLING LT			
20	1615 8945 01	EYE	1

1611 7206 85/01

TOWING EYE - AFR EYE LT, ITA EYE LT - OPTIONS


AFR EYE LT

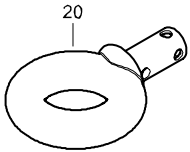

REF	PART NUMBER	DESIGNATION	QTY
AFR EYE LT			
20	1604 7319 00	EYE	1

1611 7208 85/00

ITA EYE LT

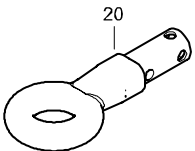


ITA EYE LT			
20	1604 7440 00	EYE	1


1611 7209 85/00

BATTERY CHARGER - OPTIONS

REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 49	BATTERY CHARGER	1
•A490	1089 0697 01	BATTERY CHARGER	1
•A492	0090 1400 02	RAIL	AR



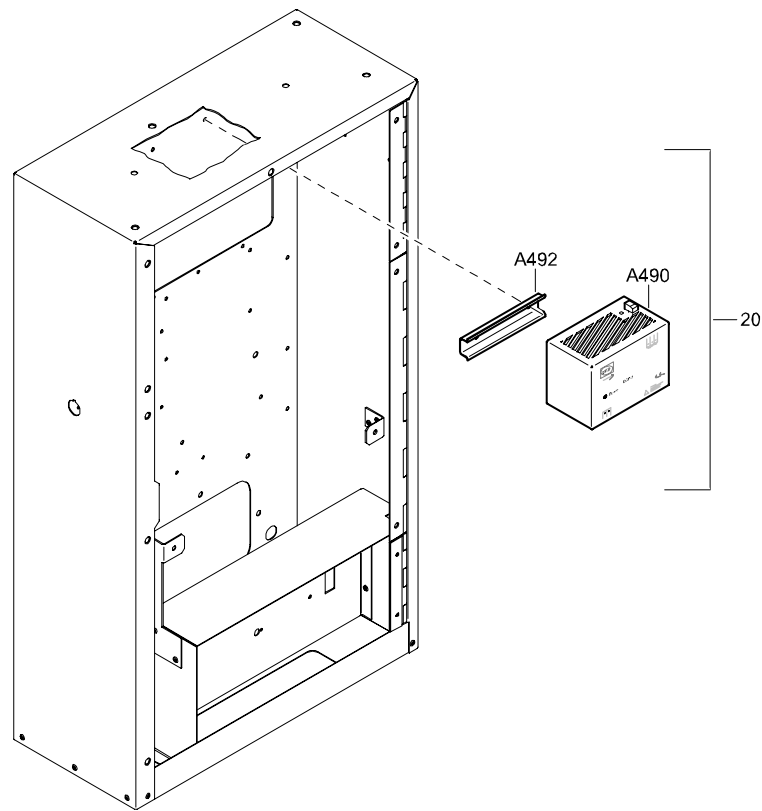


UNDERCARRIAGE - OPTIONS

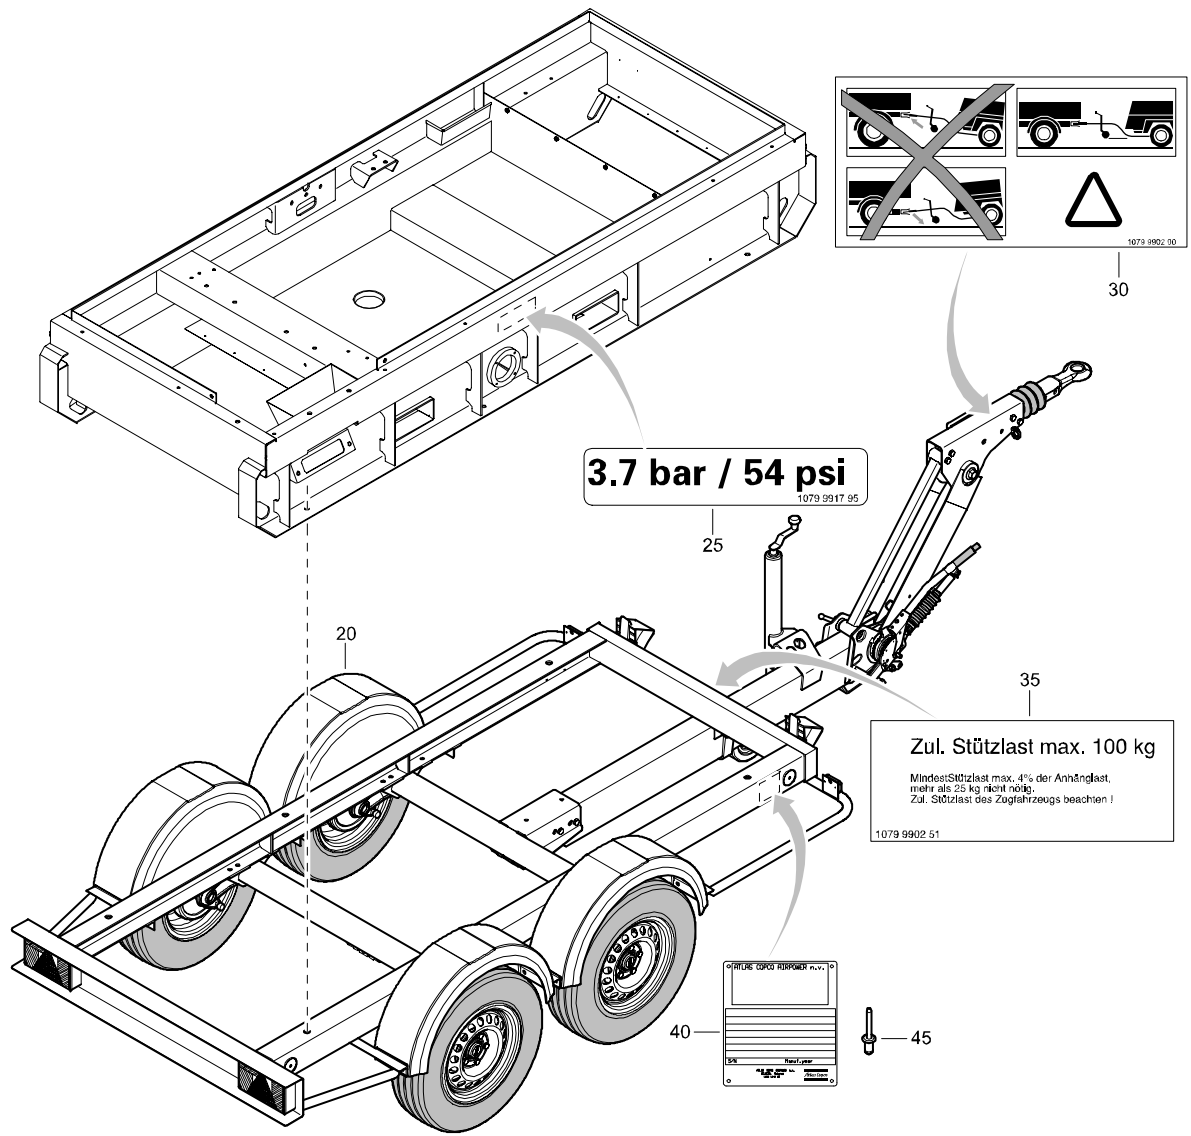

REF	PART NUMBER	DESIGNATION	QTY
20	1626 3218 00	UNDERCARRIAGE	1
25	1079 9917 95	INFORMATION LABEL	2
30	1079 9902 00	WARNING LABEL	1
35	1079 9902 51	WARNING LABEL	1
40	1626 1345 00	PLATE DATA	1
45	0129 3270 34	BLIND RIVET	4


ELECTRICAL SYSTEM - WITH BATTERY SWITCH - OPTIONS

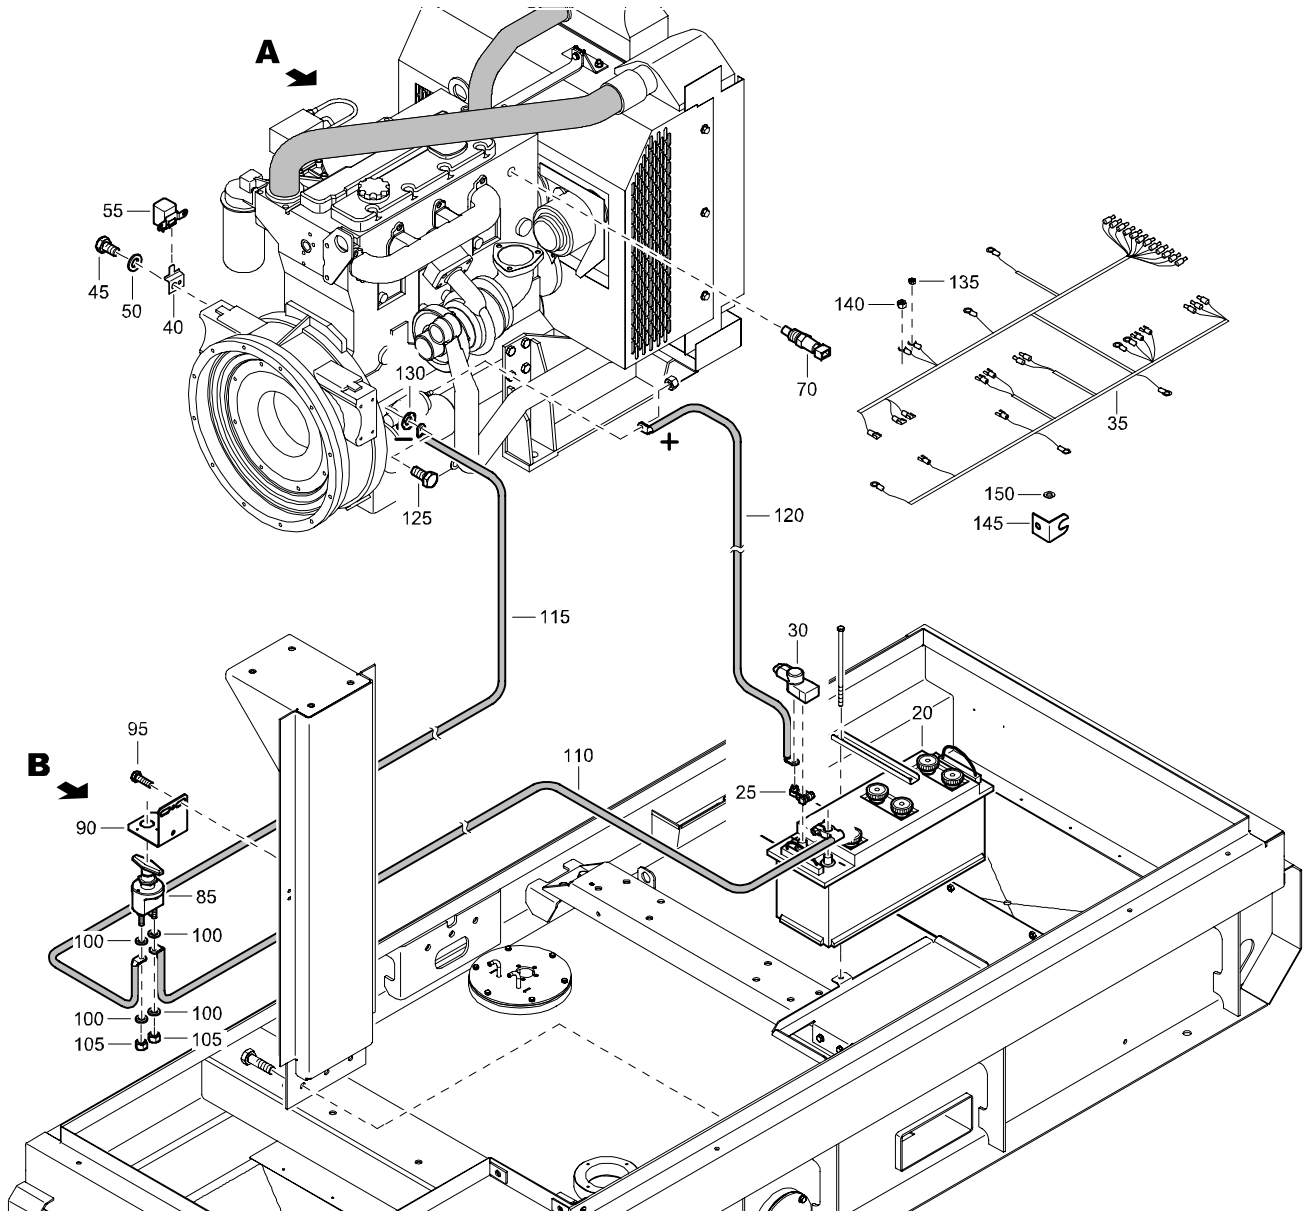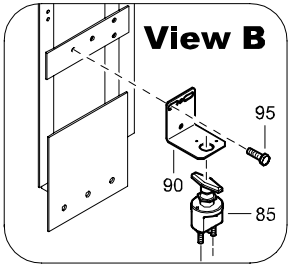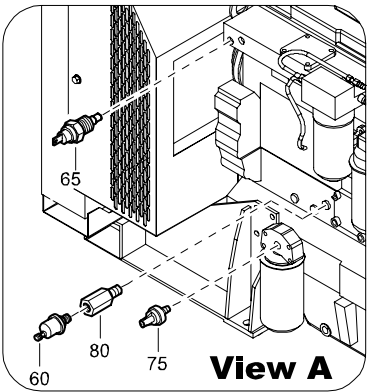

ELECTRICAL SYSTEM - WITH BATTERY SWITCH - OPTIONS

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	0975 8300 17	BATTERY	1								
25	1604 5043 00	CLAMP	1								
30	1604 7216 00	COVER	1								
35	1604 5042 05	WIRE HARNESS	1								
40	1615 9849 00	SUPPORT	1								
45	0147 1398 03	HEX. HEAD SCREW	1								
50	0301 2358 00	PLAIN WASHER	1								
55	1089 0585 01	RELAY	1								
60	1089 0565 13	OILPRESSURE SENSOR	1								
65	1089 0567 14	TEMPERATURE SENSOR	1								
70	1089 0655 10	SWITCH TEMP.	1								
75	1089 0579 51	OIL PRESS.SWITCH+PROT.BOOT	1								
80	1604 4489 00	NIPPLE	1								
85	1089 0584 01	BATTERY SWITCH	1								
90	1604 3473 02	SUPPORT	1								
95	0147 1325 03	HEX. HEAD SCREW	2								
100	0301 2335 00	PLAIN WASHER	4								
105	0266 2110 00	HEXAGON NUT	2								
110	1626 2640 00	CABLE	1								
115	2250 4224 04	CABLE	1								
120	1626 2639 00	CABLE	1								
125	0147 1398 03	HEX. HEAD SCREW	1								
130	1088 0019 03	CONTACT WASHER	1								
135	0266 2107 00	HEXAGON NUT	1								
140	0266 2108 00	HEXAGON NUT	1								
145	1613 0809 00	BRACKET	5								
150	0301 2358 00	PLAIN WASHER	2								


EXHAUST SYSTEM - WITH SPARK ARRESTER - OPTIONS

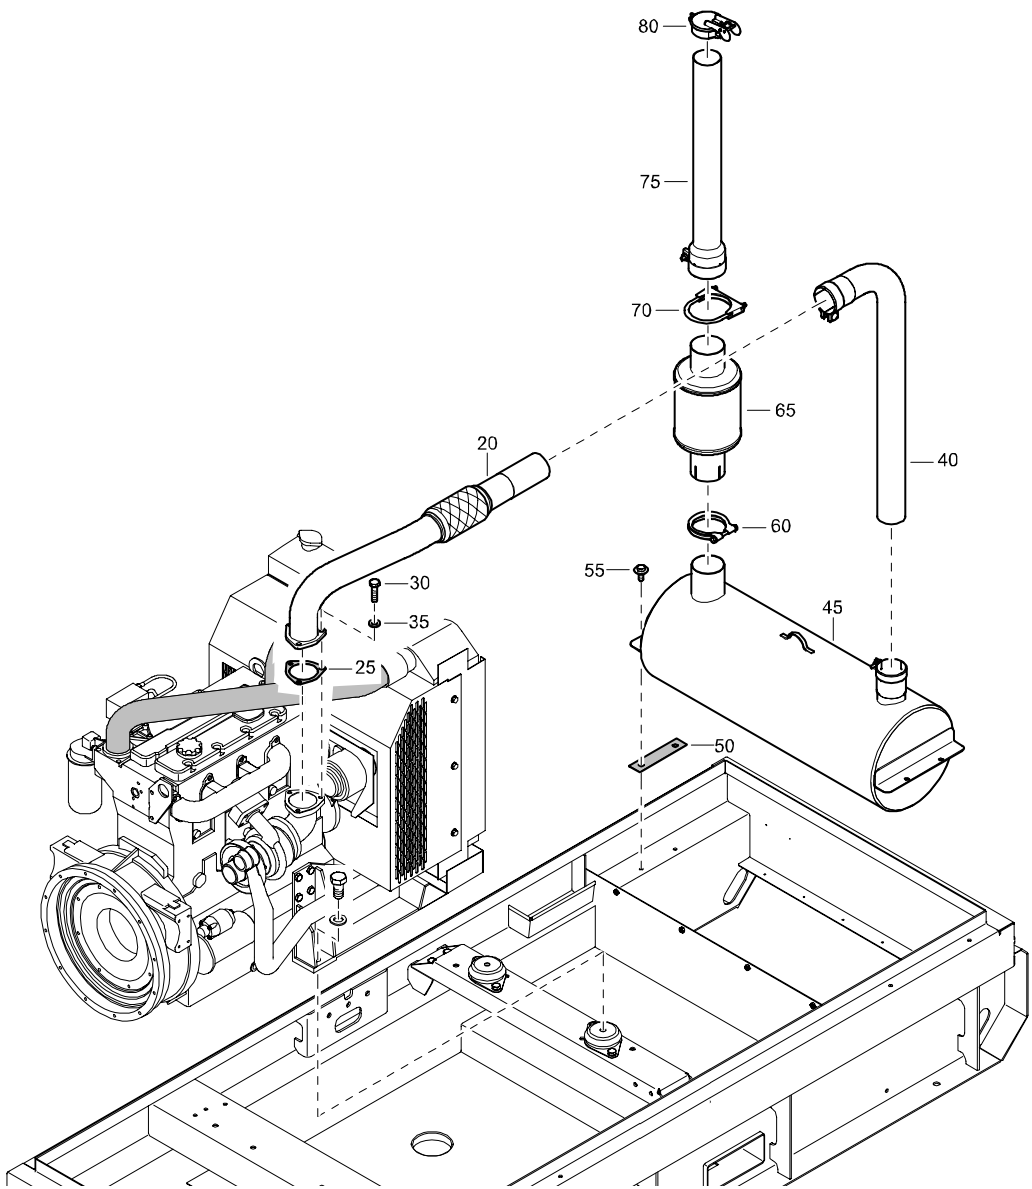


REF	PART NUMBER	DESIGNATION	QTY
20	1626 2355 01	PIPE EXHAUST	1
25	1604 6990 00	GASKET	1
30	0147 1363 03	HEX. HEAD SCREW	3
35	0301 2344 00	PLAIN WASHER	3
40	1626 1766 00	PIPE EXHAUST	1
45	1626 1794 00	MUFFLER	1
50	1626 2404 00	GASKET	2
55	1615 5664 00	HEX. HEAD SCREW	4
60	0346 3001 03	PIPE CLAMP	1
65	1604 6116 00	SPARK ARRESTER	1
70	0346 2900 21	PIPE CLAMP	1
75	1626 3023 00	PIPE EXHAUST	1
80	1615 7214 00	EXHAUST COVER	1

FRAME AND MOUNTS - FOR GENERATOR WITH SKID FUELTANK - OPTIONS

REF	PART NUMBER	DESIGNATION	QTY
20	1626 2778 90	FRAME ASSY + FUELTANK ASSY (For details see page 83)	1
25	1089 0659 10	SENSOR LEVEL	1
30	0147 1213 03	HEX. HEAD SCREW	5

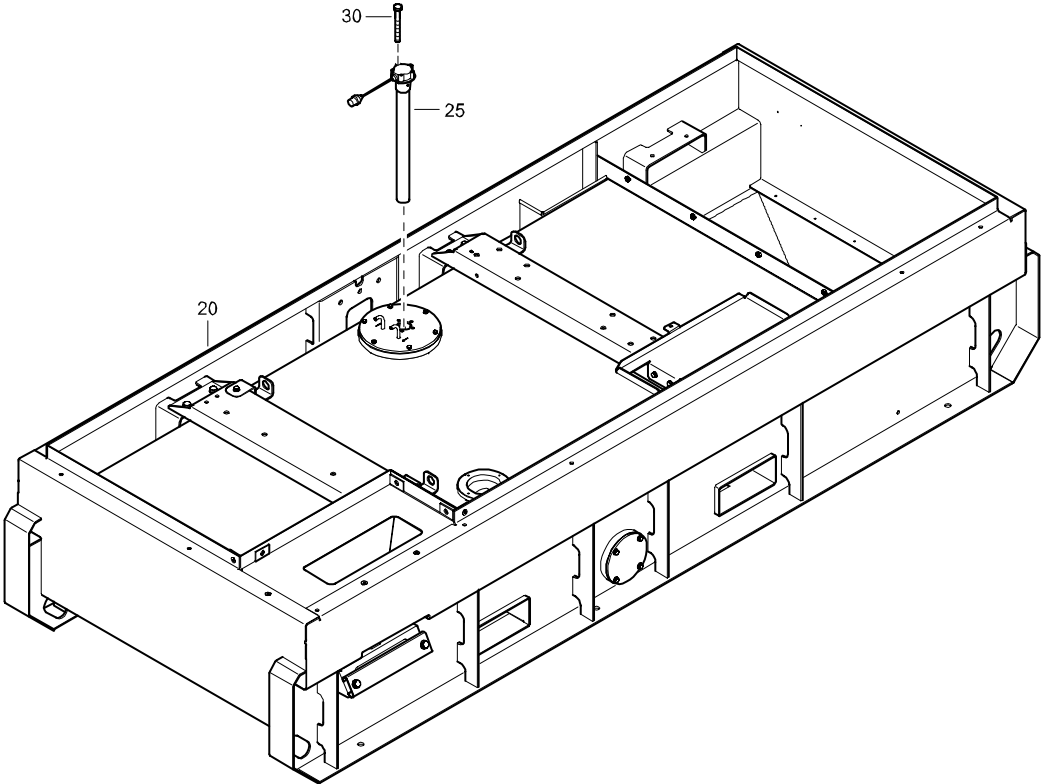


COSMOS - GLOBAL COVERAGE WITH GPRS NETWORK - OPTIONS

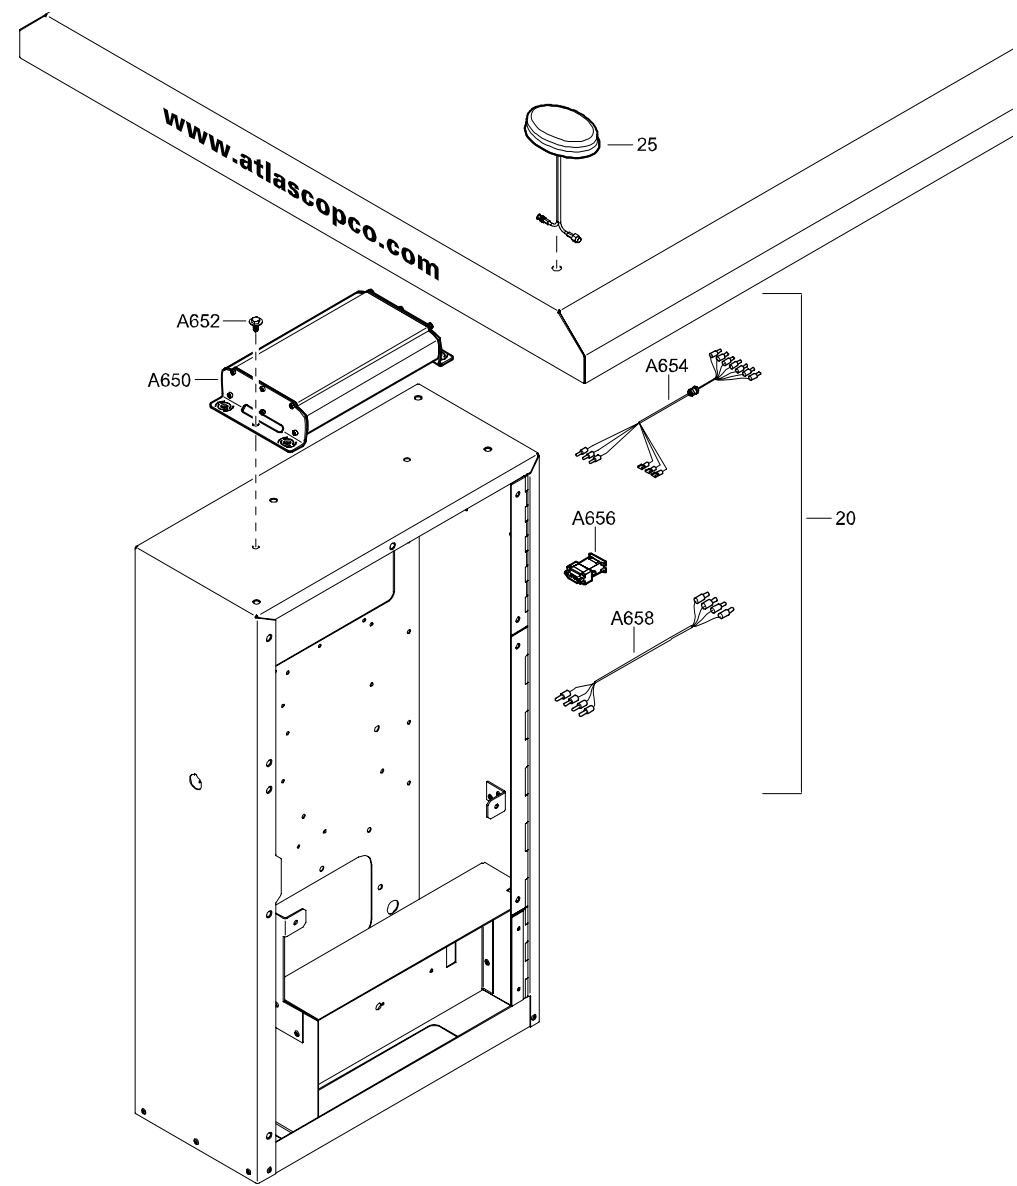



REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 40	COSMOS GPRS	1
•A650	1604 7945 00	COSMOS MODULE	1
•A652	1619 2765 00	SCREW	2
•A654	1604 8397 00	COSMOS WIRING	1
•A656	1604 8401 00	CONVERTOR	1
•A658	1604 7730 00	WIRING	1
25	1089 9593 97	ANTENNA	1

COSMOS - GLOBAL COVERAGE WITH CDMA NETWORK - OPTIONS

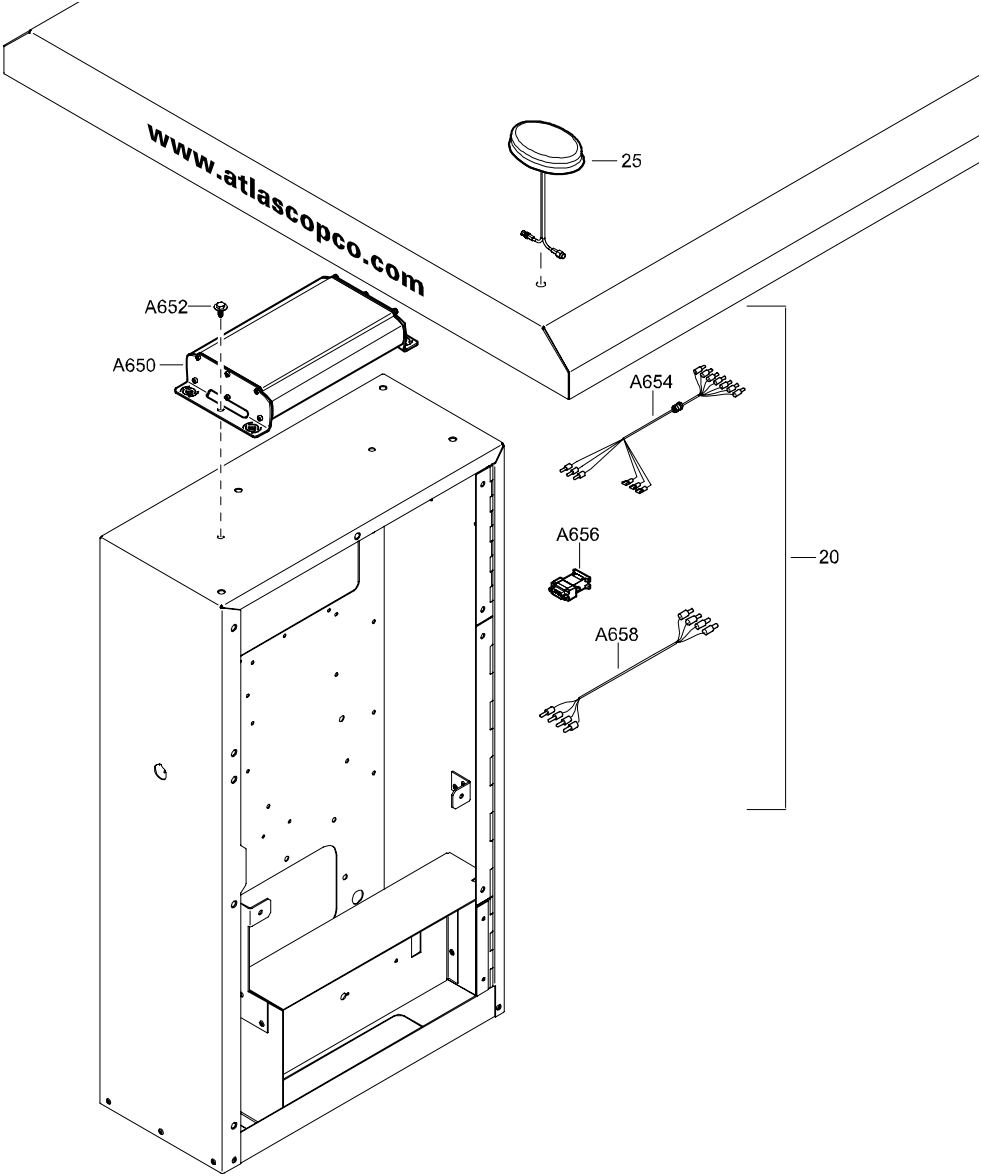

REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 41	COSMOS CDMA	1
•A650	1604 8945 00	COSMOS MODULE	1
•A652	1619 2765 00	SCREW	2
•A654	1604 8397 00	COSMOS WIRING	1
•A656	1604 8401 00	CONVERTOR	1
•A658	1604 7730 00	WIRING	1
25	1089 9593 97	ANTENNA	1


COOLANT HEATER - OPTIONS

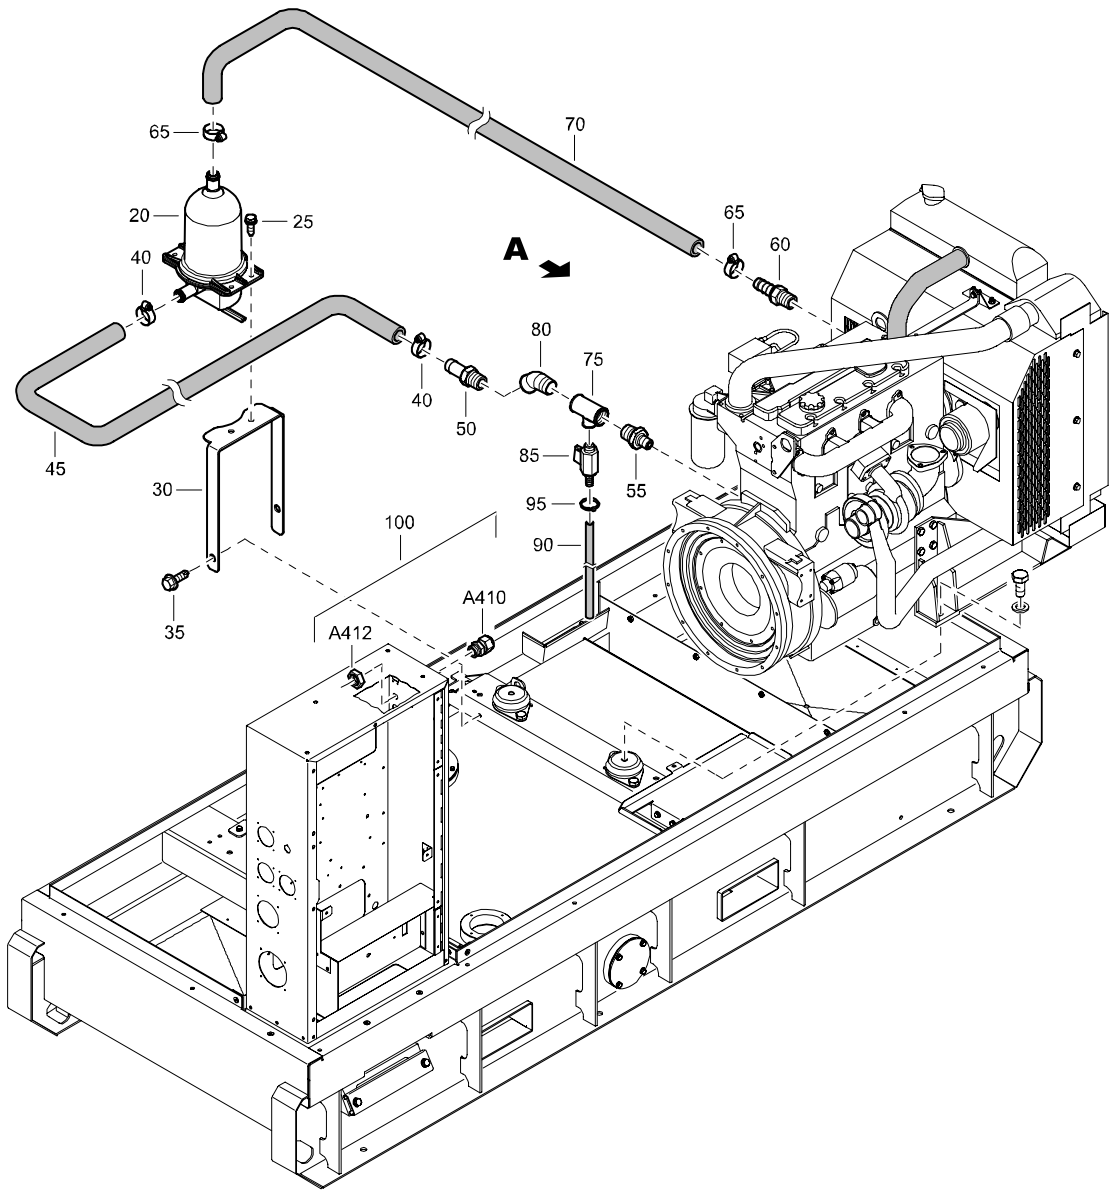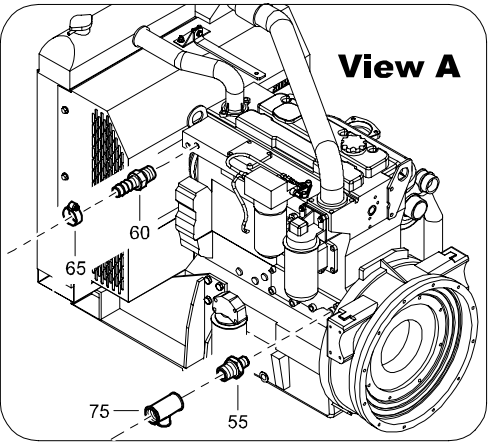

COOLANT HEATER - OPTIONS


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1089 9403 01	COOLANT HEATER	1								
25	1619 5898 01	HEX. HEAD SCREW	2								
30	1626 2432 00	SUPPORT	1								
35	1619 2766 00	HEX. HEAD SCREW	2								
40	0347 6106 00	HOSE CLAMP	2								
45	0072 8403 16	HOSE	AR								
50	9000 0244 00	HOSE NIPPLE	1								
55	0603 5105 03	HEXAGON NIPPLE	1								
60	0571 0020 78	HOSE NIPPLE	1								
65	0347 6106 00	HOSE CLAMP	2								
70	0072 8403 16	HOSE	AR								
75	0564 0116 03	TEE	1								
80	0560 0200 34	ELBOW	1								
85	1615 7072 00	VALVE	1								
90	0099 9910 29	PLASTIC TUBE	AR								
95	1088 1301 02	CABLE STRIP	10								
100	1900 1038 65	COOLANT HEATER	1								
•A410	0698 5140 71	CABLE GLAND	1								
•A412	0697 9809 20	LOCK NUT	1								

TERMINAL BOARD - OPTIONS

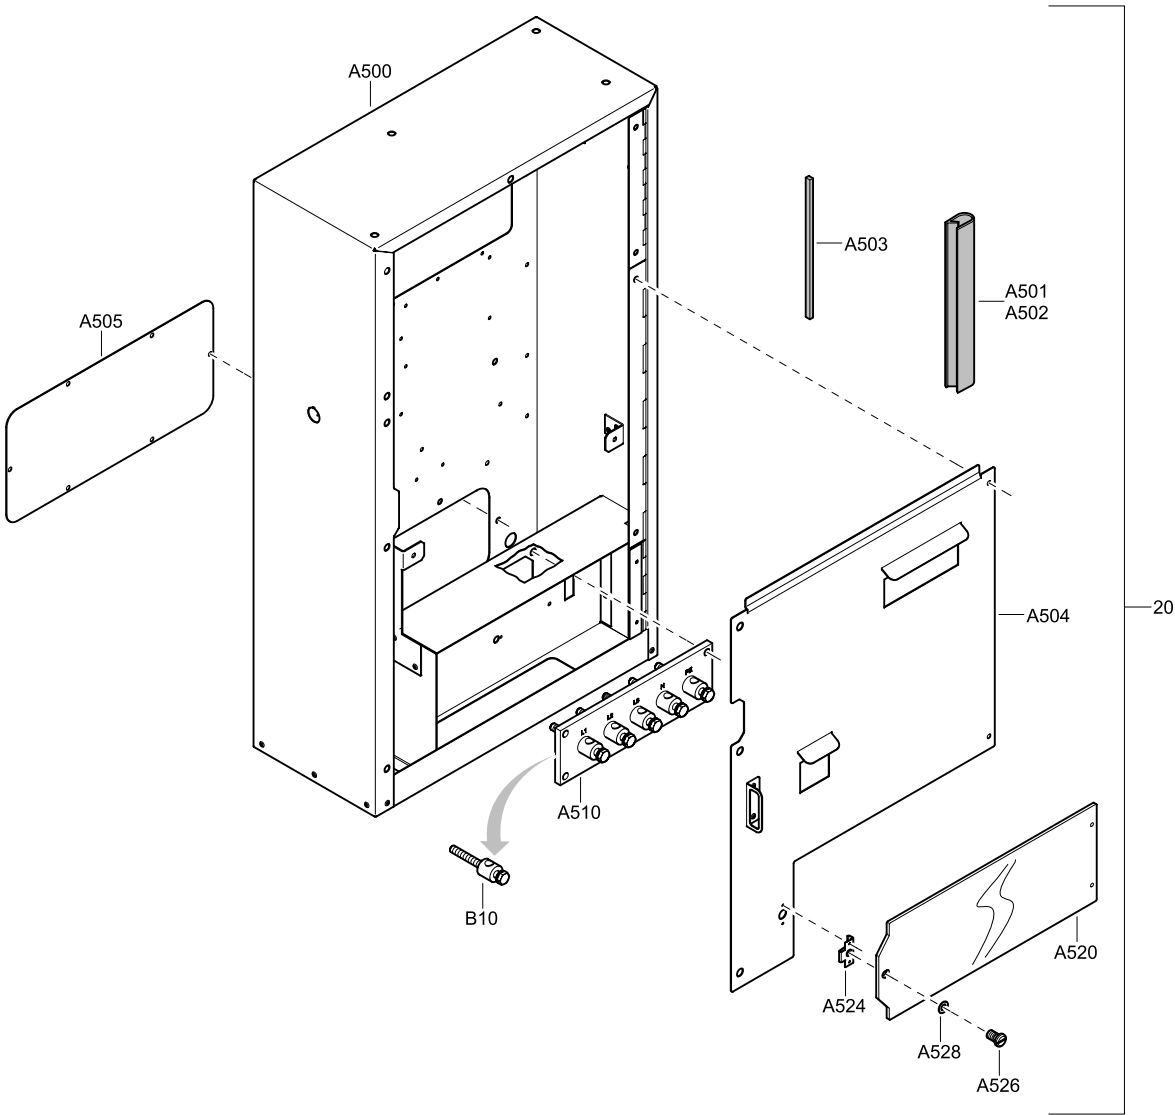

REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 50	TERMINAL BOARD	1
•A500	1626 2485 00	CUBICLE	1
•A501	1503 1056 00	SEAL	AR
•A502	1503 1056 00	SEAL	AR
•A503	0090 5050 14	TAPE	AR
•A504	1626 2478 00	PANEL	1
•A505	1626 3020 00	PLATE BACK	1
•A510	1615 7095 00	TERMINAL BOARD	1
••B10	1615 8912 00	TERMINAL	5
•A520	1626 2302 00	DOOR CUBICLE	1
•A524	1615 6728 00	PLATE	1
•A526	1615 7166 00	STUD	1
•A528	1615 6727 00	WASHER	1


TERMINAL BOARD - NEUTRAL EDF - OPTIONS

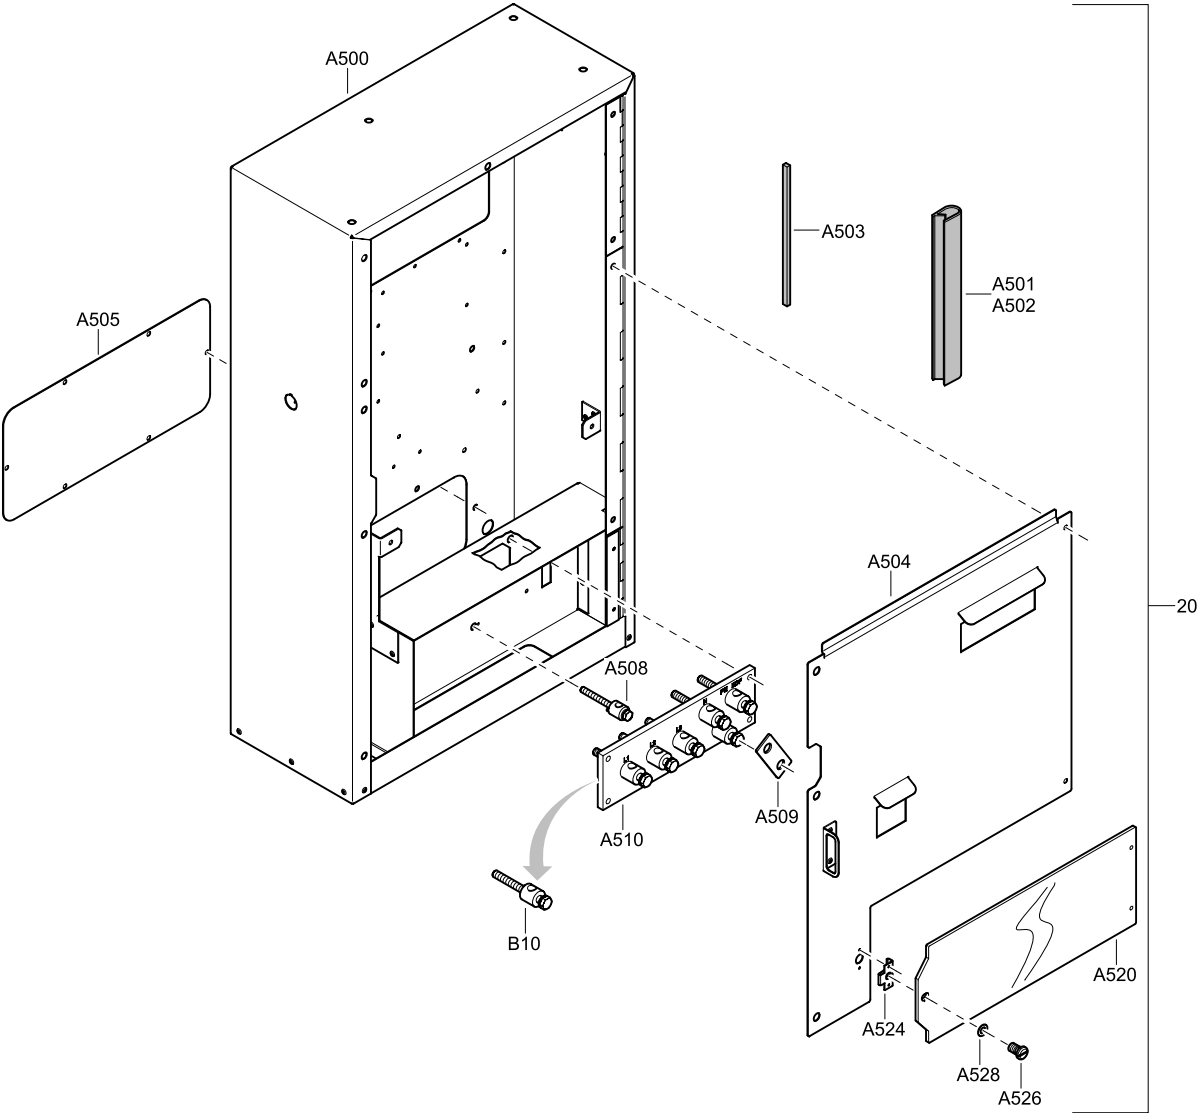


REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 51	TERMINAL BOARD N-EDF	1
•A500	1626 2485 00	CUBICLE	1
•A501	1503 1056 00	SEAL	AR
•A502	1503 1056 00	SEAL	AR
•A503	0090 5050 14	TAPE	AR
•A504	1626 2478 00	PANEL	1
•A505	1626 3020 00	PLATE BACK	1
•A508	1615 7280 00	TERMINAL	1
•A509	1615 8911 00	LINK	1
•A510	1615 8909 00	EDF TERMINAL BOARD	1
••B10	1615 8912 00	TERMINAL	5
•A520	1626 2302 00	DOOR CUBICLE	1
•A524	1615 6728 00	PLATE	1
•A526	1615 7166 00	STUD	1
•A528	1615 6727 00	WASHER	1

SOCKET - 16A RIM EARTH, 16A PIN EARTH, 16A CEE - OPTIONS


16A PIN EARTH

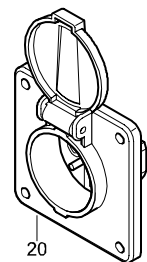

16A RIM EARTH

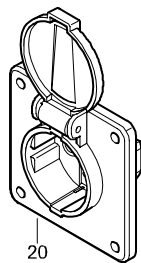

16A CEE

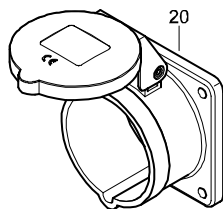

REF	PART NUMBER	DESIGNATION	QTY
16A PIN EARTH			
20	1900 1038 59	SOCKET 16A PIN EARTH	1
•A546	1089 0662 29	SOCKET OUTLET	1

1611 8556 75/01


16A RIM EARTH			
20	1900 1038 58	SOCKET 16A RIM EARTH	1
•A546	1089 0662 01	SOCKET OUTLET	1

1611 8551 75/00

16A CEE			
20	1900 1038 57	SOCKET 16A CEE EARTH	1
•A546	1089 0662 11	SOCKET OUTLET	1


1611 8559 75/00

TERMINAL BOARD - WITH SOCKETS 63A-32A-16A - OPTIONS

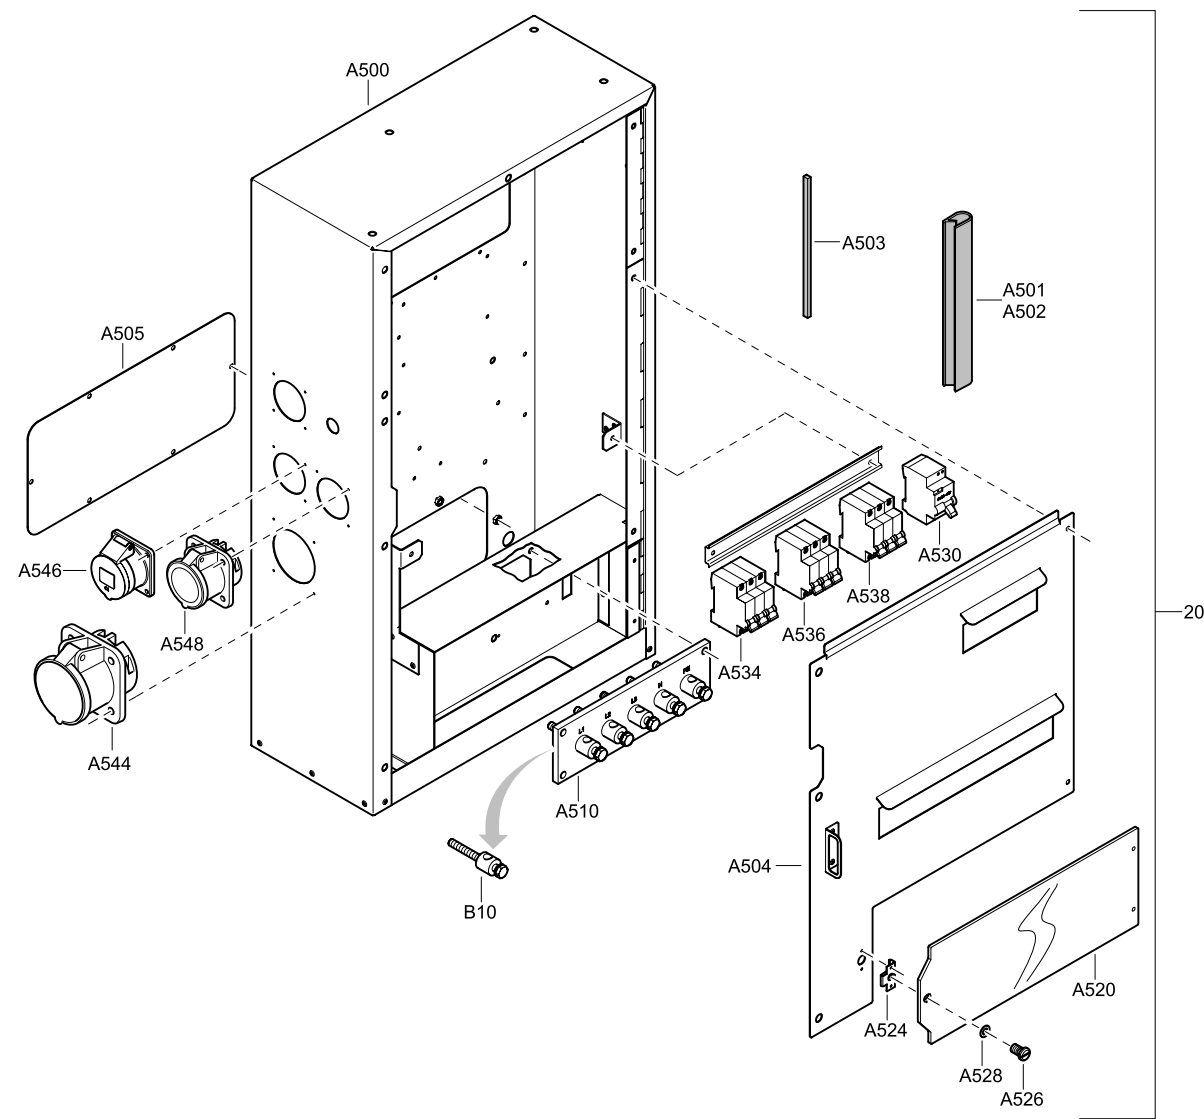


REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 53	TERMINAL BOARD + SOCKET SET1	1
•A500	1626 2300 00	BODY	1
•A501	1503 1056 00	SEAL	AR
•A502	1503 1056 00	SEAL	AR
•A503	0090 5050 14	TAPE	AR
•A504	1626 2301 00	PANEL	1
•A505	1626 3020 00	PLATE BACK	1
•A510	1615 7095 00	TERMINAL BOARD	1
••B10	16158 912 00	TERMINAL	5
•A520	1626 2302 00	DOOR CUBICLE	1
•A524	1615 6728 00	PLATE	1
•A526	1615 7166 00	STUD	1
•A528	1615 6727 00	WASHER	1
•A530	1089 9473 01	CIRCUIT BREAKER	1
•A534	1089 9472 28	CIRCUIT BREAKER	1
•A536	1089 9472 27	CIRCUIT BREAKER	1
•A538	1089 9472 26	CIRCUIT BREAKER	1
•A544	1089 0662 07	SOCKET OUTLET	1
•A546	1089 0662 04	SOCKET OUTLET	1
•A548	1089 0662 12	SOCKET OUTLET	1

TERMINAL BOARD - WITH SOCKETS 63A-63A-32A-16A - OPTIONS

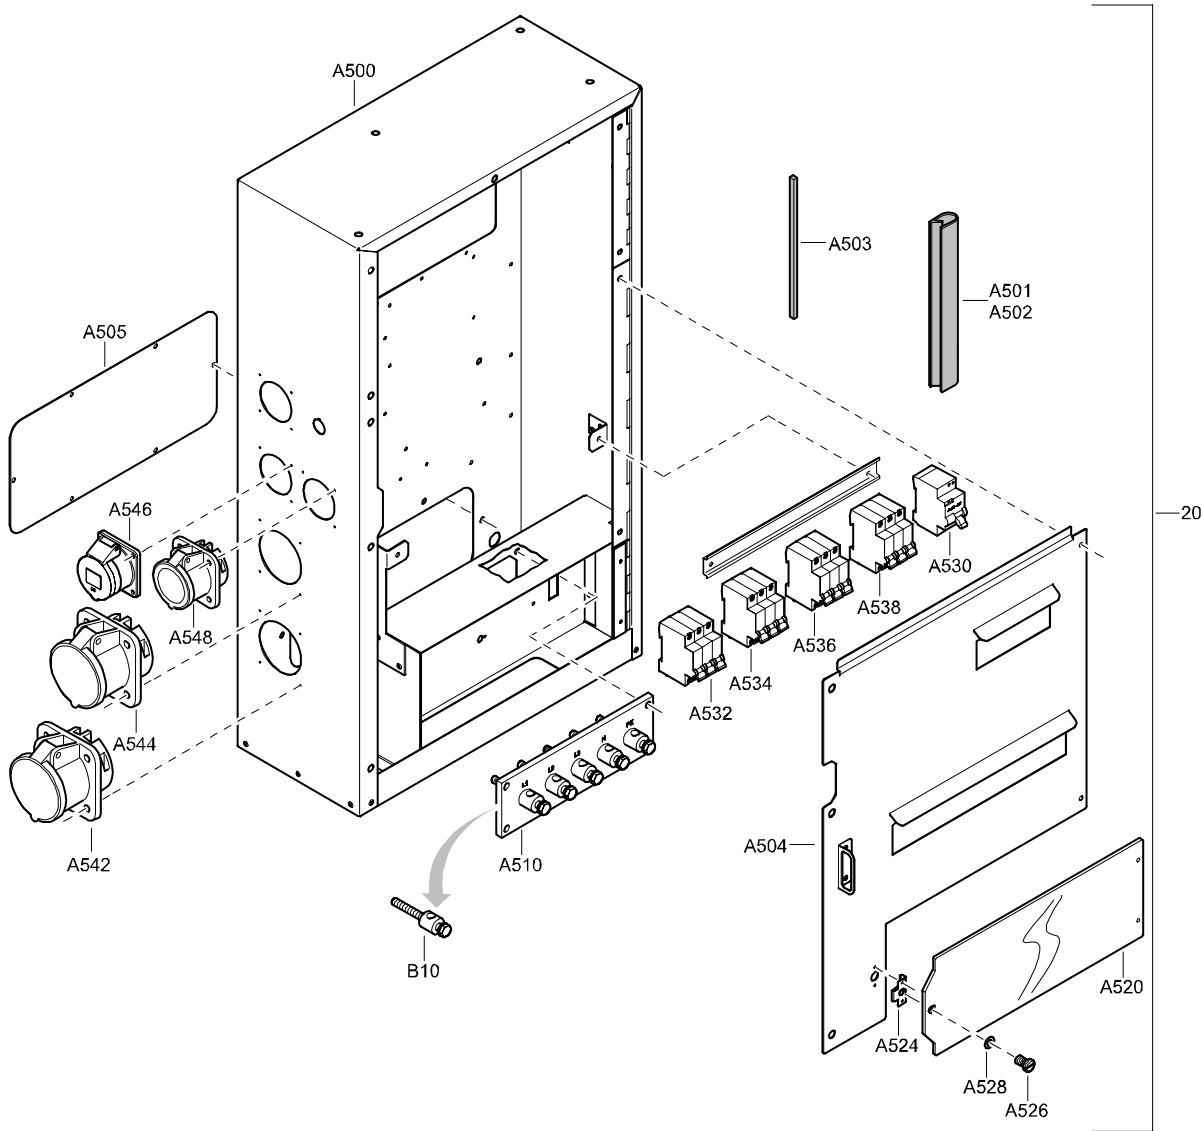


REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 54	TERMINAL BOARD + SOCKET SET2	1
•A500	1626 2483 00	CUBICLE -	1
•A501	1503 1056 00	SEAL	AR
•A502	1503 1056 00	SEAL	AR
•A503	0090 5050 14	TAPE	AR
•A504	1626 2301 00	PANEL	1
•A505	1626 3020 00	PLATE BACK	1
•A510	1615 7095 00	TERMINAL BOARD	1
••B10	1615 8912 00	TERMINAL	5
•A520	1626 2302 00	DOOR CUBICLE	1
•A524	1615 6728 00	PLATE	1
•A526	1615 7166 00	STUD	1
•A528	1615 6727 00	WASHER	1
•A530	1089 9473 01	CIRCUIT BREAKER	1
•A532	1089 9472 28	CIRCUIT BREAKER	1
•A534	1089 9472 28	CIRCUIT BREAKER	1
•A536	1089 9472 27	CIRCUIT BREAKER	1
•A538	1089 9472 26	CIRCUIT BREAKER	1
•A542	1089 0662 07	SOCKET OUTLET	1
•A544	1089 0662 07	SOCKET OUTLET	1
•A546	1089 0662 04	SOCKET OUTLET	1
•A548	1089 0662 12	SOCKET OUTLET	1

TERMINAL BOARD - WITH SOCKETS 125A-63A-32A-16A - OPTIONS

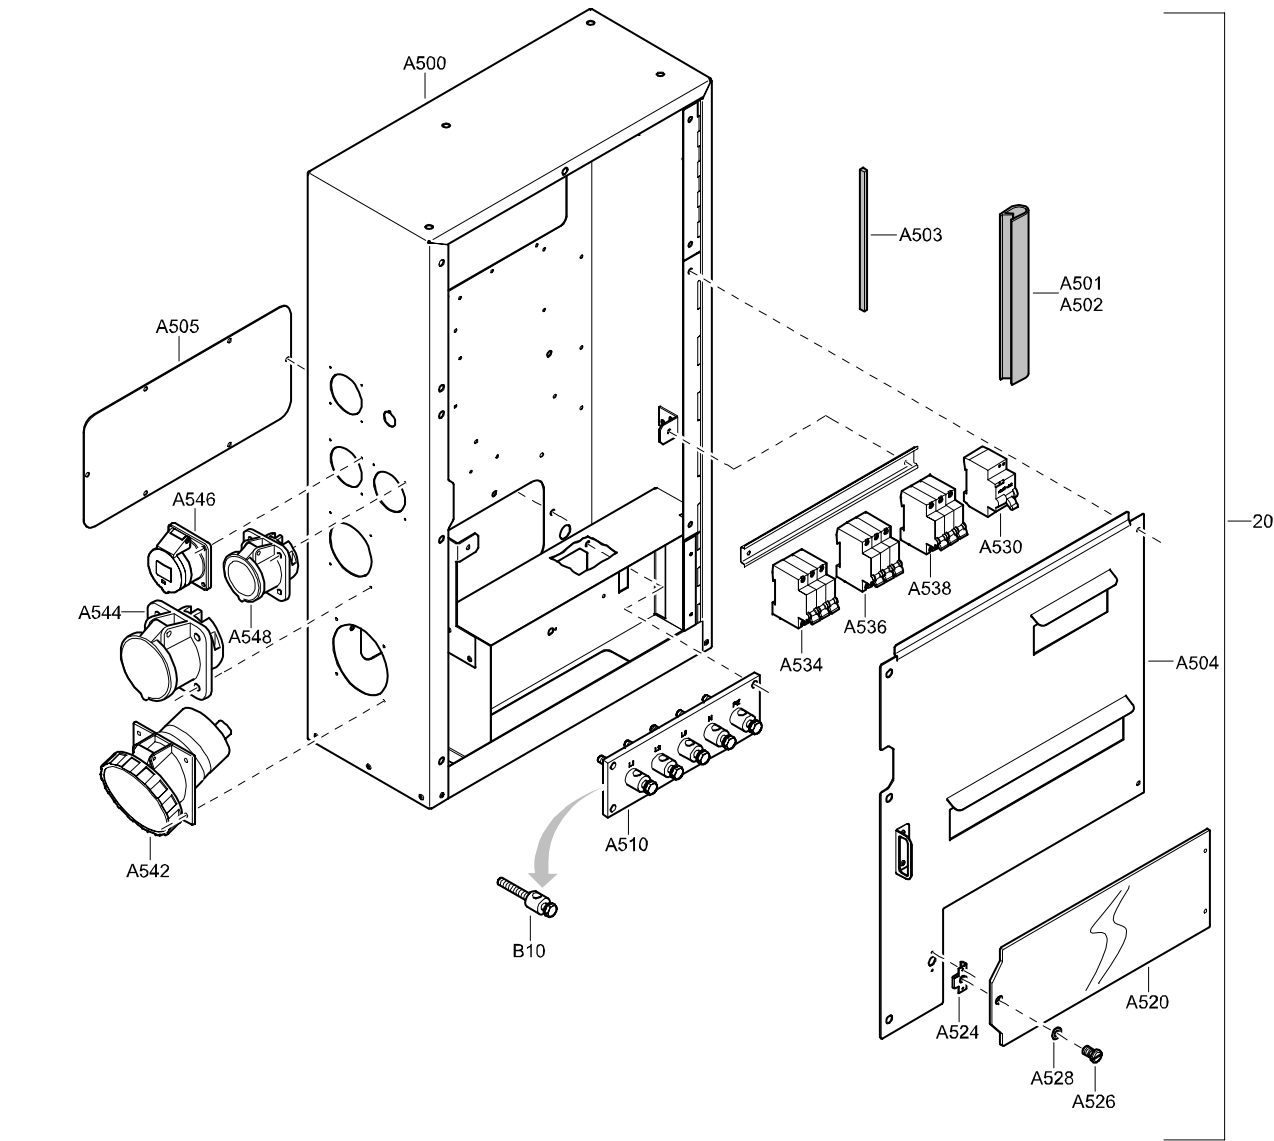


REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 55	TERMINAL BOARD + SOCKER SET3	1
•A500	1626 2484 00	CUBICLE -	1
•A501	1503 1056 00	SEAL	AR
•A502	1503 1056 00	SEAL	AR
•A503	0090 5050 14	TAPE	AR
•A504	1626 2301 00	PANEL	1
•A505	1626 3020 00	PLATE BACK	1
•A510	1615 7095 00	TERMINAL BOARD	1
••B10	1615 8912 00	TERMINAL	5
•A520	1626 2302 00	DOOR CUBICLE	1
•A524	1615 6728 00	PLATE	1
•A526	1615 7166 00	STUD	1
•A528	1615 6727 00	WASHER	1
•A530	1089 9473 01	CIRCUIT BREAKER	1
•A534	1089 9472 28	CIRCUIT BREAKER	1
•A536	1089 9472 27	CIRCUIT BREAKER	1
•A538	1089 9472 26	CIRCUIT BREAKER	1
•A542	1089 0662 37	SOCKET OUTLET	1
•A544	1089 0662 07	SOCKET OUTLET	1
•A546	1089 0662 04	SOCKET OUTLET	1
•A548	1089 0662 12	SOCKET OUTLET	1

CONTROL PANEL - QC1002 - OPTIONS

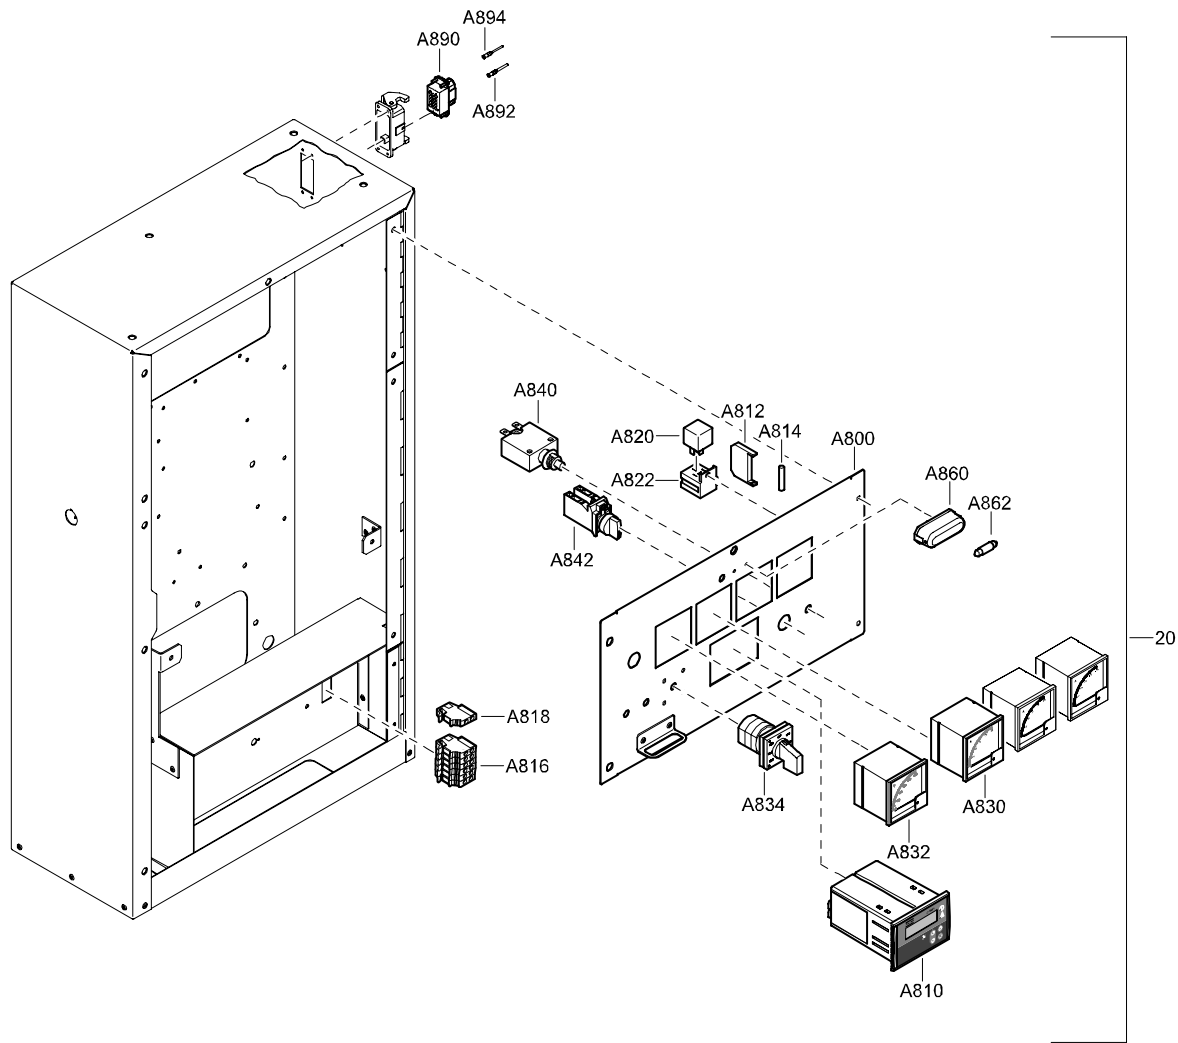


REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 81	CONTROL PANEL QC1002	1
•A800	1626 2299 00	PANEL	1
•A810	1604 9382 00	CONTROLLER	1
•A812	1089 0506 19	DIODE	1
•A814	1089 0310 14	RESISTOR	1
•A816	1088 0027 02	TERMINAL	6
•A818	1088 0027 04	TERMINAL	1
•A820	1089 0341 07	RELAY	1
•A822	1089 0358 01	SOCKET	1
•A830	1089 9381 04	AMPEREMETER	1
•A832	1089 9383 01	VOLTMETER	1
•A834	1089 9614 01	VOLTAGE SWITCH	1
•A840	1089 9423 01	CIRCUIT BREAKER	1
•A842	1089 0263 11	SELECTOR SWITCH	1
•A860	1089 9354 01	PANELLIGHT	1
•A862	1619 1609 00	BULB	1
•A890	1088 0029 45	MALE INSERT	1
•A892	1088 0029 61	MALE CONTACT	10
•A894	1088 0029 55	MALE CONTACT	2

CONTROL PANEL - QC2002 - OPTIONS

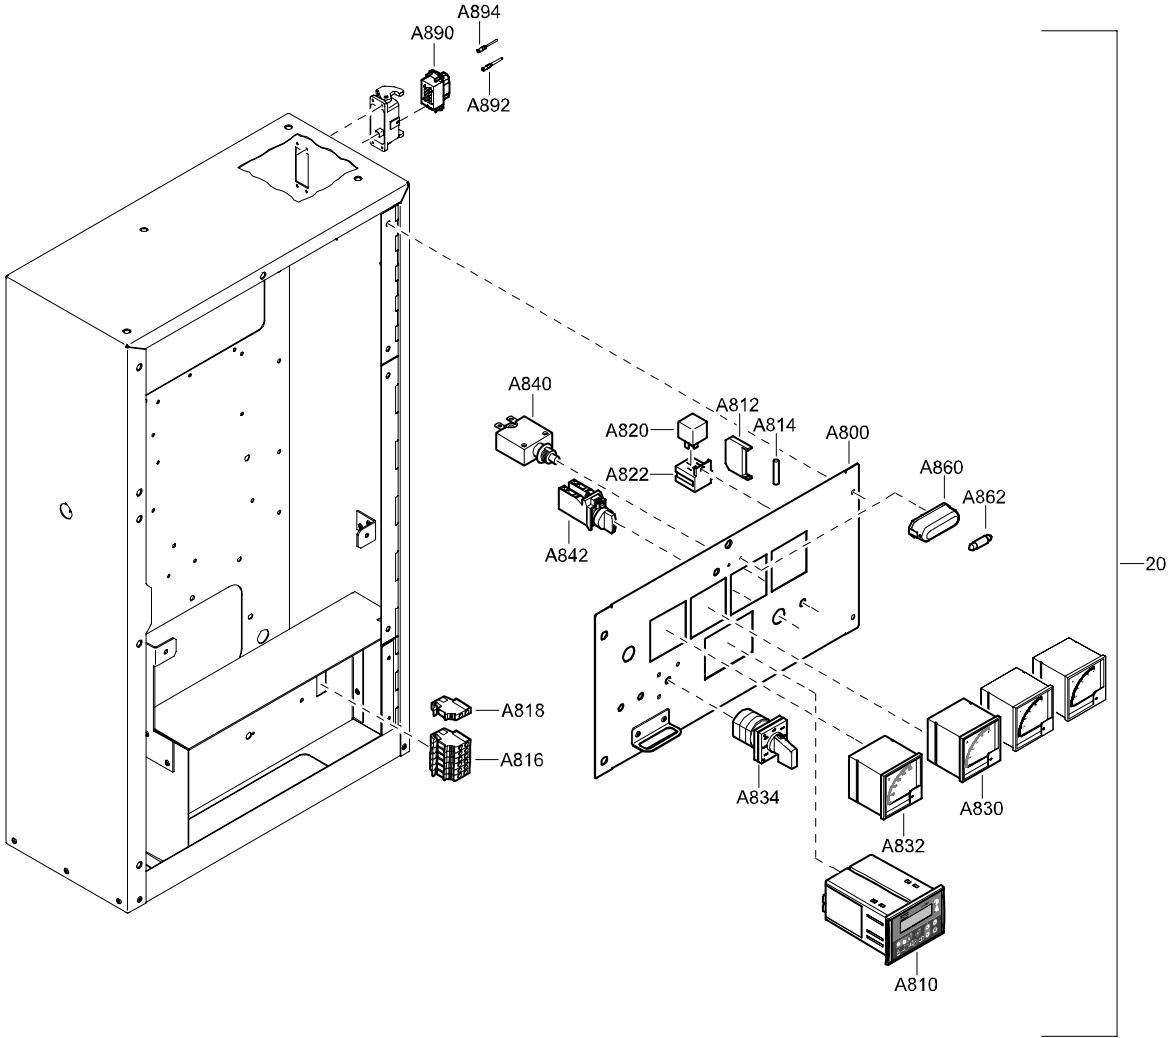

REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 83	CONTROL PANEL QC2002	1
•A800	1626 2299 00	PANEL	1
•A810	1604 9420 00	CONTROLLER	1
•A812	1089 0506 19	DIODE	1
•A814	1089 0310 14	RESISTOR	1
•A816	1088 0027 02	TERMINAL	10
•A818	1088 0027 04	TERMINAL	1
•A820	1089 0341 07	RELAY	1
•A822	1089 0358 01	SOCKET	1
•A830	1089 9381 04	AMPEREMETER	1
•A832	1089 9383 01	VOLTMETER	1
•A834	1089 9614 01	VOLTAGE SWITCH	1
•A840	1089 9423 01	CIRCUIT BREAKER	1
•A842	1089 0263 27	SELECTOR SWITCH	1
•A860	1089 9354 01	PANELLIGHT	1
•A862	1619 1609 00	BULB	1
•A890	1088 0029 45	MALE INSERT	1
•A892	1088 0029 61	MALE CONTACT	10
•A894	1088 0029 55	MALE CONTACT	2


EARTH LEAKAGE RELAY - OPTIONS

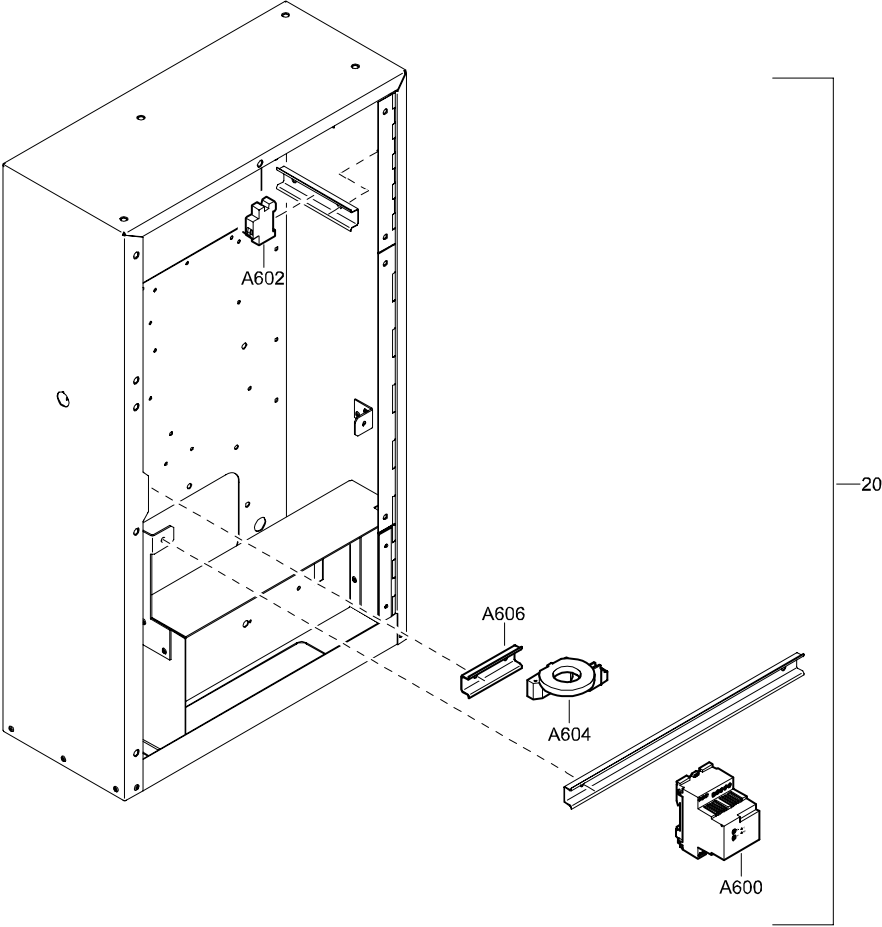



REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 60	EARTH LEAKAGE RELAY	1
•A600	1089 9473 54	EARTH RELAY	1
•A602	1089 9473 20	SWITCH	1
•A604	1089 9473 55	TORUS	1
•A606	0090 1400 02	RAIL	AR

INSULATION MONITORING RELAY - OPTIONS

REF	PART NUMBER	DESIGNATION	QTY
20	1900 1038 61	INSULATION MONITORING RELAY	1
•A600	1089 9450 01	INSUL.MON.RELAY	1

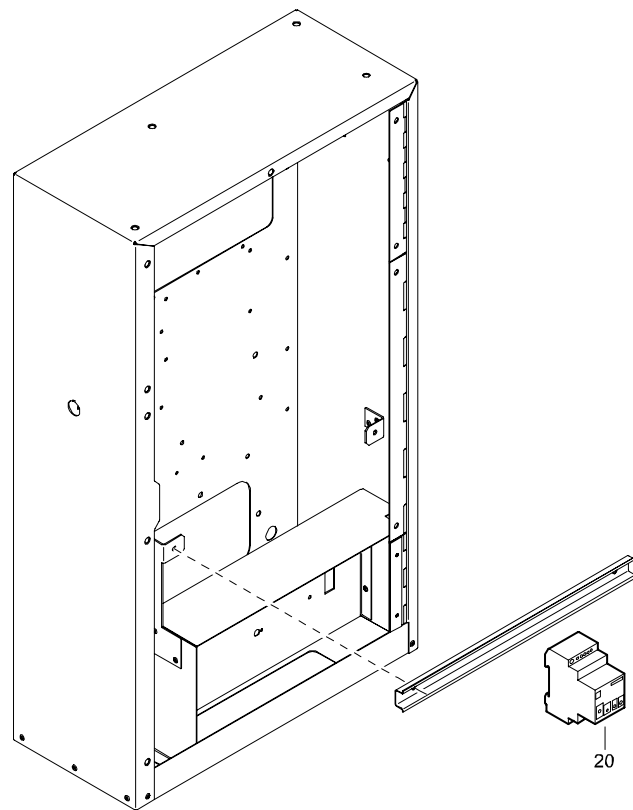


3 - WAY VALVE ASSEMBLY - OPTIONS

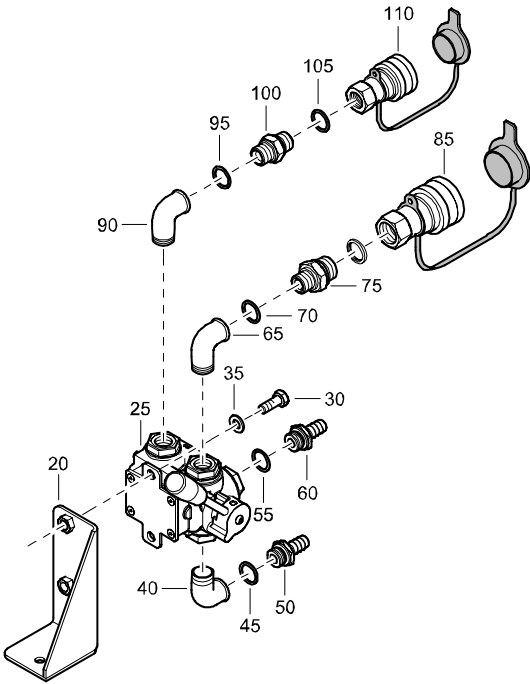 


REF	PART NUMBER	DESIGNATION	QTY
-	1626 2503 81	ASSEMBLY - EFT	(From page 58)
•20	1626 2503 01	SUPPORT	1
•25	1604 6111 01	VALVE	1
•30	0147 1362 03	HEX. HEAD SCREW	2
•35	0301 2344 00	PLAIN WASHER	2
•40	0560 0200 23	ELBOW	2
•45	0653 1124 00	FLAT GASKET	2
•50	0571 0020 14	HOSE NIPPLE	2
•55	0653 1124 00	FLAT GASKET	2
•60	0571 0020 14	HOSE NIPPLE	2
•65	0560 0200 23	ELBOW	1
•70	0653 1124 00	FLAT GASKET	1
•75	0603 5522 03	HEXAGON NIPPLE	1
•80	0653 1124 00	FLAT GASKET	1
•85	1615 8745 01	QUICK COUPLING	1
•90	0560 0200 23	ELBOW	1
•95	0653 1124 00	FLAT GASKET	1
•100	0603 4200 10	FITTING	1
•105	0653 1124 00	FLAT GASKET	1
•110	1615 8744 01	QUICK COUPLING	1

FRAME AND MOUNTS - FOR GENERATOR WITH SKID FUELTANK - OPTIONS

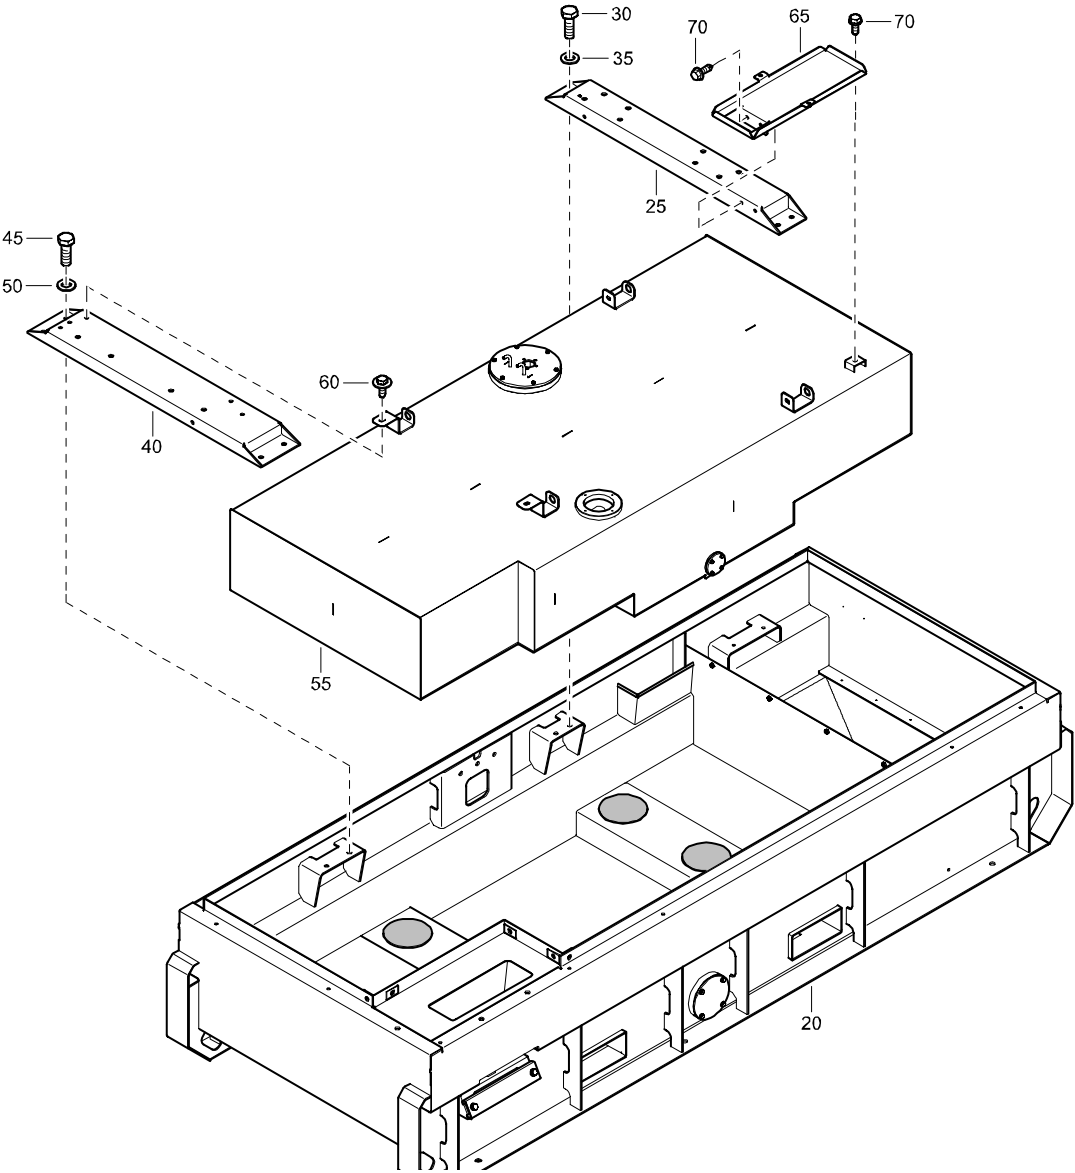

REF	PART NUMBER	DESIGNATION	QTY
-	1626 2778 90	FRAME ASSY + FUELTANK ASSY (From page 67)	
•20	1626 2778 80	FRAME ASSY (For details see page 84)	1
•25	1626 1700 01	SUPPORT ENGINE	1
•30	0147 1401 03	HEX. HEAD SCREW	4
•35	0301 2358 00	PLAIN WASHER	4
•40	1626 2779 00	SUPPORT	1
•45	0147 1401 03	HEX. HEAD SCREW	4
•50	0301 2358 00	PLAIN WASHER	4
•55	1626 2780 80	FUELTANK ASSY (For details see page 85)	1
•60	1615 5664 00	HEX. HEAD SCREW	4
•65	1626 2194 01	SUPPORT	1
•70	1619 2766 00	HEX. HEAD SCREW	3

FRAME ASSEMBLY - FOR GENERATOR WITH SKID FUELTANK - OPTIONS

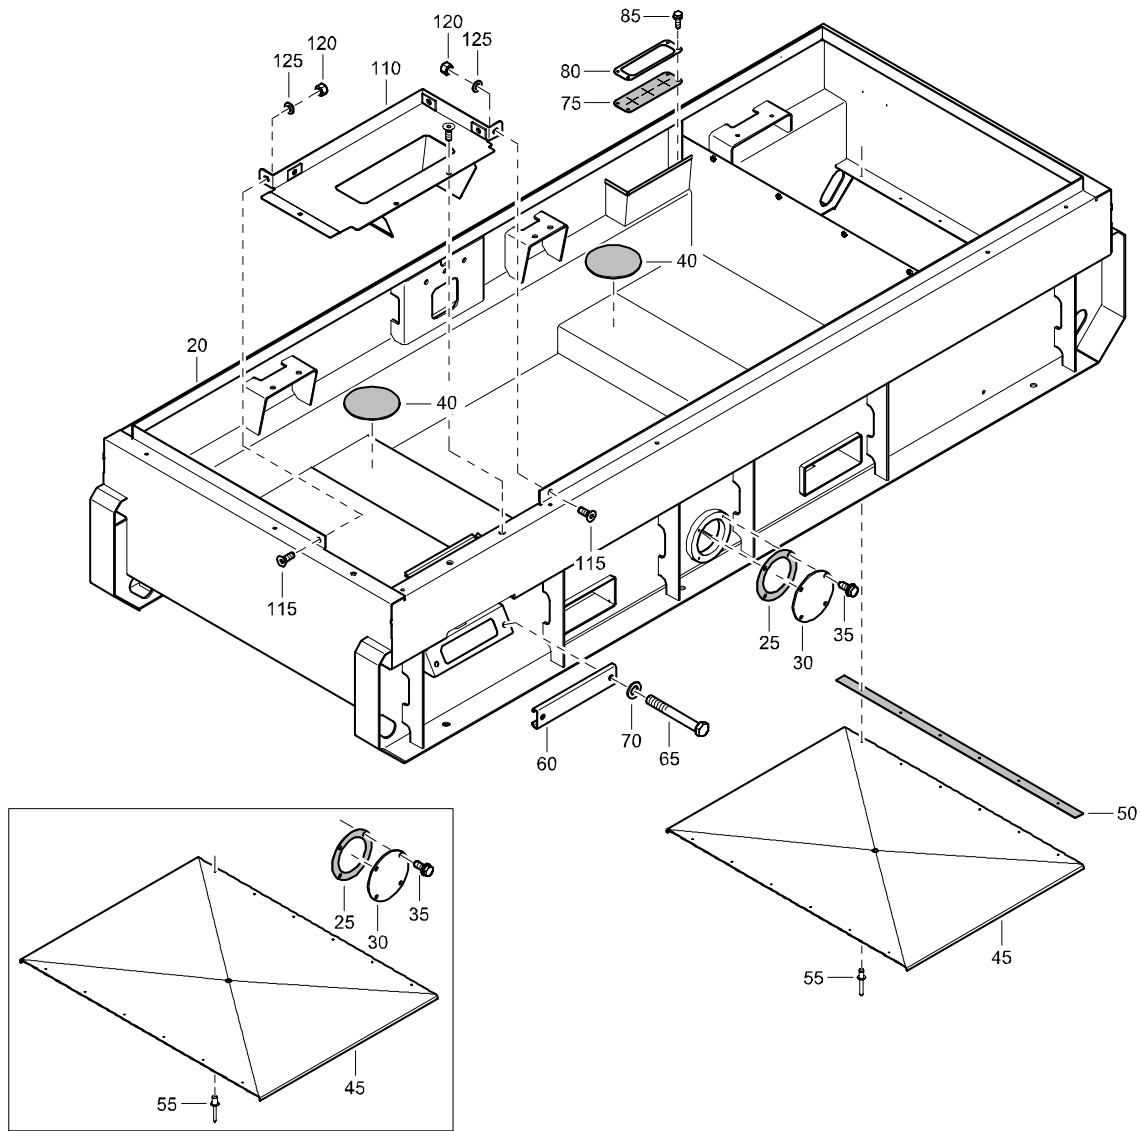

REF	PART NUMBER	DESIGNATION	QTY
-	1626 2778 80	FRAME ASSY	(From page 83)
•20	1626 2778 00	FRAME	1
•25	1604 6550 00	GASKET	2
•30	1604 6551 00	FLANGE	2
•35	1619 2766 00	HEX. HEAD SCREW	8
•40	1626 1805 00	SEAL	9
•45	1626 1702 00	PLATE BOTTOM	2
•50	1626 2391 00	SEAL	2
•55	0129 3172 01	BLIND RIVET	24
•60	1626 0593 00	CLAMP	1
•65	0147 1413 03	HEX. HEAD SCREW	2
•70	0301 2358 00	PLAIN WASHER	2
•75	1626 1967 01	SEAL GASKET	1
•80	1626 1968 01	PLATE	1
•85	1619 5898 01	HEX. HEAD SCREW	4
•110	1626 2781 00	SUPPORT	1
•115	0216 1324 03	HEX SOCK. SCREW	3
•120	0266 2110 00	HEXAGON NUT	2
•125	0301 2335 00	PLAIN WASHER	2

FUELTANK ASSEMBLY - FOR GENERATOR WITH SKID FUELTANK - OPTIONS

REF	PART NUMBER	DESIGNATION	QTY
-	1626 2780 80	FUELTANK ASSY (From page 83)	
•20	1626 2780 00	TANK FUEL	1
•25	1626 3027 00	MANIFOLD	1
•30	1626 2346 00	GASKET	1
•35	0147 1247 03	HEX. HEAD SCREW	6
•40	0301 2321 00	PLAIN WASHER	6
•45	1604 4345 00	GASKET	1
•50	1604 4344 00	FLANGE	1
•55	0147 1246 03	HEX. HEAD SCREW	4
•60	0301 2321 00	PLAIN WASHER	4
•65	1604 4137 00	HOSE CLIP	1
•70	0075 4005 55	FUEL HOSE	AR

