Parts List

For Portable Compressor

XRVS 976 CdH
XRHS 1096 CdH
XRVS 476 CdH
XRHS 506 CdH
XRVS 1000 CdH

Parts List

For Portable Compressor

XRVS 976 CdH
XRHS 1096 CdH
XRVS 476 CdH
XRHS 506 CdH
XRVS 1000 CdH

Warranty and Liability 4

Safety Precautions for Portable Compressors 7

Parts Index 11

Printed Matter N°

1092 0524 10

06/2007

Atlas Copco

ATLAS COPCO - PORTABLE AIR DIVISION

www.atlascopco.com

Warranty and Liability Limitation
Use only authorized parts.
Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.
The manufacturer does not accept any liability for any damage arising for modifications, additions or conversions made without the manufacturer's approval in writing.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.
Any unauthorized use or copying of the contents or any part thereof is prohibited.
This applies in particular to trademarks, model denominations, part numbers and drawings.

Garantie- en aansprakelijkheidsbepalingen
Gebruik alleen originele onderdelen.
Beschadigingen of defecten die het gevolg zijn van het gebruik van niet originele onderdelen vallen niet onder garantie of productaansprakelijkheid.
De producent is niet aansprakelijk voor enige schade veroorzaakt door modificatie, toevoeging of ombouw, gemaakt zonder de schriftelijke toestemming van de fabrikant.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, België.
Het is niet toegestaan om zonder toestemming de inhoud geheel of gedeeltelijk te kopiëren of anderszins te gebruiken.
Dit betreft vooral trademarks, modelbenamingen, onderdeelnummers en tekeningen.

Limitation de garantie et de responsabilité
Utiliser uniquement les pièces homologuées.
Tout dommage ou mauvais fonctionnement dû à l'utilisation de pièces non homologuées n'est pas couvert par la garantie ou la responsabilité des produits défectueux.
Le fabriquant décline toute responsabilité en cas de dommage faisant suite à des modifications, des ajouts ou des conversions effectués sans l'accord écrit du fabriquant.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgique.
Toute utilisation ou copie du contenu, ou d'une parte de celui-ci, non autorisée est interdite.
Cette interdiction s'applique en particulier aux marques de commerce, aux dénominations des modèles, aux numéros des pièces et aux schémas.

Garantie- und Haftungseinschränkungen
Nur zugelassene Teile verwenden.
Jede Beschädigung oder Fehlfunktion, die durch die Verwendung von nicht zugelassenen Teilen verursacht wurde, ist nicht durch die Garantie oder Produkthaftung abgedeckt.
Der Hersteller übernimmt keine Haftung für Schäden, die durch Modifizierungen, Ergänzungen oder Funktionsänderungen entstehen, die ohne schriftliche Zustimmung des Herstellers erfolgt sind.

Urheberrecht 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.
Jede nicht genehmigte Verwendung oder Kopie des Inhaltes oder von Teilen ist untersagt.
Das bezieht sich im Einzelnen auf Warenzeichen, Modellbezeichnungen, Teilenummern und Zeichnungen.

Limitación de garantía y responsabilidad
Use sólo piezas autorizadas.
La garantía o responsabilidad del producto no cubre ningún daño o funcionamiento defectuoso provocado por el uso de piezas no autorizadas.
El fabricante no acepta ninguna responsabilidad por los daños provocados por modificaciones, adiciones o conversiones realizadas sin la aprobación por escrito del fabricante.

Derechos de reproducción 2004, Atlas Copco Airpower n.v., Amberes, Bélgica.
Está prohibida toda utilización o reproducción total o parcial no autorizada de estos contenidos,
en especial de las marcas registradas, denominaciones de modelos, números de piezas y planos.

Begränsningar av garanti och ansvarsskyldighet
Använd endast godkända delar.
Den skada eller funktionsoduglighet som förorsakats av att ej godkända delar har använts, täcks inte av garantin eller produktansvaret.
Tillverkaren accepterar ingen ansvarsskyldighet för skador som uppstått efter att ändringar, tillägg eller ombyggnader gjorts utan skriftligt tillstånd från tillverkaren.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.
Ej auktoriserad användning eller kopiering av innehållet, eller delar av det, är förbjuden.
Detta gäller speciellt varumärken, modellbeteckningar, reservdelsnummer och ritningar.

Limitazione di Garanzia e di Responsabilità
Usare solo componenti autorizzati.
Qualsiasi danno o malfunzione causati dall'uso di componenti non autorizzati non è coperto dalla Garanzia o dalla Responsabilità sul Prodotto.
Il fabbricante non accetta alcuna reponsabilità per danni derivanti da modifiche, aggiunte o trasformazioni effettuate senza l'approvazione scritta del fabbricante.

Copyright 2004, Atlas Copco Airpower n.v., Anversa, Belgio.
Sono vietati ogni uso o copia non autorizzati del contenuto o di qualsiasi parte dello stesso.
Ciò si applica in particolare ai marchi, alle denominazioni dei modelli, ai numeri dei componenti ed ai disegni.

Garanti- og ansvarsbegrænsning
Brug kun tilladte reservedele.
Enhver skade eller fejlfunktion, forårsaget af brug af ikke tilladte reservedele, omfattes ikke af garantien eller produktansvaret.
Fabrikanten kan ikke drages til ansvar for nogen skade som følge af ændringer, udvidelser eller ombygninger, der er blevet udført uden fabrikantens skriftlige samtykke.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.
Enhver uautoriseret brug eller kopiering af indholdet eller dele deraf er forbudt.
Dette gælder især varemærker, modelbenævnelser, delnumre og tegninger.

Εγγύηση και Περιορισμός Ευθύνης
Χρησιμοποιήστε μόνο εγκεκριμένα εξαρτήματα.
Οποιαδήποτε ζημιά ή δυσλειτουργία προκληθεί από τη χρήση μη εγκεκριμένων εξαρτημάτων δεν καλύπτεται από την εγγύηση και την ευθύνη για το προϊόν.
Ο κατασκευαστής δεν αποδέχεται καμία ευθύνη για ζημιές που προκύπτουν από τροποποιήσεις, προσθήκες ή μετατροπές που έγιναν χωρίς τη γραπτή έγκριση του κατασκευαστή.

Copyright 2004, Atlas Copco Airpower n.v., Αμβέρσα, Βέλγιο.
Απαγορεύεται οποιαδήποτε χρήση ή αντιγραφή του περιεχόμενου ή οποιουδήποτε τμήματος του παρόντος χωρίς εξουσιοδότηση.
Αυτό ισχύει συγκεκριμένα για εμπορικά σήματα, ονομασίες μοντέλων, κωδικούς εξαρτημάτων και σχέδια.

Garanti og ansvarsbegrensning
Bruk kun autoriserte deler.
Enhver skade eller funksjonsfeil som skyldes bruk av uautoriserte deler dekkes ikke av garanti eller produktansvar.
Fabrikanten aksepterer intet ansvar for noen skade som oppstår på grunn av modifikasjoner, tilføyelser eller forandringer som er gjort uten fabrikantens skriftlige tillatelse.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgia.
All uautorisert bruk eller kopiering av innholdet eller en del av det er forbudt.
Dette gjelder særlig varemerker, modellbenevnelser, delenumre og tegninger.

Takuun ja vastuuvelvollisuuden rajoitus
Käytä vain valmistajan hyväksymiä varaosia.
Takuu ja tuotevastuu eivät kata vahinkoja tai toimintahäiriöitä, joiden syynä on muiden kuin hyväksyttyjen varaosien käyttö.
Valmistaja ei vastaa vahingoista, jotka aiheutuvat ilman valmistajan kirjallista lupaa tehdyistä muutoksista tai lisäyksistä.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgia.
Sisällön osittainenkin käyttö tai kopiointi ilman lupaa on kielletty.
Tämä koskee erityisesti tavaramerkkejä, mallien nimiä, osanumeroita ja piirustuksia.

Garantijas un atbildîbas ierobeþojumi
Izmantot tikai ieteiktâs rezerves daïas.
Ðî garantija nesedz bojâjumus vai disfunkciju, kuri ir raduðies neatïautu rezerves daïu izmantoðanas rezultâtâ.
Raþotâjs nepieòem pretenzijas par bojâjumiem, kas izriet no modifikâcijâm, papildinâjumiem vai pârveidojumiem bez raþotâja rakstiskas piekriðanas.

Autortiesîbas 2004, Atlas Copco Airpower n.v., Antverpene, Beïìija.
Jebkura neatïautâ ðî satura izmantoðana vai kopçðana ir aizliegta.Tas konkrçti attiecas uz tirdzniecîbas markâm, modeïu denominâcijâm, daïu numuriem un rasçjumiem.

Limites de Garantia e Responsabilidade

Utilize apenas peças autorizadas.

Avarias ou defeitos de funcionamento que sejam causados pelo uso de sobresselentes ou componentes não autorizados não serão cobertos pela Garantia ou pela Responsabilidade de Produto.

O fabricante não aceita qualquer responsabilidade por quaisquer danos resultantes de modificações, adições ou conversões efectuadas sem a aprovação escrita do fabricante.

Copyright 2004, Atlas Copco Airpower n.v., Antuérpia, Bélgica.

Qualquer uso não autorizado ou cópia do conteúdo ou de qualquer parte dele é proibida.

Isto aplica-se em particular a marcas registadas, denominações de modelos, números de peças e desenhos.

有限担保和责任

只允许使用经认可的零件。

因使用未经认可的零件而导致的任何损坏或故障不在本担保或产品责任所保障的范围之内。

未经制造商书面许可，制造商概不负责因擅自对设备进行改动、添加附件或改型而导致的设备损坏。

版权 2004，比利时安特卫普 Atlas Copco Airpower n.v.。

未经许可，禁止使用或复制本手册中所含的全部或任何一部分内容。

本公告特别适用于本手册所含的商标、型号名称、零件代号和图纸。

A garancia és felelősség korlátozása

Csak jóváhagyott alkatrészeket használjon!
A nem jóváhagyott alkatrészek használatából adódó sérülésekre és üzemzavarra nem terjed ki a garancia és a termékfelelősség.
A gyártó semminemű felelősséget nem vállal a gyártó írásos jóváhagyása nélkül végzett bármilyen módosításokból, kiegészítésekből vagy átalakításokból adódó sérülésekért.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

A kézikönyv tartalma vagy annak egy részének engedély nélküli felhasználása vagy másolása tilos.

Ez vonatkozik különösen a védjegyekre, a típusjelölésekre, cikkszámokra és rajzokra.

Záruka a obmedzenia zodpovednosti výrobcu

Používajte len schválené súčiastky.
Akákoľvek škoda alebo porucha spôsobená použitím neschválených súčiastok nie je zahrnutá v záruke ani zodpovednosti výrobcu za škodu.
Výrobca nepripúšťa žiadnu zodpovednosť za akékoľvek škody vzniknuté úpravou, pridaním alebo prerobením, ktoré boli vykonané bez predchádzajúceho písomného súhlasu výrobcu.

Autorské práva 2004, Atlas Copco Airpower n.v., Antverpy, Belgicko.

Akékoľvek neoprávnené použitie alebo kopírovanie obsahu, alebo jeho časti je zakázané.
Toto sa vzťahuje najmä na obchodné značky, modelové označenia, čísla súčiastok a nákresy.

Garantii ja piiratud vastutus

Kasutage ainult valmistaja poolt aktsepteeritud varuosi.
Mis tahes vigastus või rike, mille on põhjustanud valmistaja poolt aktsepteerimata varuosa kasutamine, ei kuulu toote garantii või tootja vastutuse alla.
Valmistaja ei aktsepteeri ühtegi riket, mis on tekkinud toote modifitseerimisest, lisandustest või ümberehitamisest, mida valmistaja ei ole kirjalikult heaks kiitnud.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

Käesoleva juhendi mistahes loata kasutamine või kopeerimine on keelatud.
See kehtib nii kaubamärkide, mudeli nimetuste, varuosade numbrite kui ka jooniste kohta.

Ограничение гарантии и ответственности

Используйте компоненты только авторизованных поставщиков.
Не распространяется гарантия и ответственность за продукцию при любых повреждениях или неисправностях в результате использования неавторизованных компонентов.
Производитель не несет никакой ответственности за любые повреждения, возникшие в результате модификации, дополнения или изменения, выполненные без письменного утверждения производителя.

Copyright 2004, Atlas Copco Airpower n.v., Антверпен, Бельгия.

Запрещается любое несанкционированное использование или копирование содержания этих материалов или их части.
В особенности это относится к торговым маркам, обозначениям моделей, номерам деталей и чертежам.

Gwarancja i ograniczenie odpowiedzialności

Stosować jedynie oryginalne części zamienne.
Jakiekolwiek uszkodzenia lub niesprawności spowodowane stosowaniem niezaaprobowanych części zamiennych nie są objęte gwarancją lub odpowiedzialnością za produkt.
Producent nie będzie ponosił żadnej odpowiedzialności za jakiekolwiek szkody spowodowane modyfikacjami, dodatkami lub zmianami wykonanymi bez pisemnej zgody producenta.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpia, Belgia.

Wszelkie stosowanie lub kopiowanie zawartości lub jakiejkolwiek części publikacji bez zezwolenia jest zabronione.
Dotyczy to szczególnie znaków handlowych, oznaczeń modeli, numerów części oraz rysunków.

Omezení záruky a odpovědnosti

Používejte pouze takové součásti, které jsou schválené výrobcem zařízení.
Jakékoliv poškození nebo závady způsobené použitím součástí, které nebyly schválené výrobcem zařízení, nejsou kryty zárukou, nebo odpovědností za výrobek.
Výrobce nepřijímá žádnou odpovědnost za jakékoliv škody, způsobené modifikacemi, doplňky nebo přestavbami zařízení provedenými bez předchozího písemného svolení.

Copyright 2004, Atlas Copco Airpower n.v., Antverpy, Belgie.

Jakékoliv neoprávněné použití nebo kopírování obsahu tohoto dokumentu nebo kterékoliv jeho části je zakázáno.
Toto platí obzvláště pro obchodní známky, označení modelů, čísla součástí a výkresovou dokumentací.

Garancijski pogoji in omejitve

Uporabljajte samo odobrene dele.
Garancija proizvajalca ni veljavna pri poškodbah ali motnjah v delovanju, ki so posledica uporabe neodobrenih delov.
Proizvajalec ne prevzema nikakršne odgovornosti za poškodbe, ki so nastale zaradi sprememb, dodatkov ali prilagoditev na izdelku, ki so bile izvedene brez pisne odobritve proizvajalca.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

Brez pisnega dovoljenja ni dovoljeno uporabljati ali razmnoževati nobenega dela dokumenta.
To velja še posebno za blagovne znamke, označbe modelov, številke izdelkov in risbe.

Garantijos ir atsakomybės galiojimas

Naudokite tik originalias dalis.
Garantija nebus taikoma tuo atveju, jeigu þala ar sutrikimas atsiranda naudojant neoriginalias dalis.
Gamintojas neprisiima jokios atsakomybės dël þalos, susijusios su modifikacija, papildymu ar perdirbimu, atliktu be raðtiðko gamintojo sutikimo.

Autorystës teisë 2004, “Atlas Copco Airpower n.v.“, Antverpenas, Belgija.

Neteisëtas viso teksto ar kurios nors jo dalies panaudojimas ar kopijavimas yra draudþiamas.
Visø pirma ði sàlyga taikoma prekiniams þenklams, modeliø pavadinimams, daliø numeriams ir brëþiniams.

1. SAFETY PRECAUTIONS FOR PORTABLE COMPRESSORS

To be read attentively and acted accordingly before towing, lifting, operating, performing maintenance or repairing the compressor

1.1 INTRODUCTION

The policy of Atlas Copco is to provide the users of their equipment with safe, reliable and efficient products. Factors taken into account are among others:
- the intended and predictable future use of the products, and the environments in which they are expected to operate,
- applicable rules, codes and regulations,
- the expected useful product life, assuming proper service and maintenance,
- providing the manual with up-to-date information.

Before handling any product, take time to read the relevant instruction manual. Besides giving detailed operating instructions, it also gives specific information about safety, preventive maintenance, etc.
Keep the manual always at the unit location, easy accessible to the operating personnel.

See also the safety precautions of the engine and possible other equipment, which are separately sent along or are mentioned on the equipment or parts of the unit.

These safety precautions are general and some statements will therefore not always apply to a particular unit.

Only people that have the right skills should be allowed to operate, adjust, perform maintenance or repair on Atlas Copco equipment. It is the responsibility of management to appoint operators with the appropriate training and skill for each category of job.

Skill level 1: Operator

An operator is trained in all aspects of operating the unit with the push-buttons, and is trained to know the safety aspects.

Skill level 2: Mechanical technician

A mechanical technician is trained to operate the unit the same as the operator. In addition, the mechanical technician is also trained to perform maintenance and repair, as described in the instruction manual, and is allowed to change settings of the control and safety system. A mechanical technician does not work on live electrical components.

Skill level 3: Electrical technician

An electrical technician is trained and has the same qualifications as both the operator and the mechanical technician. In addition, the electrical technician may carry out electrical repairs within the various enclosures of the unit. This includes work on live electrical components.

Skill level 4: Specialist from the manufacturer

This is a skilled specialist sent by the manufacturer or its agent to perform complex repairs or modifications to the equipment.

In general it is recommended that not more than two people operate the unit, more operators could lead to unsafe operating conditions. Take necessary steps to keep unauthorized persons away from the unit and eliminate all possible sources of danger at the unit.

When handling, operating, overhauling and/or performing maintenance or repair on Atlas Copco equipment, the mechanics are expected to use safe engineering practices and to observe all relevant local safety requirements and ordinances. The following list is a reminder of special safety directives and precautions mainly applicable to Atlas Copco equipment.

These safety precautions apply to machinery processing or consuming air. Processing of any other gas requires additional safety precautions typical to the application and are not included herein.

Neglecting the safety precautions may endanger people as well as environment and machinery:
- endanger people due to electrical, mechanical or chemical influences,
- endanger the environment due to leakage of oil, solvents or other substances,
- endanger the machinery due to function failures.

All responsibility for any damage or injury resulting from neglecting these precautions or by non-observance of ordinary caution and due care required in handling, operating, maintenance or repair, also if not expressly mentioned in this instruction manual, is disclaimed by Atlas Copco.

The manufacturer does not accept any liability for any damage arising from the use of non-original parts and for modifications, additions or conversions made without the manufacturer's approval in writing.

If any statement in this manual does not comply with local legislation, the stricter of the two shall be applied.

Statements in these safety precautions should not be interpreted as suggestions, recommendations or inducements that it should be used in violation of any applicable laws or regulations.

1.2 GENERAL SAFETY PRECAUTIONS

1 The owner is responsible for maintaining the unit in a safe operating condition. Unit parts and accessories must be replaced if missing or unsuitable for safe operation.

2 The supervisor, or the responsible person, shall at all times make sure that all instructions regarding machinery and equipment operation and maintenance are strictly followed and that the machines with all accessories and safety devices, as well as the consuming devices, are in good repair, free of abnormal wear or abuse, and are not tampered with.

3 Whenever there is an indication or any suspicion that an internal part of a machine is overheated, the machine shall be stopped but no inspection covers shall be opened before sufficient cooling time has elapsed; this to avoid the risk of spontaneous ignition of oil vapour when air is admitted.

4 Normal ratings (pressures, temperatures, speeds, etc.) shall be durably marked.

5 Operate the unit only for the intended purpose and within its rated limits (pressure, temperature, speeds, etc.).

6 The machinery and equipment shall be kept clean, i.e. as free as possible from oil, dust or other deposits.

7 To prevent an increase in working temperature, inspect and clean heat transfer surfaces (cooler fins, intercoolers, water jackets, etc.) regularly. See the maintenance schedule.

8 All regulating and safety devices shall be maintained with due care to ensure that they function properly. They may not be put out of action.

9 Care shall be taken to avoid damage to safety valves and other pressure-relief devices, especially to avoid plugging by paint, oil coke or dirt accumulation, which could interfere with the functioning of the device.

10 Pressure and temperature gauges shall be checked regularly with regard to their accuracy. They shall be replaced whenever outside acceptable tolerances.

11 Safety devices shall be tested as described in the maintenance schedule of the instruction manual to determine that they are in good operating condition.

12 Mind the markings and information labels on the unit.

13 In the event the safety labels are damaged or destroyed, they must be replaced to ensure operator safety.

14 Keep the work area neet. Lack of order will increase the risk of accidents.

15 When working on the unit, wear safety clothing. Depending on the kind of activities these are: safety glasses, ear protection, safety helmet (including visor), safety gloves, protective clothing, safety shoes. Do not wear the hair long and loose (protect long hair with a hairnet), or wear loose clothing or jewelry.

16 Take precautions against fire. Handle fuel, oil and anti-freeze with care because they are inflammable substances. Do not smoke or approach with naked flame when handling such substances. Keep a fire-extinguisher in the vicinity.

1.3 SAFETY DURING TRANSPORT AND INSTALLATION

To lift a unit, all loose or pivoting parts, e.g. doors and towbar, shall first be securely fastened.

Do not attach cables, chains or ropes directly to the lifting eye; apply a crane hook or lifting shackle meeting local safety regulations. Never allow sharp bends in lifting cables, chains or ropes.

Helicopter lifting is not allowed.
It is strictly forbidden to dwell or stay in the risk zone under a lifted load. Never lift the unit over people or residential areas. Lifting acceleration and retardation shall be kept within safe limits.

1 Before towing the unit:
- ascertain that the pressure vessel(s) is (are) depressurized,
- check the towbar, the brake system and the towing eye. Also check the coupling of the towing vehicle,
- check the towing and brake capability of the towing vehicle,
- check that the towbar, jockey wheel or stand leg is safely locked in the raised position,
- ascertain that the towing eye can swivel freely on the hook,
- check that the wheels are secure and that the tyres are in good condition and inflated correctly,
- connect the signalisation cable, check all lights and connect the pneumatic brake couplers,
- attach the safety break-away cable or safety chain to the towing vehicle,
- remove wheel chocks, if applied, and disengage the parking brake.

2 To tow a unit use a towing vehicle of ample capacity. Refer to the documentation of the towing vehicle.

3 If the unit is to be backed up by the towing vehicle, disengage the overrun brake mechanism (if it is not an automatic mechanism).

4 Never exceed the maximum towing speed of the unit (mind the local regulations).

5 Place the unit on level ground and apply the parking brake before disconnecting the unit from the towing vehicle. Unclip the safety break-away cable or safety chain. If the unit has no parking brake or jockey wheel, immobilize the unit by placing chocks in front of and/or behind the wheels. When the towbar can be positioned vertically, the locking device must be applied and kept in good order.

6 To lift heavy parts, a hoist of ample capacity, tested and approved according to local safety regulations, shall be used.

7 Lifting hooks, eyes, shackles, etc., shall never be bent and shall only have stress in line with their design load axis. The capacity of a lifting device diminishes when the lifting force is applied at an angle to its load axis.

8 For maximum safety and efficiency of the lifting apparatus all lifting members shall be applied as near to perpendicular as possible. If required, a lifting beam shall be applied between hoist and load.

9 Never leave a load hanging on a hoist.

10 A hoist has to be installed in such a way that the object will be lifted perpendicular. If that is not possible, the necessary precautions must be taken to prevent load-swinging, e.g. by using two hoists, each at approximately the same angle not exceeding 30° from the vertical.

11 Locate the unit away from walls. Take all precautions to ensure that hot air exhausted from the engine and driven machine cooling systems cannot be recirculated. If such hot air is taken in by the engine or driven machine cooling fan, this may cause overheating of the unit; if taken in for combustion, the engine power will be reduced.

1.4 SAFETY DURING USE AND OPERATION

1 When the unit has to operate in a fire-hazardous environment, each engine exhaust has to be provided with a spark arrestor to trap incendiary sparks.

2 The exhaust contains carbon monoxide which is a lethal gas. When the unit is used in a confined space, conduct the engine exhaust to the outside atmosphere by a pipe of sufficient diameter; do this in such a way that no extra back pressure is created for the engine. If necessary, install an extractor. Observe any existing local regulations. Make sure that the unit has sufficient air intake for operation. If necessary, install extra air intake ducts.

3 When operating in a dust-laden atmosphere, place the unit so that dust is not carried towards it by the wind. Operation in clean surroundings considerably extends the intervals for cleaning the air intake filters and the cores of the coolers.

4 Close the compressor air outlet valve before connecting or disconnecting a hose. Ascertain that a hose is fully depressurized before disconnecting it. Before blowing compressed air through a hose or air line, ensure that the open end is held securely, so that it cannot whip and cause injury.

5 The air line end connected to the outlet valve must be safeguarded with a safety cable, attached next to the valve.

6 No external force may be exerted on the air outlet valves, e.g. by pulling on hoses or by installing auxiliary equipment directly to a valve, e.g. a water separator, a lubricator, etc. Do not step on the air outlet valves.

7 Never move a unit when external lines or hoses are connected to the outlet valves, to avoid damage to valves, manifold and hoses.

8 Do not use compressed air from any type of compressor, without taking extra measures, for breathing purposes as this may result in injury or death. For breathing air quality, the compressed air must be adequately purified according to local legislation and standards. Breathing air must always be supplied at stable, suitable pressure.

9 Distribution pipework and air hoses must be of correct diameter and suitable for the working pressure. Never use frayed, damaged or deteriorated hoses. Replace hoses and flexibles before the lifetime expires. Use only the correct type and size of hose end fittings and connections.

10 If the compressor is to be used for sand-blasting or will be connected to a common compressed-air system, fit an appropriate non-return valve (check valve) between compressor outlet and the connected sand-blasting or compressed-air system. Observe the right mounting position/ direction.

11 Before removing the oil filler plug, ensure that the pressure is released by opening an air outlet valve.

12 Never remove a filler cap of the cooling water system of a hot engine. Wait until the engine has sufficiently cooled down.

13 Never refill fuel while the unit is running, unless otherwise stated in the Atlas Copco Instruction Book (AIB). Keep fuel away from hot parts such as air outlet pipes or the engine exhaust. Do not smoke when fuelling. When fuelling from an automatic pump, an earthing cable should be connected to the unit to discharge static electricity. Never spill nor leave oil, fuel, coolant or cleansing agent in or around the unit.

14 All doors shall be shut during operation so as not to disturb the cooling air flow inside the bodywork and/or render the silencing less effective. A door should be kept open for a short period only e.g. for inspection or adjustment.

15 Periodically carry out maintenance works according to the maintenance schedule.

16 Stationary housing guards are provided on all rotating or reciprocating parts not otherwise protected and which may be hazardous to personnel. Machinery shall never be put into operation, when such guards have been removed, before the guards are securely reinstalled.

17 Noise, even at reasonable levels, can cause irritation and disturbance which, over a long period of time, may cause severe injuries to the nervous system of human beings.
When the sound pressure level, at any point where personnel normally has to attend, is:

below 70 dB(A):	no action needs to be taken,
above 70 dB(A):	noise-protective devices should be provided for people continuously being present in the room,
below 85 dB(A):	no action needs to be taken for occasional visitors staying a limited time only,
above 85 dB(A):	room to be classified as a noise-hazardous area and an obvious warning shall be placed permanently at each entrance to alert people entering the room, for even relatively short times, about the need to wear ear protectors,
above 95 dB(A):	the warning(s) at the entrance(s) shall be completed with the recommendation that also occasional visitors shall wear ear protectors,
above 105 dB(A):	special ear protectors that are adequate for this noise level and the spectral composition of the noise shall be provided and a special warning to that effect shall be placed at each entrance.

18 Insulation or safety guards of parts the temperature of which can be in excess of 80 °C (175 °F) and which may be accidentally touched by personnel shall not be removed before the parts have cooled to room temperature.

19 Never operate the unit in surroundings where there is a possibility of taking in flammable or toxic fumes.

20 If the working process produces fumes, dust or vibration hazards, etc., take the necessary steps to eliminate the risk of personnel injury.

21 When using compressed air or inert gas to clean down equipment, do so with caution and use the appropriate protection, at least safety glasses, for the operator as well as for any bystander. Do not apply compressed air or inert gas to your skin or direct an air or gas stream at people. Never use it to clean dirt from your clothes.

22 When washing parts in or with a cleaning solvent, provide the required ventilation and use appropriate protection such as a breathing filter, safety glasses, rubber apron and gloves, etc.

23 Safety shoes should be compulsory in any workshop and if there is a risk, however small, of falling objects, wearing of a safety helmet should be included.

24 If there is a risk of inhaling hazardous gases, fumes or dust, the respiratory organs must be protected and depending on the nature of the hazard, so must the eyes and skin.

25 Remember that where there is visible dust, the finer, invisible particles will almost certainly be present too; but the fact that no dust can be seen is not a reliable indication that dangerous, invisible dust is not present in the air.

26 Never operate the unit at pressures or speeds below or in excess of its limits as indicated in the technical specifications.

1.5 SAFETY DURING MAINTENANCE AND REPAIR

Maintenance, overhaul and repair work shall only be carried out by adequately trained personnel; if required, under supervision of someone qualified for the job.

1 Use only the correct tools for maintenance and repair work, and only tools which are in good condition.

2 Parts shall only be replaced by genuine Atlas Copco replacement parts.

3 All maintenance work, other than routine attention, shall only be undertaken when the unit is stopped. Steps shall be taken to prevent inadvertent starting. In addition, a warning sign bearing a legend such as ”work in progress; do not start” shall be attached to the starting equipment.
On engine-driven units the battery shall be disconnected and removed or the terminals covered by insulating caps.
On electrically driven units the main switch shall be locked in open position and the fuses shall be taken out. A warning sign bearing a legend such as ”work in progress; do not supply voltage” shall be attached to the fuse box or main switch.

4 Before dismantling any pressurized component, the compressor or equipment shall be effectively isolated from all sources of pressure and the entire system shall be relieved of pressure. Do not rely on non-return valves (check valves) to isolate pressure systems. In addition, a warning sign bearing a legend such as ”work in progress; do not open” shall be attached to each of the outlet valves.

5 Prior to stripping an engine or other machine or undertaking major overhaul on it, prevent all movable parts from rolling over or moving.

6 Make sure that no tools, loose parts or rags are left in or on the machine. Never leave rags or loose clothing near the engine air intake.

7 Never use flammable solvents for cleaning (fire-risk).

8 Take safety precautions against toxic vapours of cleaning liquids.

9 Never use machine parts as a climbing aid.

10 Observe scrupulous cleanliness during maintenance and repair. Keep away dirt, cover the parts and exposed openings with a clean cloth, paper or tape.

11 Never weld on or perform any operation involving heat near the fuel or oil systems. Fuel and oil tanks must be completely purged, e.g. by steam-cleaning, before carrying out such operations. Never weld on, or in any way modify, pressure vessels. Disconnect the alternator cables during arc welding on the unit.

12 Support the towbar and the axle(s) securely if working underneath the unit or when removing a wheel. Do not rely on jacks.

13 Do not remove any of, or tamper with, the sound-damping material. Keep the material free of dirt and liquids such as fuel, oil and cleansing agents. If any sound-damping material is damaged, replace it to prevent the sound pressure level from increasing.

14 Use only lubricating oils and greases recommended or approved by Atlas Copco or the machine manufacturer. Ascertain that the selected lubricants comply with all applicable safety regulations, especially with regard to explosion or fire-risk and the possibility of decomposition or generation of hazardous gases. Never mix synthetic with mineral oil.

15 Protect the engine, alternator, air intake filter, electrical and regulating components, etc., to prevent moisture ingress, e.g. when steam-cleaning.

16 When performing any operation involving heat, flames or sparks on a machine, the surrounding components shall first be screened with non-flammable material.

17 Never use a light source with open flame for inspecting the interior of a machine.

18 When repair has been completed, the machine shall be barred over at least one revolution for reciprocating machines, several revolutions for rotary ones to ensure that there is no mechanical interference within the machine or driver. Check the direction of rotation of electric motors when starting up the machine initially and after any alteration to the electrical connection(s) or switch gear, to check that the oil pump and the fan function properly.

19 Maintenance and repair work should be recorded in an operator's logbook for all machinery. Frequency and nature of repairs can reveal unsafe conditions.

20 When hot parts have to be handled, e.g. shrink fitting, special heat-resistant gloves shall be used and, if required, other body protection shall be applied.

21 When using cartridge type breathing filter equipment, ascertain that the correct type of cartridge is used and that its useful service life is not surpassed.

22 Make sure that oil, solvents and other substances likely to pollute the environment are properly disposed of.

23 Before clearing the unit for use after maintenance or overhaul, check that operating pressures, temperatures and speeds are correct and that the control and shutdown devices function correctly.

1.6 TOOL APPLICATIONS SAFETY

Apply the proper tool for each job. With the knowledge of correct tool use and knowing the limitations of tools, along with some common sense, many accidents can be prevented.

Special service tools are available for specific jobs and should be used when recommended. The use of these tools will save time and prevent damage to parts.

1.7 SPECIFIC SAFETY PRECAUTIONS

Batteries

When servicing batteries, always wear protecting clothing and glasses.

1 The electrolyte in batteries is a sulphuric acid solution which is fatal if it hits your eyes, and which can cause burns if it contacts your skin. Therefore, be careful when handling batteries, e.g. when checking the charge condition.

2 Install a sign prohibiting fire, open flame and smoking at the post where batteries are being charged.

3 When batteries are being charged, an explosive gas mixture forms in the cells and might escape through the vent holes in the plugs.
Thus an explosive atmosphere may form around the battery if ventilation is poor, and can remain in and around the battery for several hours after it has been charged. Therefore:
- never smoke near batteries being, or having recently been, charged,
- never break live circuits at battery terminals, because a spark usually occurs.

4 When connecting an auxiliary battery (AB) in parallel to the unit battery (CB) with booster cables: connect the + pole of AB to the + pole of CB, then connect the - pole of CB to the mass of the unit. Disconnect in the reverse order.

Pressure vessels
(according to directive 87/404/EEC annex II § 2)

Maintenance/installation requirements:

1 The vessel can be used as pressure vessel or as separator and is designed to hold compressed air for the following application:
- pressure vessel for compressor,
- medium AIR/OIL,

and operates as detailed on the data plate of the vessel:
- the maximum working pressure ps in bar,
- the maximum working temperature Tmax in °C,
- the minimum working temperature Tmin in °C,
- the capacity of the vessel V in l.

2 The pressure vessel is only to be used for the applications as specified above and in accordance with the technical specifications. Safety reasons prohibit any other applications.

3 National legislation requirements with respect to re-inspection must be complied with.

4 No welding or heat treatment of any kind is permitted to those vessel walls which are exposed to pressure.

5 The vessel is provided and may only be used with the required safety equipment such as manometer, overpressure control devices, safety valve, etc.

6 Draining of condensate shall be performed regularly when vessel is in use.

7 Installation, design and connections should not be changed.

8 Bolts of cover and flanges may not be used for extra fixation.

Safety valves

All adjustments or repairs are to be done by an authorized representative of the valve supplier (see maintenance schedule).

PARTS INDEX

PART	PAGE
A	
ADAPTER	40, 92
ADDITIONAL FUELFILTER	120
ADJUSTING ROD	140
AFTERCOOLER	126
AIR DUCT	48
AIR FILTER	48
AIR FILTER ELEMENT	19, 48
AIR FILTER SAFETY CARTRIDGE	19, 48
AIR INLET	48, 49
AIR OUTLET	52
ANCHOR PLATE	60, 108, 119
AXLE	137, 139, 140
B	
BALL BEARING	113, 114
BALL VALVE	46, 71, 126
BASE PLATE	110
BATT CABLES CLAMPING	58
BATTERY	69
BATTERY CABLE	58
BEAM	32, 54, 108
BEARING	28, 140
BEARING BALL	26, 110
BELT GUARD	43
BLEED OF VALVE	19
BODY	120
BOW SHACKLE	66, 67
BRAKE	137, 139
BRAKE CABLE	137, 139
BUFFER	34, 92
BUMPER	76
BUSHING	28, 36, 38, 40, 66, 67, 115
C	
CABLE	58, 123
CABLE CLAMP	46, 60
CABLE GUIDE	60
CABLE STRIP	50, 108
CABLE TIE	60, 119
CHAIN	66, 67, 126, 137
CIRCLIP	100, 113, 114
CIRCUIT BREAKER	58, 119
CLAMP (AIRFILTER)	48, 70
CLAMP RING	112
CLAMPING	60, 61
COMPR.SPRING	30, 100, 110
COMPRESSOR DRIVE	36
COMPRESSOR OIL	22, 23
COMPRESSOR OIL FILTER	19
CONDUIT	46
CONNECTION TUBE	38
CONNECTION	38, 103, 115, 123
CONTACT BLOCK	119
CONTROL MODULE	56
CONTROL UNIT	56
COOLER AND FAN	43
COOLER AND FANDRIVE ASSEMBLY	102
COOLER ASSEMBLY	108
CORE PLUG	103
CORNER ASSEMBLY	50, 70, 78, 85, 86, 127, 129, 131
CORNER PANEL	91, 131
COUNTRY SET	66, 67
COUPLING ELEMENT	37
COUPLING HUB	37
COUPLING LINK	137
COUPLING RING	37
COUPLING STROMAG	37
COVER	32, 38, 69, 72, 88, 107, 108, 111
COVER AIR FILTER	48
COVER ASSEMBLY	115, 119, 127
CROSS	40
CUBICLE	58
D	
DATA PLATE	57
DECAL	75
DISTANCE PIECE	58
DISTANCE SLEEVE	92
DOOR	78, 79, 80, 81, 82, 89, 90, 105, 106
DOOR ASSEMBLY	50, 72, 79, 80, 81, 82, 89, 90, 99, 105, 106, 127
DOOR HOOK	78, 79, 80, 81, 82, 83, 84, 85, 86, 88, 89, 90, 105, 106, 107, 129
DRAIN PIPE	38
DRAINPLATE	118
DRAINS	46, 47
DRIVE SHAFT	36
E	
ELBOW	115
ELBOW PIPE COUPLING	40
ELECTRICAL SYSTEM	58, 59
ELEMENT AND MOUNTS	35
EMERGENCY STOP	78
ENGINE	33
ENGINE AND ACCESSORIES	33

PARTS INDEX

PART	PAGE
E	
ENGINE COOLANT	24
ENGINE COOLING	42
ENGINE COMPRESSOR SEALING RING	19
ENGINE OIL	20, 21
EXHAUST	34
EXHAUST COVER	34
EXHAUST PIPE	34, 63, 122
F	
FAN	112
FAN COWL	108
FAN DRIVE ASSEMBLY	102, 112
FAN GUARD	108
FAN SHAFT	113
FAN SHAFT ASSEMBLY	112, 113
FILTER	26, 110
FILTER HOUSING	110
FLANGE	44, 136, 137
FLASH LIGHT	78
FLEXIBLE CONDUIT	119
FORKLIFT SLOTS ROW	125
FRAME	124, 137
FRAME AND MOUNTS	32
FUEL COOLER	115
FUEL FILTER	19, 115, 120
FUEL HOSE	115, 120
FUEL SYSTEM	115
FUELFILTER ELEMENT	120
FUELSYSTEM ADDITIONAL	120
FUELTANK ASSEMBLY	135, 136
FUEL WATER SEPARATOR	19
G	
GEAR	65
GEAR CASING	36
GEARSET	65
GROMMET	78, 108
GUARD (COUPLING)	36
GUIDE	60
H	
HANDLE	81, 82
HINGE	78, 79, 80, 81, 82, 83, 84, 85, 86, 88, 89, 90, 129, 131
HOLDER	43
HORN	78
HOUSE MARK	57
HOUSING	38, 44, 100, 113
HUMP HOSE	48
I	
INFORMATION LABEL	57, 144
INLET SHUT DOWN VALVE	123
INNER CANOPY	53
INSTRUCTION LABEL	57
INSULATING HOSE	40, 52
INSULATION	34
INTERCOOLER	108
ISOLATOR	58
K	
KEY	50
L	
LABEL	75, 126
LATCH	78, 79, 80, 89, 90
LEVEL GAUGE	92
LEVEL SENSOR	115
LEVEL SWITCH	108
LEVER	112
LID OF POWER SUPPLY BOX	77
LIFTING EYE	66, 67, 126
LOCK	78, 79, 80, 81, 82, 89
M	
MANIFOLD	71, 115, 126
MARKINGS	57, 75
MEMBRANE	26, 110
MINIMUM PRESSURE VALVE	66, 67
MUDGUARD	144
N	
NO AFTERCOOLER	70
NO COLD START	74
NO INLET SHUT DOWN VALVE	64
NO MANIFOLD	71
NO NORDIC	55
NO PREHEATER	62
NO REHEATER	68
NO ROADSIGNALISATION	76
NO SPARK ARRESTOR	63
NO UNDERCARRIAGE	124
NOISE REGULATION ROW	72
NON-RETURN VALVE	40
NOZZLE	38
O	
OIL CAN	22, 23
OIL NOZZLE	36, 38
OIL SEPARATOR	29, 92
OIL SYSTEM	44, 45
OILCOOLER	108
OILFILTER	19, 66, 67
OILSEPARATOR ELEMENT	29, 92
OILSEPARATOR ASSEMBLY	74, 92
OIS	35
OUTER CANOPY	50, 51

PARTS INDEX

PART	PAGE
P	
PAD	108
PANEL	83, 84, 85, 86, 87, 88, 101, 129, 132, 133, 134
PANEL ASSEMBLY	52, 52, 53, 70, 83, 84, 85, 86, 87, 88, 91, 93 94, 95, 101, 127, 129, 131, 132, 133, 134
PARALLEL KEY	31, 33, 36
PARALLEL PIN	36
PARCOOL	24
PAROIL	20, 21, 22, 23
PIPE	34, 42, 44, 48, 52, 64, 108, 123, 127
PIPE CLAMP	42, 46, 60, 119, 120
PIPE COUPLING	40, 52, 126
PISTON	100
PLASTIC TUBE	40, 115, 119
PLATE	33, 34, 35, 69, 93, 96, 108, 118,130
PLATE ASSEMBLY	54, 96, 117, 130
PLUG	32, 58, 62, 64, 70, 71, 74, 76, 78, 79, 80, 81, 82, 83, 84, 85, 86 88, 89, 90, 103, 129, 135, 136
POINTER	112
POWER SUPPLY BOX ASSEMBLY	77
PREHEATER	119
PREHEATER KIT	119
PRESSURE SENSOR	58, 126
PRESSURE VESSEL ASSEMBLY	92, 111
PROTECTION	36, 78, 115, 124, 138
PULLEY	33

PART	PAGE
S	
SAFETY RING	33
SAFETY VALVE	36, 66, 67
SEALING RING	19, 25, 28, 36, 38
SERVICE KIT	25, 26, 27, 28, 29, 30, 31
SERVICE PAK	19
SERVICE STAGE	35
SHRINKING HOSE	46
SILENCER	34, 72
SOLENOID VALVE	40
SPACER	84, 112, 114
SPARK ARRESTOR	122
SPHERICAL ROLLER BEARING	36
SPRING	26, 38, 110
SPRING COVER	110
SPRING GUIDE	110
SPRING PIN	112
SPRING SEAT	100, 110
STAY	122
STEEL DRUM	22, 23
STRAIGHT PIPE COUPLING	40, 52, 126
STRAINER	52, 126
STRIP	58
SUPPORT	32, 34, 35, 42, 44, 48, 52, 54, 58, 60, 108, 112, 115, 118, 124 125, 126
SUPPORT ENGINE	33
SUPPORT POWER SUPPLY BOX	58

PART	PAGE
R	
RADIATOR	108
REDUCER	100
REDUCER FOR SCAVENGE PIPE	40
REGULATING SYSTEM	40, 41
REGULATING VALVE	26, 110
REGULATING VALVE FILTER	19
RELAY	58, 123
RESISTOR	119
RESTRICTOR	126
RETAINER	38, 92, 99, 105, 106, 115
RIM	128
RING	26, 110
ROCKER COVER GASKET	19
ROLLER BEARING	36
ROOF	97, 98
ROOF - AFTERCOOLER	117
ROOF ASSEMBLY	73, 97, 98
ROOFS AND BEAMS	54
RUBBER BUFFER	33

PART	PAGE
T	
TEE	40
TEMPRATURE SENSOR	58, 98, 126
TENSION PULLEY ASSEMBLY	112, 114
TENSIONER	114
THERMOSTATIC VALVE	55
THREADED ROD	126
TOWBAR	144
TUBE	92
TYRE ASSEMBLY	128
U	
U-BOLT	137
UNDERCARRIAGE	137
0NLOADER HOUSING	103
UNLOADER VALVE ASSEMBLY	25, 38, 103
V	
VALVE	38, 103, 123
VALVE OILSTOP	100
VALVE SEAT	38

PARTS INDEX

PART	PAGE
V	
VALVES ON ELEMENT	38, 39
V-BELT	33
V-CLAMP	34
VENTIL	128
VESSEL ASSEMBLY	92, 111
VESSEL FILL UP WASHER	19
VIBRATION DAMPER	38
W	
WAGON	137
WARNING MARK	77
WARNING SWITCH	48
WATERSEPARATOR	126
WIRE	58, 115
WIRE HARNESS	58, 126
WIRE MESH HOSE	66, 67
WIRING	58, 108, 119
Y	

ORDERING SPARE PARTS

ORDERING SPARE PARTS

Always quote the part number, the designation and the quantity of the parts required, as well as the type and the serial number of the machine.

EXPLANATION OF THE COLUMNS

REF : REFERENCE CODE

Establishes the connection between a part in the list and a part in the illustration.
"–" means that the part is not shown in the illustration.

PART NUMBER

If no part number is given, the part cannot be obtained as a spare part.
Parts marked with a dot are part of the assembly listed right above them.

DESIGNATION

Usually this is the name of the part. For standard parts, in addition to the name, a number of characteristics are given.

QTY : QUANTITY

Indicates the quantity of the part concerned. "AR" stands for "As Required".

BESTELLUNG VON ERSATZTEILEN

Stets die Teilenummer, die Bezeichnung, und die Anzahl der gewünschten Teile sowie den Typ und die Seriennummer der Maschine angeben.

INFORMATION ZU DEN SPALTEN

REF : REFERENZCODE

Stellt die Verbindung zwischen einem Teil in der Liste und einem Teil auf der Zeichnung her. "–" bedeutet, daß das Teil nicht in der Zeichnung dargestellt ist.

PART NUMBER : TEILENUMMER

Wenn keine Teilenummer angegeben ist, ist das Teil nicht als Ersatzteil erhältlich.
Mit einem Punkt markierte Teile gehören zu der Einheit, die über den jeweiligen Teilen aufgeführt ist.

DESIGNATION : BEZEICHNUNG

Meistens die Bezeichnung des Teils. Bei Standardteilen werden neben der Bezeichnung einige technische Daten angegeben.

QTY : ANZAHL

Gibt die Anzahl des betreffenden Teils an. Die Angabe "AR" steht für "As Required" (wie erforderlich).

BESTELLEN VAN ONDERDELEN

Vermeld steeds het onderdeelnummer, de benaming en het aantal van de gewenste stukken, evenals het type en het serienummer van de machine.

TOELICHTING BIJ DE KOLOMMEN

REF : REFERENTIECODE

Legt het verband tussen een onderdeel uit de lijst en een onderdeel op de tekening. "–" betekent dat het onderdeel niet is getekend.

PART NUMBER : ONDERDEELNUMMER

Indien niet opgegeven is het onderdeel niet als wisselstuk beschikbaar.
Onderdelen aangeduid met een stip maken deel uit van het geheel dat boven de betreffende onderdelen staat.

DESIGNATION : BENAMING

Meestal de benaming van het onderdeel. In het geval van standaard onderdelen worden naast de benaming een aantal karakteristieken opgegeven.

QTY : AANTAL

Geeft de hoeveelheid van het betreffende onderdeel weer. De aanduiding "AR" betekent "As Required" (zoals vereist).

PEDIDO DE PARTES

Siempre comunicar el número de parte, la designación y la cantidad deseada así como el tipo y el número de serie de la máquina.

INFORMACIONES SOBRE LAS COLUMNAS

REF : CODIGO DE REFERENCIA

Establece la conexión entre una parte en la lista y una parte en la ilustración.
"–" quiere decir que la parte no está ilustrada.

PART NUMBER : NUMERO DE PARTE

Si no se da ningún número, quiere decir que la parte no está disponible como parte de recambio.
Partes marcadas con un punto son partes del conjunto indicado más arriba.

DESIGNATION : DESIGNACION

Principalmente el nombre de la parte. En caso de partes estándares, el nombre es seguido por especificaciones.

QTY : CANTIDAD

Indica la cantidad de la parte correspondiente. La indicación "AR" significa "As Required" (como sea requerido).

COMMANDE DE PIÈCES DETACHEES

Toujours indiquer le numéro de pièce, la désignation, la quantité désirée ainsi que le type et le numéro de série du groupe.

EXPLICATION DES INTITULES DES COLONNES

REF : CODE DE REFERENCE

Réfère à la pièce détachée spécifiée dans la liste et sur l'illustration. "–" implique que la pièce n'est pas indiquée sur l'illustration.

PART NUMBER : NUMERO DE PIECE DETACHEE

Si le numéro n'est pas indiqué, la pièce n'est pas disponible en tant que pièce de rechange.
Les pièces indiquées par un point gras font partie de l'ensemble se trouvant au-dessus des pièces détachées correspondantes.

DESIGNATION

En général, le nom de la pièce. S'il s'agit de pièces standard, outre la désignation, un certain nombre de caractéristiques sont indiquées.

QTY : QUANTITE

Indique la quantité de la pièce détachée. "AR" indique "As required", c'est-à-dire la quantité à déterminer selon le cas.

BESTÄLLNING AV RESERVDELAR

Ange alltid reservdelsnummer, benämning och kvantitet för varje önskad detalj samt maskinens typ och tillverkningsnummer.

TÖRKLARING AV SPALTER

REF : REFERENSNUMMER

Identifierar motsvarande detaljer i listan och illustrationen. "–" betyder att detaljen inte visas i illustrationen.

PART NUMBER : RESERVDELSNUMMER

Om inget reservdelsnummer anges, kan detaljen inte erhållas som reservdel. Detaljer som anges med en punkt ingår i den monteringssats som listas ovanför dessa.

DESIGNATION : BENÄMNING

Detta är vanligen namnet på detaljen. För standarddetaljer anges förutom namnet ett antal specifikationer.

QTY : KVANTITET

Anger den ifrågavarande detaljens kvantitet. "AR" (As Required) betyder enligt behov.

ORDERING SPARE PARTS

ORDINAZIONE DI PARTI DI RICAMBIO

Menzionare sempre il numero della parte, la denominazione e il numero de pezzi desiderati, nonché il tipo e il numero di serie della macchina.

SPIEGAZIONE DELLE COLONNE

REF : CODICE DI RIFERIMENTO

Stabilisce il nesso tra un pezzo nell'elenco e un pezzo nell'illustrazione. "–" siginfica che il pezzo non è presente nell'illustrazione.

PART NUMBER : NUMERO DELLA PARTE

Nel caso non sia fornito il numerom di parte, il pezzo non puó essere ordinato come parte di ricambio.
Il componenti indicati con un puntino fanno parte del gruppo elencato immediatamente sopra di essi.

DESIGNATION : DENOMNAZIONE

Generalmente si tratta della denominazione della parte. Per i pezzi standard oltre alla denominazione sono fornite alcune caratteristiche.

QTY : QUANTITA'

Indica la quantità dei pezzi in questione. "AR" significa "As Required" (Come richiesto).

ΠΑΡΑΓΓΕΛΙΑ ΑΝΤΑΛΛΑΚΤΙΚΩΝ

Πάντοτε σημειώνετε τον κωδικό, τον προσδιορισμό και την ποσότητα των απαιτούμενων ανταλλακτικών, καθώς επίσης τον τύπο και τον αύξοντα κωδικό αριθμό παραγωγής του μηχανήματος.

ΕΞΗΓΗΣΗ ΤΩΝ ΣΤΗΛΩΝ

REF : ΚΩΔΙΚΟΣ ΑΝΑΦΟΡΑΣ

Παρουσιάζει τη σχέση μεταξύ ενός εξαρτήματος στη λίστα και ενός εξαρτήματος στη φωτογραφία. Το "–" σημαίνει ότι το εξάρτημα δεν εμφανίζεται στη φωτογραφία.

PART NUMBER : ΚΩΔΙΚΟΣ ΑΡΙΘΜΟΣ

Αν δεν δίνεται κάποιος κωδικός αριθμός, τότε το εξάρτημα δεν μπορεί να ληφθεί ως ανταλλακτικό.
Τα εξαρτήματα που έχουν μαρκαρισθεί με μία τελεία είναι τμήματα του συγλροτήματος που παρουσιάζεται ακριβώς πάνω από αυτά.

DESIGNATION : ΠΡΟΣΔΙΟΡΙΣΜΟΣ

Συνήθως αυτό είναι το όνομα του εξαρτήματος. Για τα βασικά εξαρτήματα, επιπροσθέτα στην ονομασία, δίνεται και ένας αριθμός χαρακτηριστικών.

QTY : ΠΟΣΟΤΗΤΑ

Δηλώνει την ποσότητα του υπόψη εξαρτήματος. “AR” σημαίνει “Ως απαιτείται”. Για τα βασικά εξαρτήματα, η ποσότητα δίνεται στη φωτογραφία παρά στη λίστα.

BESTÄLLNING AV RESERVDELAR

Ange alltid reservdelsnummer, benämning och kvantitet för varje önskad detalj samt maskinens typ och tillverkningsnummer.

TÖRKLARING AV SPALTER

REF : REFERENSNUMMER

Identifierar motsvarande detaljer i listan och illustrationen. "–" betyder att detaljen inte visas i illustrationen.

PART NUMBER : RESERVDELSNUMMER

Om inget reservdelsnummer anges, kan detaljen inte erhållas som reservdel. Detaljer som anges med en punkt ingår i den monteringssats som listas ovanför dessa.

DESIGNATION : BENÄMNING

Detta är vanligen namnet på detaljen. För standarddetaljer anges förutom namnet ett antal specifikationer.

QTY : KVANTITET

Anger den ifrågavarande detaljens kvantitet. "AR" (As Required) betyder enligt behov.

ONCOMENDAS DE PEÇAS

Refira sempre o número da peça, a designação e a quantidade das peças que pretende encomendar, assim como o tipo e o número de série do aparelho.

EXPLICAÇÃO DAS COLUNAS

REF : CÓDIGO DE REFERÉNCIA

Estabeleça a ligação entre a peça na lista e a peça no desenho. "–" significa que a peça não vem no desenho.

PART NUMBER : NÚMERO DA PEÇA

Se não vier referido o número da peça, a peça não pode ser adquirida como peça sobressalente.
As peças marcadas com pontos são peças de um conjunto listado acima dessa peça.

DESIGNATION : DESIGNAÇÃO

Geralmente é o nome da peça. Para peças normalizadas, além do nome da peça, vem também referido um número.

QTY : QUANTIDADE

Indica a quantidade da peça em questão. "AR" (As Required) quer dizer “Como solicitado”.

BESTILLING AV RESERVEDELER

Oppgi alltid delenummer, betegnelse og antall på de delene du trenger, samt maskintype og serienummer.

FORKLARING TIL SPALTENE

REF: REFERANSEKODE

Viser hvor en del i listen er vist på illustrasjonen.
"-" betyr at delen ikke er vist på illustrasjonen.

DELENUMMER

Hvis delenummer ikke er oppgitt, kan delen ikke bestilles som reservedel. Deler merket med en prikk er del av enheten som er oppgitt like ovenfor de aktuelle delene.

BETEGNELSE

Dette er vanligvis delens navn. Ved standarddeler blir enkelte karakteristika oppgitt i tillegg til navnet.

QTY: ANTALL

Oppgir antallet av den aktuelle delen. "EB" betyr "Etter behov".

VARAOSIEN TILAAMINEN

Tilauksessa tulee aina mainita osanumero, nimike ja määrä sekä kompressorin tyyppi ja sarjanumero.

SARAKKEIDEN SELITYKSET

REF: VIITE: VIITEKOODI

Viitekoodi yhdistää luettelossa mainitun osan kuvassa olevaan. "_" tarkoittaa, että osaa ei ole merkitty kuvaan.

PART NUMBER: OSANUMERO

Ellei osanumeroa ole mainittu, osaa ei ole saatavana varaosana. Pisteellä merkityt osat kuuluvat niiden edellä mainittuun asennelmaan.

DESIGNATION: NIMIKE

Nimikkeenä käytetään tavallisesti osan nimeä. Vakio-osien ollessa kyseessä mainitaan nimen lisäksi osan joitakin ominaisuuksia.

QTY: MÄÄRÄ

Tarkoittaa kyseisten osien lukumäärää. "AR" tarkoittaa "tarpeen mukaan".

ORDERING SPARE PARTS

ZAMAWIANIE CZĘŚCI ZAMIENNYCH

Należy zawsze podawać numery, nazwy i ilości potrzebnych części, a także typ i numer seryjny maszyny.

WYJAŚNIENIE PRZEZNACZENIA KOLUMN

REF: KOD REFERENCYJNY

Kojarzy część na liście z częścią na ilustracji.
Symbol “–” oznacza, że część nie jest przedstawiona na ilustracji.

PART NUMBER (NUMER CZĘŚCI)

Brak numeru oznacza, że dana część nie jest dostępna jako część zamienna.
Części oznaczone kropką należą do zespołu wymienionego bezpośrednio nad nimi.

DESIGNATION (NAZWA)

Zwykle jest to nazwa części. W przypadku części standardowych oprócz nazwy podano szereg właściwości.

QTY (IL.): ILOŚĆ

Ilość części danego rodzaju. “AR” (“OP”) oznacza “odpowiednio do potrzeb”.

PÓTALKAKTRÉSZ-RENDELÉS

Mindig jelezze a szükséges alkatrész számát, megnevezését és mennyiségét , valamint a gép típusát és sorozatszámát.

AZ OSZLOPOK MAGYARÁZATA

REF: REFERENCIAKÓD

Ez teremt kapcsolatot a listán szereplő alkatrész és az ábrán látható alkatrész között.
“–”: azt jelenti, hogy az adott alkatrész nem szerepel az ábrán.

ALKATRÉSZ-SZÁM

Ha nincsen megadva alkatrész-szám, akkor az adott alkatrész nem rendelhető meg pótalkatrészként.
A ponttal jelölt alkatrészek a közvetlenül fölöttük felsorolt szerelvény részét képezik.

MEGNEVEZÉS

Rendszerint ez az alkatrész neve. Az alapfelszereltséghez tartozó alkatrészek esetében a név mellett néhány jellemzõ adat is szerepel.

QTY: MENNYISÉG

Az adott alkatrész mennyiségét jelzi. “SZ” jelentése “Szükség szerint”

Заказ запасных частей

Необходимо всегда указывать номер детали, наименование и количество заказываемых запчастей, а также тип и серийный номер устройства.

Расшифровка столбцов

ИЛЛ. : код сноски

Показывает ссылку детали в списке на ее соответствующую иллюстрацию.

"–" означает, что к данной детали нет иллюстраций.

НОМЕР ДЕТАЛИ

Отсутствие номера детали означает, что данная деталь как запчасть не поставляется.

Детали, помеченные точкой, являются частями сборного механизма, который указан над этими деталями.

НАИМЕНОВАНИЕ

Обычно, название детали. К стандартным деталям, кроме названия, могут быть даны некоторые их характеристики.

КОЛ-ВО: Количество

Показывает количество деталей. «По тр.» означает «по требованию».

订购备件

请务必提供所需部件的部件号、名称和数量，以及设备型号和序列号。

表格各列说明

REF：参考代码

确立列表内部件与插图内部件间的联系。
“–”表示插图内未显示此部件。

部件号

如果未给出部件号，则表明无法通过备件方式购买此部件。
标有圆点的部件是其上一行所列配件的一部分。

名称

通常为部件的名称。对于标准件，除了名称外，还会列出它的一些特性。

QTY：数量

表明可供部件的数量。“AR”代表 “根据需要”

OBJEDNÁVÁNÍ NÁHRADNÍCH DÍLÙ

V objednávce vždy uveïte èíslo dílu, jeho oznaèení a požadované množství. Rovnìž tak udejte typ a výrobní èíslo zaøízení.

VYSVÌTLIVKY K JEDNOTLIVÝM SLOUPCÙM

REF : REFERENÈNÍ KÓD

Udává spojitost mezi dílem v seznamu a dílem na obrázku.
“–” znamená, že díl není na obrázku uveden.

ÈÍSLO DÍLU

Pokud není číslo dílu uvedeno, nelze tuto součást objednat jako náhradní díl.
Díly označené tečkami jsou součástí konstrukčního celku, který je uveden přímo nad nimi.

OZNAÈENÍ

Ve sloupci označení bývá obvykle uveden název dílu. U standardních součástí je vedle názvu uváděna též řada dalších charakteristik.

POÈET : MNOŽSTVÍ

Oznaèuje množství uvedených dílù. Zkratka “PP” znamená “Podle požadavku”.

OBJEDNÁVANIE NÁHRADNÝCH SÚČIASTOK

Uvádzajte vždy číslo súčiastky, označenie a množstvo požadovaných súčiastok, ako aj typ a výrobné číslo stroja.

VYSVETLENIE STĹPCOV

REF : REFERENČNÝ KÓD

Stanovuje spojitosť medzi súčiastkou v zozname a súčiastkou na obrázku.
"–" znamená, že súčiastka nie je zobrazená na obrázku.

ČÍSLO SÚČIASTKY

Ak nie je uvedené žiadne číslo súčiastky, táto súčiastka nie je k dispozícii ako náhradná.
Súčiastky označené bodkou sú časťou zostavy uvedenej hneď nad nimi.

OZNAČENIE

Obyčajne je to názov súčiastky. U normalizovaných súčiastok sa okrem názvu uvádza aj niekoľko charakteristík

QTY : MNOŽSTVO

Označuje množstvo danej súčiastky. "AR" je skratka pre “Podľa potreby”.

ORDERING SPARE PARTS

NAROČEVANJE NADOMESTNIH DELOV

Zmeraj navedite številko nadomestnega dela, označbo in količino potrebnih delov ter tip in serijsko številko stroja.

RAZLAGA STOLPCEV

REF : REFERENČNA ŠIFRA

Predstavlja povezavo med delom na seznamu in delom na ilustraciji.
“-” predstavlja del, ki ni prikazan na ilustraciji.

ŠTEVILKA DELA

Če številka dela ni podana potem je ne morete dobiti kot nadomestni del.
Deli označeni s piko so sestavni del montaže, navedene nad njimi.

OZNAČBA

Običajno je to ime nadomestnega dela. Pri standardnih delih je poleg imena podano še število značilnosti.

QTY : KOLIČINA

Označuje količino nadomestnih delov. “AR” pomeni “kot je bilo zahtevano”.

VARUOSADE TELLIMINE

Alati viidake osa numbrile, tähisele ja vajalikule osade kogusele, samuti masina tüübile ja seerianumbrile.

SELGITUS VEERGUDE KOHTA

REF : VIITENUMBER

Loob seose nimekirjas toodud osa ja illustratsioonil esitatud osa vahel.
"–" tähendab, et illustratsioonil ei ole seda osa kujutatud.

OSA NUMBER

Kui osa numbrit ei ole toodud, pole seda osa võimalik varuosana soetada.
Punktiga tähistatud osad on nende kohal toodud koostu osaks.

TÄHIS

Tavaliselt on see osa nimetus. Standardosadel on lisaks nimetusele toodud ka tunnusnumber.

QTY : KOGUS

Osutab vastava osa kogusele. "AR" tähendab vajadusel ("As Required").

ATSARGINIØ DALIØ UÞSAKYMAS

Visuomet nurodykite dalies numerá, pavadinimà ir reikiamà daliø kieká, taip pat ir maðinos tipà bei serijiná numerá.

STULPELIØ PAAIÐKINIMAI

NRD.: NUORODOS KODAS

Susieja sàraðe nurodytà dalá su jos atvaizdu iliustracijoje.
“–” reiðkia, jog dalis iliustracijoje nepavaizduota.

DALIES NUMERIS

Jei numerio nenurodyta, detalës negalima ásigyti kaip atsarginës dalies.
Taðku paþymëtos dalys yra prieð jas sàraðe nurodyto mazgo sudëtinë dalis.

PAVADINIMAS

Paprastai tai dalies pavadinimas. Standartinëms dalims kartu su pavadinimu nurodomos ir kelios charakteristikos.

KIEK.: KIEKIS

Nurodo susijusiø daliø kieká. “AR” reiðkia “As required” (pagal poreiká).

REZERVES DAÏU PASÛTÎÐANA

Vienmçr miniet daïas numuru, apzîmçjumu un nepiecieðamo detaïu daudzumu, kâ arî maðînas tipu un sçrijas numuru.

AIÏU IZSKAIDROJUMS

REF : ATSAUKSMES KODS

Izveido saikni starp detaïu sarakstâ un detaïu uz attçla.
"–" nozîmç, ka detaïa nav attçlota ilustrâcijâ.

DETAÏAS NUMURS

Ja detaïas numurs nav minçts, tad detaïu nevar iegût kâ rezerves daïu.
Ar punktu apzîmçtâs detaïas ir mezgla sastâvdaïas, kurð ir attçlots tieði virs tâm.

APZÎMÇJUMS


Parasti tas ir detaïas nosaukums. Standarta detaïâm, papildus nosaukumam, tiek minçta virkne raksturojumu \ specifikâciju.

QTY : DAUDZUMS


Norâda domâtâs detaïas daudzumu. "AR" nozîmç "As Required" – “kâ nepiecieðams”.

SERVICE PAK


INITIAL (50H)

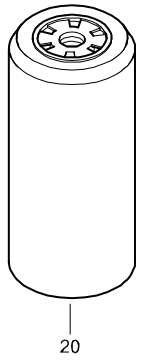

6 MONTHS (250 H)

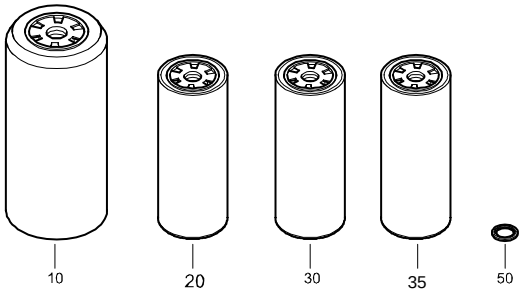

YEARLY (1000 H)

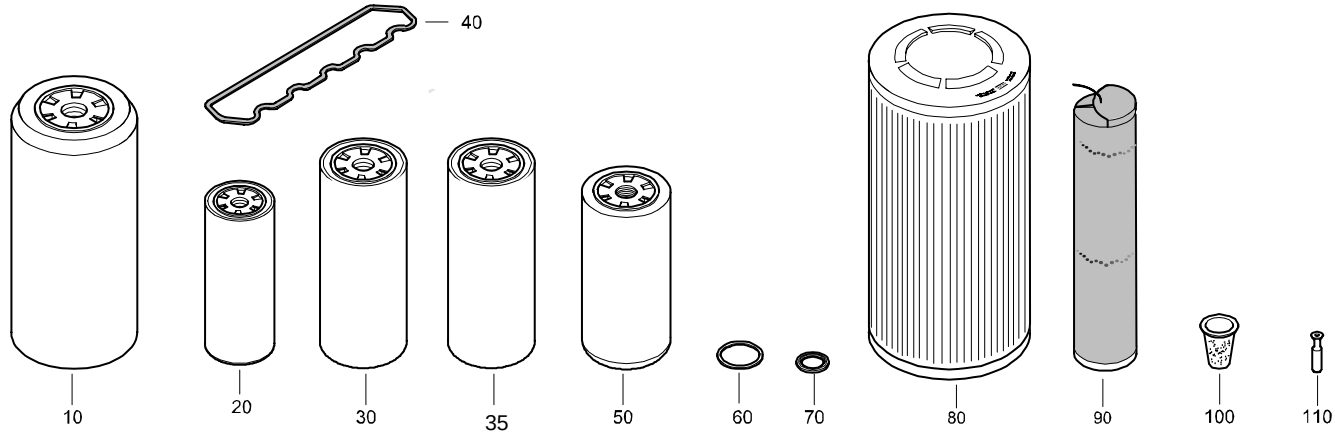


REF	PART NUMBER	DESIGNATION	QTY
-	WITH UNIT	SERVICE PAK 50H HP SIZE II (Not available separately)	
•20	1202 8040 90	OILFILTER	3
-	1092 0613 34	PAK 250H C13	
•10	2914 8297 00	OIL FILTER ENGINE	1
•20	2914 8236 00	FUEL PREFILTER	1
•30	2914 8659 00	FINAL FUEL FILTER	1
•35	2914 8307 00	FUEL FILTER HEAVY DUTY	1
•50	0661 1038 00	SEALING RING	1

REF	PART NUMBER	DESIGNATION	QTY
-	1092 0613 35	PAK 1000H C13	
•10	2914 8297 00	OIL FILTER ENGINE	1
•20	2914 8236 00	FUEL PREFILTER	1
•30	2914 8659 00	FINAL FUEL FILTER	1
•35	2914 8307 00	FUEL FILTER HEAVY DUTY	1
•40	2914 8676 00	ROCKER COVER GASKET	1
•50	1202 8040 92	COMPRESSOR OIL FILTER	3
•60	0653 1227 00	VESSEL FILL UP WASHER	1
•70	0661 1038 00	SEALING WASHER	6
•80	2914 5017 00	AIR FILTER ELEMENT	4
•90	2914 5018 00	AIR FILTER SAFETY CARTRIDGE	4
•100	1012 0356 00	REGULATING VALVE FILTER	1
•110	1604 6205 00	BLEED OFF VALVE	1

ENGINE OIL

PAROIL 5W30

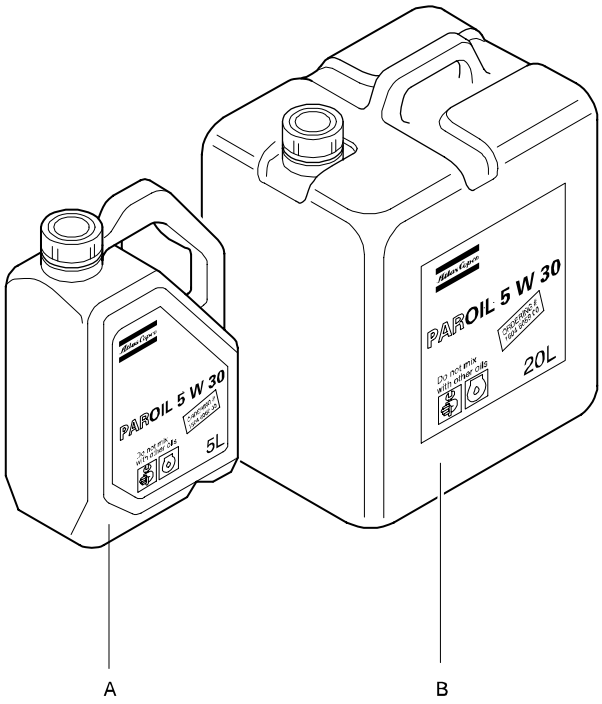


REF	PART NUMBER	DESIGNATION	QTY
A	1604 6060 00	PAROIL 5W30 5 LITER CAN	1
B	1604 6059 00	PAROIL 5W30 20 LITER CAN	1

REF	PART NUMBER	DESIGNATION	QTY

ENGINE OIL

PAROIL 15W40

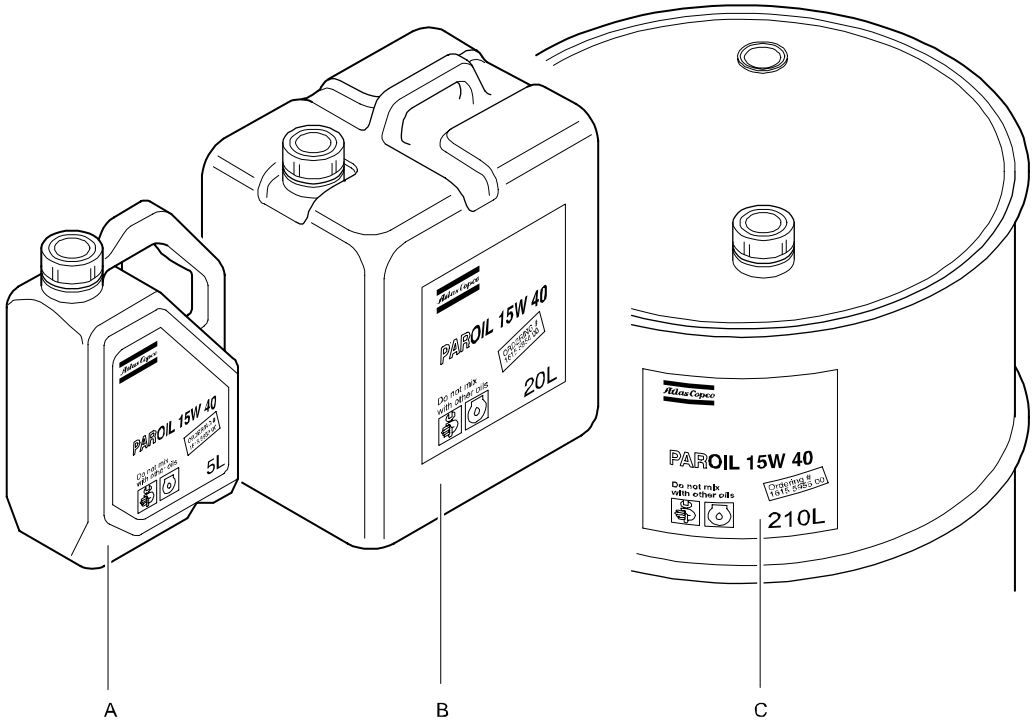


REF	PART NUMBER	DESIGNATION	QTY
A	1615 5953 00	PAROIL 15W40 5 LITER CAN	1
B	1615 5954 00	PAROIL 15W40 20 LITER CAN	1
C	1615 5955 00	PAROIL 15W40 210 LITER BARREL	1

REF	PART NUMBER	DESIGNATION	QTY

COMPRESSOR OIL

PAROIL M

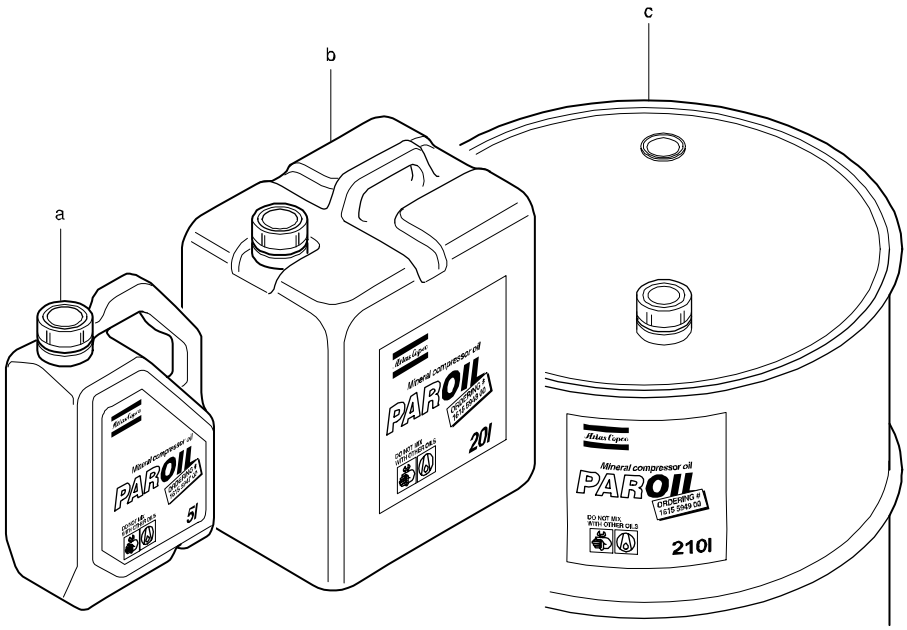


REF	PART NUMBER	DESIGNATION	QTY
		PAROIL M	
A	1615 5947 00	OIL CAN 5 L	1
B	1615 5948 00	OIL CAN 20 L	1
C	1615 5949 00	STEEL DRUM 210 L	1

REF	PART NUMBER	DESIGNATION	QTY

COMPRESSOR OIL

PAROIL S

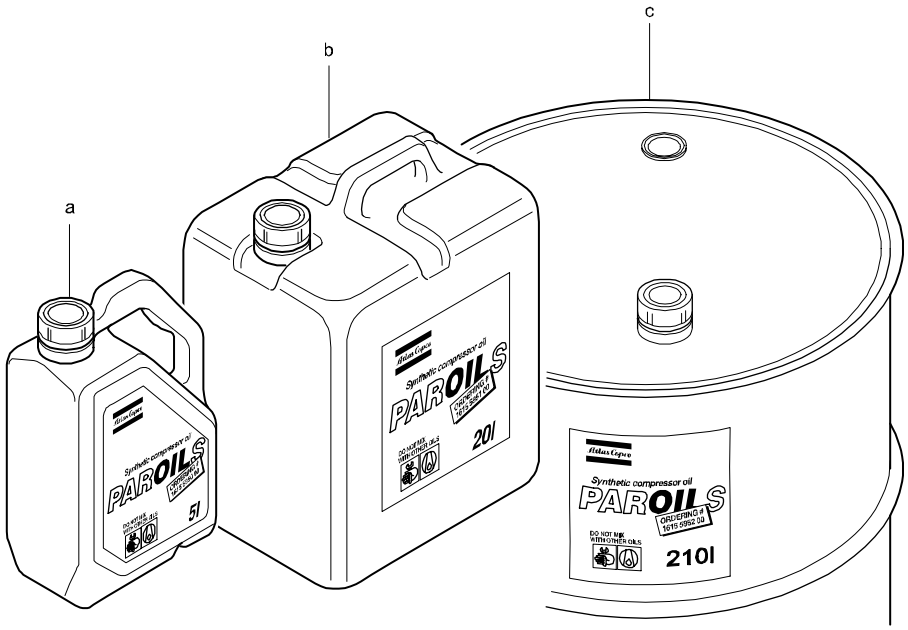


REF	PART NUMBER	DESIGNATION	QTY
		PAROIL S	
A	1615 5950 01	OIL CAN 5 L	1
B	1615 5951 01	OIL CAN 20 L	1
C	1615 5952 01	STEEL DRUM 210 L	1

REF	PART NUMBER	DESIGNATION	QTY
		PAROIL S68	
B	1604 7136 00	OIL CAN 20 L	1
C	1604 7137 00	STEEL DRUM 210 L	1

ENGINE COOLANT

PARCOOL EG

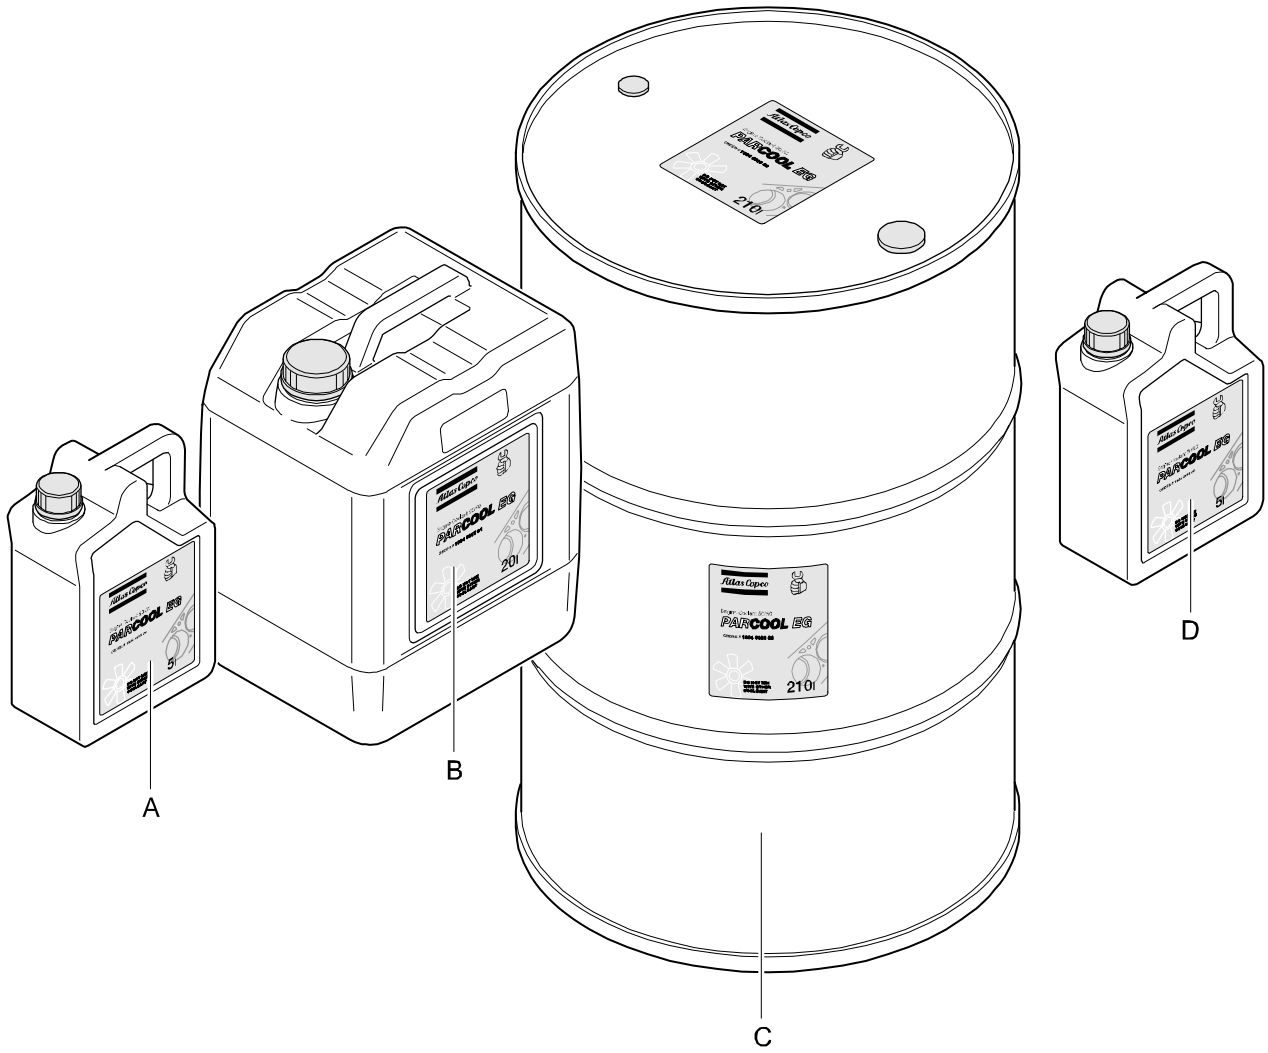


REF	PART NUMBER	DESIGNATION	QTY
A	1604 5308 00	PARCOOL EG 5 LITER CAN	1
B	1604 5307 01	PARCOOL EG 20 LITER CAN	1
C	1604 5306 00	PARCOOL EG 210 LITER BARREL	1
D	1604 8159 00	PARCOOL EG CONCENTRATE 5 LITER CAN	1

REF	PART NUMBER	DESIGNATION	QTY

SERVICE KIT

UNLOADING VALVE

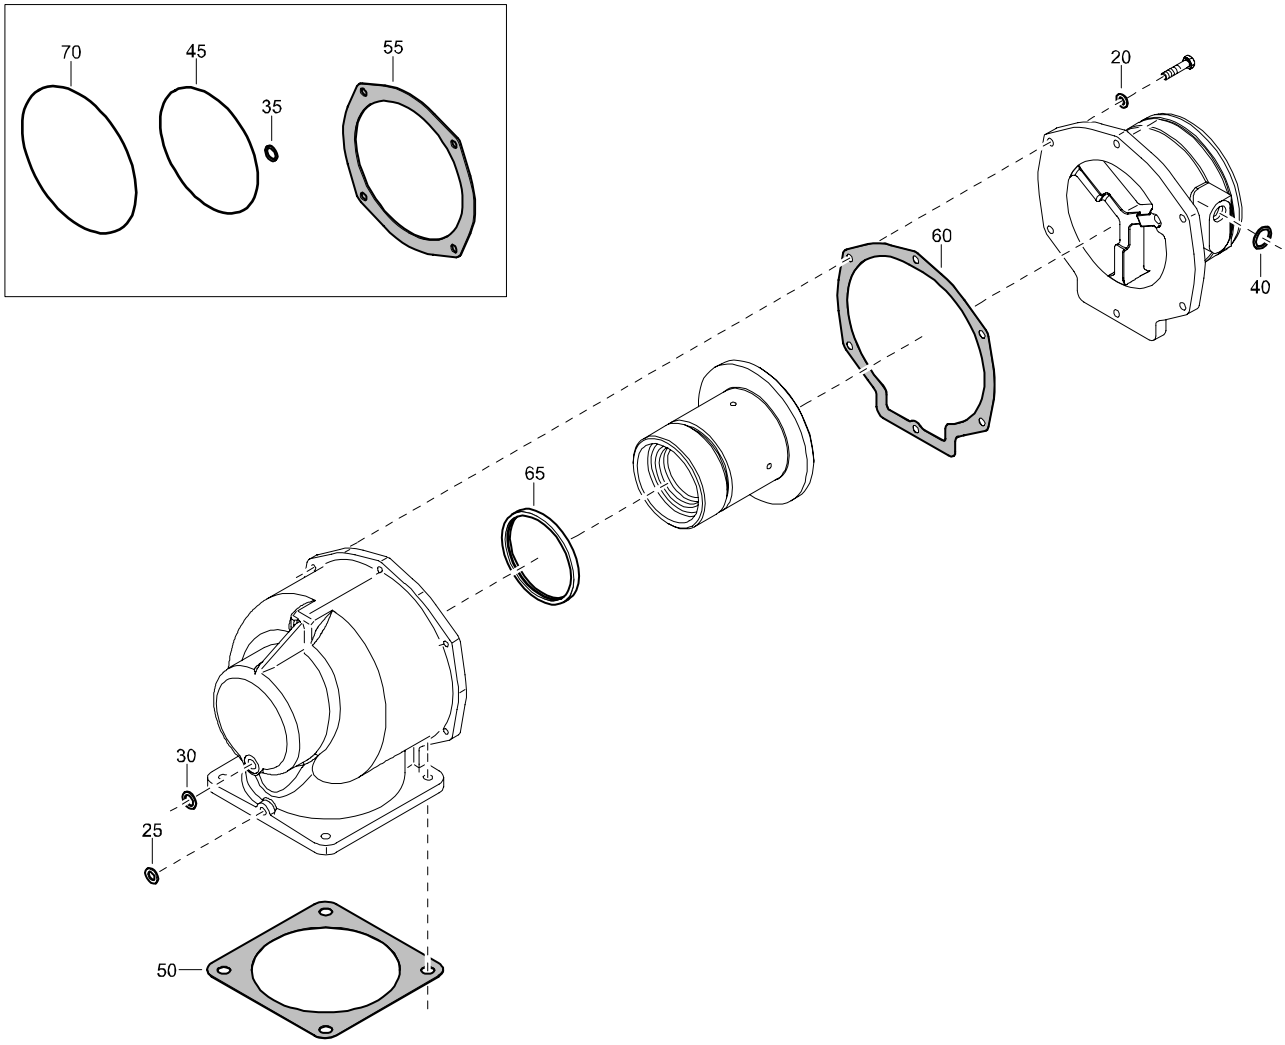


REF	PART NUMBER	DESIGNATION	QTY
-	2910 3003 00	SERVICE KIT UNLOADING VALVE	
•20	-	PLAIN WASHER	6
•25	-	FLAT GASKET	1
•30	-	FLAT GASKET	1
•35	-	FLAT GASKET	1
•40	-	FLAT GASKET	1
•45	-	O-RING	1
•50	-	GASKET	1
•55	-	GASKET	1
•60	-	GASKET	1
•65	-	SEALRING	1
•70	-	O-RING	2

REF	PART NUMBER	DESIGNATION	QTY

SERVICE KIT

REGULATING VALVE

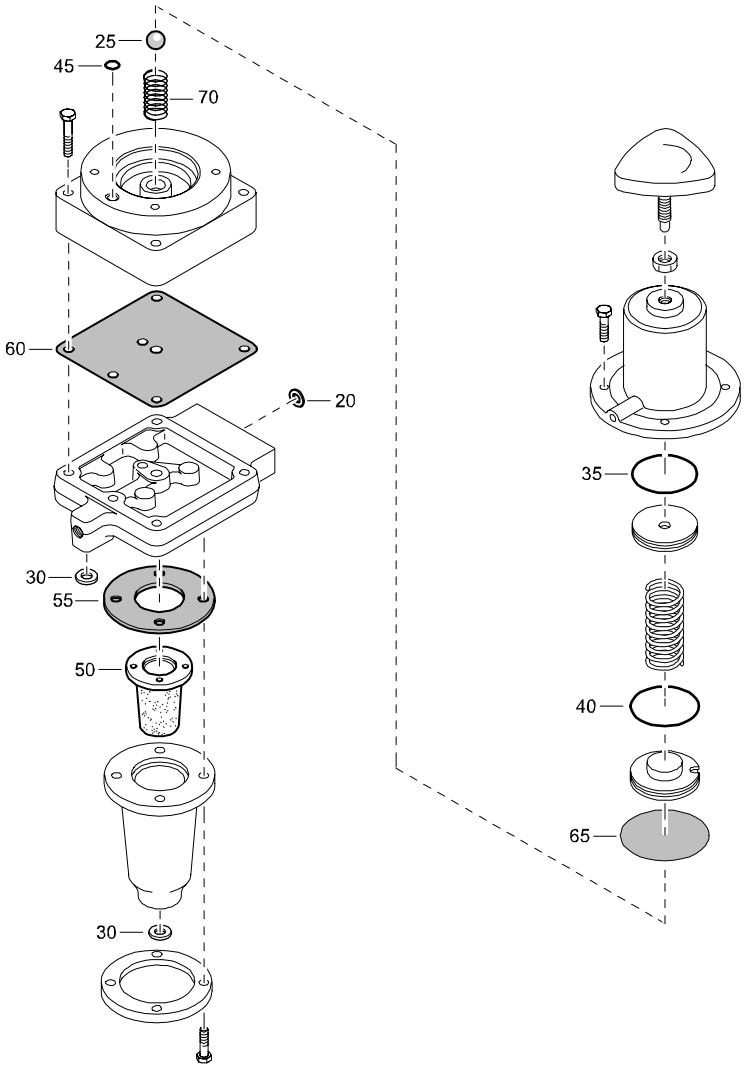


REF	PART NUMBER	DESIGNATION	QTY
-	2910 3005 00	SERVICE KIT REGULATING VALVE	
•20	-	PLAIN WASHER	2
•25	-	BEARING BALL	1
•30	-	FLAT GASKET	2
•35	-	O-RING	1
•40	-	O-RING	1
•45	-	O-RING	1
•50	-	FILTER	1
•55	-	GASKET	1
•60	-	GASKET	1
•65	-	MEMBRANE	1
•70	-	SPRING	1

REF	PART NUMBER	DESIGNATION	QTY

SERVICE KIT

ELEMENT MOUNTING

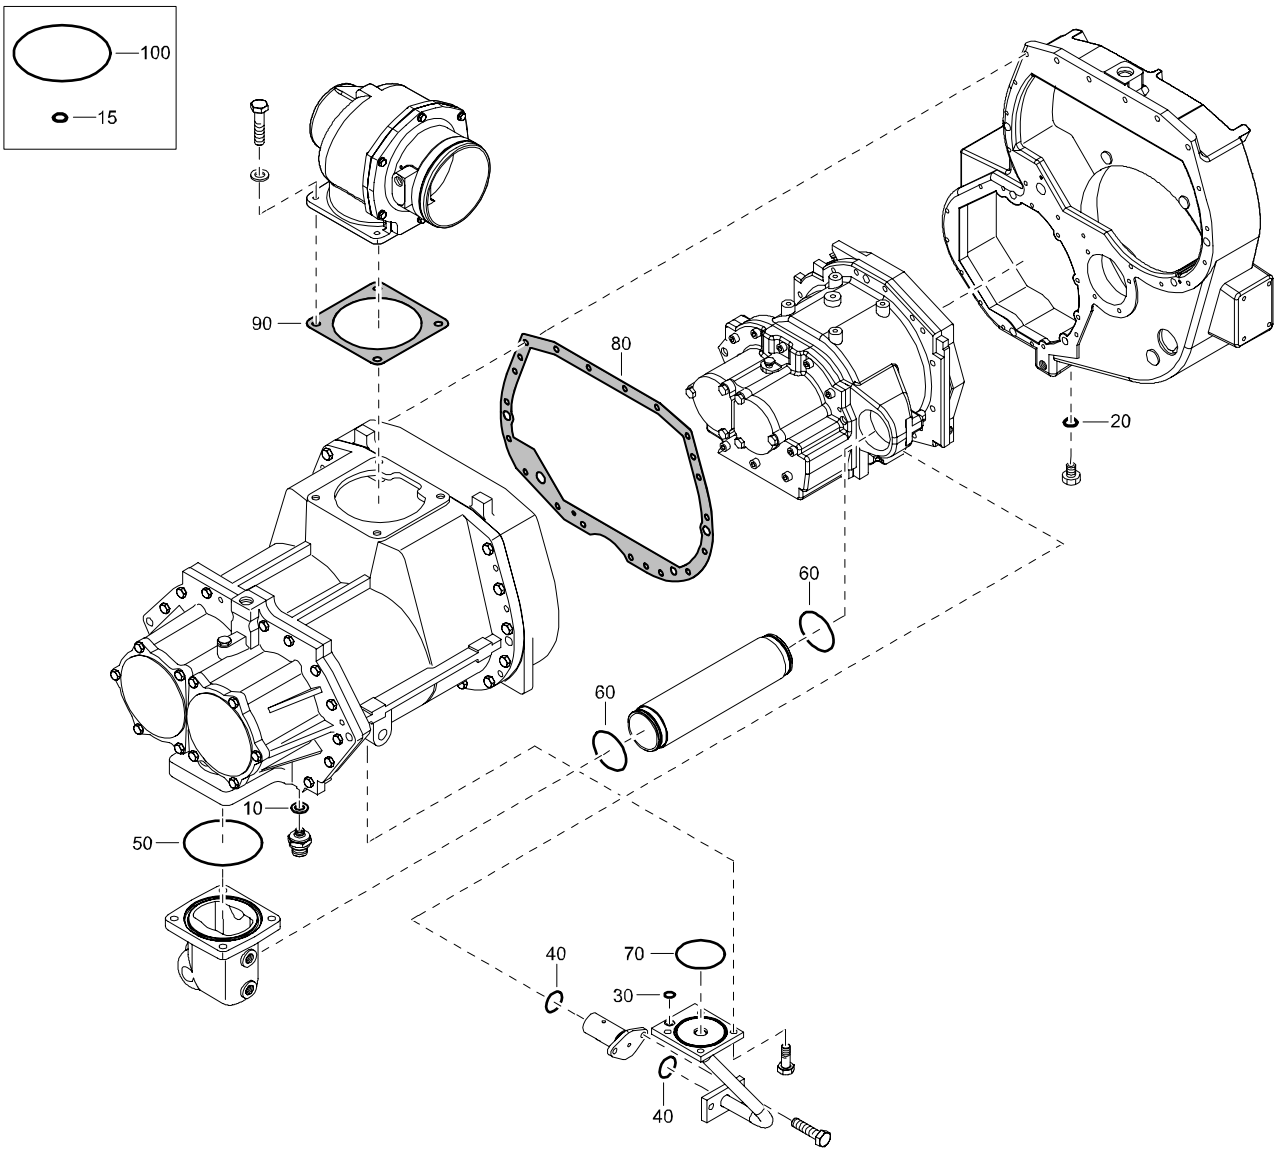


REF	PART NUMBER	DESIGNATION	QTY
-	2910 4041 00	SERVICE KIT ELEMENT MOUNTING	1
•10	-	FLAT GASKET	1
•15	-	FLAT GASKET	1
•20	-	FLAT GASKET	1
•30	-	O-RING	2
•40	-	O-RING	2
•50	-	O-RING	1
•60	-	O-RING	2
•70	-	O-RING	2
•80	-	GASKET	1
•90	-	GASKET	1
•100	-	O-RING	2

REF	PART NUMBER	DESIGNATION	QTY

SERVICE KIT

GEAR CASING

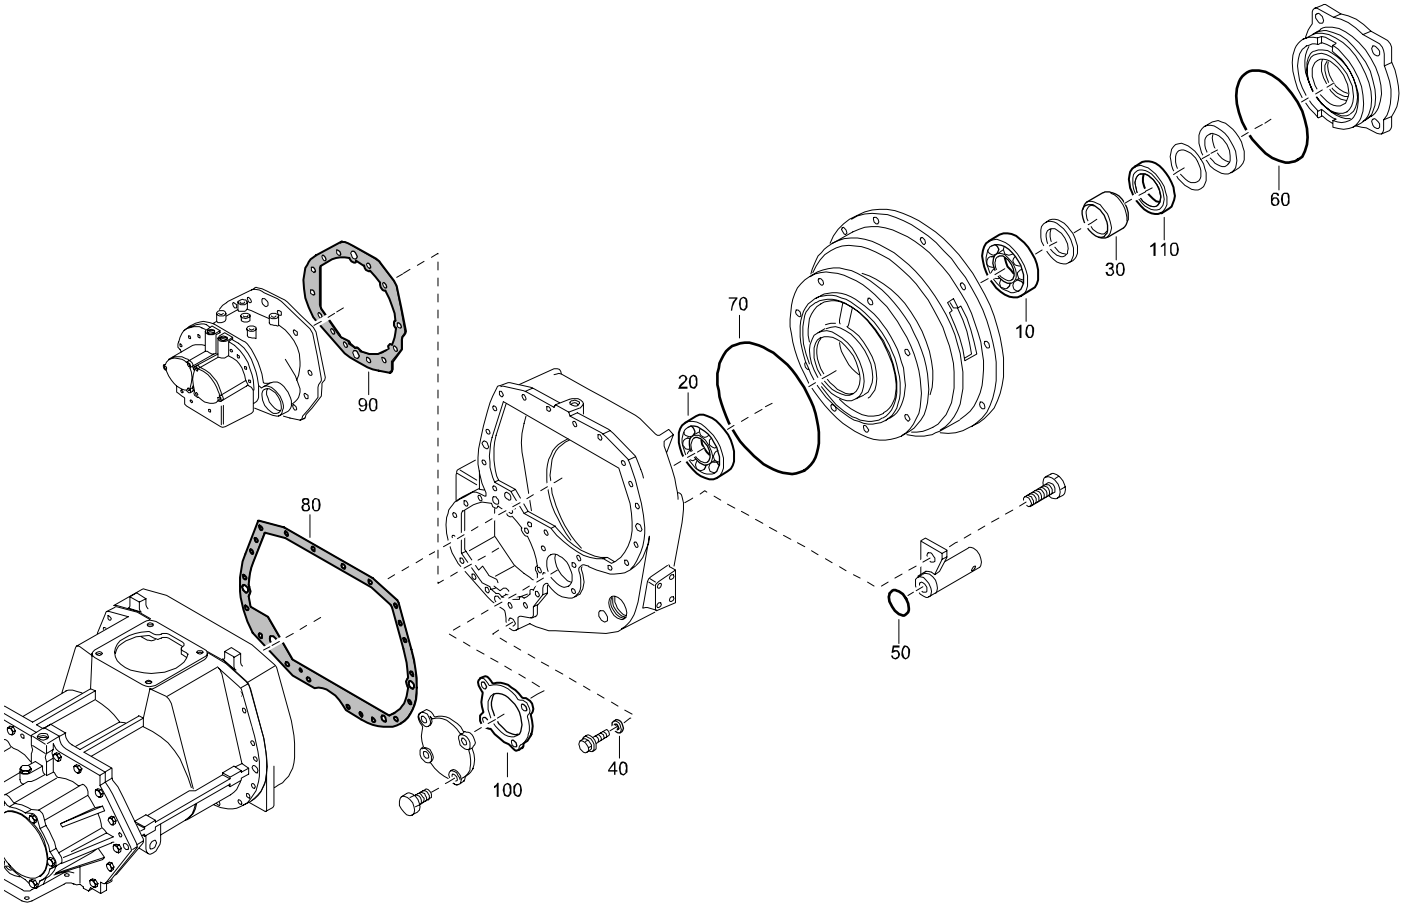


REF	PART NUMBER	DESIGNATION	QTY
-	2911 0066 00	SERVICE KIT GEAR CASING	1
•10	-	BEARING	1
•20	-	BEARING	1
•30	-	BUSHING	1
•40	-	SEALING WASHER	1
•50	-	O-RING	2
•60	-	O-RING	1
•70	-	O-RING	1
•80	-	GASKET	1
•90	-	GASKET	1
•100	-	GASKET	1
•110	-	SEALING RING	2

REF	PART NUMBER	DESIGNATION	QTY

SERVICE KIT

OIL SEPARATOR

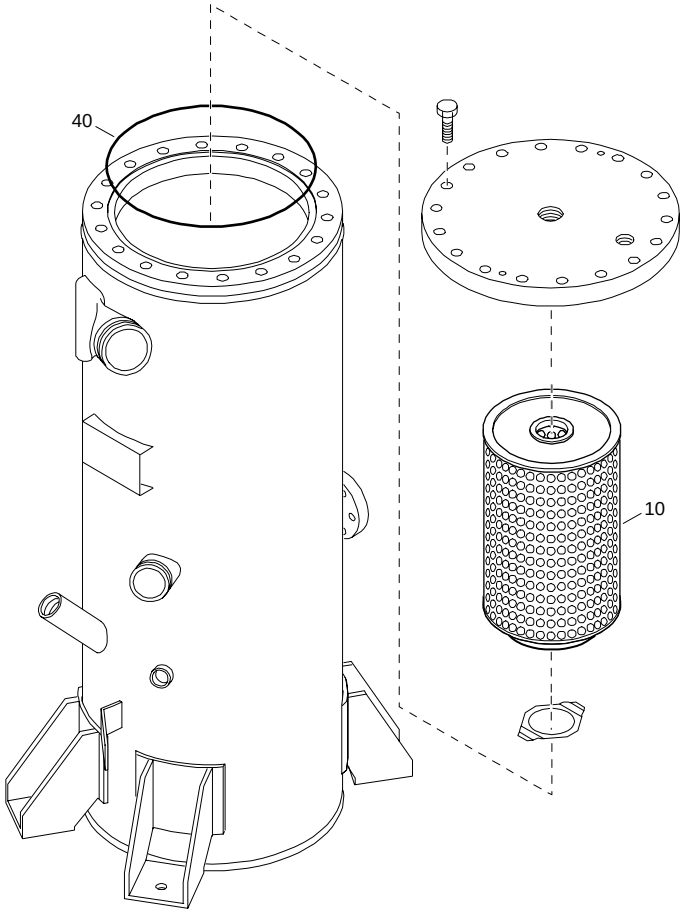


REF	PART NUMBER	DESIGNATION	QTY
-	2911 0117 00	OIL SEPARATOR	
•10	-	OIL SEP ELEMENT ASS'Y	1
•40	-	O-RING	1

REF	PART NUMBER	DESIGNATION	QTY

SERVICE KIT

OIL STOP VALVE

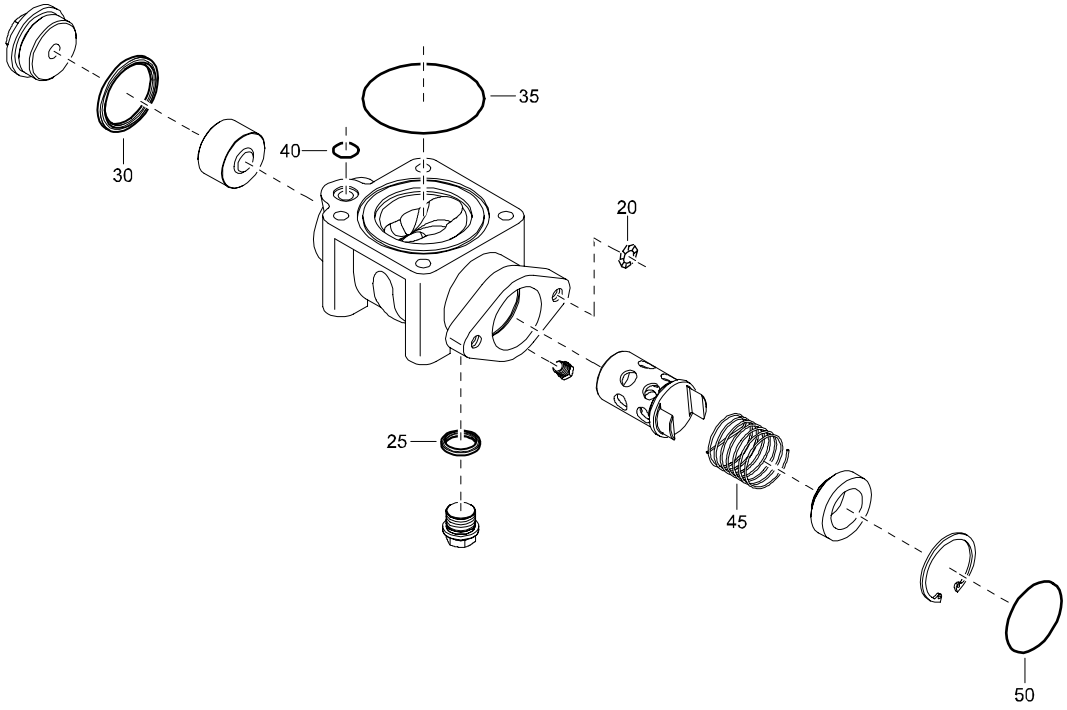


REF	PART NUMBER	DESIGNATION	QTY
-	2911 0118 00	OIL STOP VALVE	
•20	-	LOCK WASHER	2
•25	-	SEALING WASHER	1
•30	-	SEALING WASHER	1
•35	-	O-RING	1
•40	-	O-RING	1
•45	-	COMPR.SPRING	1
•50	-	O-RING	1

REF	PART NUMBER	DESIGNATION	QTY

SERVICE KIT

ELEMENT MOUNTING

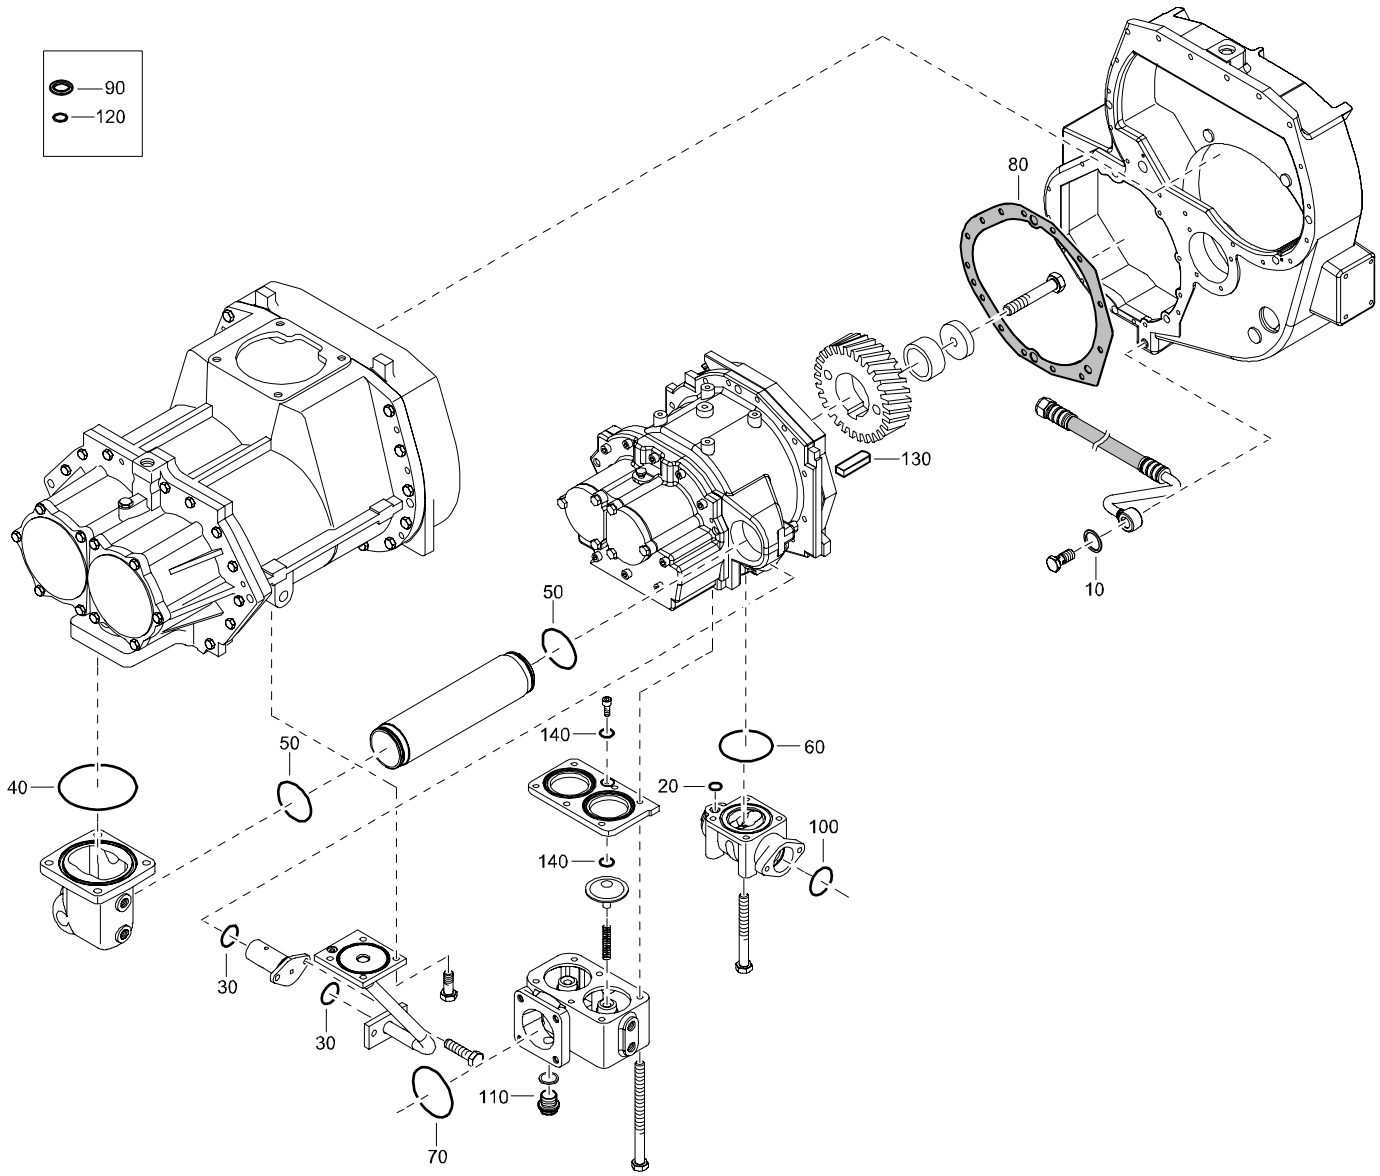


REF	PART NUMBER	DESIGNATION	QTY
-	2911 0120 00	SERVICE KIT ELEMENT MOUNTING	
•10	-	FLAT GASKET	3
•20	-	O-RING	1
•30	-	O-RING	2
•40	-	O-RING	1
•50	-	O-RING	2
•60	-	O-RING	6
•70	-	O-RING	1
•80	-	GASKET	1
•90	-	SEALING WASHER	1
•100	-	O-RING	1
•110	-	HEXAGON PLUG	1
•120	-	FLAT GASKET	2
•130	-	PARALLEL KEY	1
•140	-	O-RING	2

REF	PART NUMBER	DESIGNATION	QTY


STANDARD

FRAME AND MOUNTS

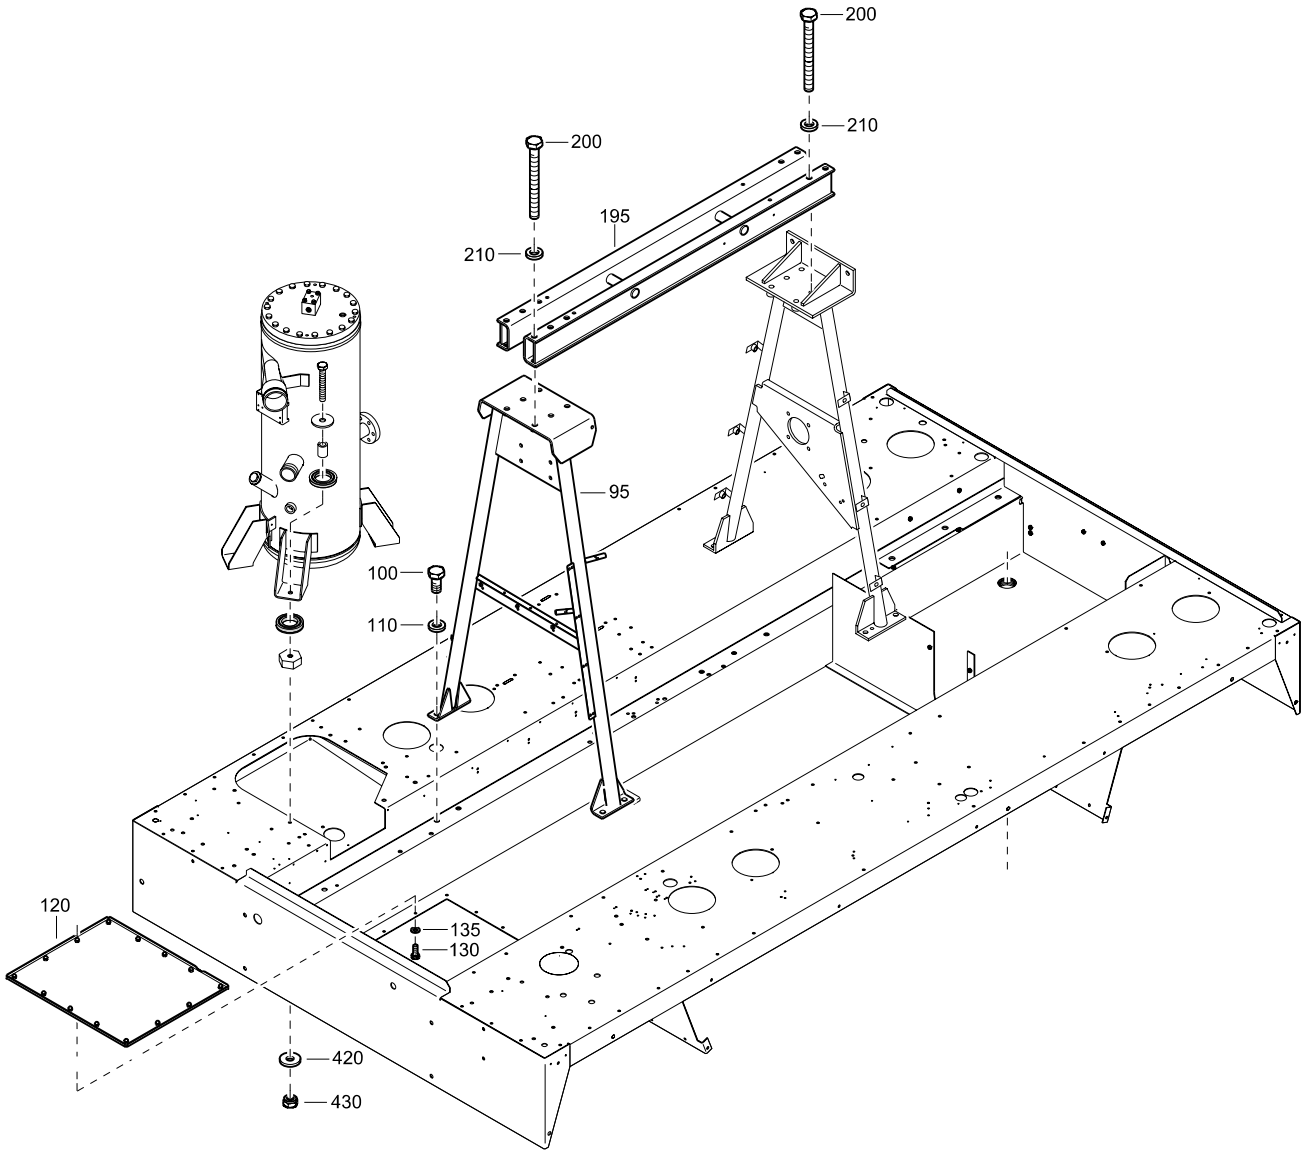

REF	PART NUMBER	DESIGNATION	QTY
95	1604 2528 07	SUPPORT	1
100	0147 1476 03	HEX. HEAD SCREW	4
110	0302 1274 04	PLAIN WASHER	4
120	1604 7860 04	COVER	1
130	0147 1323 03	HEX. HEAD SCREW	14
135	0301 2335 00	PLAIN WASHER	14
195	1604 2529 03	BEAM	1
200	0147 1495 03	HEX. HEAD SCREW	8
210	0302 1274 04	PLAIN WASHER	8
420	0300 0274 93	PLAIN WASHER	4
430	0291 1111 00	LOCKNUT	4

REF	PART NUMBER	DESIGNATION	QTY

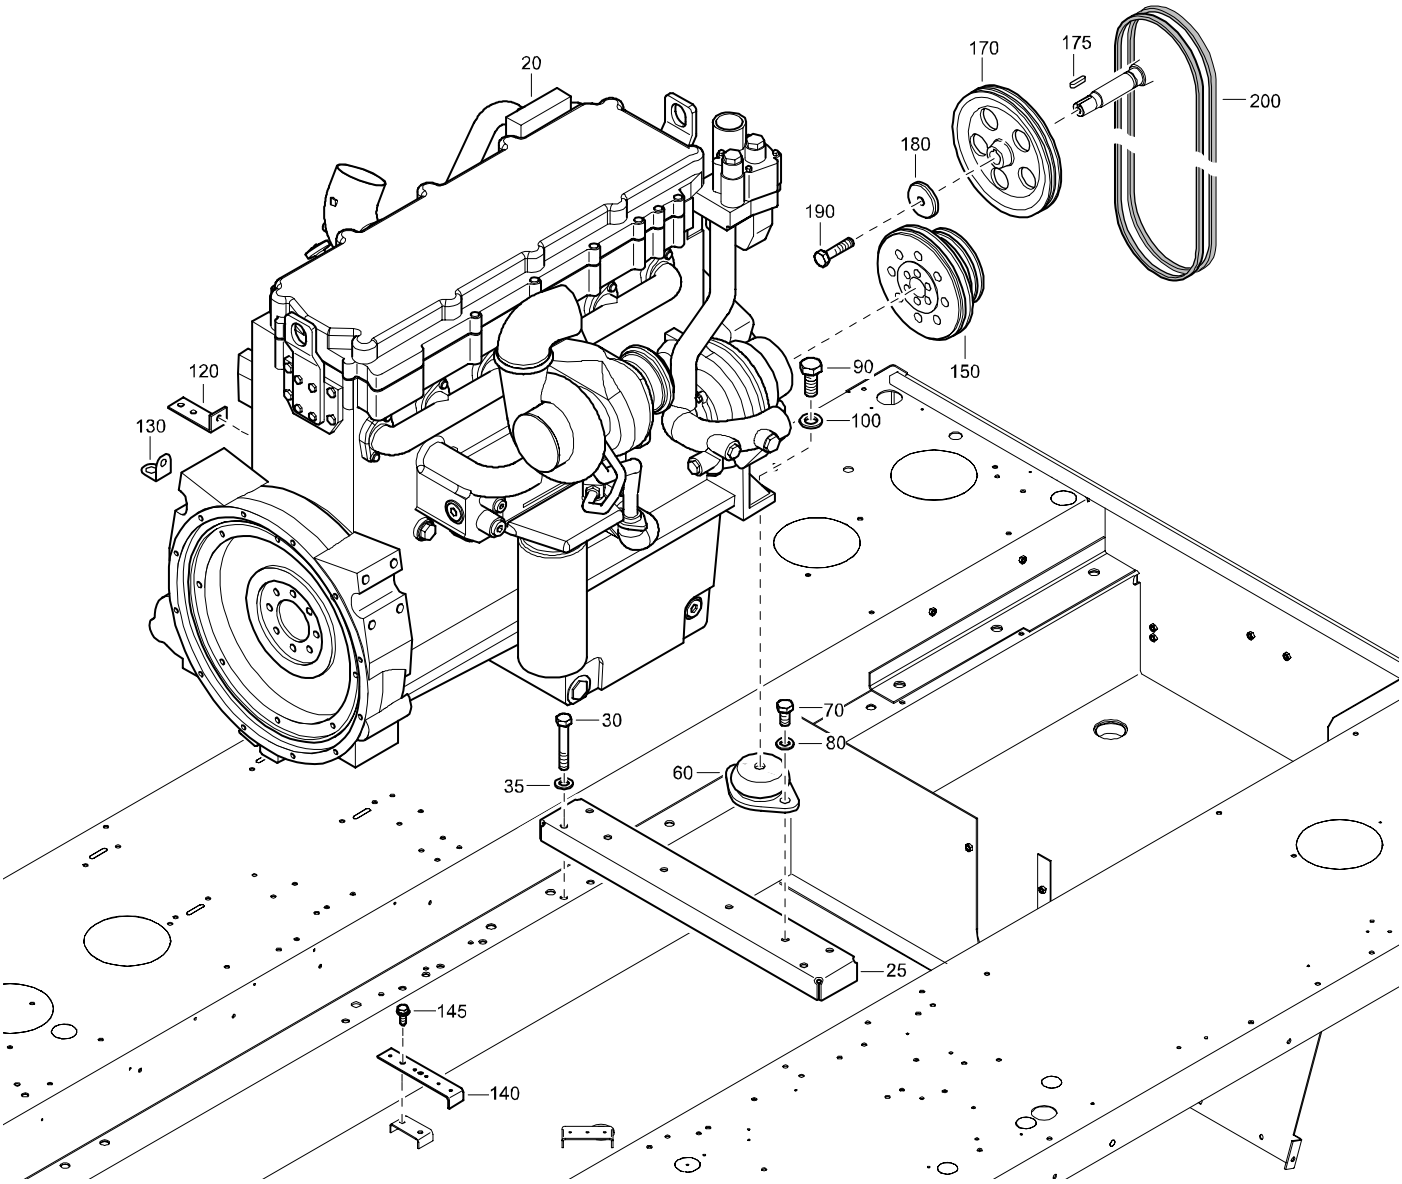


REF	PART NUMBER	DESIGNATION	QTY
20	1604 6796 00	ENGINE	1
25	1604 3650 01	SUPPORT ENGINE	1
30	0147 1410 03	HEX. HEAD SCREW	4
35	0301 2358 00	PLAIN WASHER	4
60	1615 5509 00	RUBBER BUFFER	2
70	0147 1400 03	HEX. HEAD SCREW	4
80	0301 2358 00	PLAIN WASHER	4
90	0147 1477 03	HEX. HEAD SCREW	2
100	0301 2378 00	PLAIN WASHER	2
120	1615 5614 00	BRACKET	1
130	1613 0808 00	BRACKET	2
140	1604 4817 01	PLATE	1
145	1619 2766 00	HEX. HEAD SCREW	2
150	1604 3653 00	PULLEY	1
170	1615 6428 01	PULLEY	1
175	0337 8158 00	PARALLEL KEY	1
180	1615 5441 00	WASHER	1
190	0147 1404 03	HEX. HEAD SCREW	1
200	0367 0100 54	V-BELT	2

REF	PART NUMBER	DESIGNATION	QTY


STANDARD

EXHAUST

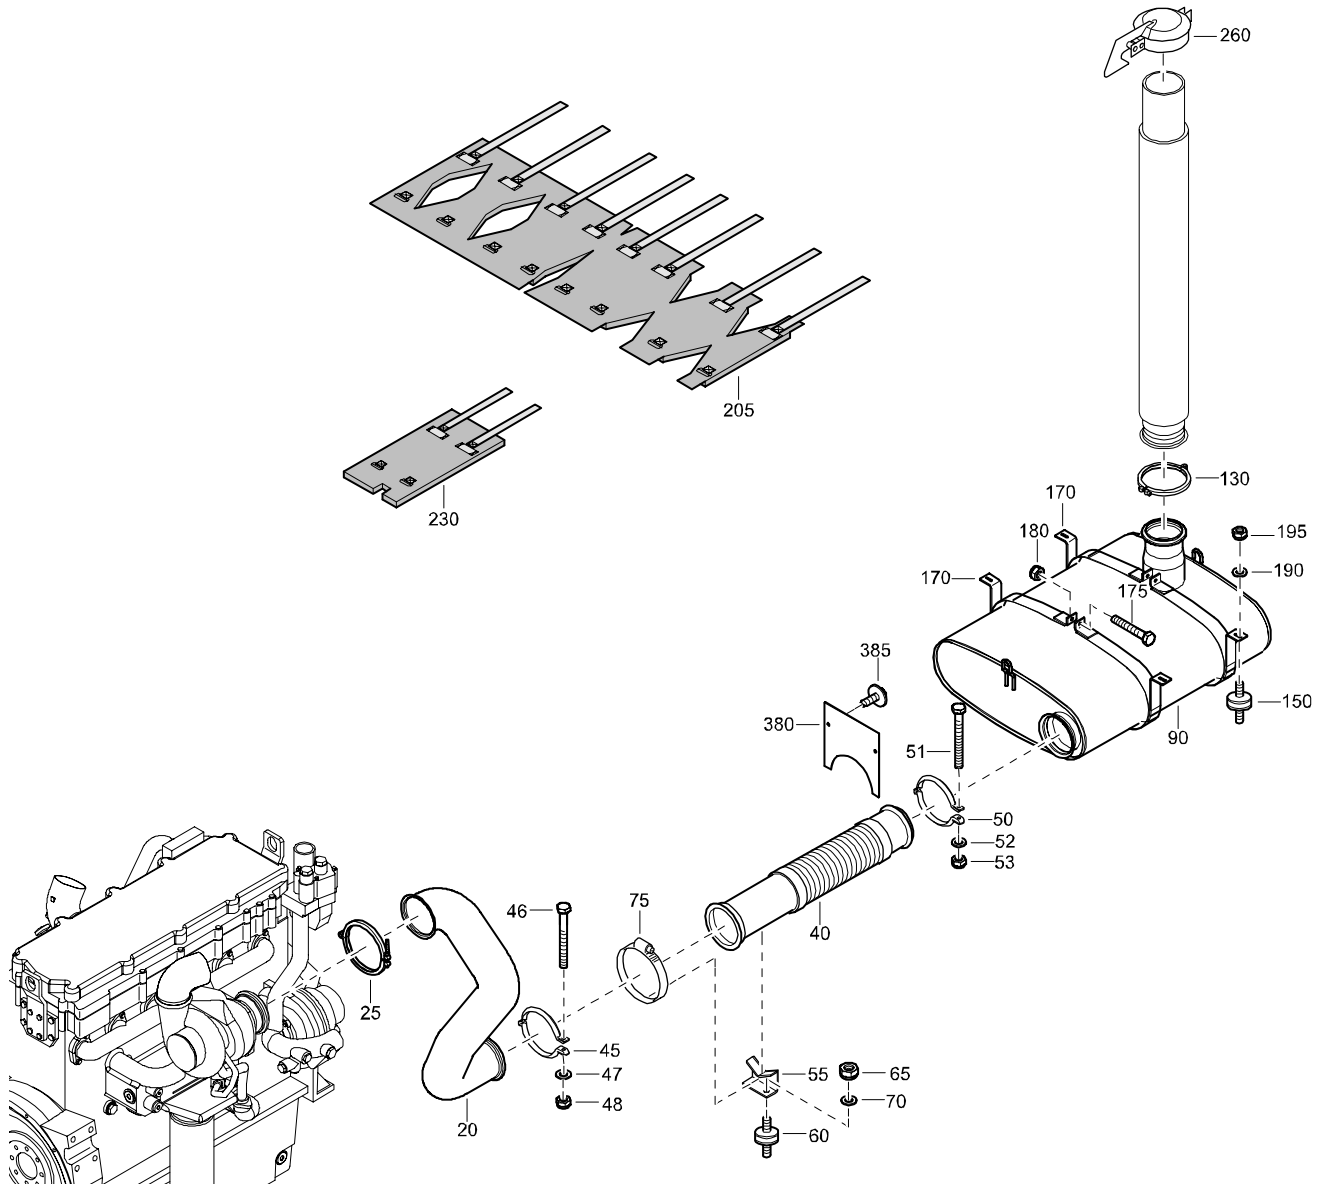

REF	PART NUMBER	DESIGNATION	QTY
20	1604 7070 00	PIPE	1
40	1604 3618 00	EXHAUST PIPE	1
45	1604 2548 00	CLAMP	1
46	0147 1963 95	HEX. HEAD SCREW	1
47	0301 2335 00	PLAIN WASHER	1
48	0291 1185 04	LOCKNUT	1
50	1604 2548 00	CLAMP	1
51	0147 1963 95	HEX. HEAD SCREW	1
52	0301 2335 00	PLAIN WASHER	1
53	0291 1185 04	LOCKNUT	1
55	1604 2654 01	SUPPORT	1
60	1604 0134 00	BUFFER	2
65	0291 1110 00	LOCKNUT	2
70	0301 2335 00	PLAIN WASHER	2
75	0347 6100 15	HOSE CLAMP	1
90	1604 2484 02	SILENCER	1
130	1615 9038 00	V-CLAMP	1
150	1604 0134 00	BUFFER	4
170	1604 2549 02	CLAMP	2

REF	PART NUMBER	DESIGNATION	QTY
175	0147 1330 12	HEX. HEAD SCREW	2
180	0291 1185 04	LOCKNUT	2
190	0300 8019 00	PLAIN WASHER	4
195	0291 1185 04	LOCKNUT	4
205	1604 3750 01	INSULATION	1
230	1604 2778 02	INSULATION	1
260	1615 6189 01	EXHAUST COVER	1
380	1604 2489 00	PLATE	1
385	1615 5664 00	HEX. HEAD SCREW	2

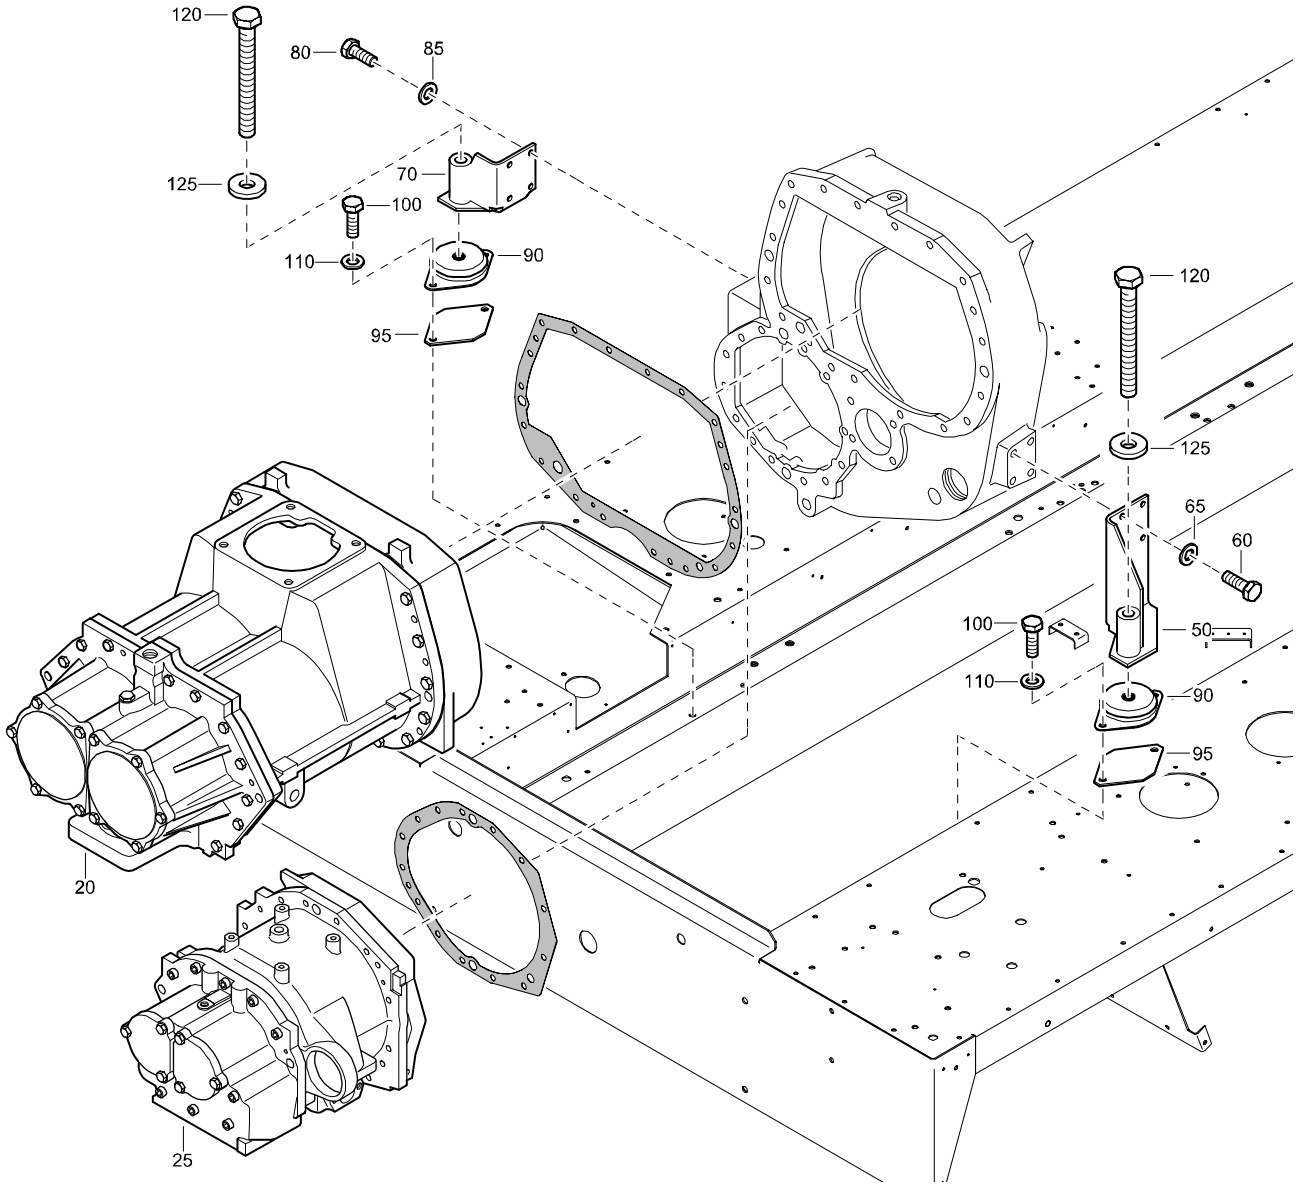


REF	PART NUMBER	DESIGNATION	QTY
20	1616 7257 91	OIS N-02 SERVICE STAGE	1
25	1616 7258 90	O.I.S. J-33 SERVICE STAGE	1
50	1604 2450 00	SUPPORT	1
60	0147 1401 03	HEX. HEAD SCREW	4
65	0301 2358 00	PLAIN WASHER	4
70	1604 2451 00	SUPPORT	1
80	0147 1401 03	HEX. HEAD SCREW	4
85	0301 2358 00	PLAIN WASHER	4
90	1619 5189 01	VIBR. DAMPER	2
95	1604 2803 00	PLATE	2
100	0147 1401 03	HEX. HEAD SCREW	4
110	0301 2358 00	PLAIN WASHER	4
120	0147 1494 03	HEX. HEAD SCREW	2
125	0300 0276 23	PLAIN WASHER	2

REF	PART NUMBER	DESIGNATION	QTY


STANDARD

COMPRESSOR DRIVE

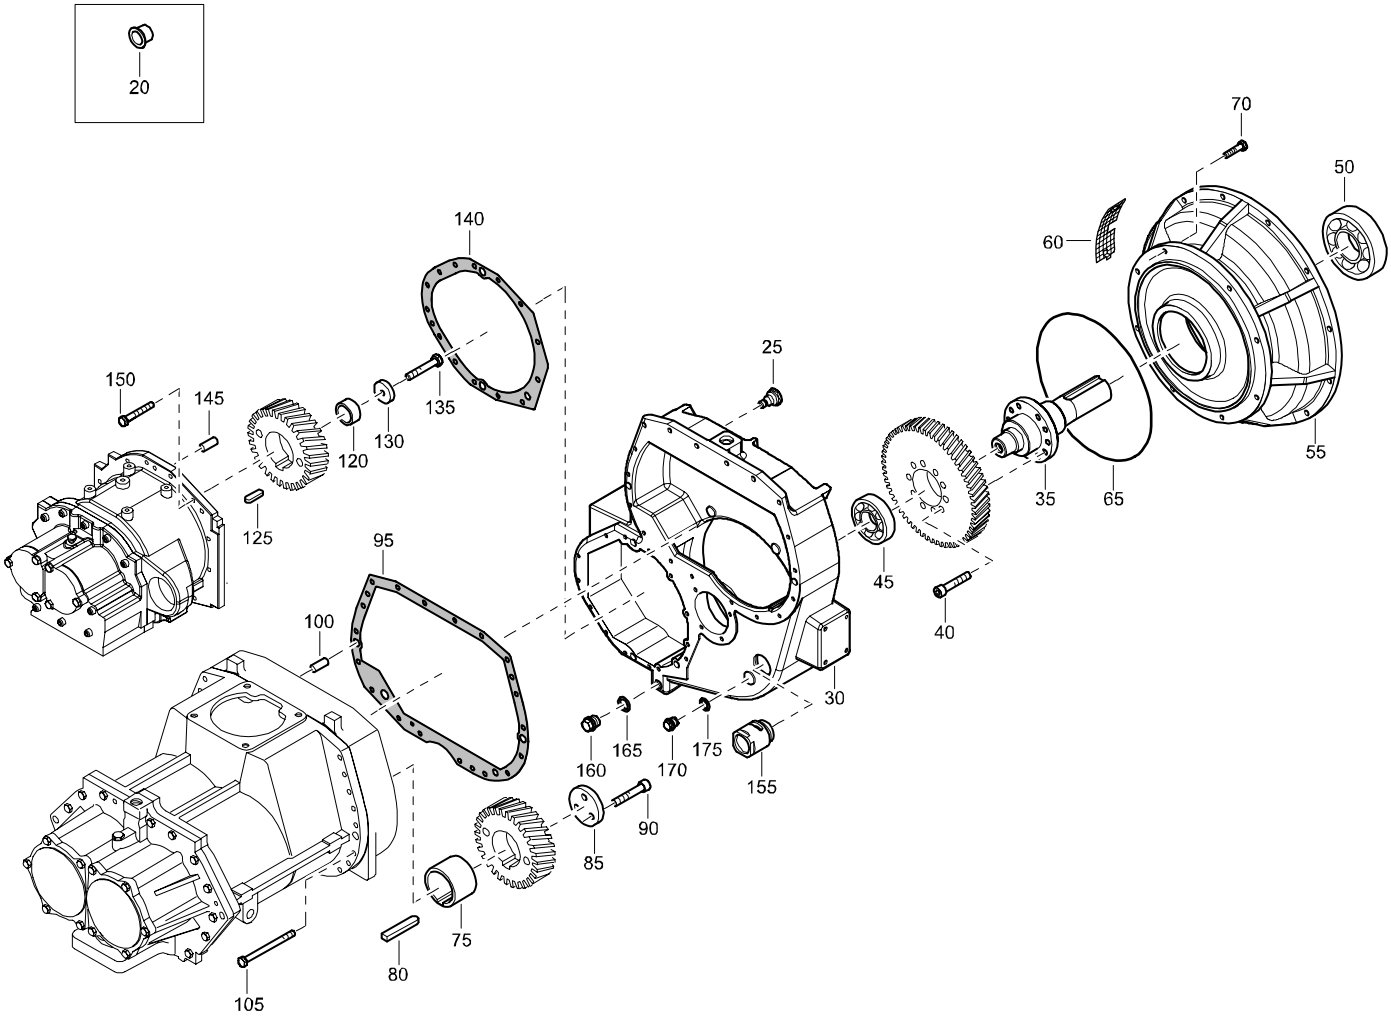


REF	PART NUMBER	DESIGNATION	QTY
20	0686 9130 00	PROTECTING PLUG	1
25	1619 6032 00	NIPPLE	1
30	2252 5483 00	GEAR CASING	1
35	2252 5484 00	DRIVE SHAFT	1
40	0211 1407 00	HEX SOCK. SCREW	10
45	0506 5109 00	SPHERICAL ROLLER BEARING	1
50	0506 0100 08	SPHERICAL ROLLER BEARING	1
55	1604 2692 01	ADAPTER	1
60	1604 2693 02	PROTECTION	1
65	0663 7177 00	O-RING	1
70	0147 1365 03	HEX. HEAD SCREW	8
75	2254 8831 00	BUSHING	1
80	0337 6074 00	PARALLEL KEY	1
85	2252 5470 00	WASHER	1
90	0211 1409 00	HEX SOCK. SCREW	3
95	-	GASKET	1
		(Part of service kit, see page 28)	
100	0101 1626 00	PARALLEL PIN	2
105	0147 1380 03	HEX. HEAD SCREW	18
120	1604 6368 00	BUSHING	1

REF	PART NUMBER	DESIGNATION	QTY
125	0337 6062 00	PARALLEL KEY	1
130	1613 2197 00	WASHER	1
135	0147 1409 03	HEX. HEAD SCREW	1
140	-	GASKET	1
		(Part of service kit, see page 28)	
145	0101 1626 00	PARALLEL PIN	2
150	0147 1371 03	HEX. HEAD SCREW	13
155	2253 2423 80	SAFETY VALVE	1
160	0686 3716 02	HEXAGON PLUG	1
165	0661 1033 00	SEALING WASHER	1
170	0686 3716 30	HEXAGON PLUG	1
175	0661 1026 00	SEALING WASHER	1

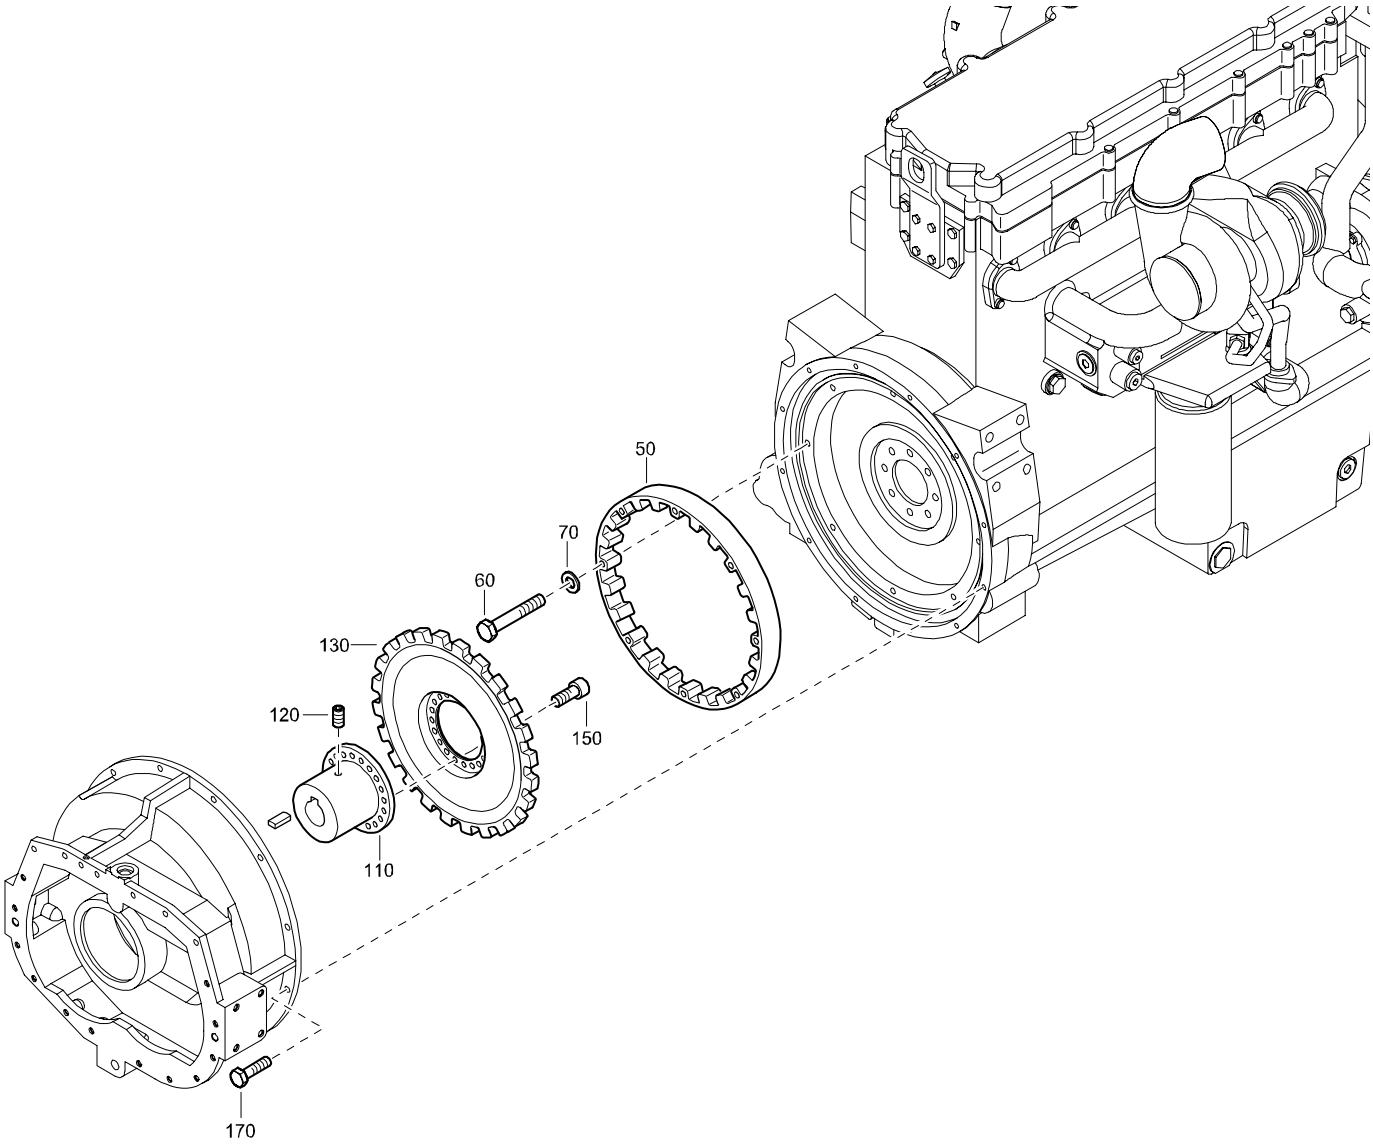

REF	PART NUMBER	DESIGNATION	QTY
50	1615 6054 00	COUPLING RING	1
60	0144 3372 03	HEX. HEAD SCREW	8
70	0301 2358 00	PLAIN WASHER	8
110	1615 6056 00	COUPLING HUB	1
120	0196 1398 00	SET SCREW	1
130	1615 6229 00	COUPLING ELEMENT	1
150	0211 1401 00	HEX SOCK. SCREW	16
170	0144 3328 00	HEX. HEAD SCREW	12

REF	PART NUMBER	DESIGNATION	QTY

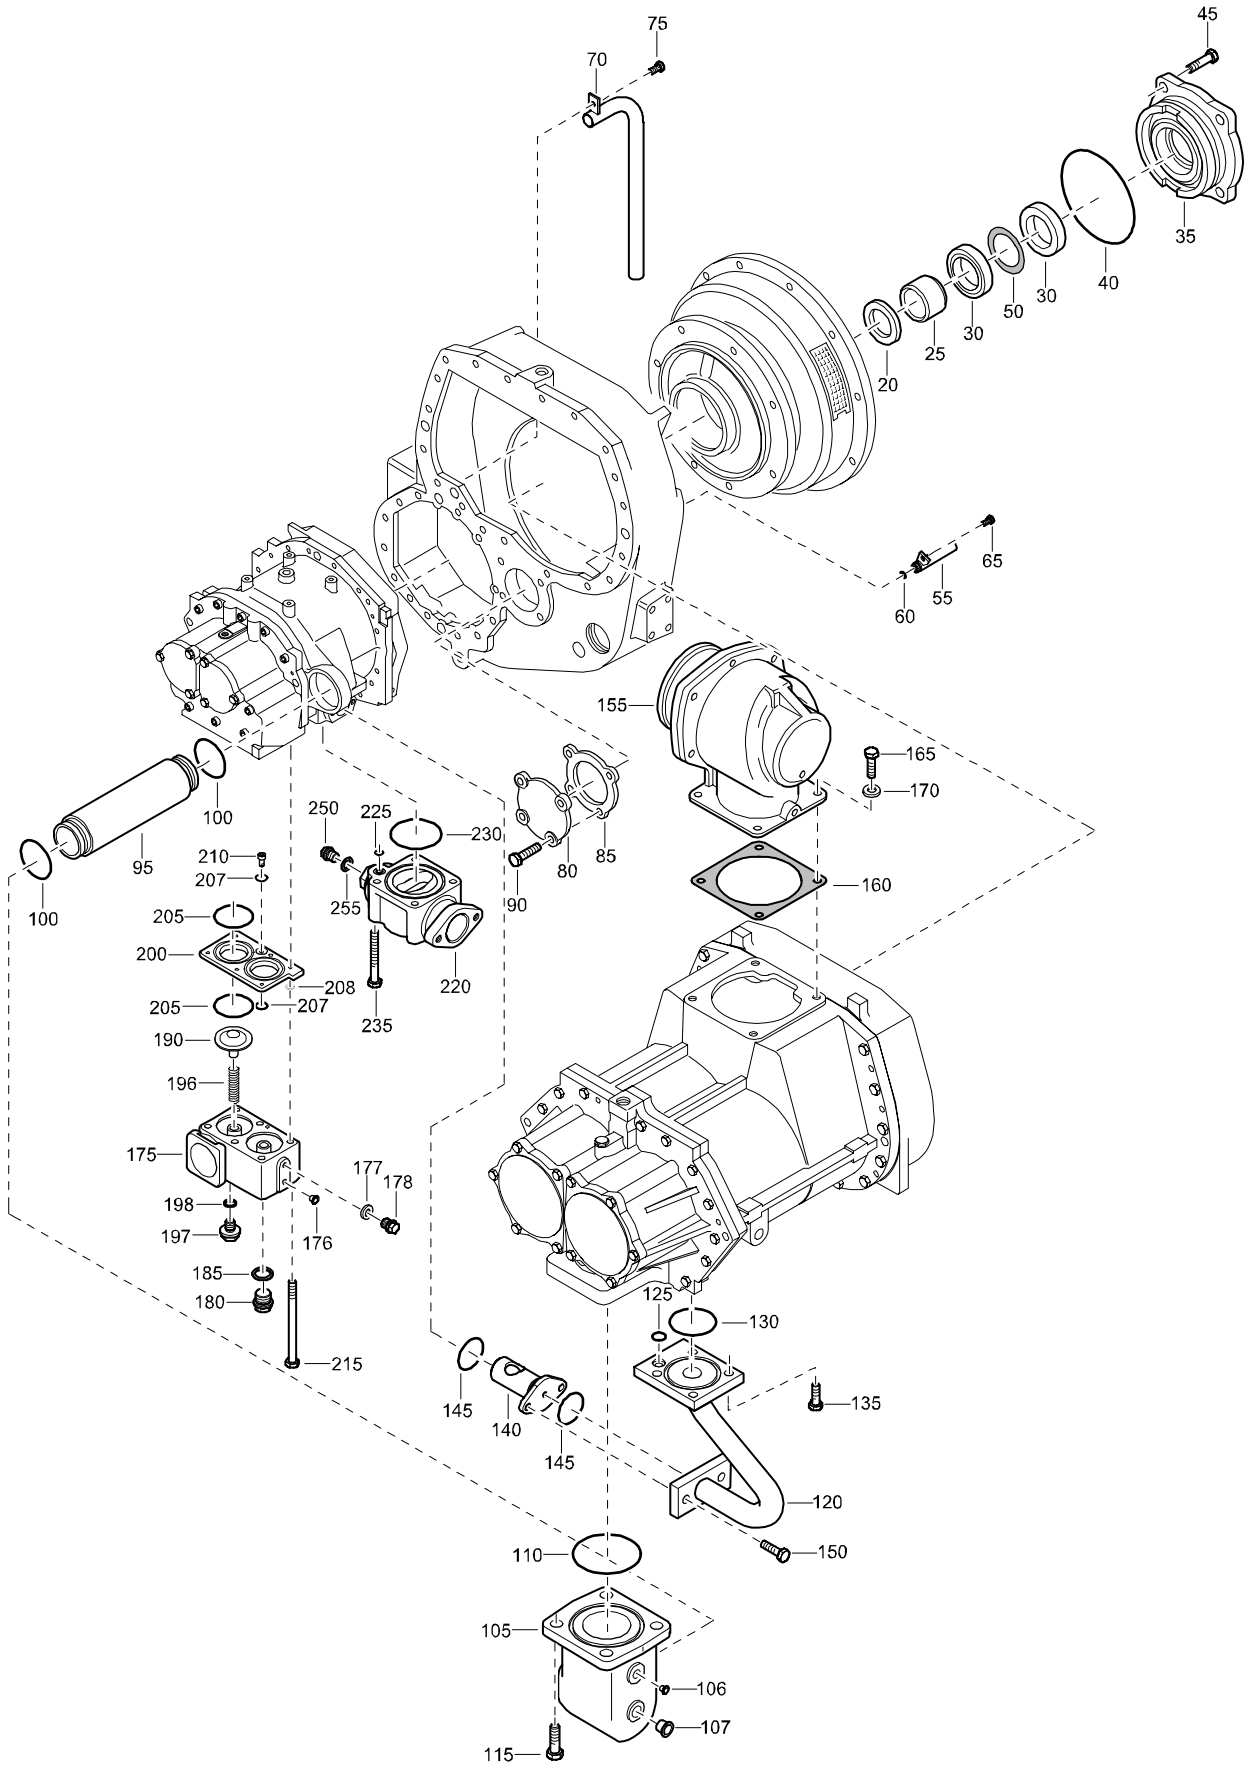

75
70
45
35
40
30
50
30
25
20
65
60
55
155
165
170
160
100
95
100
210
207
205
200
208
205
207
190
196
175
198
197
185
180
215
250
225
230
255
235
220
80
85
90
177
178
176
125
130
135
145
140
145
120
150
110
105
106
107
115

STANDARD

VALVES ON ELEMENT


REF	PART NUMBER	DESIGNATION	QTY
20	2252 5477 00	WASHER	1
25	-	BUSHING	1
		(Part of service kit, see page 28)	
30	-	SEALING RING	2
		(Part of service kit, see page 28)	
35	2252 5479 00	RETAINER	1
40	-	O-RING	1
		(Part of service kit, see page 28)	
45	0147 1365 03	HEX. HEAD SCREW	4
50	2254 7604 00	RING	1
55	1615 8447 00	OIL NOZZLE	2
60	-	O-RING	2
		(Part of service kit, see page 28)	
65	0147 1244 03	HEX. HEAD SCREW	2
70	2252 5492 00	DRAIN PIPE	1
75	0147 1244 03	HEX. HEAD SCREW	1
80	2252 5487 00	COVER	1
85	-	GASKET	1
		(Part of service kit, see page 28)	
90	0147 1364 03	HEX. HEAD SCREW	4
95	2252 8450 00	CONNECTION	1
100	-	O-RING	2
		(Part of service kit, see page 27)	
105	2252 8449 00	HOUSING HP	1
106	0686 9108 00	PROTECTING PLUG	1
107	0686 9130 00	PROTECTING PLUG	1
110	-	O-RING	1
		(Part of service kit, see page 27)	
115	0147 1403 03	HEX. HEAD SCREW	4
120	2252 9814 00	CONN. TUBE	1
125	0663 3120 00	O-RING	1
130	0663 7142 00	O-RING	1
135	0147 1362 03	HEX. HEAD SCREW	4
140	1604 7353 00	NOZZLE	1
145	-	O-RING	2
		(Part of service kit, see page 27)	
150	0147 1364 03	HEX. HEAD SCREW	2
155	2252 5502 92	UNLOADER ASSY	1
		(For details see page 103)	
160	-	GASKET	1
		(Part of service kit, see page 27)	
165	0147 1363 03	HEX. HEAD SCREW	4
170	0301 2344 00	PLAIN WASHER	4
175	-	HOUSING	1
		(Not available separately)	
176	0686 9130 00	PROTECTING PLUG	1
177	0653 1062 00	FLAT GASKET	1
178	0686 3716 01	HEXAGON PLUG	1
180	0686 3716 02	HEXAGON PLUG	1
185	0661 1033 00	SEALING WASHER	1
190	2253 9671 01	VALVE	2
196	1604 5831 00	SPRING	2
197	0686 3716 30	HEXAGON PLUG	1
198	0653 1100 00	FLAT GASKET	1
200	1616 6093 00	VALVE SEAT	1
205	0663 2106 15	O-RING	4
207	0663 2107 09	O-RING	2
208	0663 2106 67	O-RING	1
210	0211 1244 00	HEX SOCK. SCREW	1
215	0147 1381 03	HEX. HEAD SCREW	6

REF	PART NUMBER	DESIGNATION	QTY
220	1604 6109 80	HOUSING	1
		(For details see page 100)	
225	-	O-RING	1
		(Part of service kit, see page 27)	
230	-	O-RING	1
		(Part of service kit, see page 27)	
235	0147 1375 03	HEX. HEAD SCREW	4
250	0686 3716 01	HEXAGON PLUG	1
255	0653 1062 00	FLAT GASKET	1

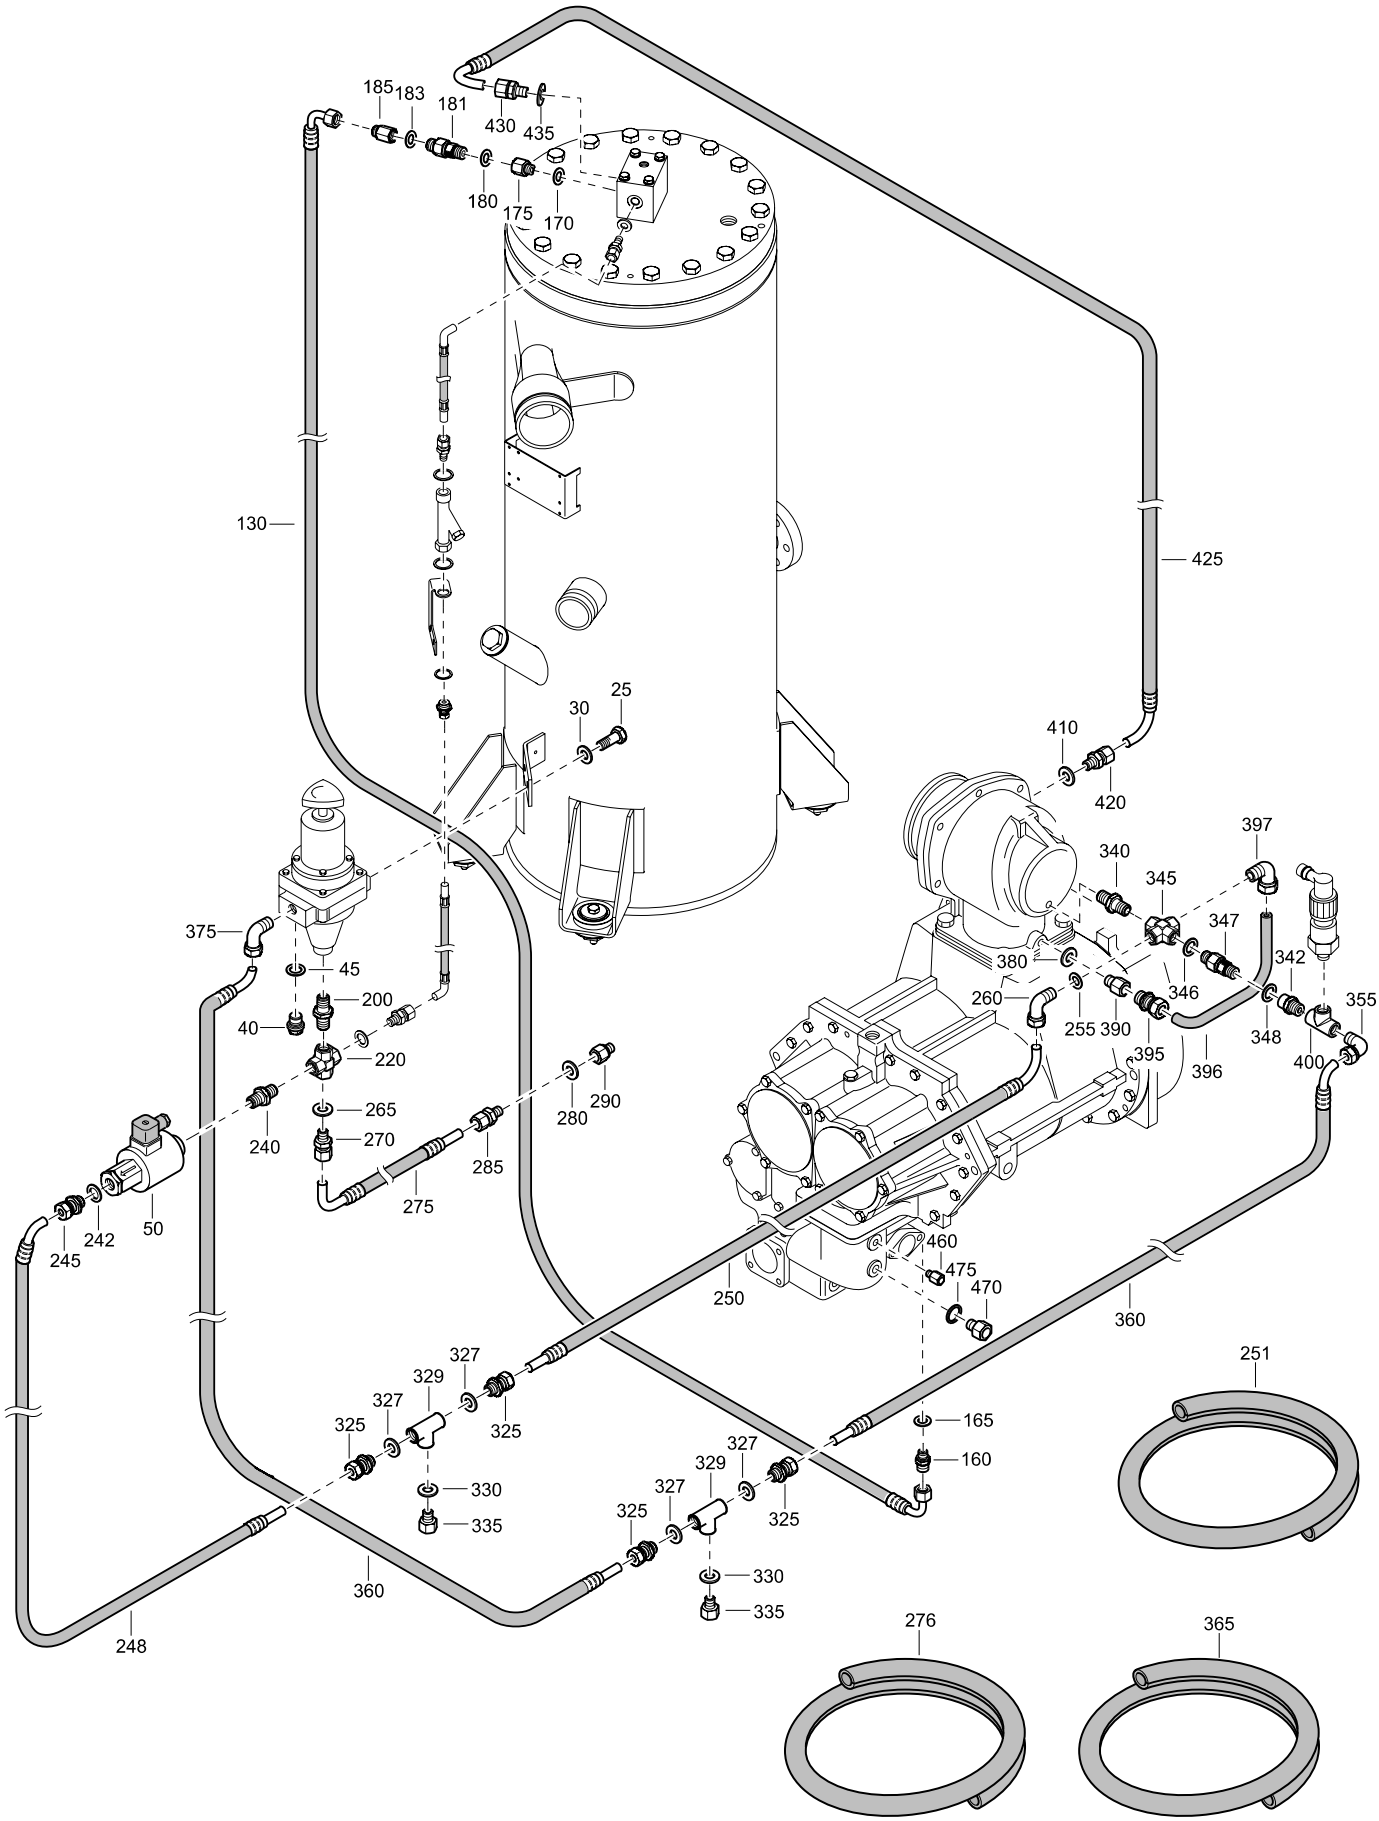
185
183
181
430
435
180
175
170
130
425
25
30
410
420
397
340
345
347
342
380
260
346
348
355
255
390
395
396
400
375
45
200
40
220
265
270
240
280
290
285
275
50
242
245
460
475
470
250
360
251
327
329
325
330
335
165
160
276
365
248


REF	PART NUMBER	DESIGNATION	QTY
25	0147 1362 03	HEX. HEAD SCREW	2
30	0301 2344 00	PLAIN WASHER	2
40	0686 3716 01	HEXAGON PLUG	1
45	0653 1062 00	FLAT GASKET	1
50	1089 0451 10	SOLENOID VALVE	1
130	0575 0791 57	HOSE ASSEMBLY	1
160	1079 5840 01	HEXAGON NIPPLE	1
165	0653 1046 00	FLAT GASKET	1
170	0653 1062 00	FLAT GASKET	1
175	1615 9643 00	REDUCER FOR SCAVENGE PIPE	1
180	0653 1062 00	FLAT GASKET	1
181	0823 0000 19	NON-RETURN VALVE	1
183	0653 1062 00	FLAT GASKET	1
185	0571 0035 14	HEXAGON NIPPLE	1
200	0603 4102 03	HEXAGON NIPPLE	1
220	0560 4401 61	CROSS	1
240	0603 4102 03	HEXAGON NIPPLE	1
242	0653 1062 00	FLAT GASKET	1
245	0581 0028 01	STRAIGHT PIPE COUPLING	1
248	0575 0102 38	HOSE ASSEMBLY	1
250	0575 0112 35	HOSE ASSEMBLY	1
251	0395 1010 57	INSULATING HOSE	1
255	0653 1062 00	FLAT GASKET	1
260	0581 1228 04	PIPE COUPLING TYPE 2.1	1
265	0653 1062 00	FLAT GASKET	1
270	0581 0028 01	STRAIGHT PIPE COUPLING	1
275	0575 0102 11	HOSE ASSEMBLY	1
276	0395 1010 47	INSULATING HOSE H15-A	1
280	0653 1062 00	FLAT GASKET	1
285	0581 0028 01	STRAIGHT PIPE COUPLING	1
290	1615 9643 00	REDUCER FOR SCAVENGE PIPE	1
325	0581 0028 01	STRAIGHT PIPE COUPLING	4
327	0653 1062 00	FLAT GASKET	4
329	0564 0000 24	TEE	2
330	0653 1062 00	FLAT GASKET	2
335	1615 9643 00	REDUCER FOR SCAVENGE PIPE	2
340	0603 4102 03	HEXAGON NIPPLE	1
342	0605 8350 69	BUSHING	1
345	0560 4401 61	CROSS	1
346	0653 1062 00	FLAT GASKET	1
347	0823 0000 19	NON-RETURN VALVE	1
348	0653 1062 00	FLAT GASKET	1
355	0581 1228 04	PIPE COUPLING TYPE 2.1	1
360	0575 0112 35	HOSE ASSEMBLY	2
365	0395 1010 57	INSULATING HOSE	1
375	0581 1228 04	PIPE COUPLING TYPE 2.1	1
380	0653 1046 00	FLAT GASKET	1
390	1604 5758 01	ADAPTER	1
395	0581 0000 67	STRAIGHT PIPE COUPLING	1
396	0070 6002 10	PLASTIC TUBE	AR
397	0581 1200 30	ELBOW PIPE COUPLING	1
400	1503 2566 02	TEE	1
410	0653 1124 00	FLAT GASKET	1
420	1079 5840 35	NIPPLE	1
425	0575 0403 55	HOSE ASSEMBLLY	1
430	1079 5840 02	HEXAGON NIPPLE	1
435	0653 1124 00	FLAT GASKET	1
460	1604 2739 00	NIPPLE	1
470	3176 2446 00	BUSHING	2
475	0653 1100 00	FLAT GASKET	2

REF	PART NUMBER	DESIGNATION	QTY

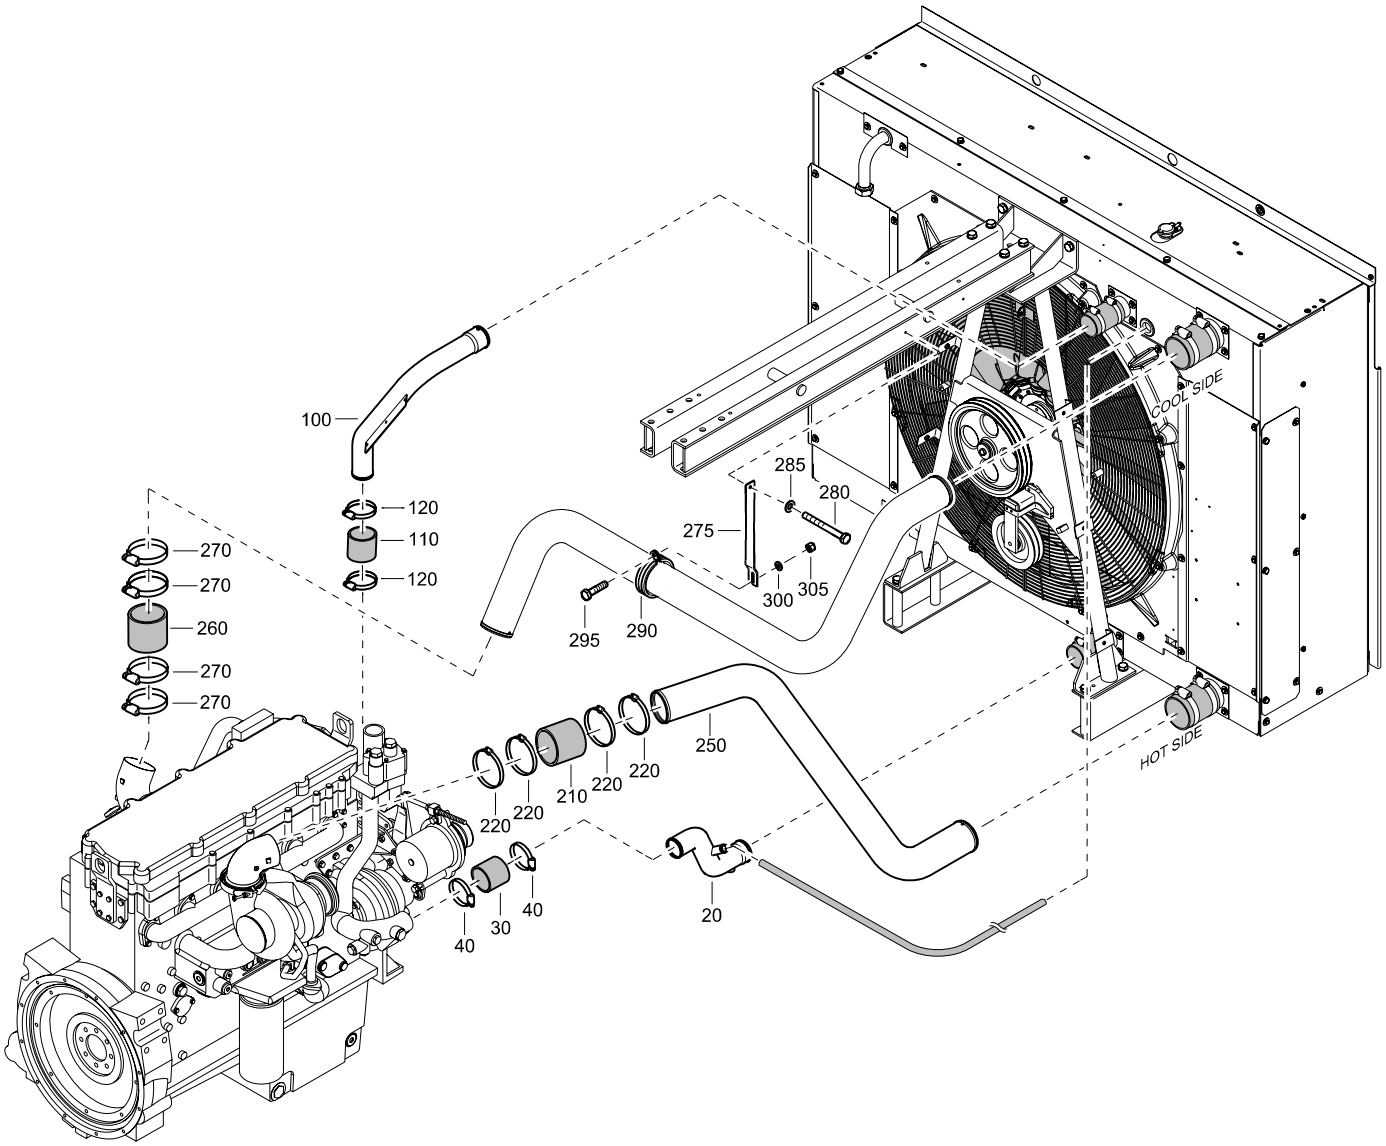


REF	PART NUMBER	DESIGNATION	QTY
10	1611 8754 67	PIPE SET ENGINE COOLING C13	1
20	1604 7069 00	PIPE	1
30	1604 5868 00	HOSE	1
40	0347 6100 21	HOSE CLAMP	2
100	1604 7068 00	PIPE	1
110	1604 5868 00	HOSE	1
120	0347 6100 21	HOSE CLAMP	2
210	1604 2786 02	HOSE	2
220	0347 6100 23	HOSE CLAMP	4
250	1604 7718 01	PIPE	1
260	1604 2785 00	HOSE	2
270	0347 6100 23	HOSE CLAMP	4
275	1604 7229 02	SUPPORT	1
280	0147 1326 03	HEX. HEAD SCREW	1
285	0301 2335 00	PLAIN WASHER	1
290	0346 1000 25	PIPE CLAMP	1
295	0147 1326 03	HEX. HEAD SCREW	1
300	0301 2321 00	PLAIN WASHER	1
305	0266 2108 00	HEXAGON NUT	1

REF	PART NUMBER	DESIGNATION	QTY

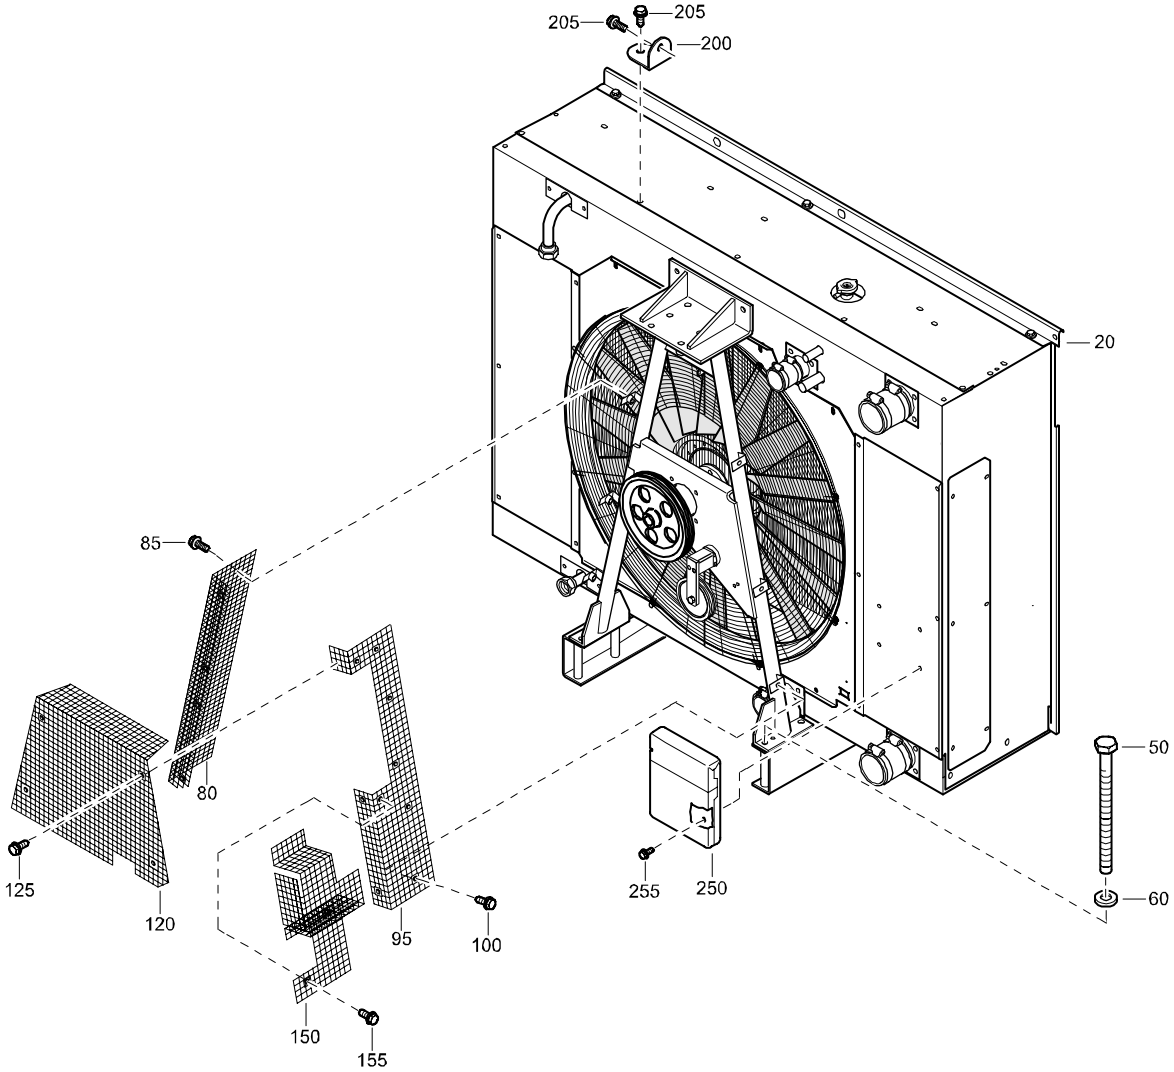


REF	PART NUMBER	DESIGNATION	QTY
20	1092 0610 91	COOL. & FAN. ASSY C13 (For details see page 102)	1
50	0147 1499 03	HEX. HEAD SCREW	6
60	0301 2378 00	PLAIN WASHER	6
80	1604 9925 00	GUARD	1
85	1615 5664 00	HEX. HEAD SCREW	3
95	1604 4244 02	BELT GUARD	1
100	1615 5664 00	HEX. HEAD SCREW	3
120	1604 2645 03	BELT GUARD	1
125	1615 5664 00	HEX. HEAD SCREW	4
150	1604 4243 03	GRATING	1
155	1615 5664 00	HEX. HEAD SCREW	3
200	2252 2333 00	BRACKET	2
205	1615 5664 00	HEX. HEAD SCREW	4
250	1604 2206 00	HOLDER (DOCUMENT)	1
255	1619 5898 01	HEX. HEAD SCREW	4

REF	PART NUMBER	DESIGNATION	QTY

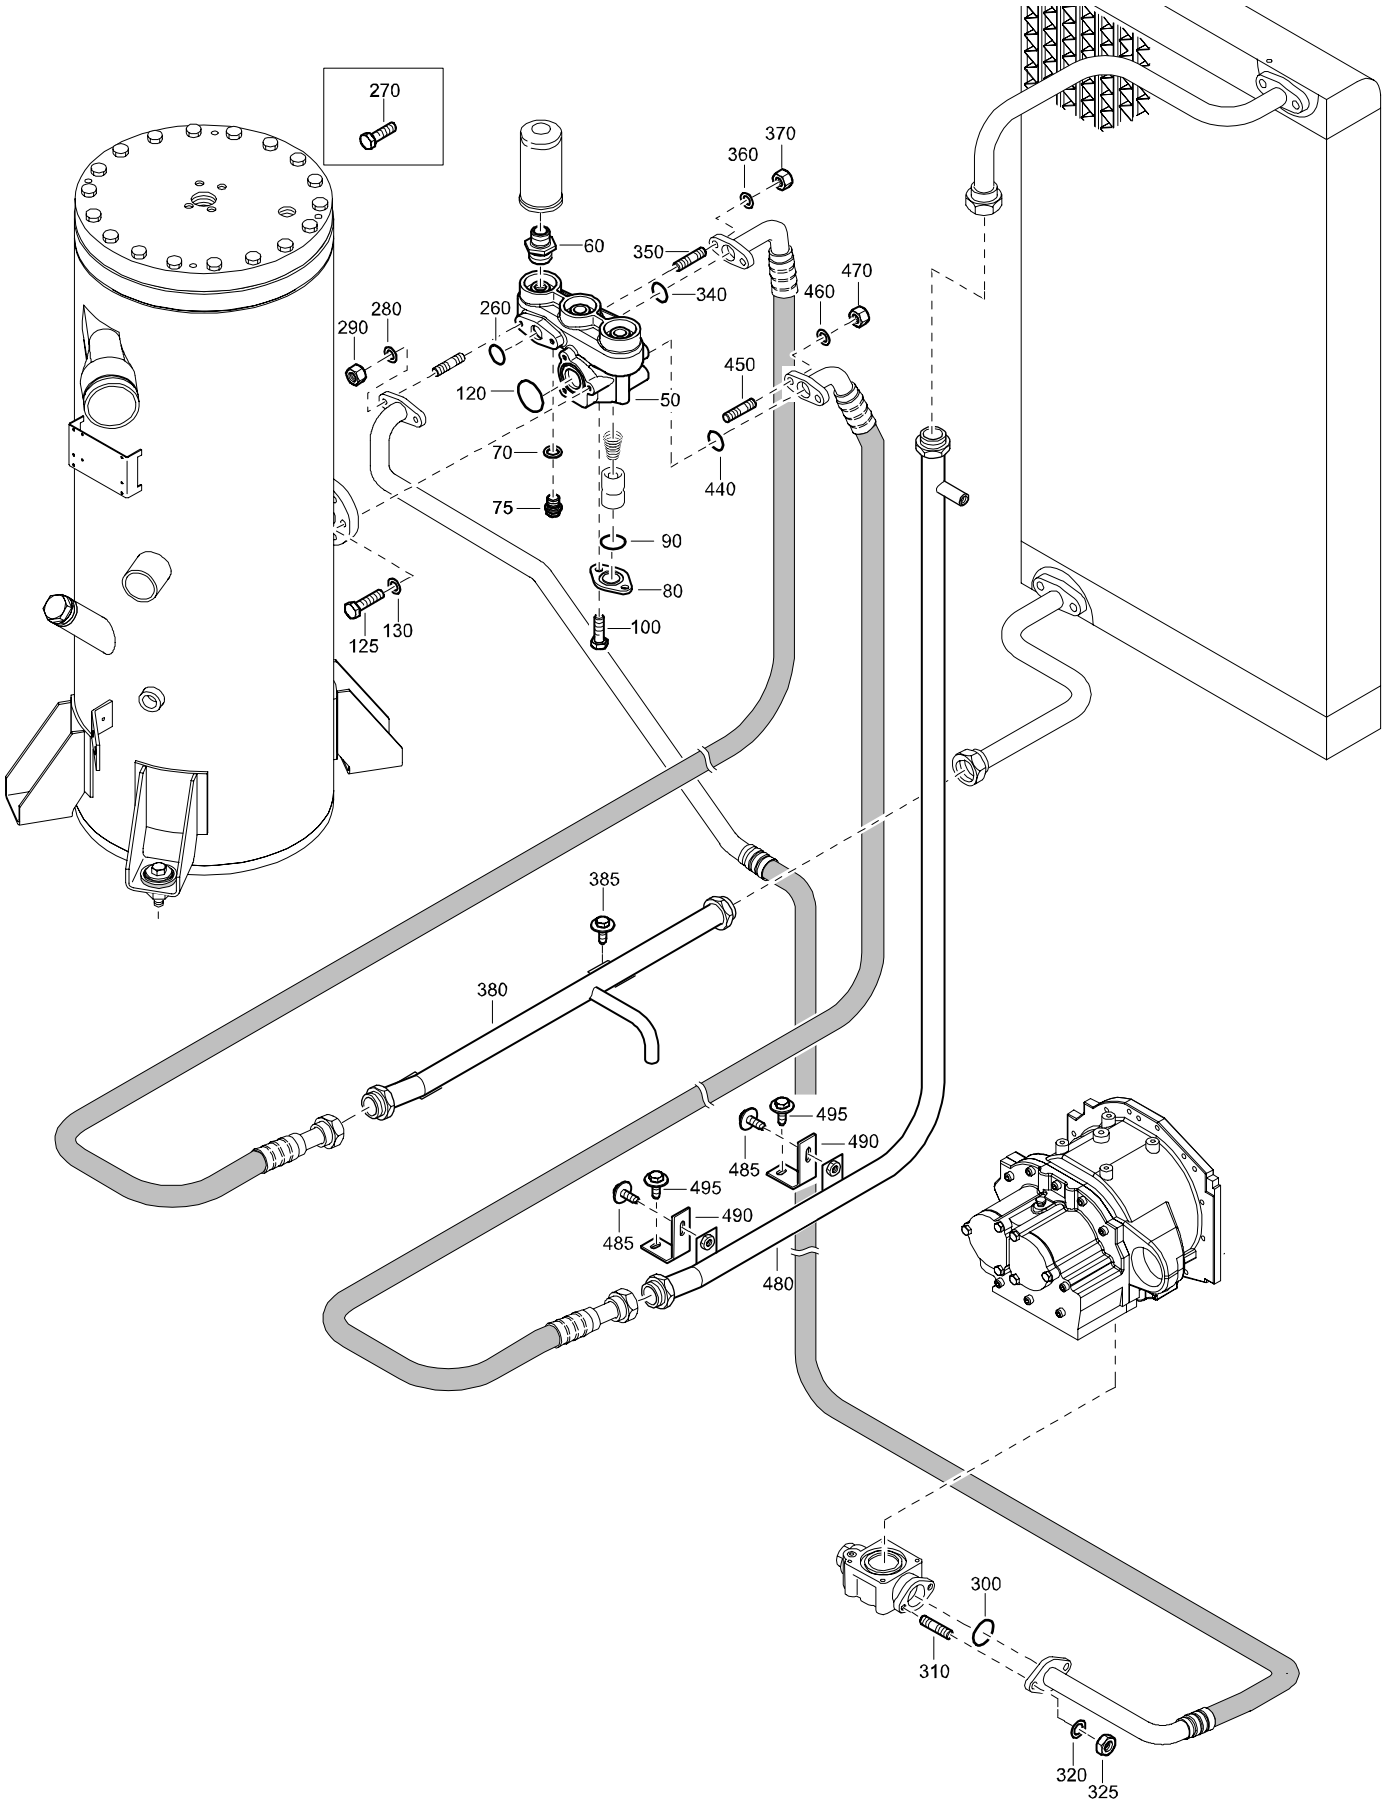

270
370
360
60
350
340
470
460
280
290
260
450
120
50
70
440
75
90
80
100
125
130
385
380
495
490
485
495
490
485
480
300
310
320
325

REF	PART NUMBER	DESIGNATION	QTY
50	1615 6398 00	HOUSING	1
60	2254 7257 00	NIPPLE	3
70	0653 1062 00	FLAT GASKET	2
75	0686 3716 01	HEXAGON PLUG	2
80	1615 6399 00	FLANGE	1
90	0663 7134 00	O-RING	1
100	0147 1363 03	HEX. HEAD SCREW	2
120	0663 9868 00	O-RING	1
125	0147 1364 03	HEX. HEAD SCREW	3
130	0333 3232 00	LOCK WASHER	3
260	0663 3131 00	O-RING	1
270	0147 1363 03	HEX. HEAD SCREW	2
280	0333 3232 00	LOCK WASHER	2
290	0266 2111 00	HEXAGON NUT	2
300	0663 7135 00	O-RING	1
310	0246 1283 04	STUD	2
320	0333 3237 00	LOCK WASHER	2
325	0266 2112 00	HEXAGON NUT	2
340	0663 3131 00	O-RING	1
350	0246 1956 42	STUD	2
360	0333 3232 00	LOCK WASHER	2
370	0266 2111 00	HEXAGON NUT	2
380	1604 2584 01	PIPE	1
385	1615 5664 00	HEX. HEAD SCREW	2
440	0663 3131 00	O-RING	1
450	0246 1956 42	STUD	2
460	0333 3232 00	LOCK WASHER	2
470	0266 2111 00	HEXAGON NUT	2
480	1604 2585 01	PIPE	1
485	1615 5664 00	HEX. HEAD SCREW	2
490	1604 3638 00	SUPPORT	2
495	1615 5664 00	HEX. HEAD SCREW	2

REF	PART NUMBER	DESIGNATION	QTY

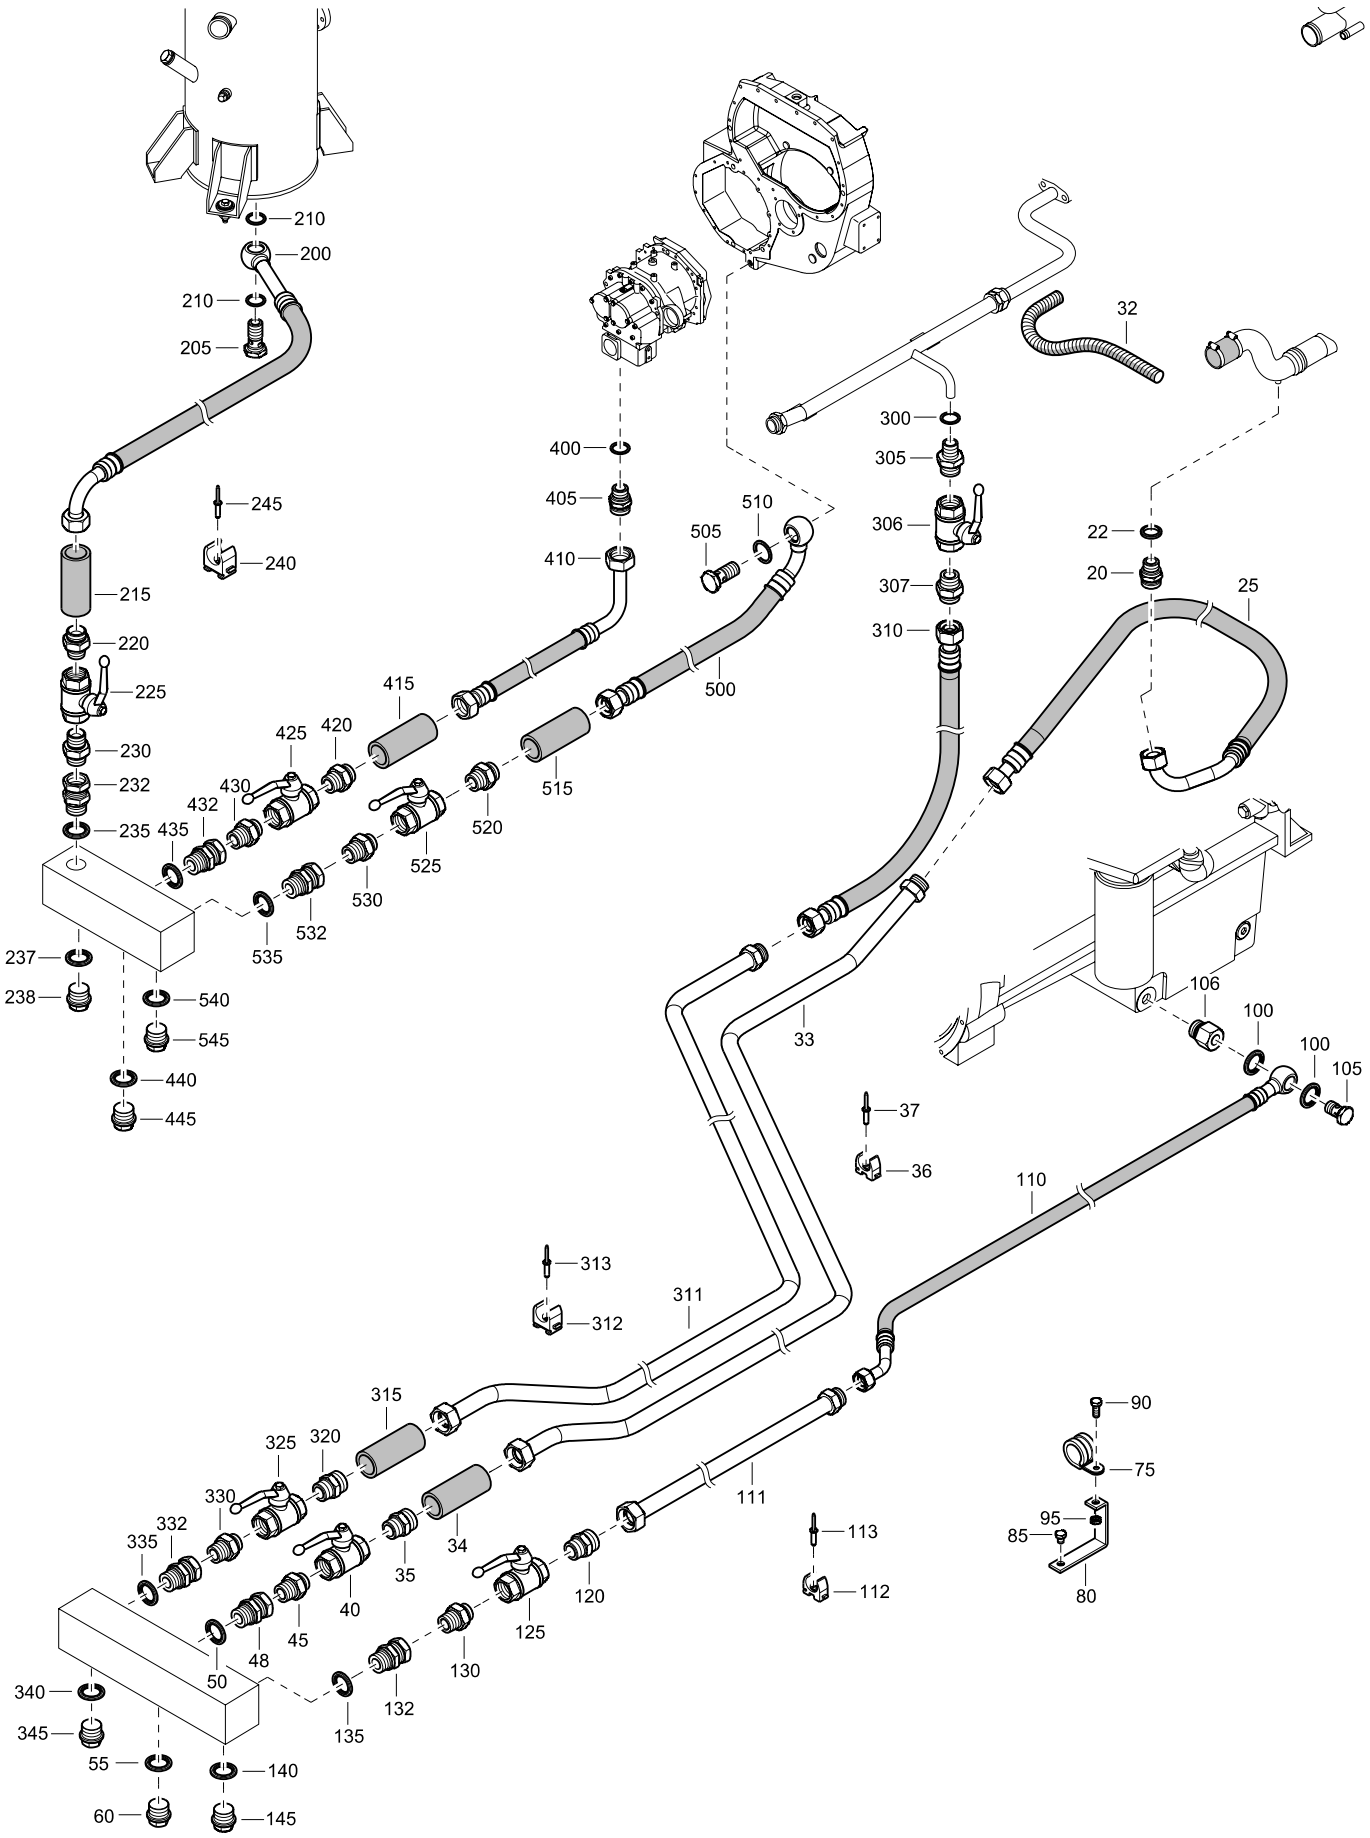
210
200
210
205
245
240
215
220
225
230
232
235
237
238
540
545
440
445
400
405
410
505
510
500
415
425
420
430
432
435
515
520
525
530
532
535
300
305
306
307
310
32
22
20
25
33
106
100
100
105
37
36
110
313
312
311
315
325
320
330
332
335
34
35
40
45
48
50
120
125
130
132
135
111
113
112
90
75
95
85
80
340
345
55
60
140
145

REF	PART NUMBER	DESIGNATION	QTY
20	1079 5840 15	NIPPLE	1
22	0661 1033 00	SEALING WASHER	1
25	1604 8369 00	HOSE	1
32	0070 4022 60	CONDUIT	0,9
33	1604 8278 00	PIPE	1
34	1088 1501 11	SHRINKING HOSE	AR
35	0571 0035 53	NIPPLE	1
36	1088 0832 07	CLAMP	2
37	0129 3110 00	BLIND RIVET	2
40	1619 6153 05	BALL VALVE	1
45	0571 0035 52	HEXAGON NIPPLE	1
48	1604 3383 00	HEXAGON NIPPLE	1
50	0661 1038 00	SEALING WASHER	1
55	0661 1038 00	SEALING WASHER	1
60	0686 3716 35	HEXAGON PLUG	1
75	0346 1002 10	PIPE CLAMP	1
80	1604 4330 00	BRACKET	1
85	0147 1319 03	HEX. HEAD SCREW	1
90	0147 1322 03	HEX. HEAD SCREW	1
95	0261 1110 00	HEXAGON NUT	1
100	0661 1038 00	SEALING WASHER	2
105	0627 4200 07	PRESSURE SCREW	1
106	1615 9099 02	NIPPLE	1
110	1604 8367 00	HOSE	1
111	1604 8276 00	PIPE	1
112	1088 0832 07	CLAMP	1
113	0129 3110 00	BLIND RIVET	1
120	0571 0035 53	NIPPLE	1
125	1619 6153 05	BALL VALVE	1
130	0571 0035 52	HEXAGON NIPPLE	1
132	1604 3383 00	HEXAGON NIPPLE	1
135	0661 1038 00	SEALING WASHER	1
140	0661 1038 00	SEALING WASHER	1
145	0686 3716 35	HEXAGON PLUG	1
200	1604 9471 00	HOSE	1
205	0627 5100 05	PRESSURE SCREW	1
210	0653 1124 00	FLAT GASKET	2
215	1088 1501 10	SHRINKING HOSE	AR
220	0571 0035 36	HEXAGON NIPPLE	1
225	1092 0376 00	BALL VALVE	1
230	0571 0035 52	HEXAGON NIPPLE	1
232	1604 3383 00	HEXAGON NIPPLE	1
235	0661 1038 00	SEALING WASHER	1
237	0661 1038 00	SEALING WASHER	1
238	0686 3716 35	HEXAGON PLUG	1
240	1088 0832 04	CABLE CLAMP	2
245	0129 3110 00	BLIND RIVET	3
300	0653 1124 00	FLAT GASKET	1
305	0603 4104 03	HEXAGON NIPPLE	1
306	0582 0010 38	BALL VALVE	1
307	1079 5840 15	HEXAGON NIPPLE	1
310	1604 8368 00	HOSE	1
311	1604 8277 00	PIPE	1
312	1088 0832 07	CLAMP	1
313	0129 3110 00	BLIND RIVET	1
315	1088 1501 10	SHRINKING HOSE	AR
320	0571 0035 53	NIPPLE	1
325	1092 0376 00	BALL VALVE	1
330	0571 0035 52	HEXAGON NIPPLE	1
332	1604 3383 00	HEXAGON NIPPLE	1
335	0661 1038 00	SEALING WASHER	1
340	0661 1038 00	SEALING WASHER	1
345	0686 3716 35	HEXAGON PLUG	1
400	0653 1124 00	FLAT GASKET	1
405	1079 5840 15	NIPPLE	1
410	1604 3583 02	HOSE ASSEMBLY	1
415	1088 1501 10	SHRINKING HOSE	AR
420	0571 0035 36	HEXAGON NIPPLE	1
425	1092 0376 00	BALL VALVE	1
430	0571 0035 52	HEXAGON NIPPLE	1
432	1604 3383 00	HEXAGON NIPPLE	1
435	0661 1038 00	SEALING WASHER	1
440	0661 1038 00	SEALING WASHER	1
445	0686 3716 35	HEXAGON PLUG	1
500	1604 9472 01	HOSE	1
505	0627 5100 05	PRESSURE SCREW	1
510	0653 1124 00	FLAT GASKET	1
515	1088 1501 10	SHRINKING HOSE	AR
520	0571 0035 36	HEXAGON NIPPLE	1
525	1619 6153 05	BALL VALVE	1
530	0571 0035 52	HEXAGON NIPPLE	1
532	1604 3383 00	HEXAGON NIPPLE	1
535	0661 1038 00	SEALING WASHER	1
540	0661 1038 00	SEALING WASHER	1
545	0686 3716 35	HEXAGON PLUG	1

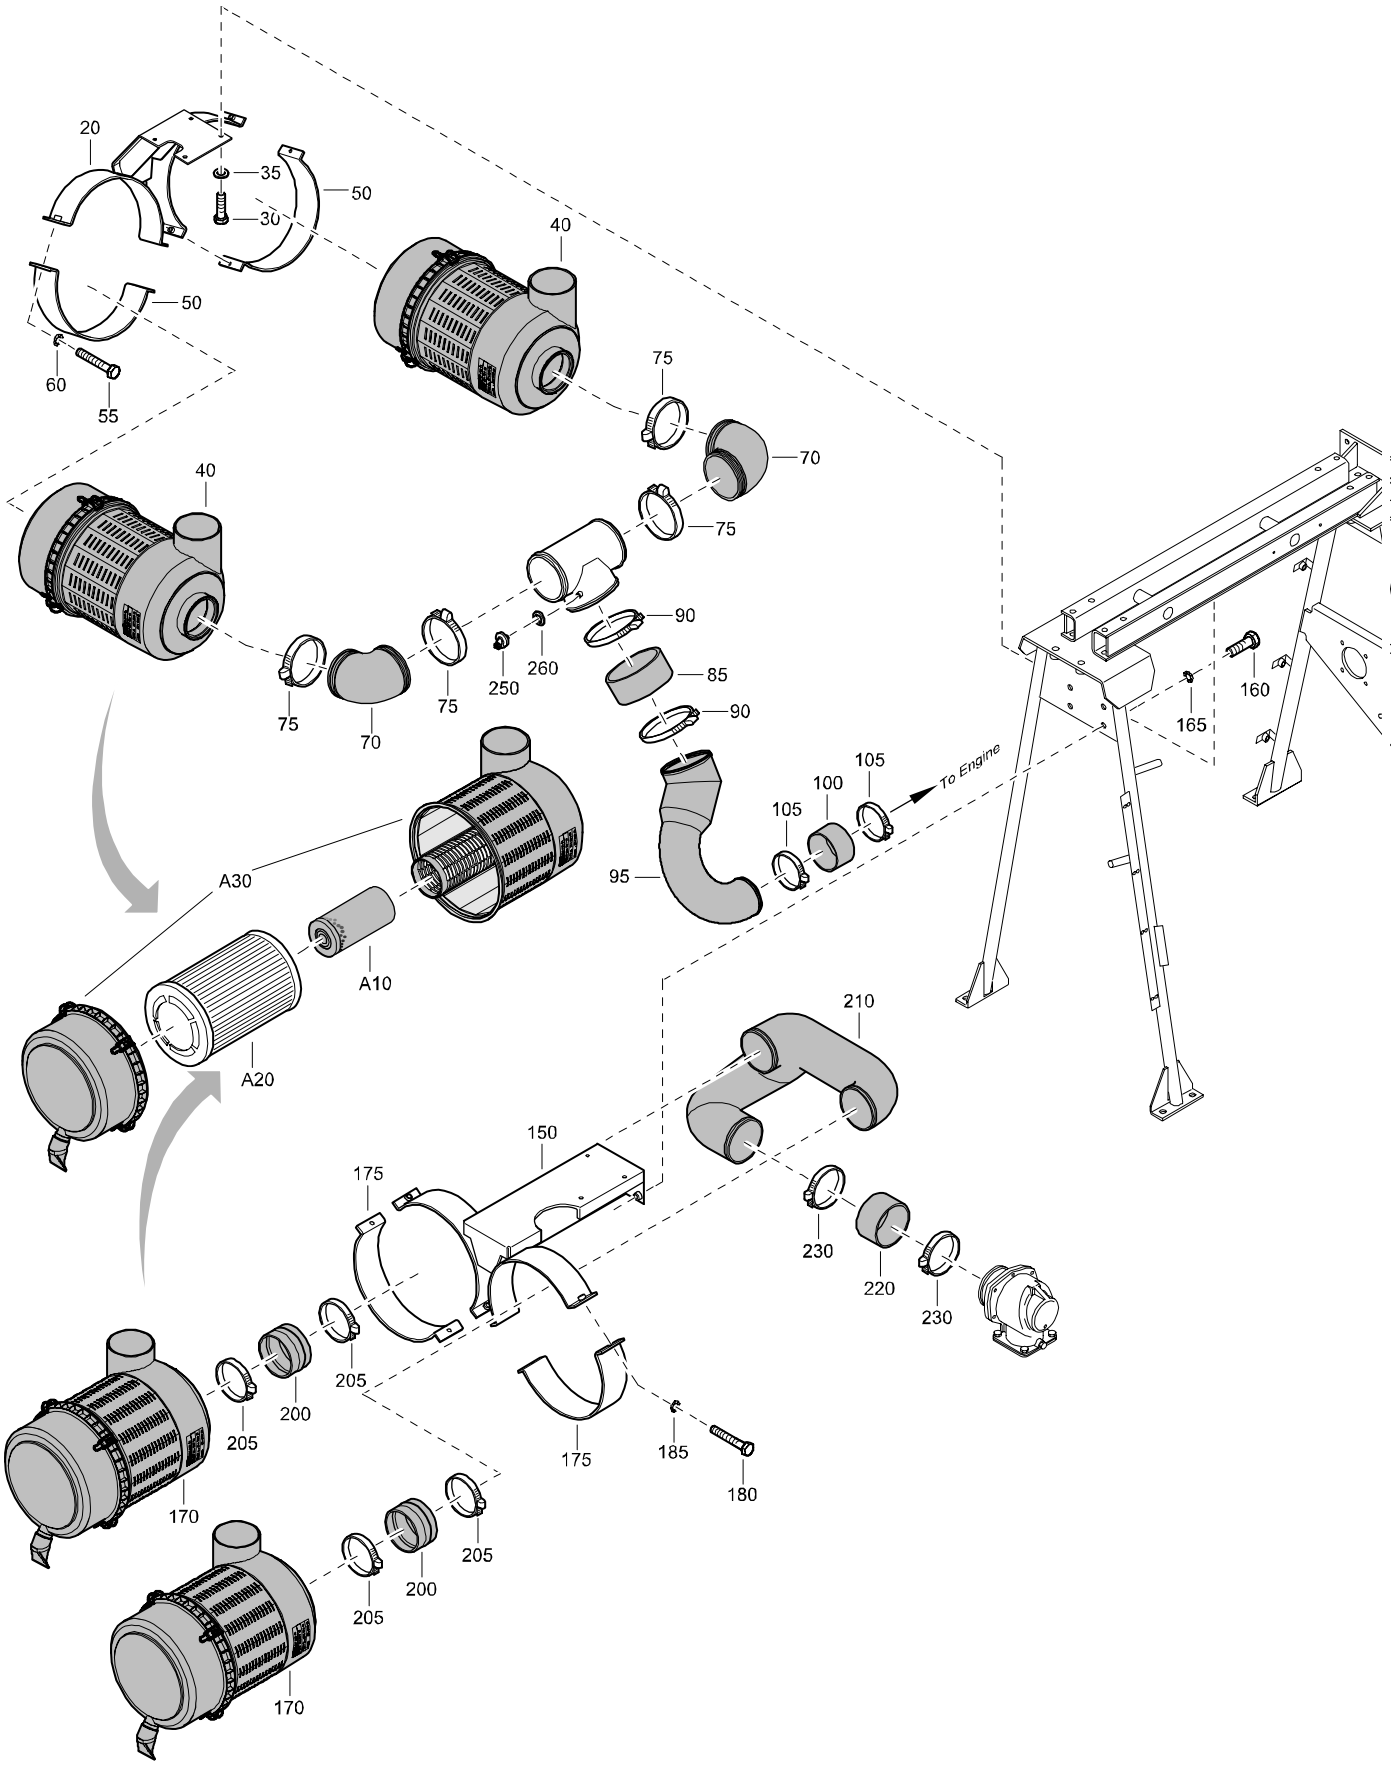

20
35
50
30
40
50
60
55
75
70
40
75
75
70
75
90
250
260
85
90
105
100
105
To Engine
95
160
165
A30
A10
A20
210
150
175
230
220
230
205
200
205
175
185
180
170
205
200
205
170

REF	PART NUMBER	DESIGNATION	QTY
20	1604 2512 01	BRACKET	1
30	0147 1326 03	HEX. HEAD SCREW	4
35	0301 2335 00	PLAIN WASHER	4
40	1604 0120 01	AIR FILTER	2
•A10	2914 5017 00	AIR FILTER ELEMENT	1
•A20	2914 5018 00	AIR FILTER SAFETY CARTRIDGE	1
•A30	2914 8662 00	COVER AIR FILTER	1
50	1604 0128 00	CLAMP (AIRFILTER)	2
55	0147 1330 12	HEX. HEAD SCREW	4
60	0333 3227 00	LOCK WASHER	4
70	1604 2356 00	HUMP HOSE	2
75	0347 6121 00	HOSE CLAMP	4
85	1615 5409 00	HOSE	1
90	0347 6122 00	HOSE CLAMP	2
95	1604 7071 00	PIPE	1
100	1604 4789 00	HOSE	1
105	0347 6100 15	HOSE CLAMP	2
150	1092 0594 00	SUPPORT	1
160	0147 1363 03	HEX. HEAD SCREW	4
165	0333 3232 00	LOCK WASHER	4
170	1604 0120 01	AIR FILTER	2
•A10	2914 5017 00	AIR FILTER ELEMENT	1
•A20	2914 5018 00	AIR FILTER SAFETY CARTRIDGE	1
•A30	2914 8662 00	COVER AIR FILTER	1
175	1604 0128 00	CLAMP (AIRFILTER)	2
180	0147 1330 12	HEX. HEAD SCREW	4
185	0333 3227 00	LOCK WASHER	4
200	2250 5266 00	HUMP HOSE	2
205	0347 6121 00	HOSE CLAMP	4
210	1604 2514 02	AIR DUCT	1
220	1615 5409 00	HOSE	1
230	0347 6122 00	HOSE CLAMP	2
250	1089 0607 08	WARNING SWITCH	1
270	0653 1046 00	FLAT GASKET	1

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

OUTER CANOPY

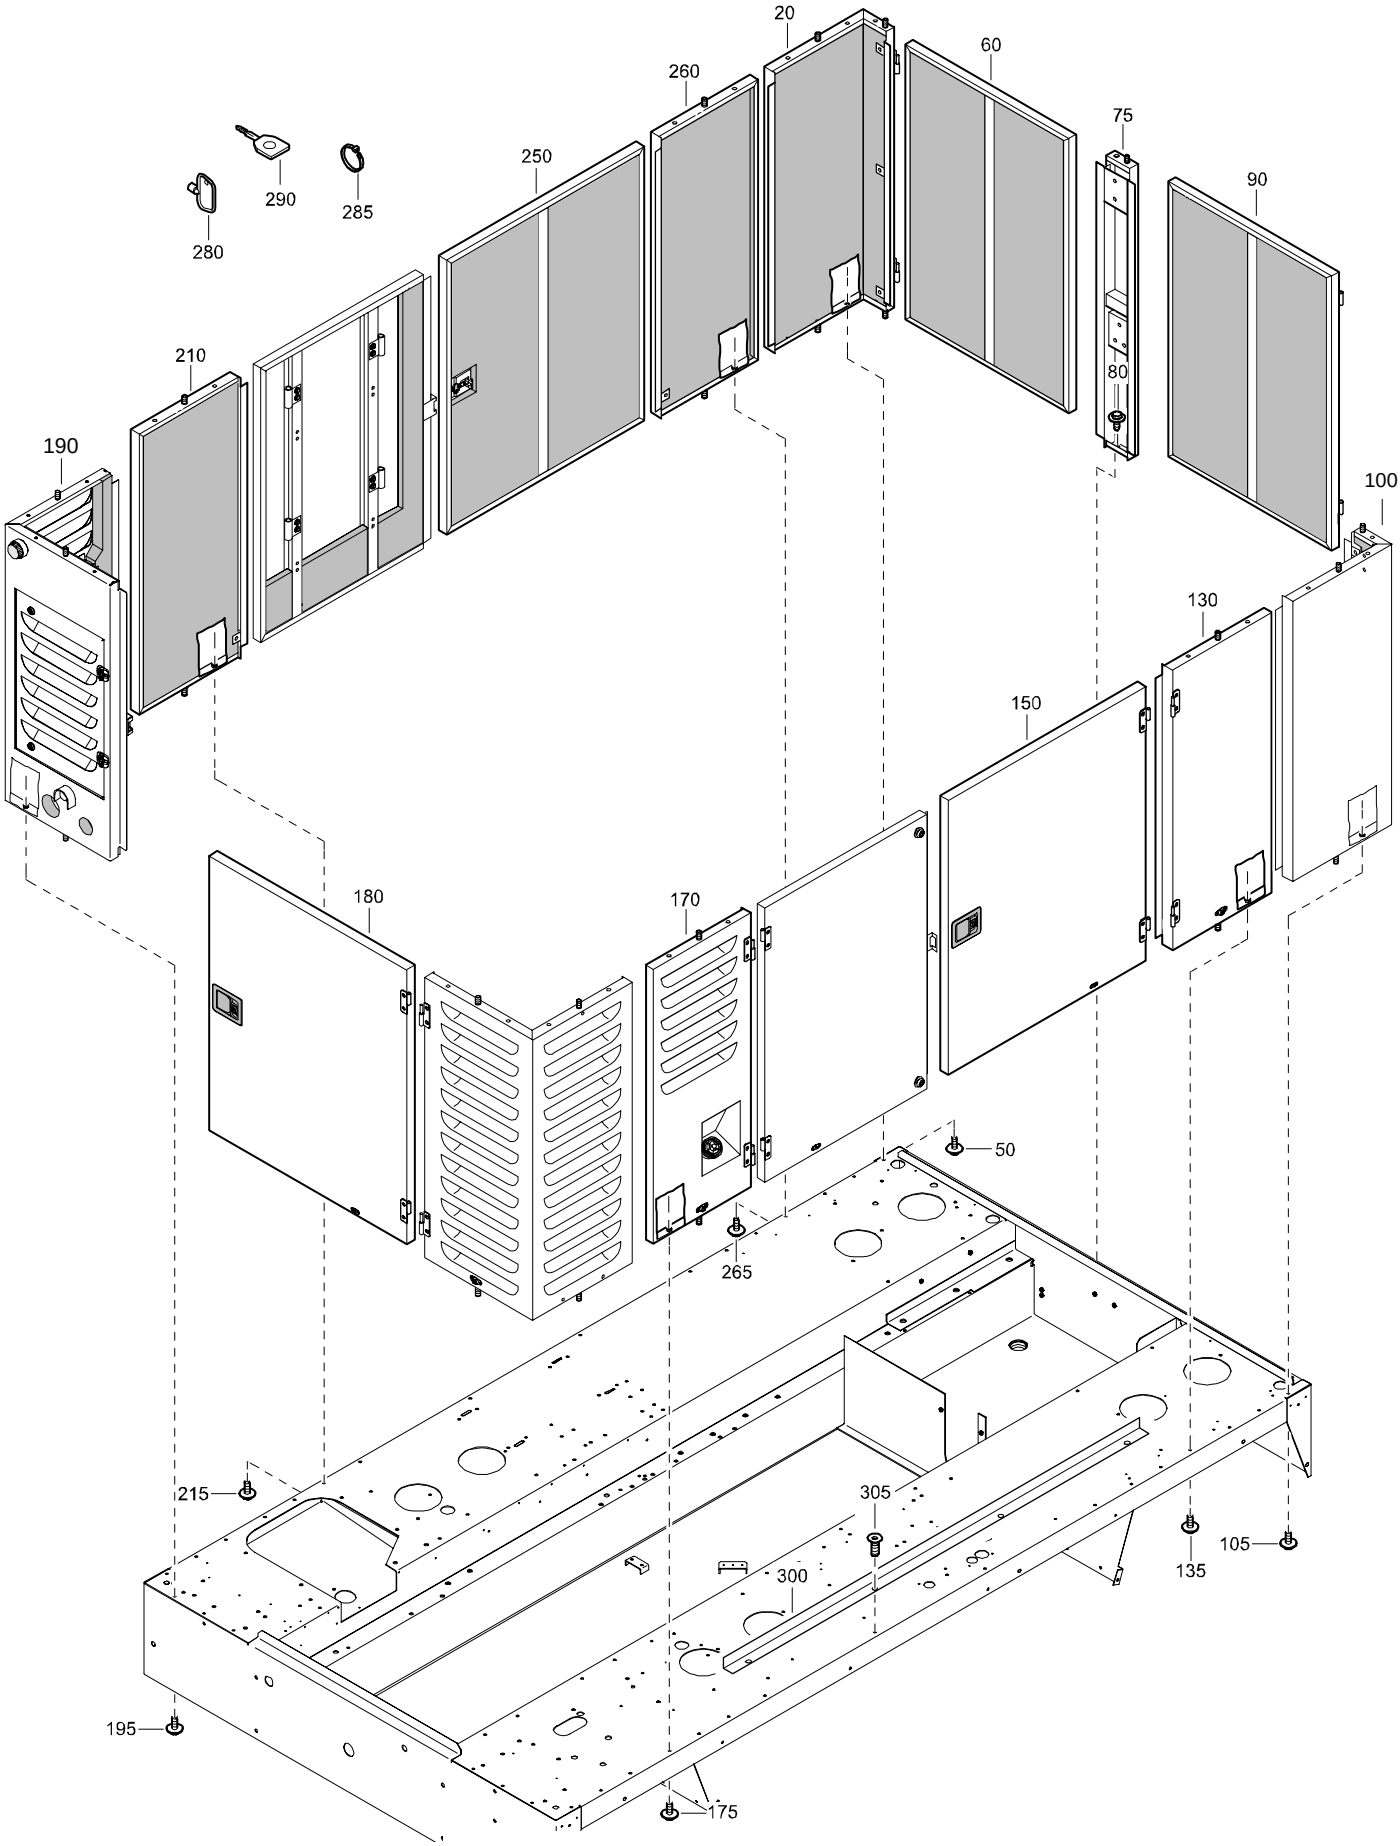

STANDARD


OUTER CANOPY

REF	PART NUMBER	DESIGNATION	QTY
20	1092 0575 80	CORNER ASSY	1
		(For details see page 85)	
50	1615 5664 00	HEX. HEAD SCREW	3
60	1092 0583 26	DOOR ASSY	1
		(For details see page 89)	
75	1604 3716 81	PANEL ASSY	1
		(For details see page 101)	
80	1615 5664 00	HEX. HEAD SCREW	2
90	1092 0583 25	DOOR ASSY	1
		(For details see page 90)	
100	1092 0631 90	CORNER ASSY	1
		(For details see page 129)	
105	1615 5664 00	HEX. HEAD SCREW	3
130	1604 2460 84	PANEL ASSY	1
		(For details see page 84)	
135	1615 5664 00	HEX. HEAD SCREW	2
150	1092 0664 80	DOOR ASSY	1
		(For details see page 81)	
170	1092 0694 80	PANEL ASSY	1
		(For details see page 88)	
175	1615 5664 00	HEX. HEAD SCREW	2
180	1092 0664 80	DOOR ASSY	1
		(For details see page 81)	
190	1092 0650 80	DOOR ASSY	1
		(For details see page 78)	
195	1615 5664 00	HEX. HEAD SCREW	6
210	1604 2460 84	PANEL ASSY	1
		(For details see page 84)	
215	1615 5664 00	HEX. HEAD SCREW	2
250	1092 0664 81	DOOR ASSY	1
		(For details see page 82)	
260	1604 2460 82	PANEL ASSY	1
		(For details see page 83)	
265	1615 5664 00	HEX. HEAD SCREW	2
280	1092 0613 36	KEY	2
285	1088 1301 03	CABLE STRIP	2
290	1092 0613 37	KEY	2
300	1604 3562 00	BRACKET	2
305	0216 1324 03	HEX SOCK. SCREW	8

REF	PART NUMBER	DESIGNATION	QTY


STANDARD

AIR OUTLET

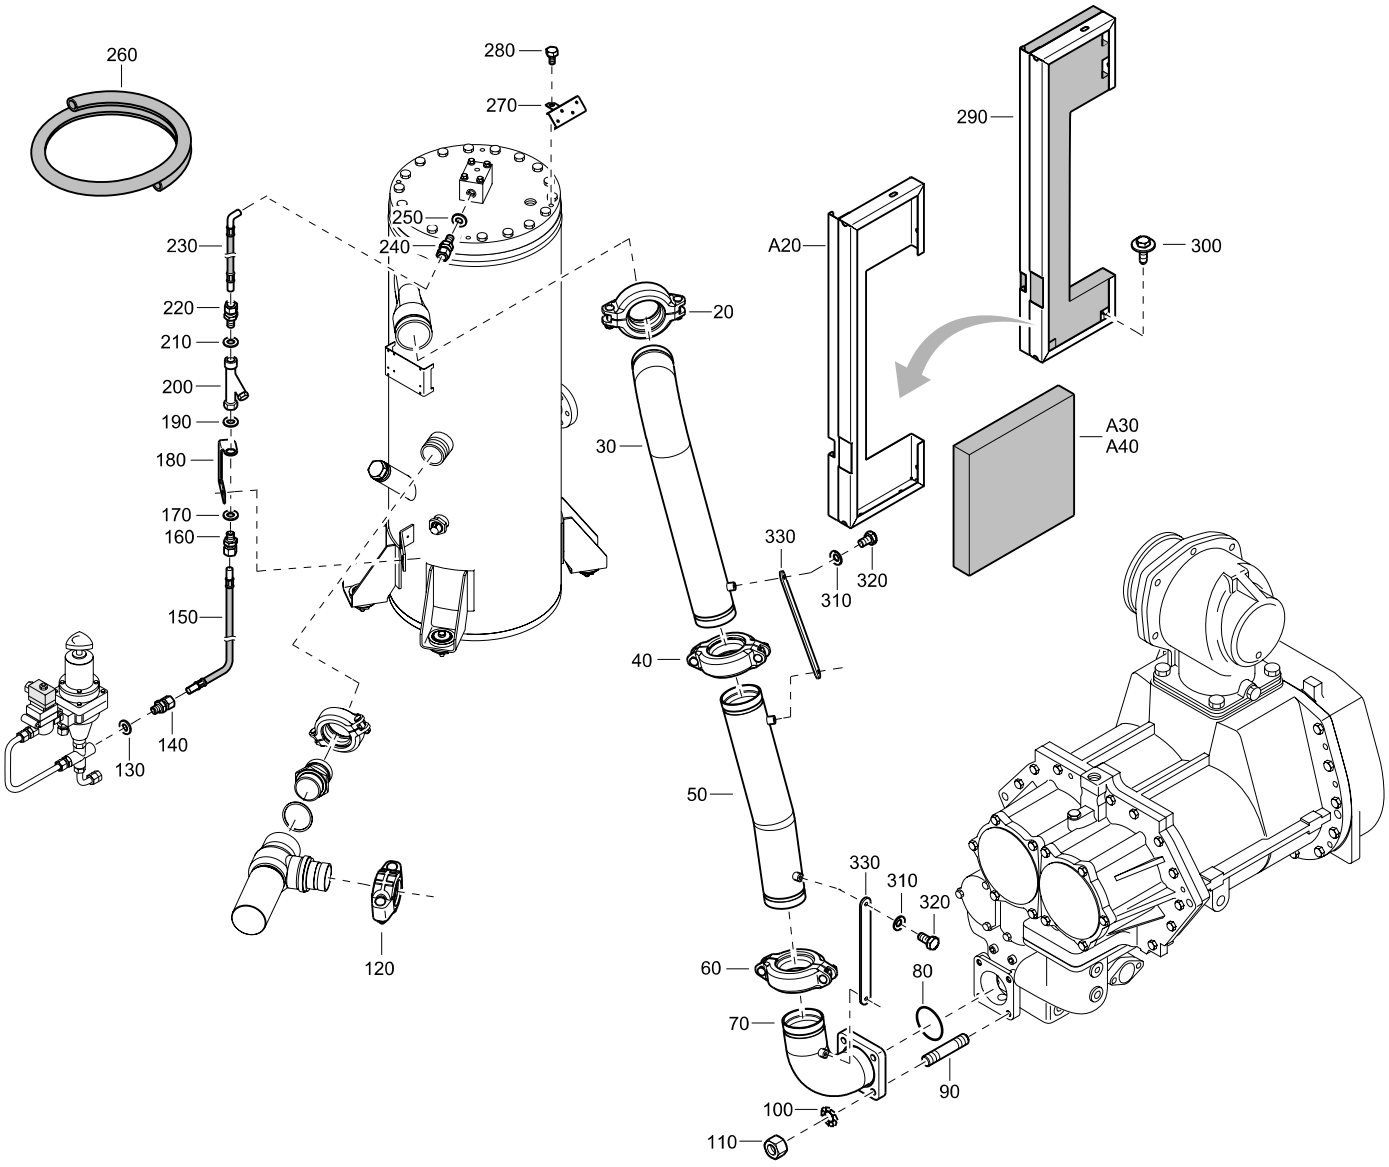


REF	PART NUMBER	DESIGNATION	QTY
20	0634 1000 60	PIPE COUPLING	1
30	1604 9486 01	PIPE	AR
40	0634 1000 60	PIPE COUPLING	1
50	1604 9485 01	PIPE	AR
60	0634 1000 60	PIPE COUPLING	1
70	1604 9484 01	PIPE	AR
80	0663 7144 00	O-RING	1
90	0246 1287 04	STUD	4
100	0333 5200 09	LOCK WASHER	4
110	0266 2112 00	HEXAGON NUT	4
120	0634 1000 59	PIPE COUPLING	1
130	0653 1062 00	FLAT GASKET	1
140	0581 0028 01	STRAIGHT PIPE COUPLING	1
150	0575 0012 04	HOSE ASSEMBLY	1
160	0581 0034 01	STRAIGHT PIPE COUPLING	1
170	0653 1124 00	FLAT GASKET	1
180	1604 6743 00	BRACKET	1
190	0653 1124 00	FLAT GASKET	1
200	0803 5010 10	STRAINER	1
210	0653 1124 00	FLAT GASKET	1

REF	PART NUMBER	DESIGNATION	QTY
220	1092 0394 60	STRAIGHT PIPE COUPLING	1
230	0575 0102 40	HOSE ASSEMBLY	1
240	0581 0028 01	STRAIGHT PIPE COUPLING	1
250	0653 1062 00	FLAT GASKET	1
260	0395 1010 45	INSULATING HOSE H15-A	1
270	1604 3381 00	SUPPORT	1
280	0147 1362 03	HEX. HEAD SCREW	1
290	1092 0612 71	PANEL ASSY	1
•A20	1092 0423 13	PLATE	1
•A30	1092 0423 14	SILENCING FOAM	1
•A40	1092 0423 15	SILENCING FOAM	1
300	1615 5664 00	HEX. HEAD SCREW	5
310	1088 0019 01	CONTACT WASHER	4
320	0147 1320 03	HEX. HEAD SCREW	4
330	1092 0368 04	EARTHING STRAP	2

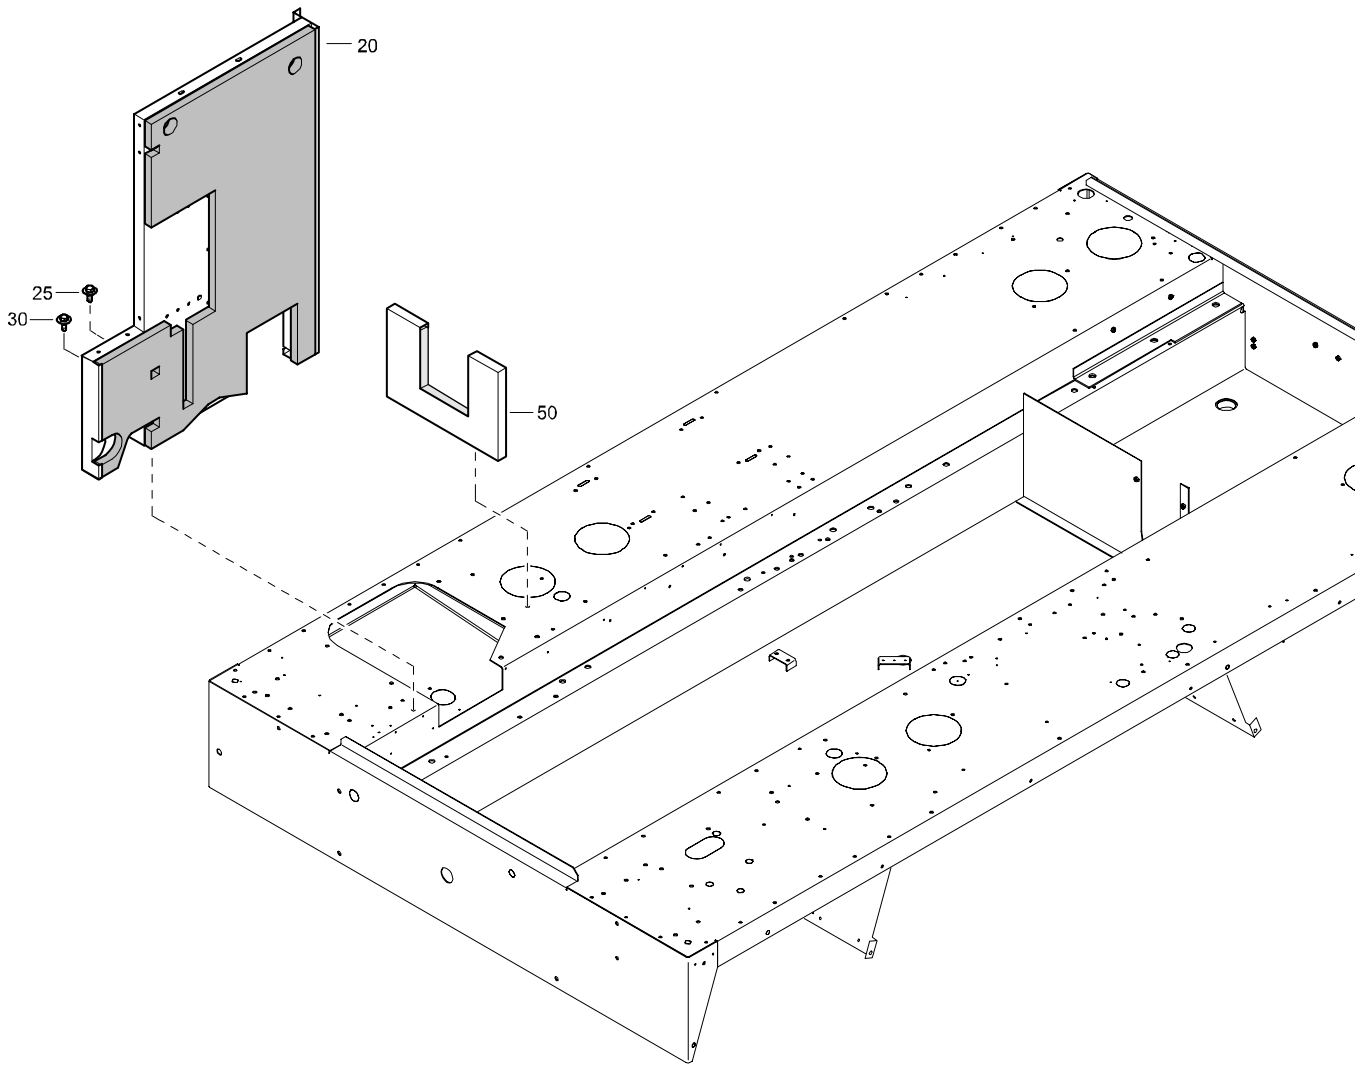

REF	PART NUMBER	DESIGNATION	QTY
20	1604 2472 84	PANEL ASSY (For details see page 87)	1
25	1615 5664 00	HEX. HEAD SCREW	4
30	1615 5664 00	HEX. HEAD SCREW	3
50	1604 2543 83	PANEL ASSY (For details see page 94)	1

REF	PART NUMBER	DESIGNATION	QTY

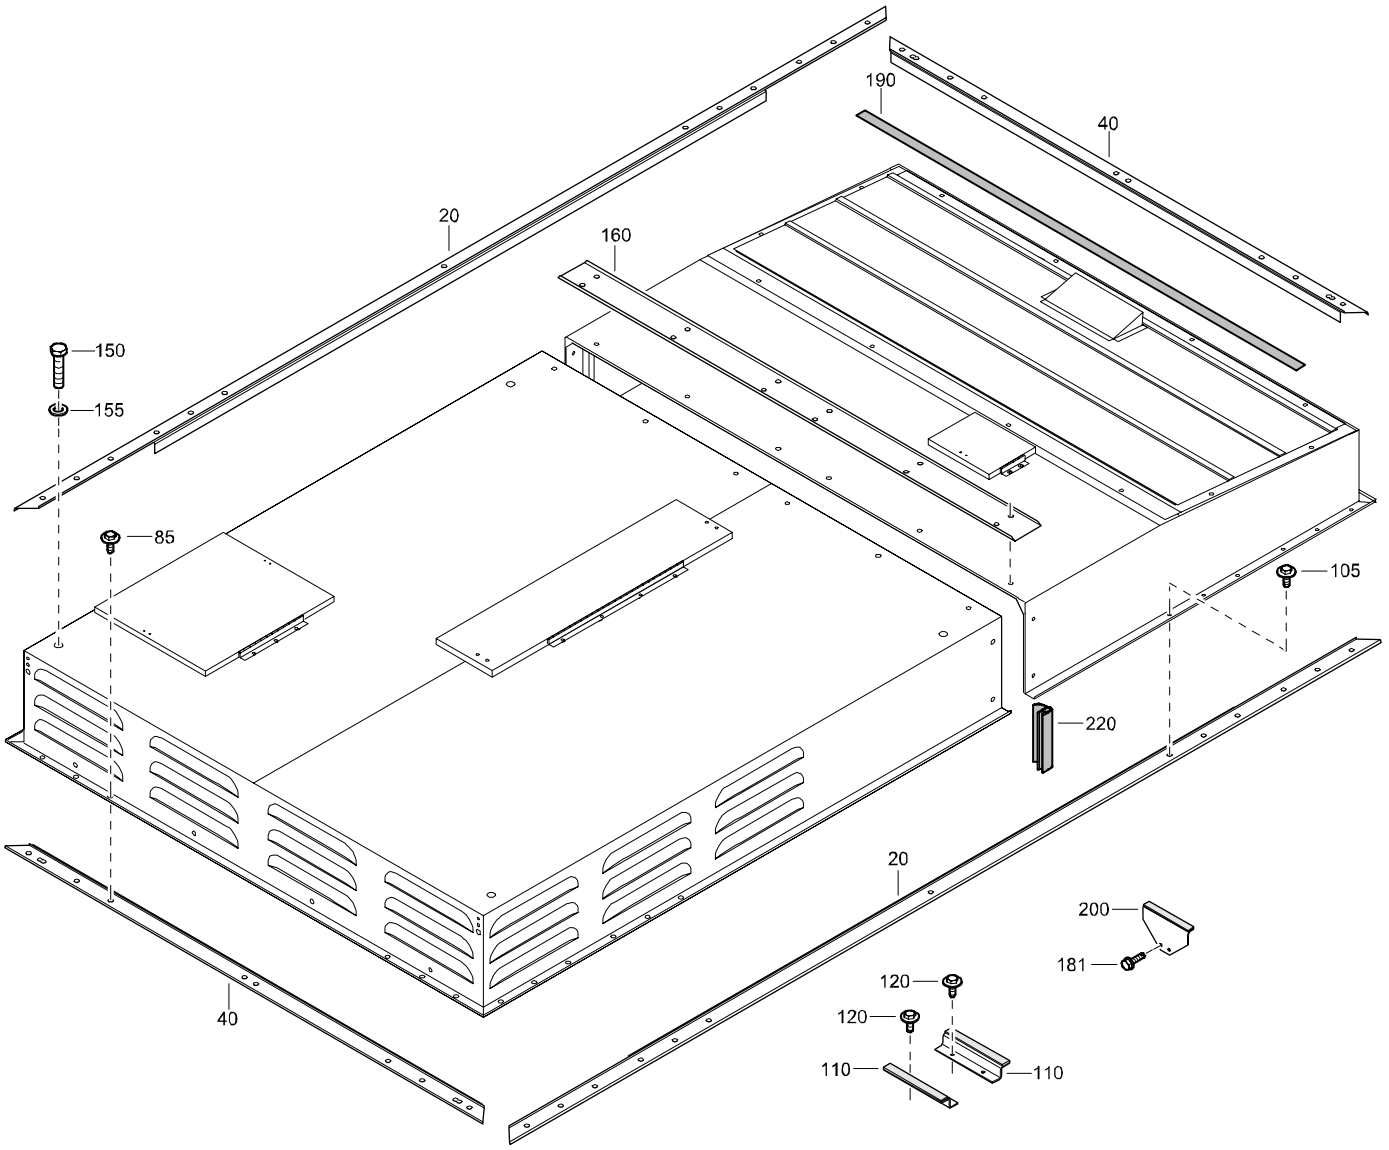



REF	PART NUMBER	DESIGNATION	QTY
20	1604 4626 00	BEAM L&R	2
40	1604 4627 00	BEAM F&R	2
85	1604 3423 00	SCRAPER BOLT	18
105	1604 3423 00	SCRAPER BOLT	18
110	1604 4393 01	SUPPORT	2
120	1604 3423 00	SCRAPER BOLT	4
150	0147 1961 01	HEX. HEAD SCREW	4
155	0301 2358 00	PLAIN WASHER	4
160	1604 3726 80	PLATE ASSY	1
		(For details see page 96)	
181	1619 5337 01	HEX. HEAD SCREW	2
190	1604 1275 00	SEAL	AR
200	1604 3729 00	SUPPORT	1
220	1604 6499 00	SEAL	AR

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

NO OILTRONIX XRV

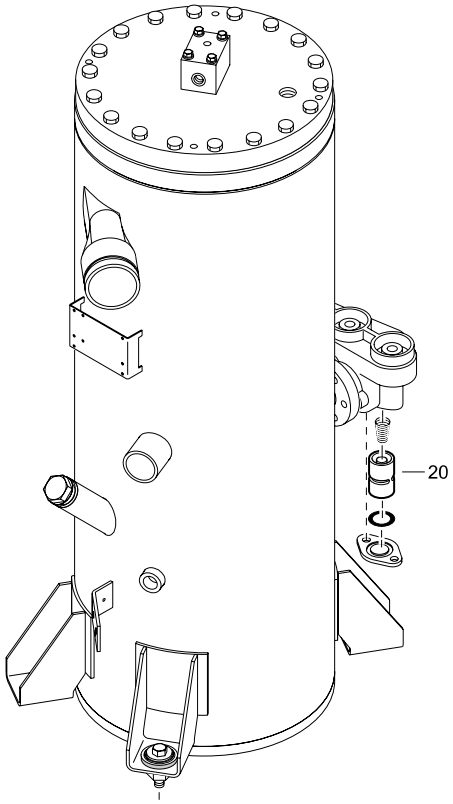

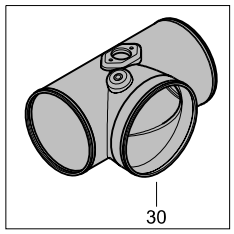


REF	PART NUMBER	DESIGNATION	QTY
20	1615 9720 00	THERMOSTATIC VALVE	1
30	1092 0360 00	AIR DUCT	1

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

CONTROL MODULE

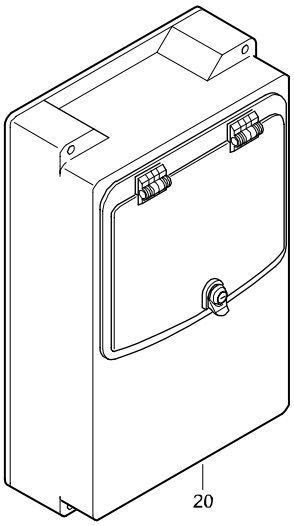


REF	PART NUMBER	DESIGNATION	QTY
20	1900 1003 55	CONTROL UNIT HP GRAPH	1
20	1900 1003 53	CONTROL UNIT HP CHARACTER	1


REF	PART NUMBER	DESIGNATION	QTY

STANDARD


MARKINGS
TWO FUEL TANKS

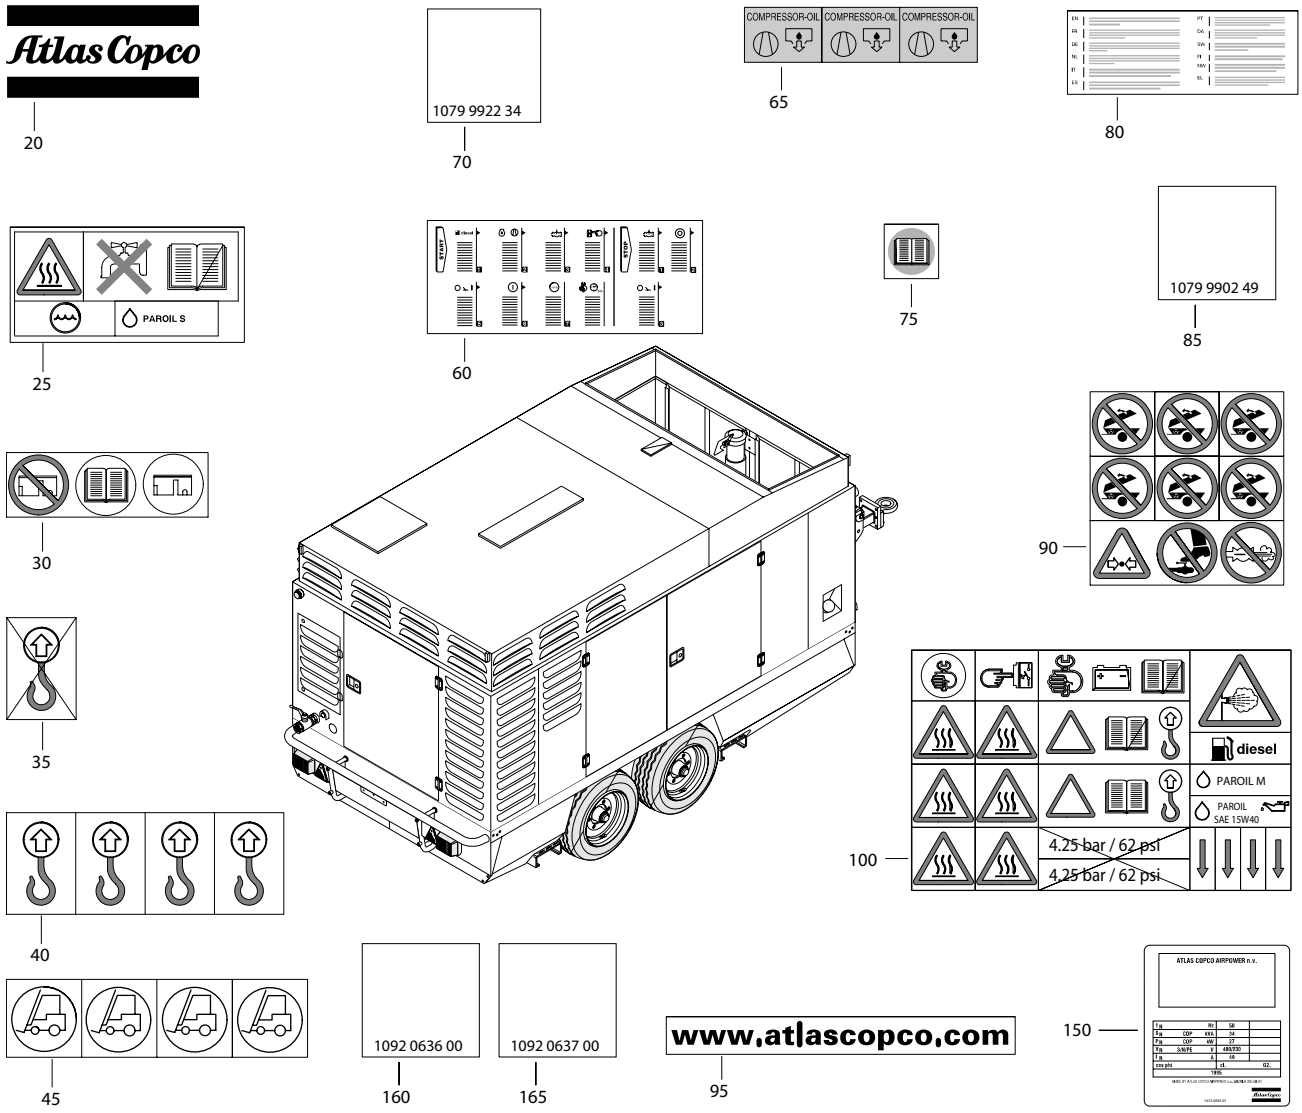



REF	PART NUMBER	DESIGNATION	QTY
20	0690 1150 00	HOUSE MARK	4
25	1079 9903 59	INFORMATION LABEL	1
30	1079 9903 62	INFORMATION LABEL	2
35	1079 9902 38	INFORMATION LABEL	2
40	1079 9902 45	INFORMATION LABEL	1
45	1079 9903 60	INFORMATION LABEL	1
60	1092 0634 00	INFORMATION LABEL	1
65	1079 9922 09	INFORMATION LABEL	1
70	1079 9922 34	INFORMATION LABEL	2
75	1079 9922 07	INFORMATION LABEL	1
80	1092 0628 00	INSTRUCTION LABEL	1
85	1079 9902 49	INFORMATION LABEL	1
90	1079 9903 58	INFORMATION LABEL	1
95	1079 9921 03	INFORMATION LABEL	1
100	1079 9910 02	INFORMATION LABEL	1
150	-	DATA LABEL	2
		(Not available separately)	
160	1092 0636 00	INSTRUCTION LABEL	1
165	1092 0637 00	INSTRUCTION LABEL	1

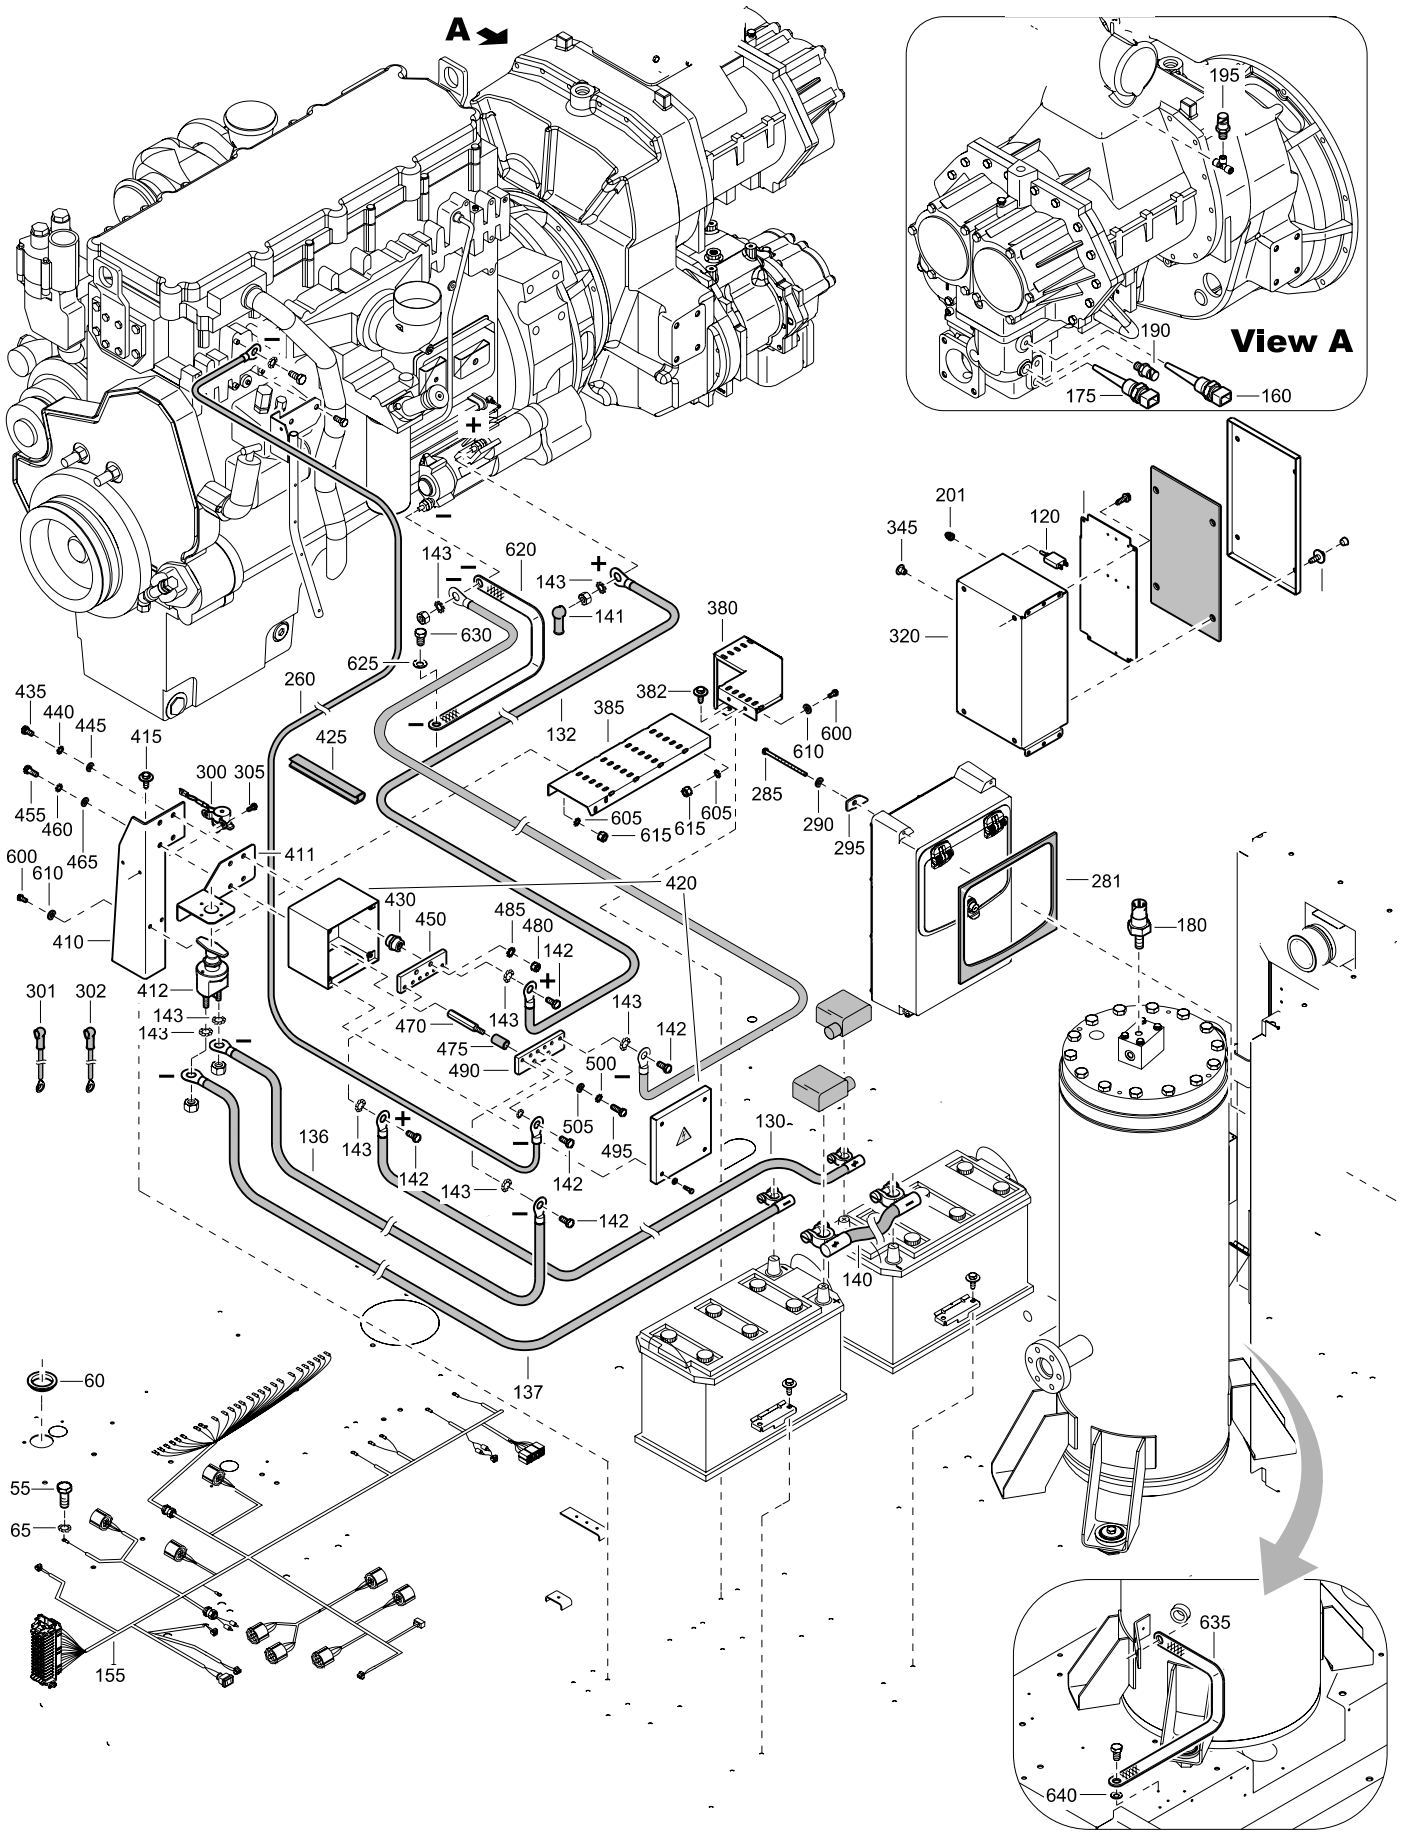

A
View A
195
190
175
160
201
120
345
320
143
620
143
141
630
625
380
382
260
385
132
600
610
285
290
295
605
615
605
615
435
440
445
415
425
455
460
465
300
305
411
600
610
410
420
281
180
430
450
485
480
142
301
302
412
143
143
470
143
143
475
490
500
142
505
495
136
143
142
143
142
142
130
140
137
60
55
65
155
635
640


REF	PART NUMBER	DESIGNATION	QTY
55	0147 1360 03	HEX. HEAD SCREW	1
60	1604 0383 00	SEAL (OIL SEPARATOR)	2
65	1088 0019 02	CONTACT WASHER	2
120	1089 9206 12	CIRCUIT BREAKER	1
130	1604 6016 00	CABLE (ELEC)	1
132	1604 5166 00	BATTERY CABLE	1
136	1604 7846 00	CABLE (ELEC)	1
137	1604 6019 00	CABLE (ELEC)	1
140	1604 8147 00	BATTERY CABLE	1
141	1619 3729 00	PROTECT.CAP	1
142	0147 1321 03	HEX. HEAD SCREW	8
143	0333 3227 00	LOCK WASHER	8
155	1604 3432 05	WIRE HARNESS	1
160	1089 0574 50	TEMP.SENSOR	1
175	1089 0574 50	TEMP.SENSOR	1
180	1089 9579 55	PRESSURE SENSOR	1
190	1089 9579 54	PRESSURE SENSOR	1
195	1089 9579 60	PRESSURE SENSOR	1
201	1089 9206 59	PROTECTION CAP	1
260	1604 3433 01	WIRE	1
281	1604 3679 00	SEAL	1
285	5541 9781 00	HEX. HEAD SCREW	4
290	0301 2321 00	PLAIN WASHER	4
295	1604 4353 00	WASHER	4
300	1604 9671 00	RELAY	1
301	1604 9748 00	CABLE (ELEC)	1
302	1604 9749 00	CABLE (ELEC)	1
305	0147 1244 03	HEX. HEAD SCREW	2
320	1604 2133 01	CUBICLE	1
345	0686 9252 86	PLUG	1
380	1604 5813 00	BATT CABLES CLAMPING S2	1
382	1615 5664 00	HEX. HEAD SCREW	2
385	1604 5822 00	BATT CABLES CLAMPING S2	1
410	1604 4594 02	SUPPORT	1
411	1604 7864 00	SUPPORT	1
412	1089 0584 01	BATTERY SWITCH	1
415	1615 5664 00	HEX. HEAD SCREW	2
420	1604 2124 81	POWER SUPPLY BOX ASSY	1
		(For details see drawing 1604 2124 81)	
425	1503 1056 00	SEAL	AR
430	1089 9385 02	ISOLATOR	2
435	0147 1321 03	HEX. HEAD SCREW	2
440	0333 3227 00	LOCK WASHER	2
445	0301 2335 00	PLAIN WASHER	2
450	1604 2121 01	STRIP	1
455	0147 1323 03	HEX. HEAD SCREW	2
460	0333 3227 00	LOCK WASHER	2
465	0301 2335 00	PLAIN WASHER	2
470	0324 1800 27	DISTANCE PIECE	2
475	0070 4024 14	HOSE	2
480	0266 2110 00	HEXAGON NUT	2
485	1088 0019 01	CONTACT WASHER	2
490	1604 2121 01	STRIP	1
495	0147 1323 03	HEX. HEAD SCREW	2
500	0333 3227 00	LOCK WASHER	2
505	0301 2335 00	PLAIN WASHER	2
600	0147 1244 03	HEX. HEAD SCREW	4
605	0333 3220 00	LOCK WASHER	4
610	0301 2321 00	PLAIN WASHER	4
615	0266 2108 00	HEXAGON NUT	4
620	1092 0368 01	EARTHING STRAP	1
625	1088 0019 03	CONTACT WASHER	1
630	0147 1398 03	HEX. HEAD SCREW	1
635	1092 0368 02	EARTHING STRAP	1
640	1088 0019 02	CONTACT WASHER	1

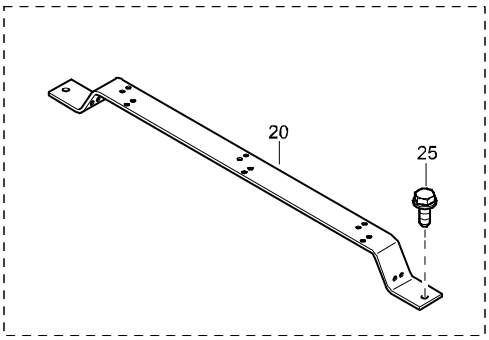

20
25

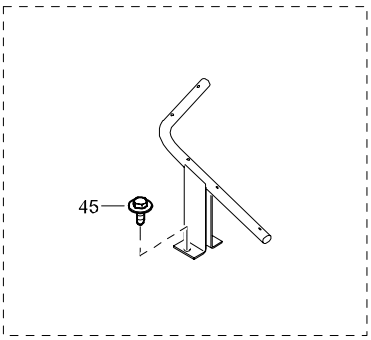

45

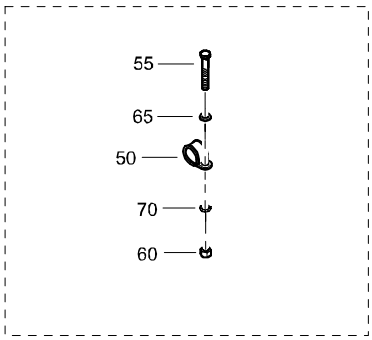

55
65
50
70
60

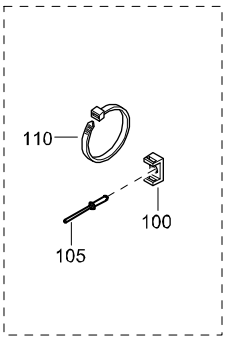

110
100
105

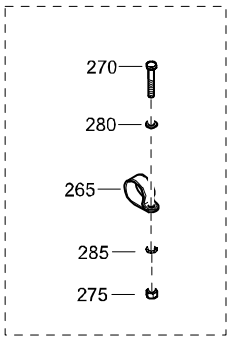

270
280
265
285
275

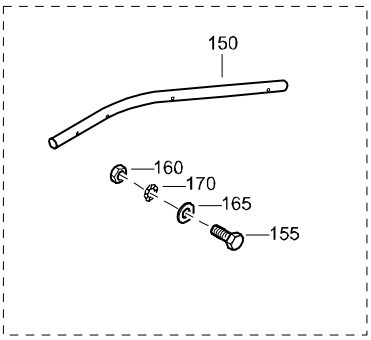

150
160
170
165
155

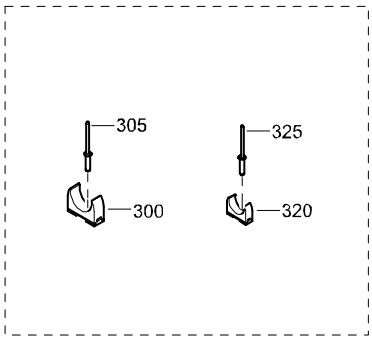

305
325
300
320

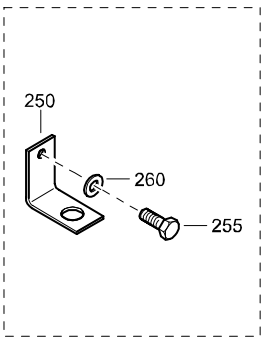

250
260
255

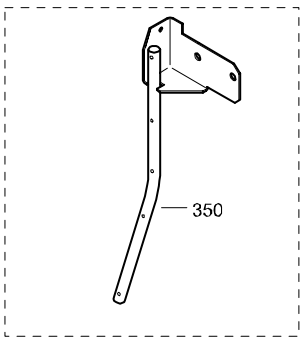

350

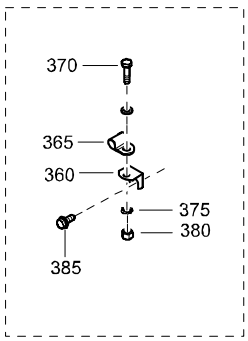
370
365
360
375
380
385

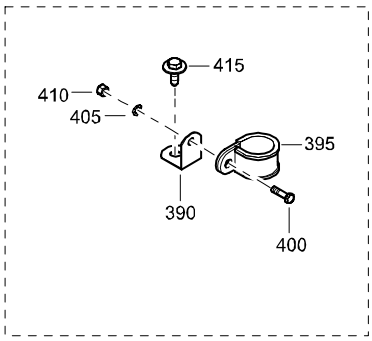
415
410
405
395
390
400

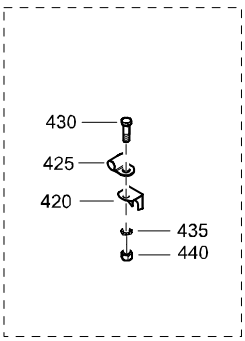
430
425
420
435
440

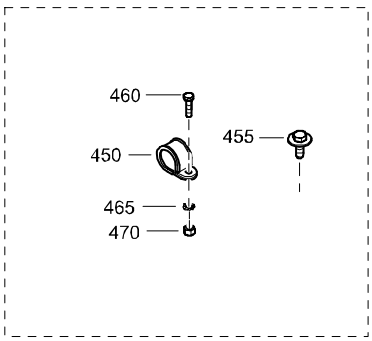
460
450
455
465
470

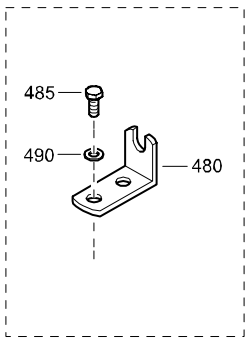
485
490
480

STANDARD


CLAMPING

REF	PART NUMBER	DESIGNATION	QTY
20	1604 2745 03	CABLE GUIDE	1
25	1619 2766 00	HEX. HEAD SCREW	3
45	1615 5664 00	HEX. HEAD SCREW	2
50	1613 0801 07	PIPE CLAMP	11
55	0147 1252 03	HEX. HEAD SCREW	4
60	0266 2108 00	HEXAGON NUT	4
65	0301 2321 00	PLAIN WASHER	4
70	0333 3220 00	LOCK WASHER	4
100	0348 0110 03	ANCHOR PLATE	40
105	0129 3110 00	BLIND RIVET	45
110	0348 0101 05	CABLE TIE	65
150	1604 2765 02	GUIDE	1
155	0147 1251 03	HEX. HEAD SCREW	1
160	0266 2108 00	HEXAGON NUT	1
165	0301 2321 00	PLAIN WASHER	1
170	0333 3220 00	LOCK WASHER	1
250	1615 5619 00	BRACKET	1
255	0147 1400 03	HEX. HEAD SCREW	1
260	0333 3237 00	LOCK WASHER	1
265	1613 0801 04	PIPE CLAMP	1
270	0147 1251 03	HEX. HEAD SCREW	1
275	0266 2108 00	HEXAGON NUT	1
280	0301 2321 00	PLAIN WASHER	1
285	0333 3220 00	LOCK WASHER	1
300	1088 0832 06	CLAMP	2
305	0129 3110 00	BLIND RIVET	2
320	1088 0832 01	CABLE CLAMP	1
325	0129 3110 00	BLIND RIVET	1
350	1604 4381 01	GUIDE	1
360	1613 0808 00	BRACKET	3
365	1613 0803 02	PIPE CLAMP	12
370	0147 1247 03	HEX. HEAD SCREW	6
375	0333 3220 00	LOCK WASHER	6
380	0266 2108 00	HEXAGON NUT	6
385	1619 5898 01	HEX. HEAD SCREW	6
390	2252 2333 00	BRACKET	3
395	1613 0801 03	PIPE CLAMP	8
400	0147 1247 03	HEX. HEAD SCREW	3
405	0333 3220 00	LOCK WASHER	3
410	0266 2108 00	HEXAGON NUT	3
415	1615 5664 00	HEX. HEAD SCREW	3
420	1613 0808 00	BRACKET	1
425	1613 0802 00	PIPE CLAMP	1
430	0147 1247 03	HEX. HEAD SCREW	1
435	0333 3220 00	LOCK WASHER	1
440	0266 2108 00	HEXAGON NUT	1
450	1613 0801 08	PIPE CLAMP	1
455	1615 5664 00	HEX. HEAD SCREW	1
460	0147 1247 03	HEX. HEAD SCREW	1
465	0333 3220 00	LOCK WASHER	1
470	0266 2108 00	HEXAGON NUT	1
480	1613 2679 00	SUPPORT	1
485	0147 1358 03	HEX. HEAD SCREW	1
490	0301 2344 00	PLAIN WASHER	1

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

NO PREHEATER

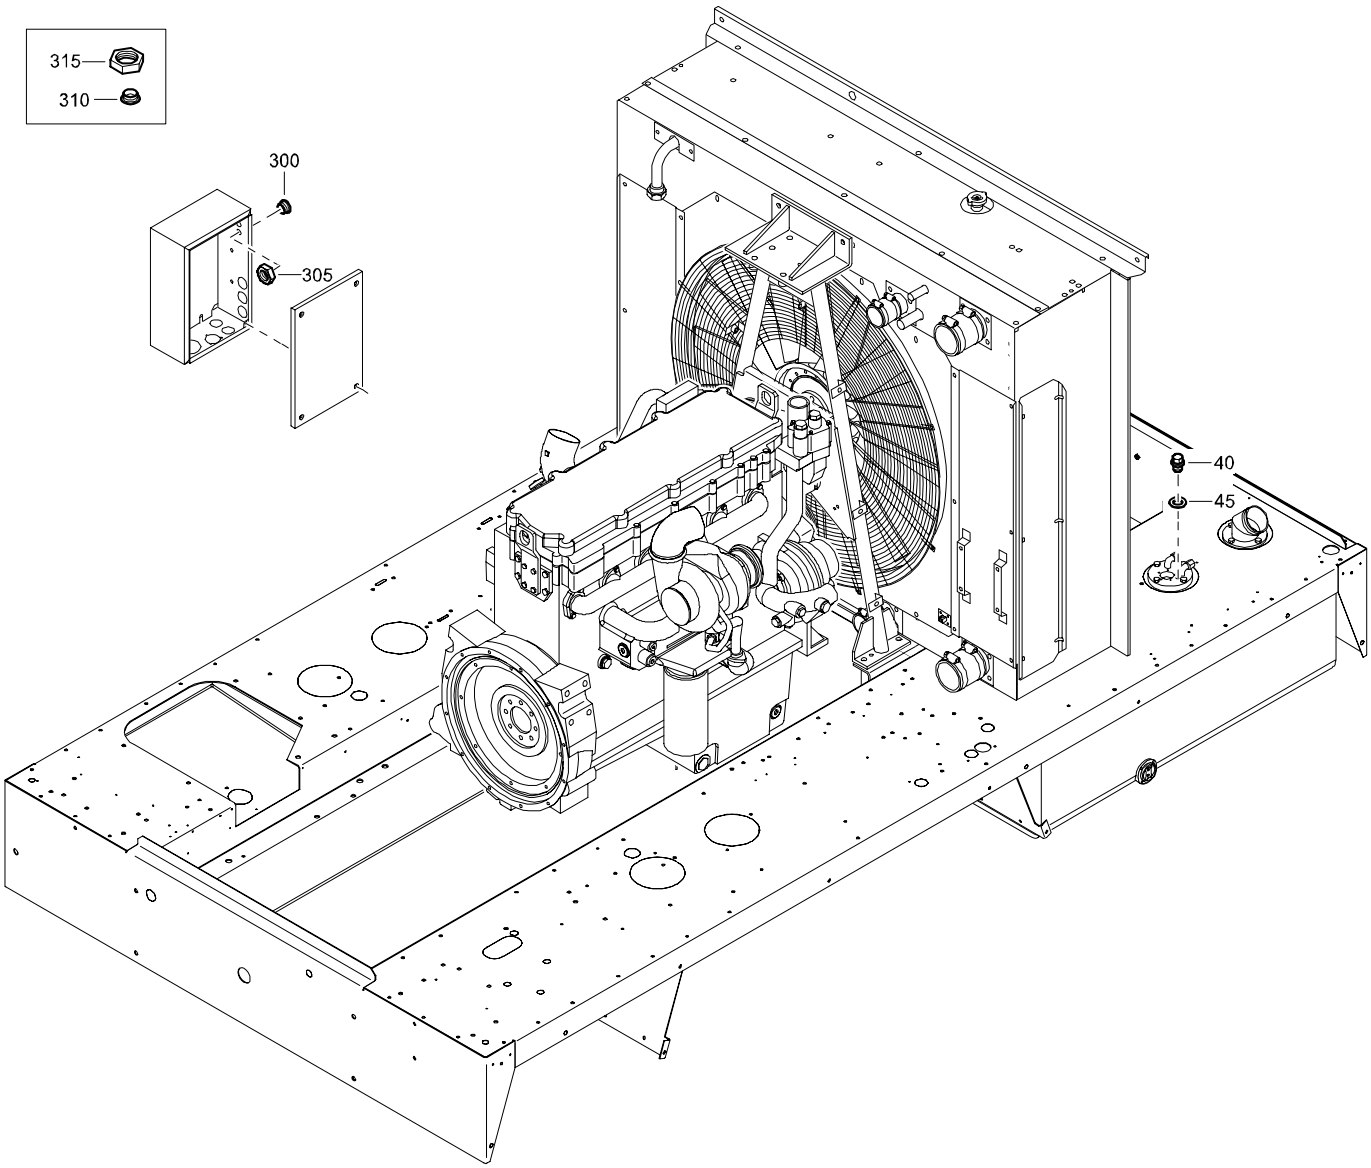


REF	PART NUMBER	DESIGNATION	QTY
40	0686 4201 03	HEXAGON PLUG	1
45	0653 1046 00	FLAT GASKET	1
300	0697 9810 32	PLUG	1
305	0697 9809 30	LOCKNUT	1
310	0697 9810 27	PLUG	1
315	0697 9809 22	LOCK NUT	1

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

NO SPARK ARRESTOR

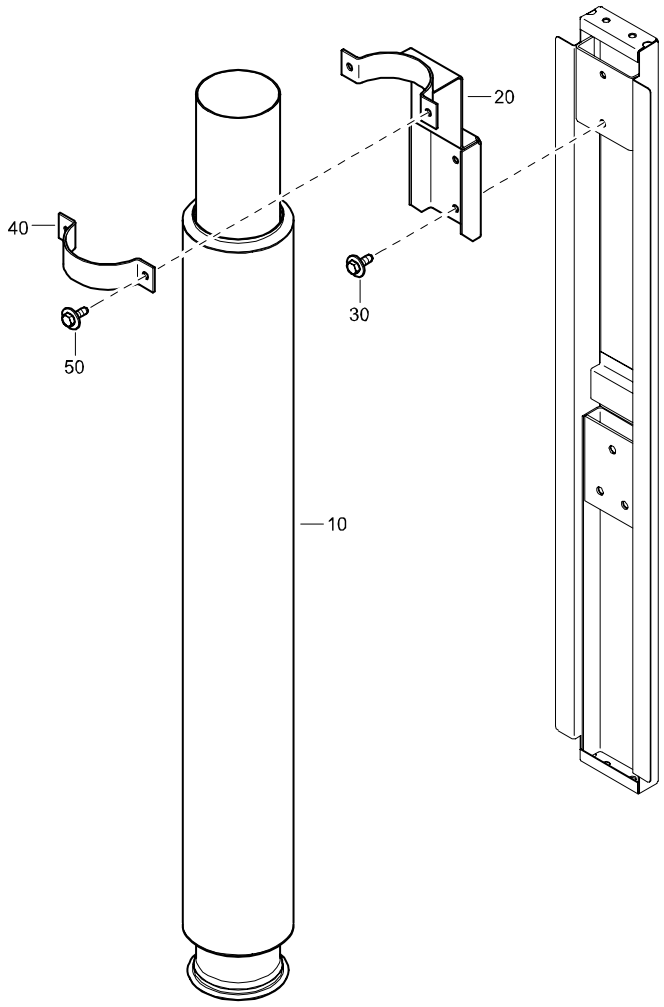


REF	PART NUMBER	DESIGNATION	QTY
10	1604 2486 02	EXHAUST PIPE	1
20	1604 3732 01	BRACKET	1
30	1615 5664 00	SCRAPER BOLT	2
40	1604 3731 00	BRACKET	1
50	1615 5664 00	SCRAPER BOLT	2

REF	PART NUMBER	DESIGNATION	QTY


STANDARD

NO INLET SHUT DOWN VALVE

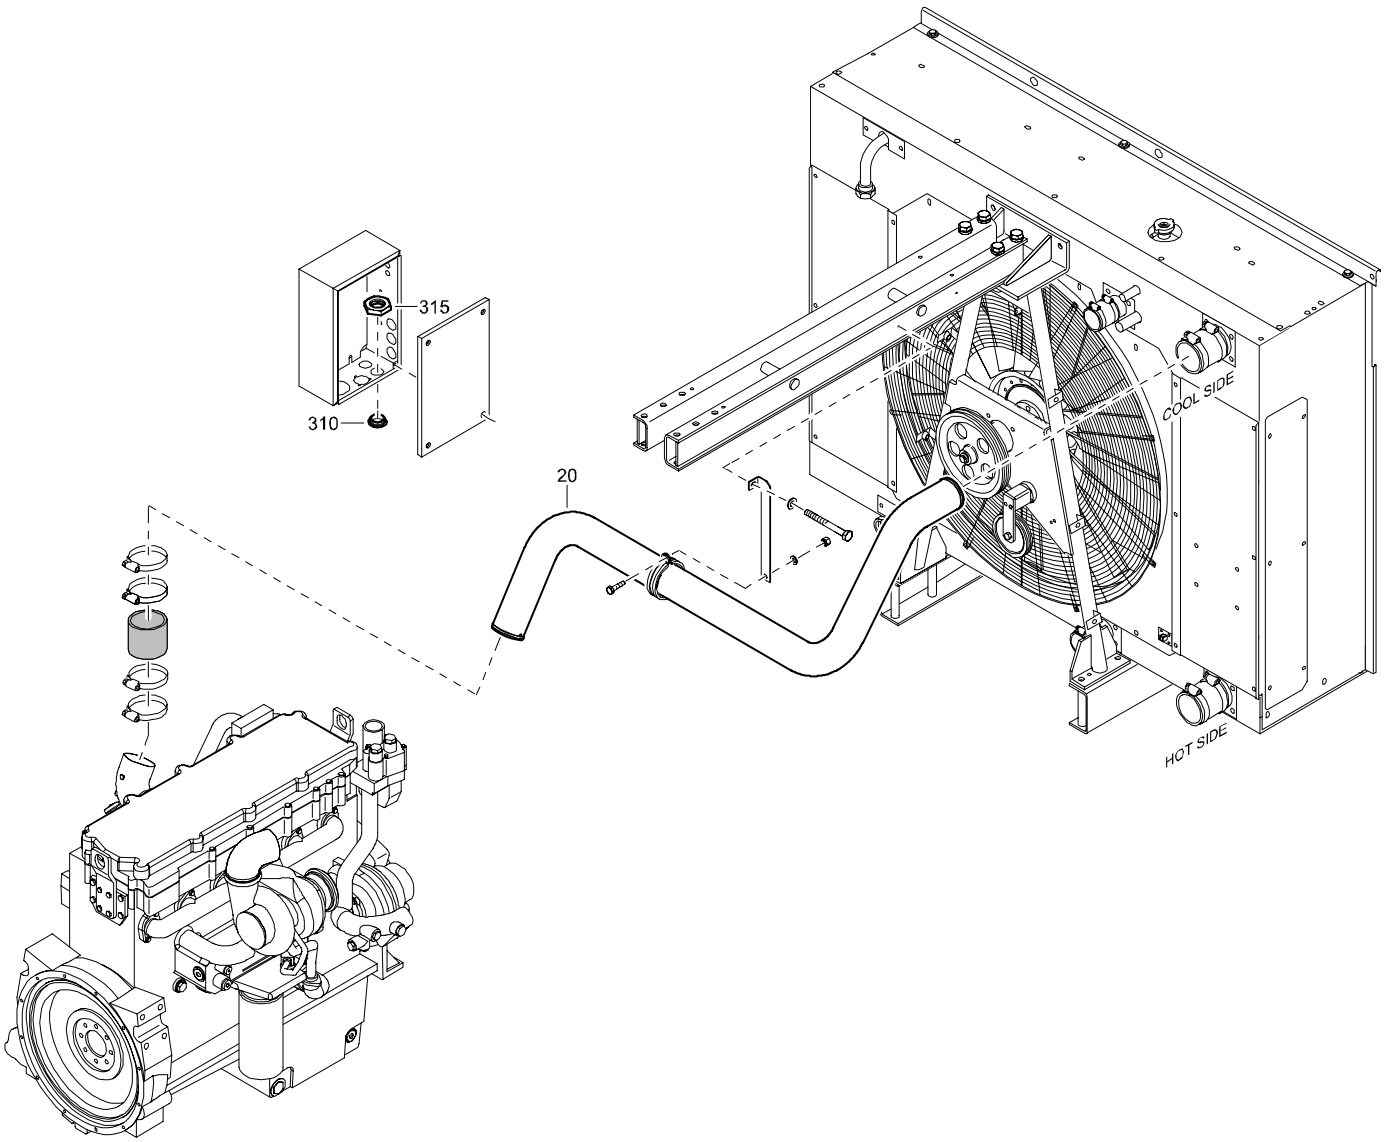


REF	PART NUMBER	DESIGNATION	QTY
20	1604 7720 01	PIPE	1
310	0697 9810 27	PLUG	1
315	0697 9809 22	LOCK NUT	1

REF	PART NUMBER	DESIGNATION	QTY

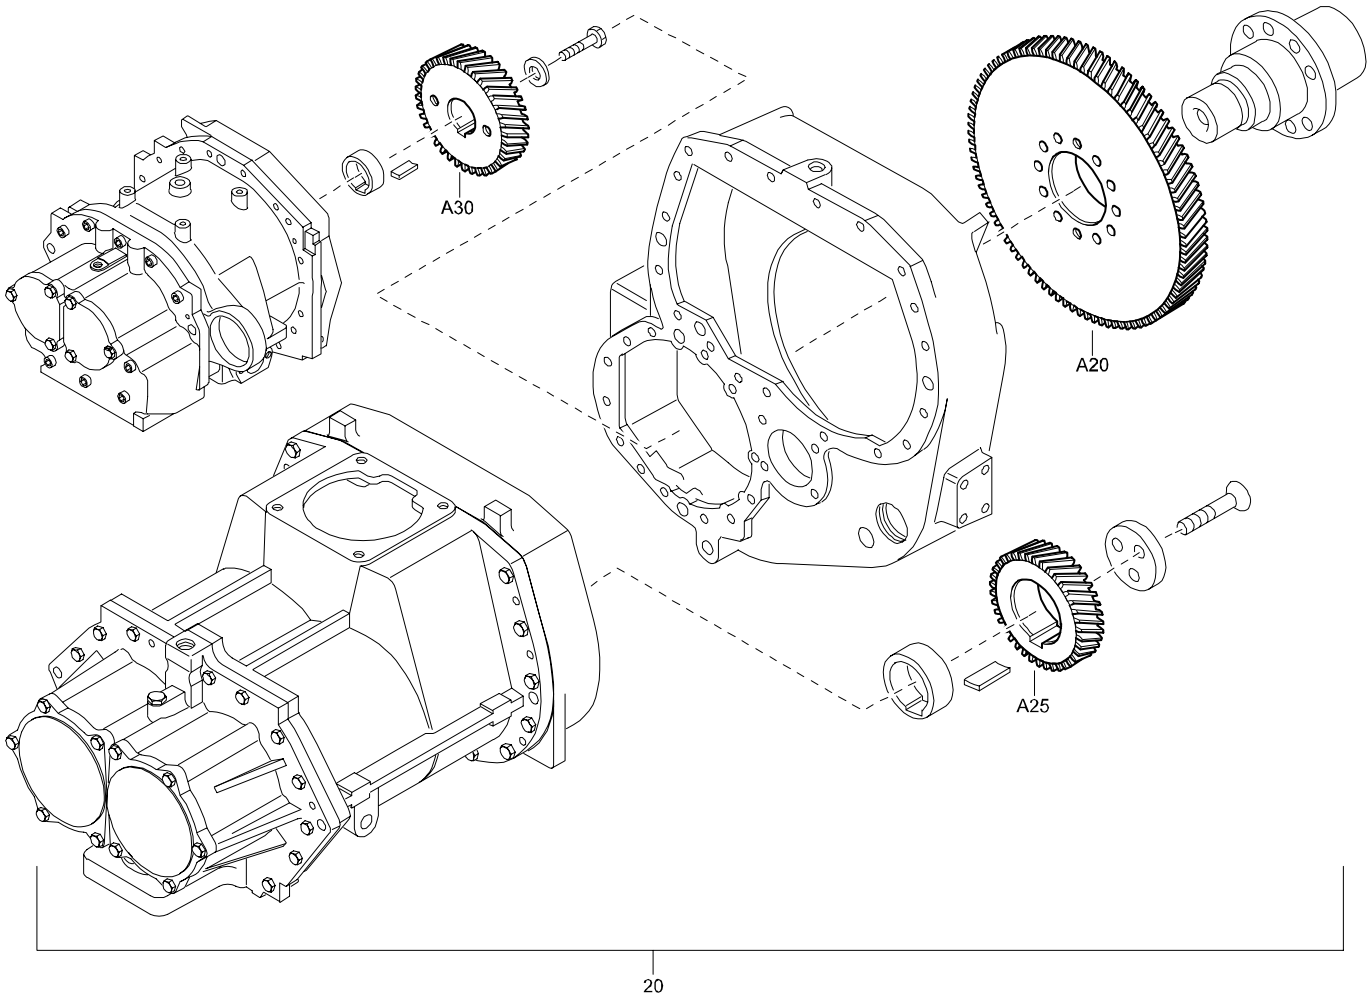


REF	PART NUMBER	DESIGNATION	QTY	WHERE USED
20	1604 7197 80	GEARSET_1	1	XRVS976
•A20	1604 7197 00	GEAR	1	
•A25	1604 7198 00	GEAR	1	
•A30	1604 7199 00	GEAR	1	
20	1604 7480 80	GEARSET_2	1	XRHS1096
•A20	1604 7480 00	GEAR	1	
•A25	1604 7481 00	GEAR	1	
•A30	1604 7482 00	GEAR	1	

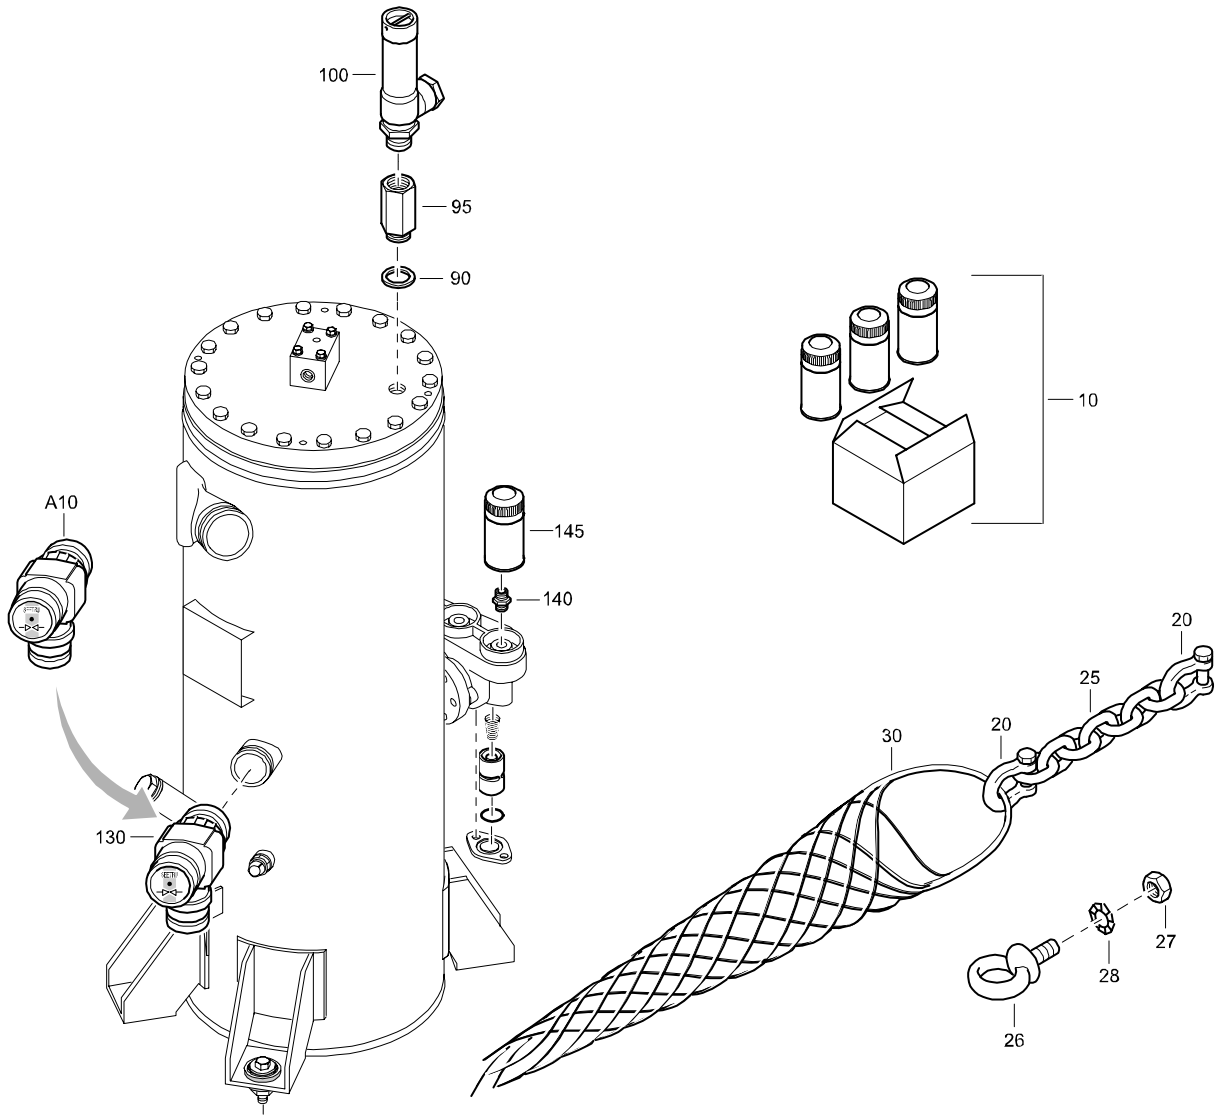

REF	PART NUMBER	DESIGNATION	QTY
10	-	PAK 50H HP SIZE II (Not available separately)	1
20	0372 4100 08	BOW SHACKLE	2
25	3163 1853 00	CHAIN	1
26	0371 1100 21	LIFTING EYE	1
27	0266 2111 00	HEXAGON NUT	1
28	0333 3232 00	LOCK WASHER	1
30	3163 1852 00	WIRE MESH HOSE	1
90	0661 1038 00	SEALING WASHER	1
95	1604 3757 00	BUSHING	1
100	1092 0348 35	SAFETY VALVE	1
130	1604 3602 01	MIN. PRESSURE VALVE	1
•A10	2914 8347 00	MPV	1
140	2254 7257 00	NIPPLE	3
145	1202 8040 02	OILFILTER	3

STANDARD


COUNTRY SET XRHS1096
SQL

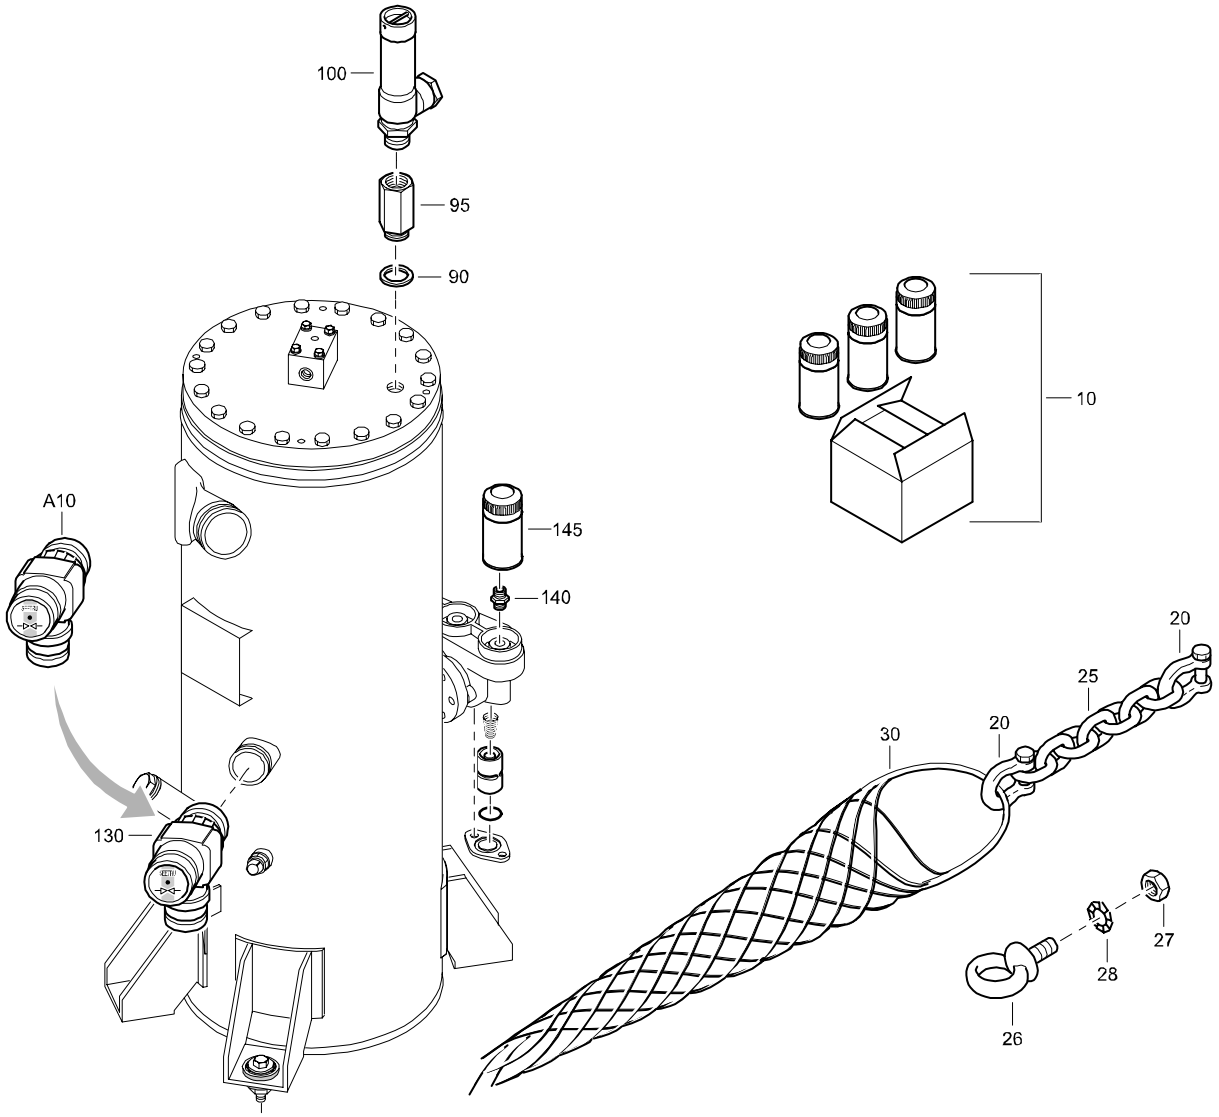

REF	PART NUMBER	DESIGNATION	QTY
10	-	PAK 50H HP SIZE II (Not available separately)	1
20	0372 4100 08	BOW SHACKLE	2
25	3163 1853 00	CHAIN	1
26	0371 1100 21	LIFTING EYE	1
27	0266 2111 00	HEXAGON NUT	1
28	0333 3232 00	LOCK WASHER	1
30	3163 1852 00	WIRE MESH HOSE	1
90	0661 1038 00	SEALING WASHER	1
95	1604 3757 00	BUSHING	1
100	1092 0671 00	SAFETY VALVE	1
130	1604 2524 02	MIN. PRESSURE VALVE	1
•A10	2914 8345 00	MPV	1
140	2254 7257 00	NIPPLE	3
145	1202 8040 02	OILFILTER	3

STANDARD


NO REHEATER

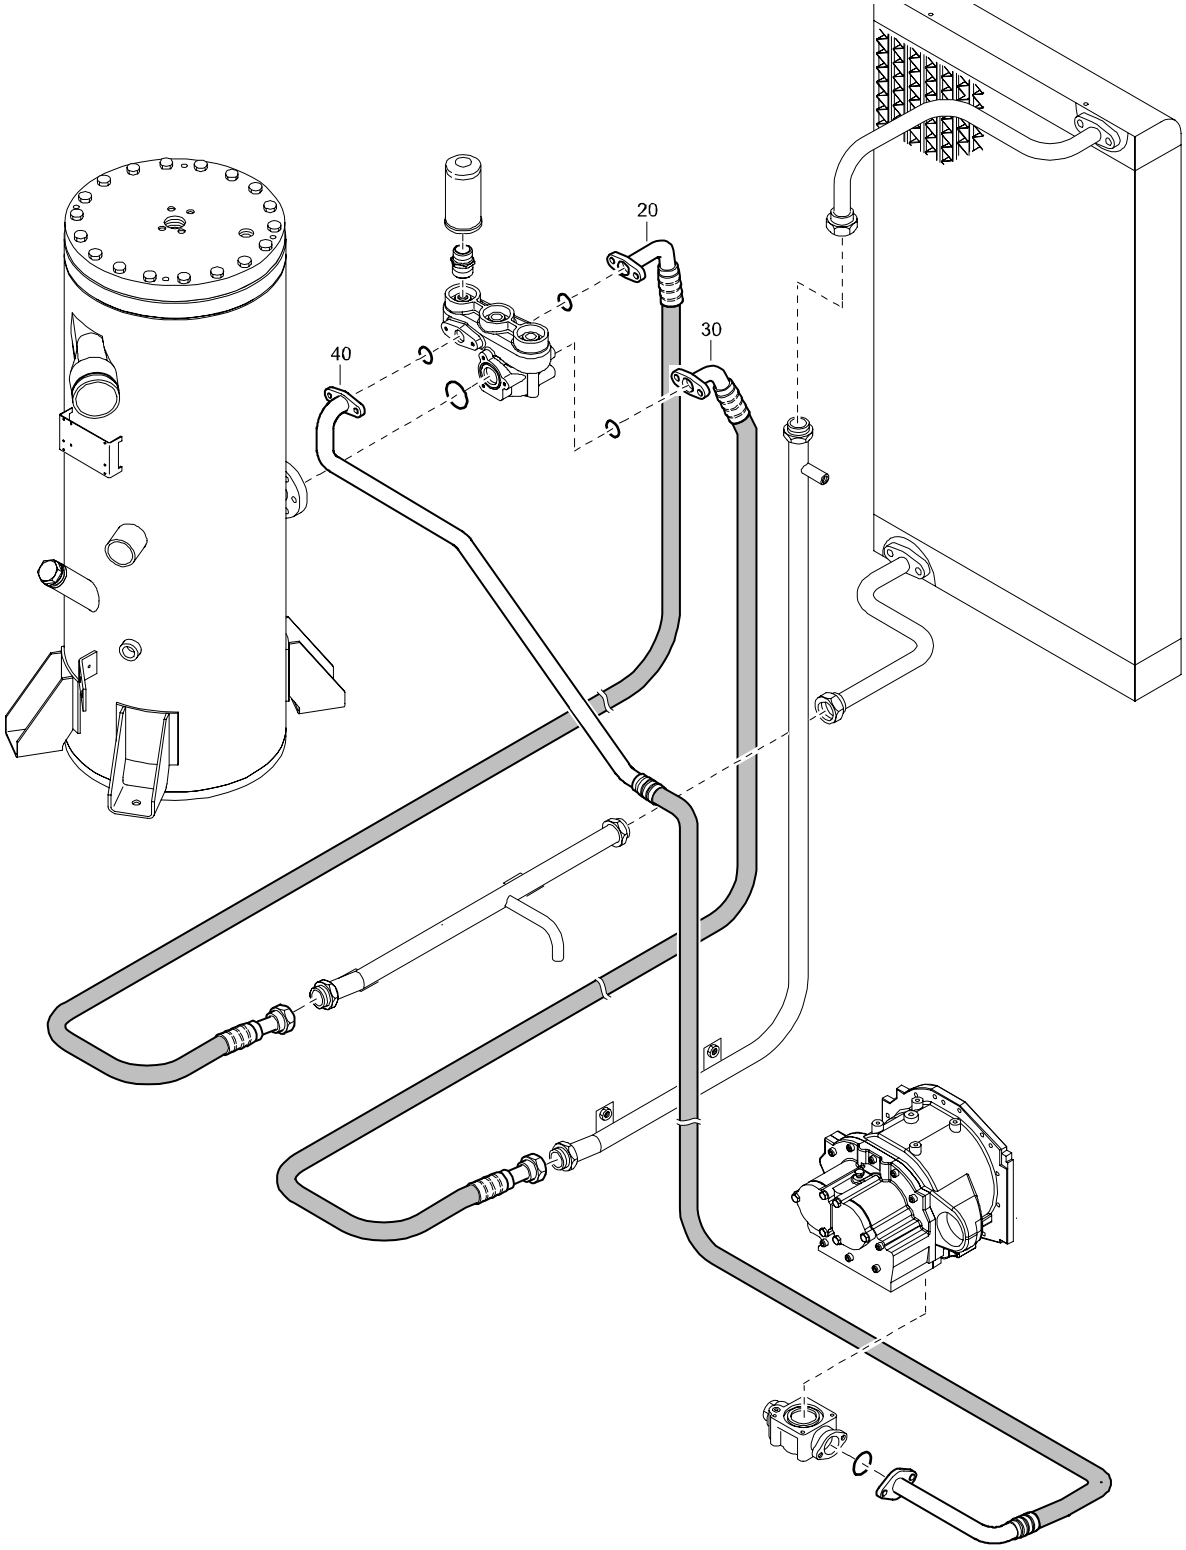

REF	PART NUMBER	DESIGNATION	QTY
20	1092 0512 00	HOSE ASSEMBLY	1
30	1604 2462 01	HOSE ASSEMBLY	1
40	1604 2458 04	HOSE ASSEMBLY	1

REF	PART NUMBER	DESIGNATION	QTY

BATTERIES
C13 NO COLD START

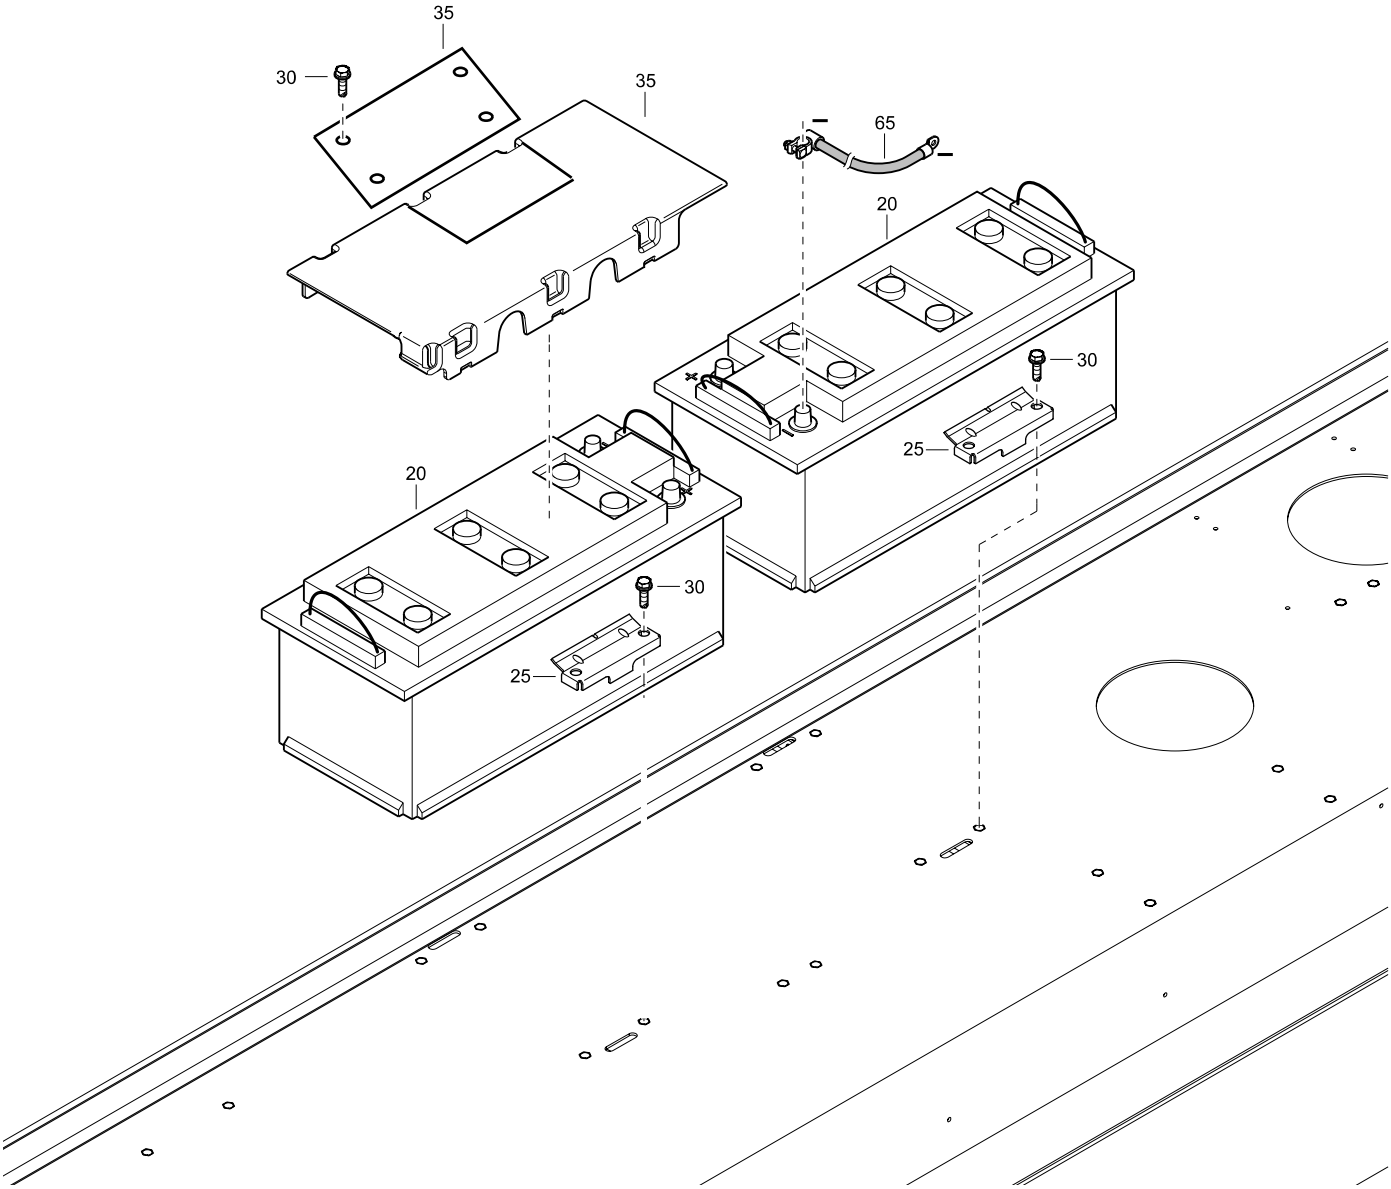


REF	PART NUMBER	DESIGNATION	QTY
20	1092 0641 00	BATTERY	2
25	1092 0698 00	CLAMP	2
30	1619 2766 00	HEX. HEAD SCREW	8
35	1604 7881 00	COVER (BATTERY)	2
40	1092 0348 88	PLATE	8
45	1619 2766 00	HEX. HEAD SCREW	4
65	1604 7851 00	CABLE (ELEC)	1

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

NO AFTERCOOLER

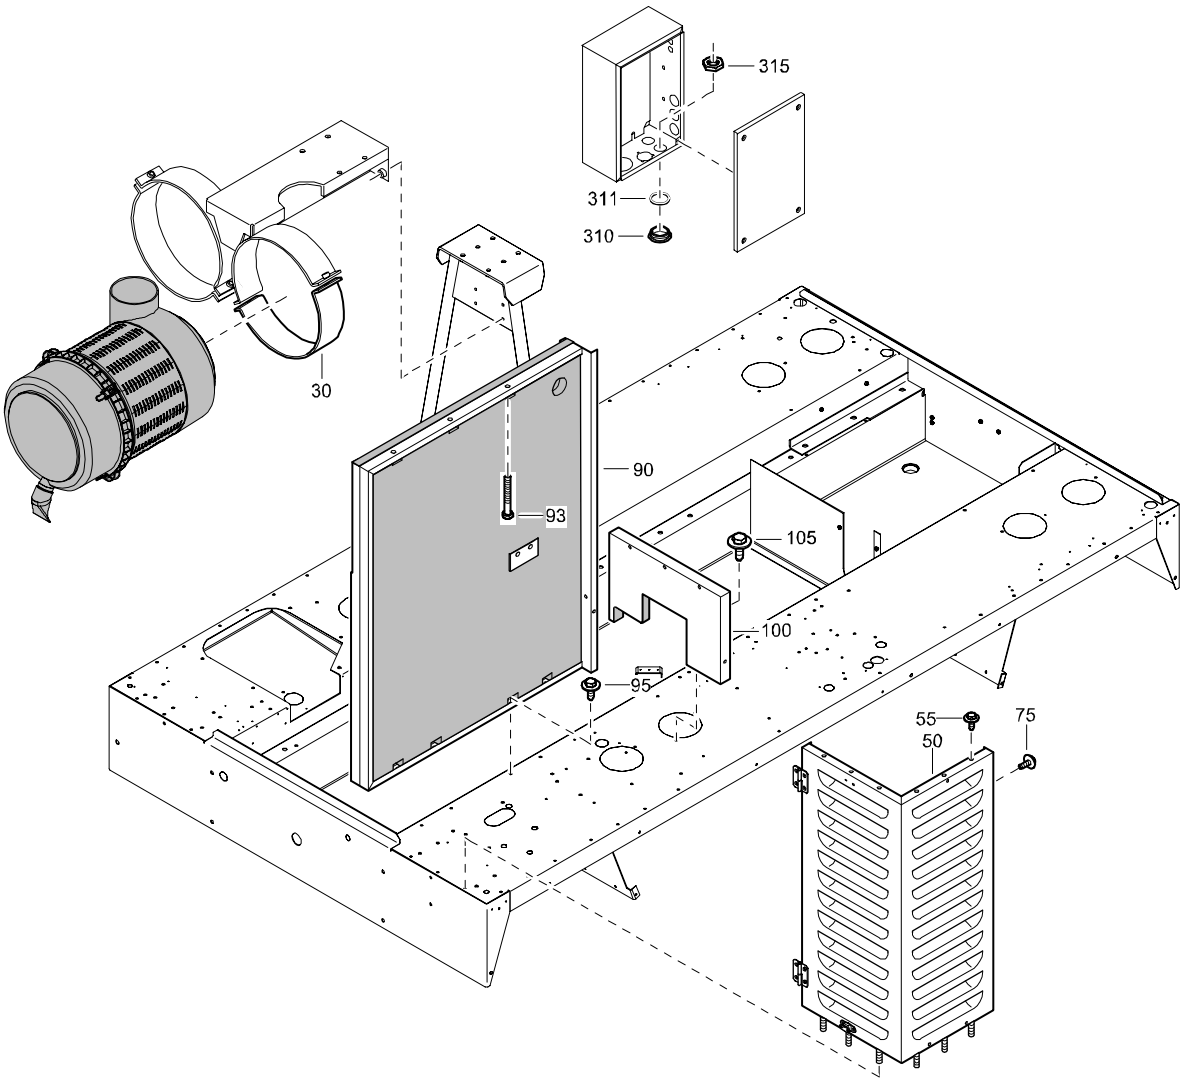


REF	PART NUMBER	DESIGNATION	QTY
30	1604 0128 00	CLAMP (AIRFILTER)	1
50	1604 2468 80	CORNER ASSY	1
		(For details see page 86)	
55	1615 5664 00	HEX. HEAD SCREW	6
75	1615 5664 00	HEX. HEAD SCREW	4
90	1604 2477 82	PANEL ASSY	1
		(For details see page 91)	
93	0147 1332 03	HEX. HEAD SCREW	3
95	1615 5664 00	HEX. HEAD SCREW	4
100	1604 2542 81	PANEL ASSY	1
		(For details see page 93)	
105	1615 5664 00	HEX. HEAD SCREW	4
310	0697 9810 27	PLUG	1
311	0663 6127 00	O-RING	1
315	0697 9809 22	LOCK NUT	1

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

NO MANIFOLD

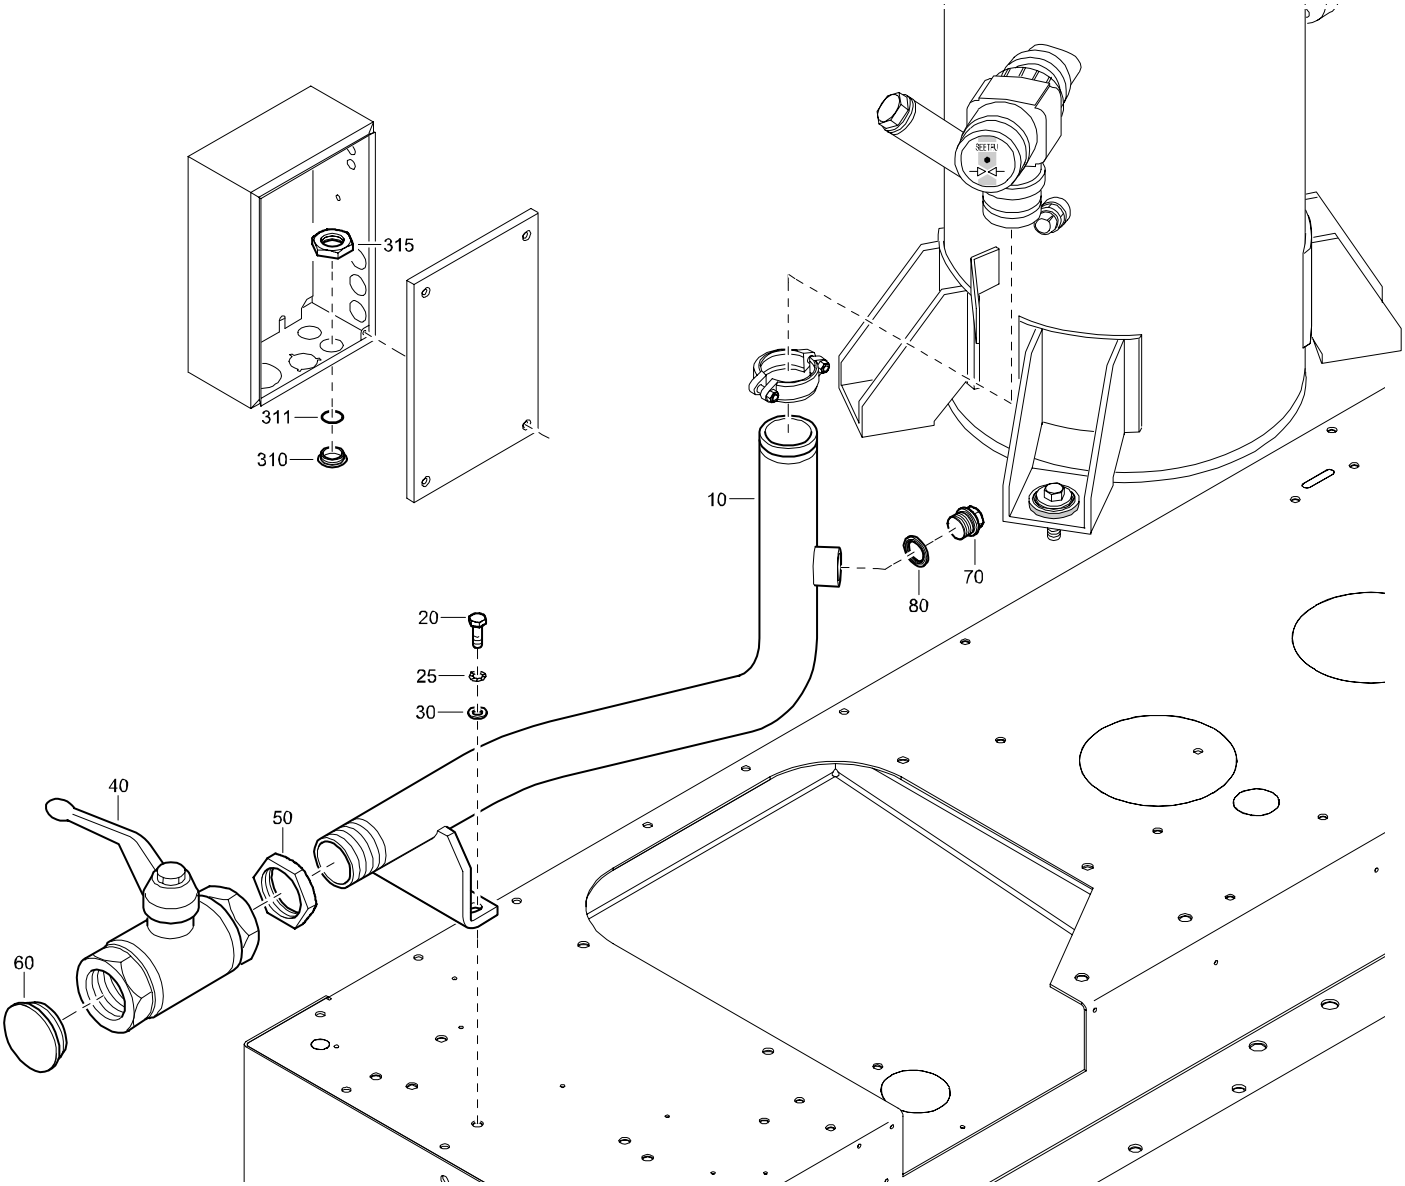


REF	PART NUMBER	DESIGNATION	QTY
10	1604 3768 00	MANIFOLD	1
20	0147 1362 03	HEX. HEAD SCREW	2
25	0333 3232 00	LOCK WASHER	2
30	0301 2344 00	PLAIN WASHER	2
40	0852 0010 52	BALL VALVE	1
50	0623 2100 09	BACKNUT	1
60	0686 9252 83	PLUG	1
70	0686 3716 35	HEXAGON PLUG	1
80	0661 1038 00	SEALING WASHER	1
310	0697 9810 27	PLUG	1
311	0663 6127 00	O-RING	1
315	0697 9809 22	LOCK NUT	1

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

NOISE REGULATION ROW C13

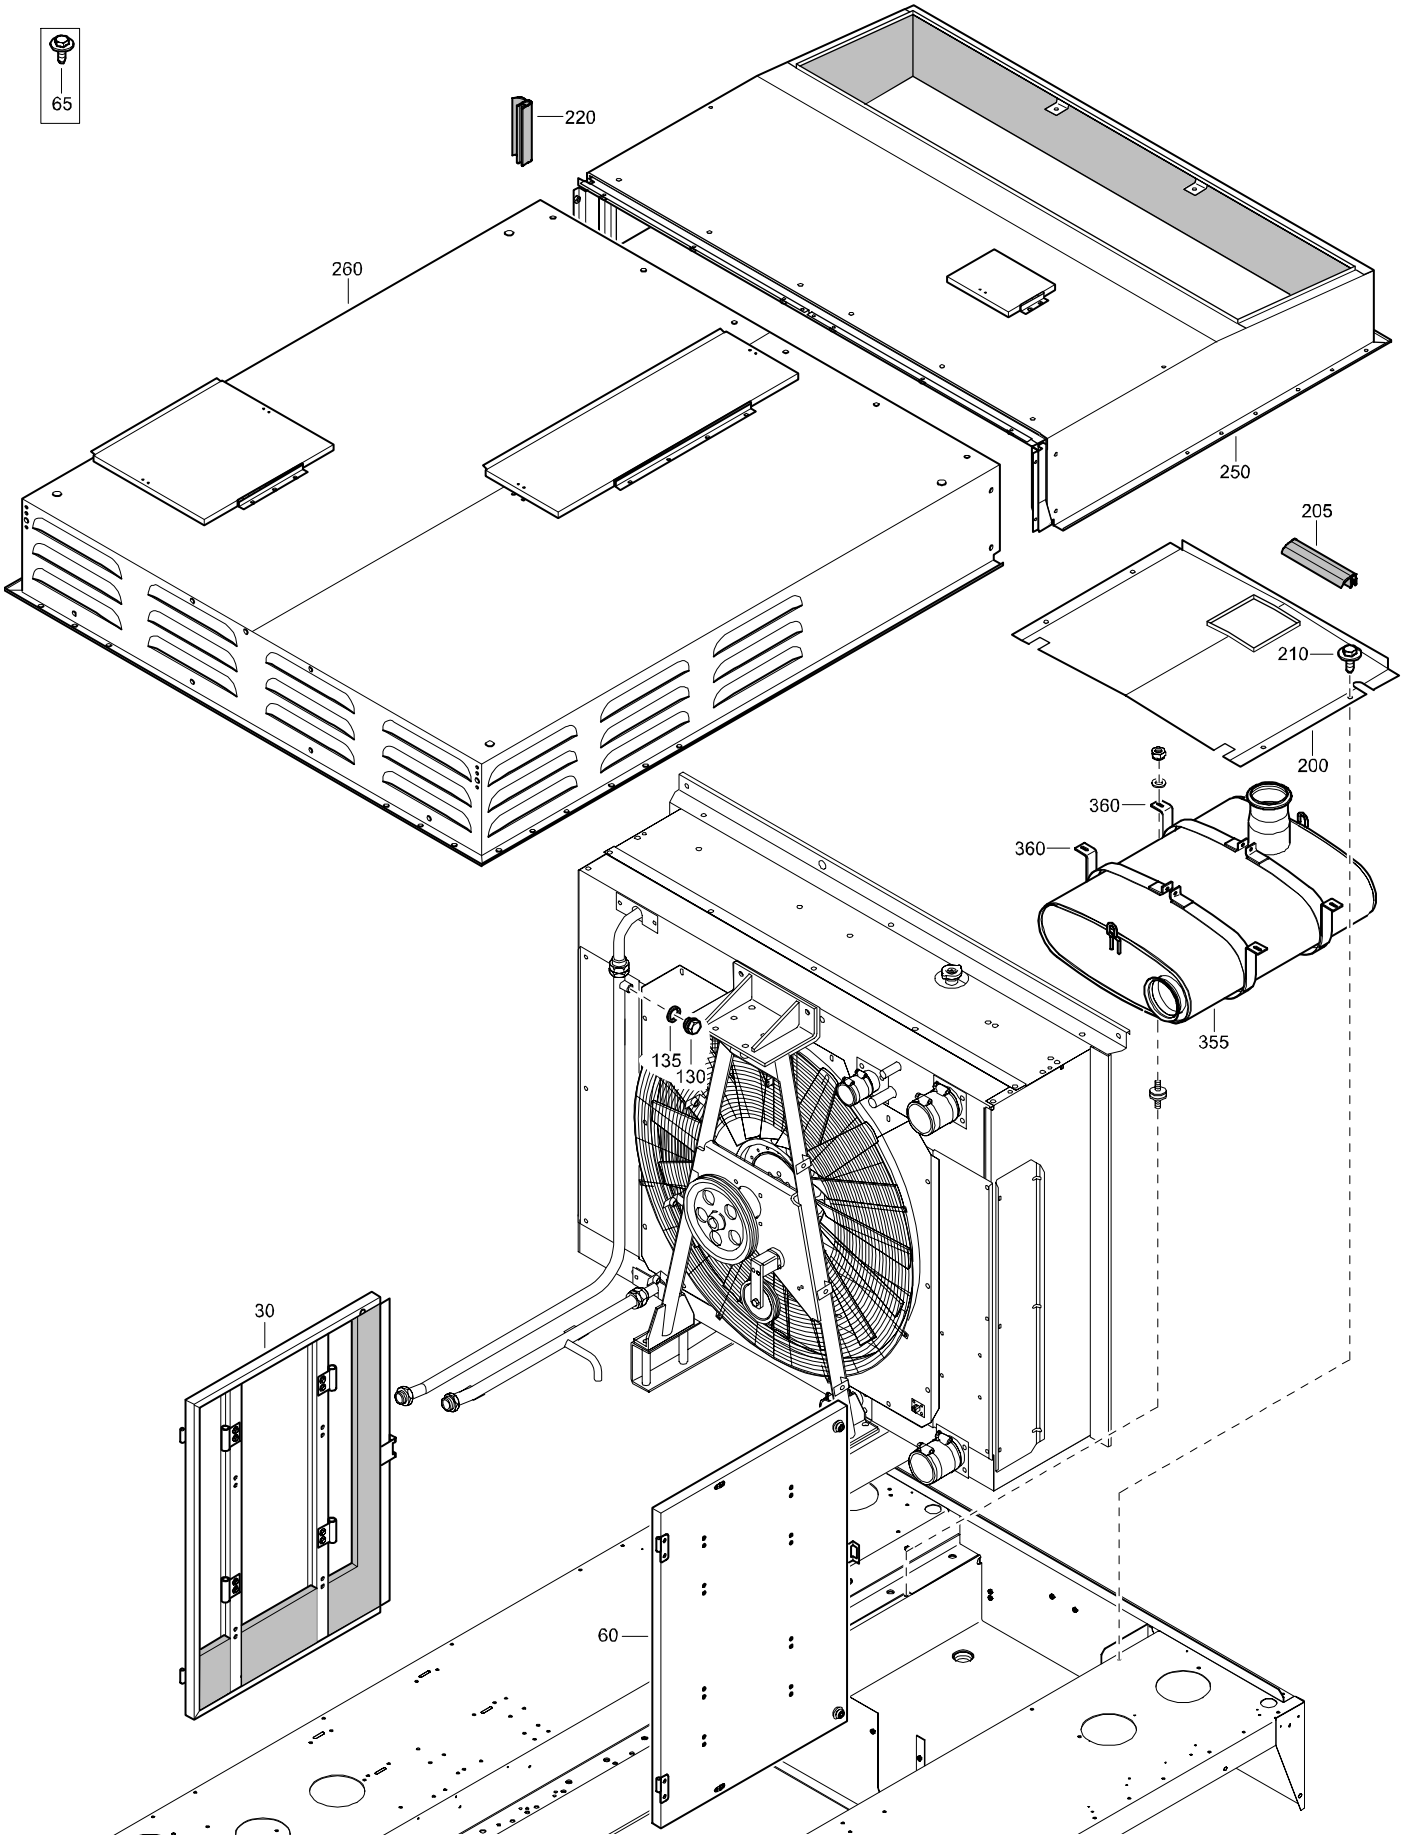


REF	PART NUMBER	DESIGNATION	QTY
30	1092 0663 81	DOOR ASSY	1
		(For details see page 80)	
60	1092 0663 80	DOOR ASSY	1
		(For details see page 79)	
65	1615 5664 00	HEX. HEAD SCREW	3
130	0686 3716 30	HEXAGON PLUG	1
135	0653 1100 00	FLAT GASKET	1
200	1604 4498 01	COVER	1
205	1619 6449 00	SEAL	AR
210	1615 5664 00	HEX. HEAD SCREW	4
220	1619 6449 00	SEAL	AR
250	1604 4250 81	ROOF ASSY FRONT CD4	1
		(For details see page 97)	
260	1092 0583 67	ROOF ASSY REAR ROW	1
		(For details see page 98)	
355	1092 0394 66	SILENCER	1
360	1604 2549 02	CLAMP	2


REF	PART NUMBER	DESIGNATION	QTY

STANDARD

NO COLD START
SQL

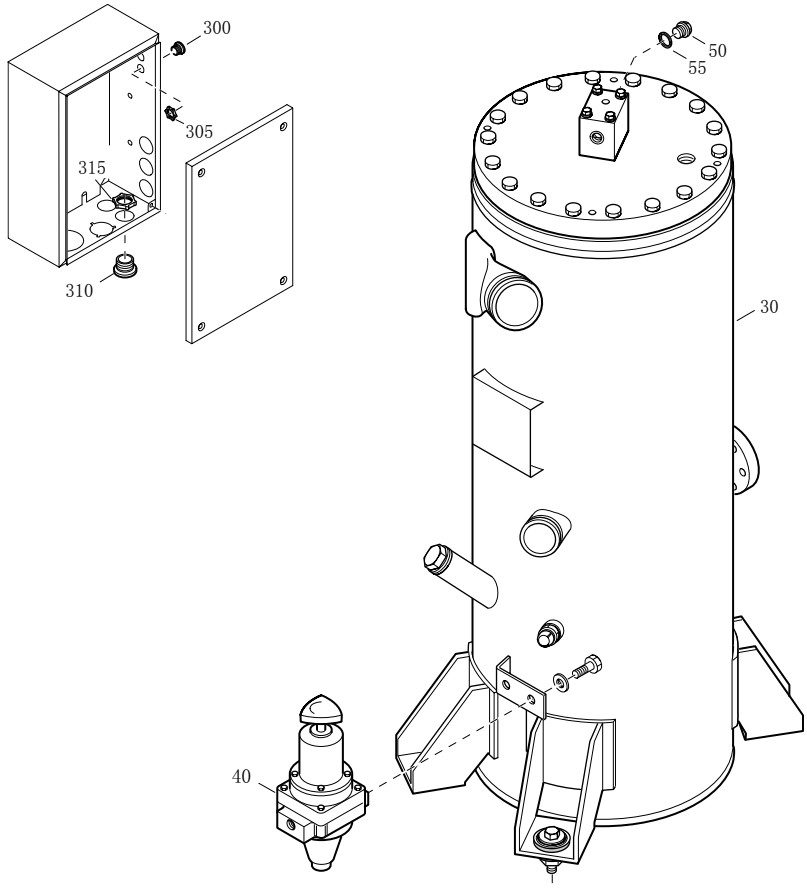

REF	PART NUMBER	DESIGNATION	QTY
30	1092 0583 06	OILSEP. ASSY (For details see page 92)	1
40	2252 0495 96	REGUL. VALVE (For details see page 110)	1
50	0686 3716 02	HEXAGON PLUG	1
55	0653 1124 00	FLAT GASKET	1
300	0697 9810 32	PLUG	1
305	0697 9809 30	LOCKNUT	1
310	0697 9810 27	PLUG	1
315	0697 9809 22	LOCK NUT	1

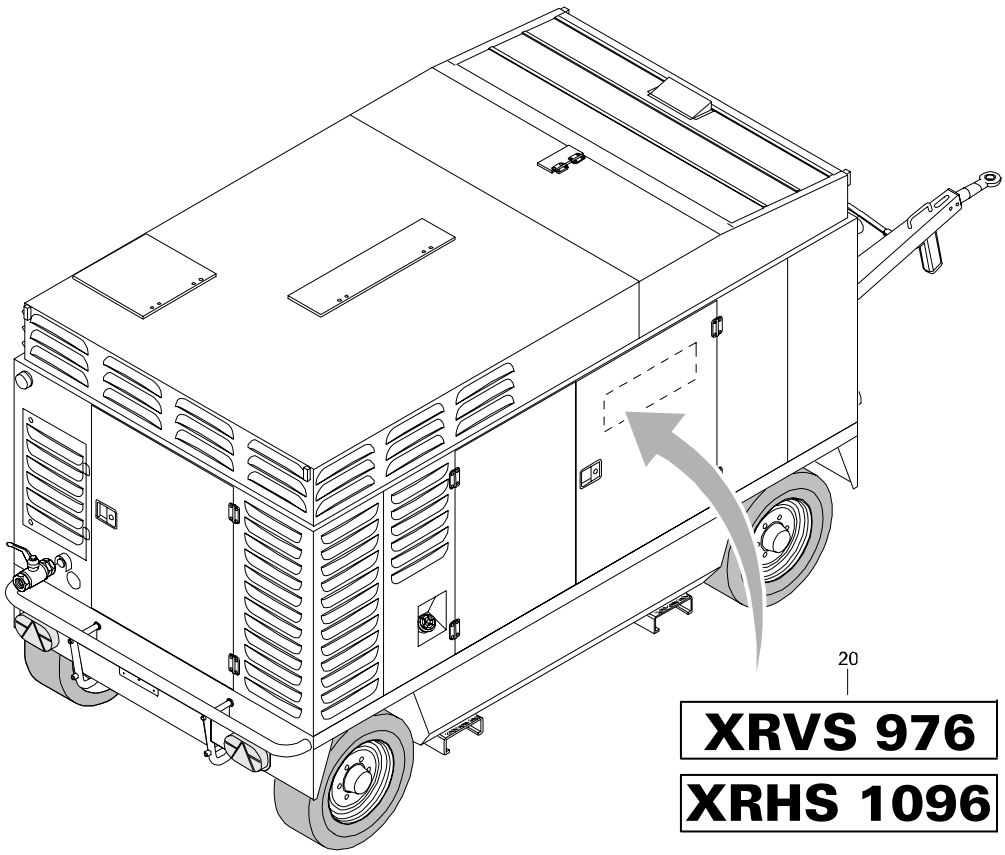


REF	PART NUMBER	DESIGNATION	QTY
20	1092 0658 16	DECAL XRVS976	2
20	1092 0658 15	DECAL XRHS1096	2

REF	PART NUMBER	DESIGNATION	QTY

STANDARD


NO ROADSIGNALISATION

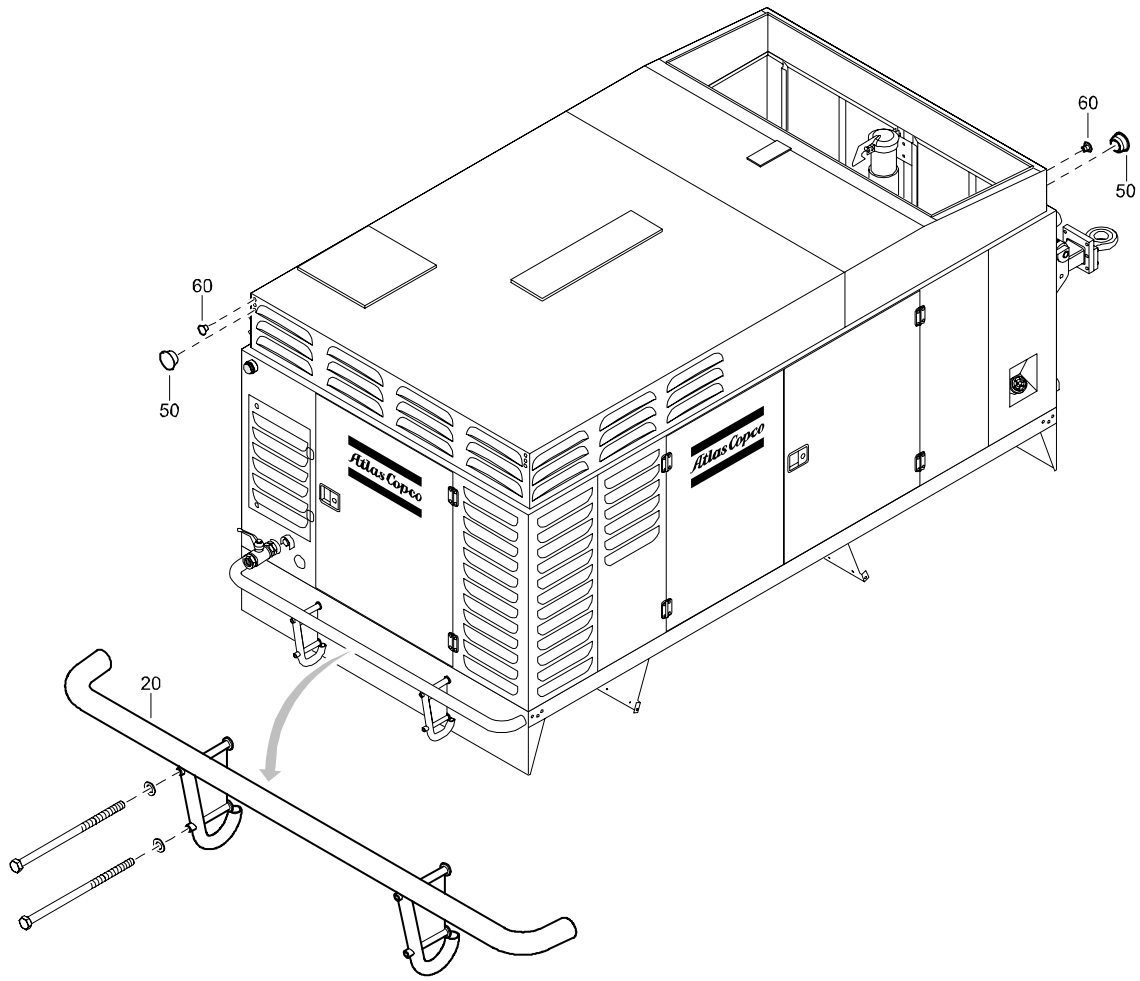

REF	PART NUMBER	DESIGNATION	QTY
20	1092 0665 00	BUMPER	1
50	0686 9252 85	PLUG	4
60	0686 9252 86	PLUG	12

REF	PART NUMBER	DESIGNATION	QTY

POWER SUPPLY BOX ASSEMBLY

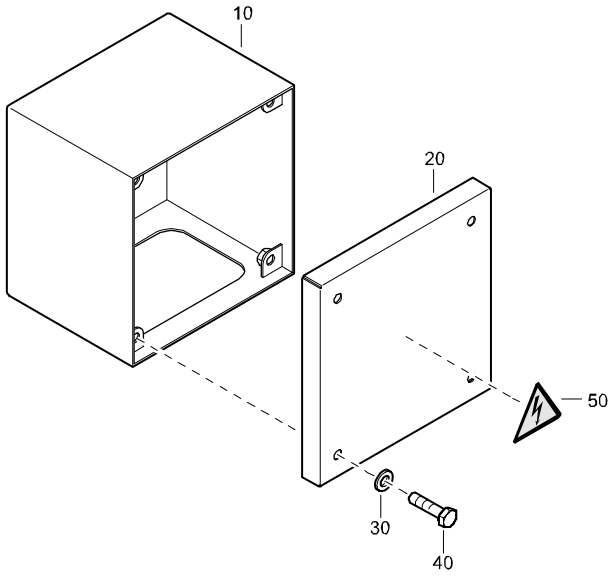


REF	PART NUMBER	DESIGNATION	QTY
-	1604 2124 81	POWER SUPPLY BOX ASSY(From page 59)	
•10	1604 2124 04	POWER SUPPLY BOX	1
•20	1604 2153 01	LID OF POWER SUPPLY BOX	1
•30	0301 2321 00	PLAIN WASHER	4
•40	0147 1249 03	HEX. HEAD SCREW	4
•50	1088 1001 02	WARNING MARK	1

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

CORNER ASSEMBLY

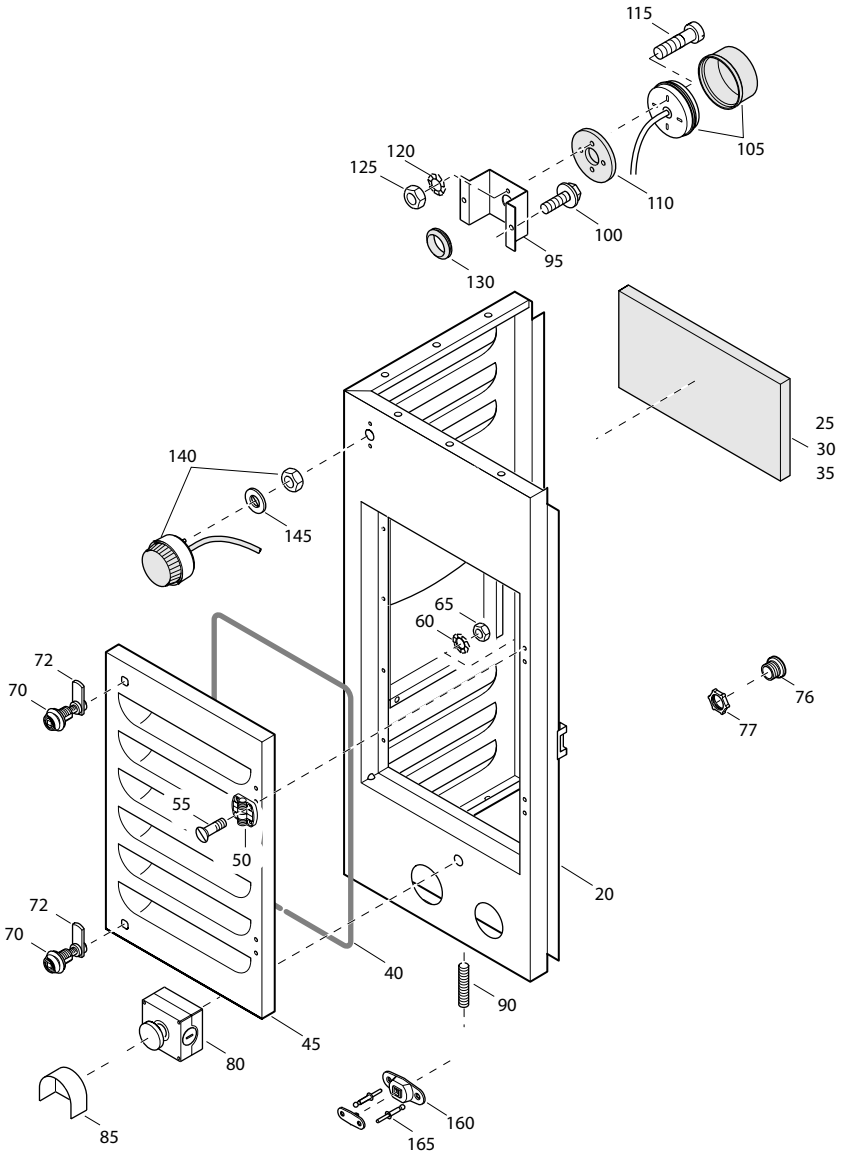



REF	PART NUMBER	DESIGNATION	QTY
-	1092 0650 80	CORNER ASSY	
•20	1092 0650 02	CORNER	1
•25	-	SILENCING FOAM	1
•30	-	SILENCING FOAM	2
•35	-	SILENCING FOAM	1
•40	1619 2665 00	SEAL	AR
•45	1604 2470 02	DOOR	1
•50	1604 7601 00	HINGE	2
•55	0160 6060 00	SLOTTED SCREW	8
•60	0333 3215 00	LOCK WASHER	8
•65	0266 2107 00	HEXAGON NUT	8
•70	1092 0612 00	LOCK	2
•72	1092 0613 00	LATCH	2
•76	0697 9810 25	PLUG	1
•77	0697 9809 20	LOCK NUT	1
•80	1092 0307 00	EMERGENCY STOP	1
•85	1092 0580 00	PROTECTION	1
•90	0246 1956 35	STUD	4
•95	1604 2800 01	BRACKET	1
•100	1615 5664 00	SCRAPER BOLT	2
•105	1092 0670 00	HORN	1
•110	1604 0996 00	SEAL	1
•115	0162 4174 00	SLOTTED SCREW	2

REF	PART NUMBER	DESIGNATION	QTY
•120	0333 3214 00	LOCK WASHER	2
•125	0266 2106 00	HEXAGON NUT	2
•130	1088 0801 22	GROMMET	1
•140	1092 0669 00	FLASH LIGHT	1
•145	0301 2321 00	PLAIN WASHER	2
•160	1619 1663 00	DOOR HOOK	1
•165	0129 3270 17	BLIND RIVET	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

STANDARD

DOOR ASSEMBLY

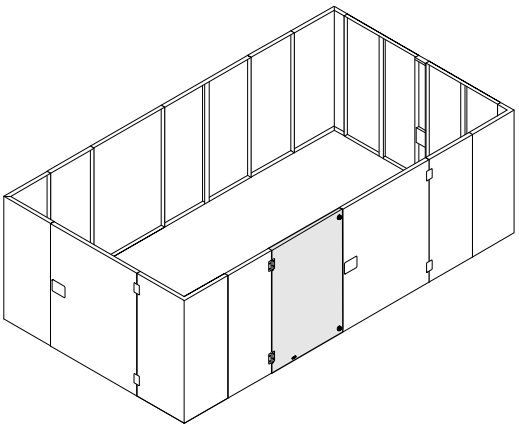

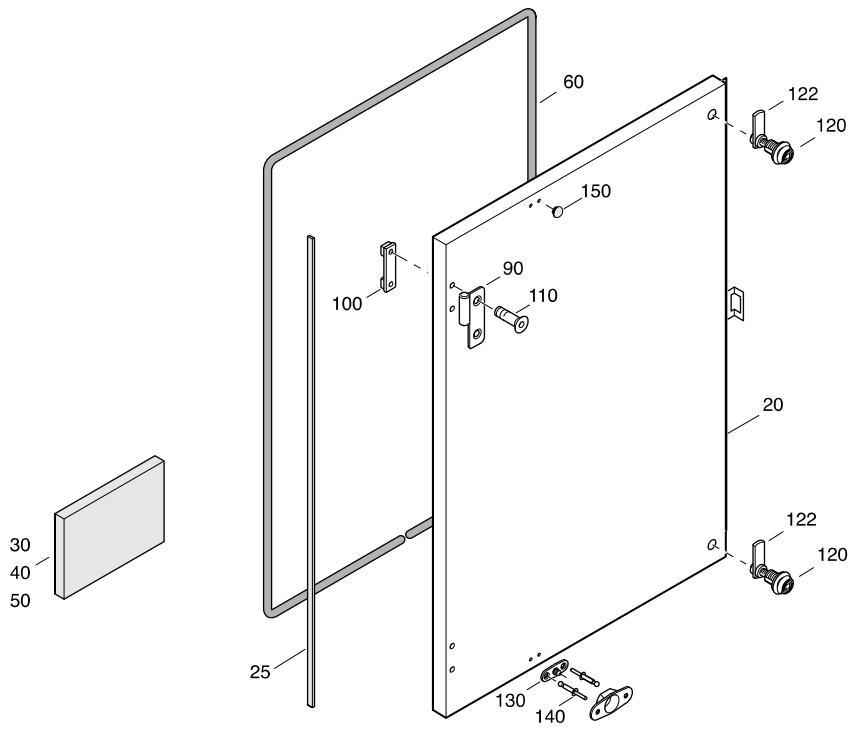



REF	PART NUMBER	DESIGNATION	QTY
-	1092 0663 80	DOOR ASSY	
•20	1092 0663 00	DOOR	1
•25	1619 6858 00	SEAL	AR
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•50	-	SILENCING FOAM	1
•60	1619 2665 00	SEAL	AR
•90	1604 3429 00	HINGE	2
•100	1615 5684 00	BRACKET	2
•110	0216 1324 03	HEX SOCK. SCREW	4
•120	1092 0612 00	LOCK	2
•122	1092 0613 00	LATCH	2
•130	1619 1663 00	DOOR HOOK	1
•140	0129 3270 17	BLIND RIVET	2
•150	0686 9252 87	PLUG	2

REF	PART NUMBER	DESIGNATION	QTY
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

STANDARD


DOOR ASSEMBLY

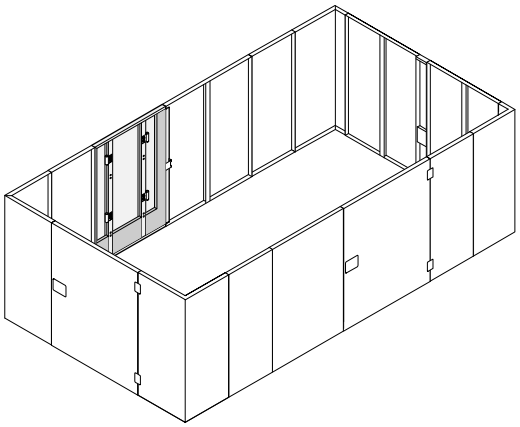


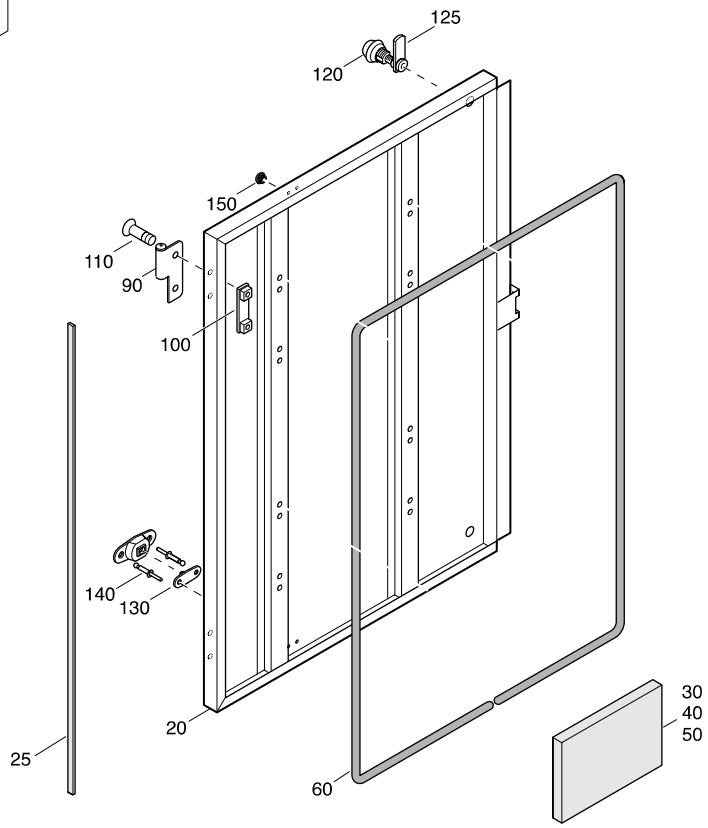


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0663 81	DOOR ASSY	
•20	1092 0663 00	DOOR	1
•25	1619 6858 00	SEAL	AR
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•50	-	SILENCING FOAM	1
•60	1619 2665 00	SEAL	AR
•90	1604 3431 00	HINGE	2
•100	1615 5684 00	BRACKET	2
•110	0216 1324 03	HEX SOCK. SCREW	4
•120	1092 0612 00	LOCK	2
•125	1092 0613 00	LATCH	2
•130	1619 1663 00	DOOR HOOK	1
•140	0129 3270 17	BLIND RIVET	2
•150	0686 9252 87	PLUG	2

REF	PART NUMBER	DESIGNATION	QTY
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

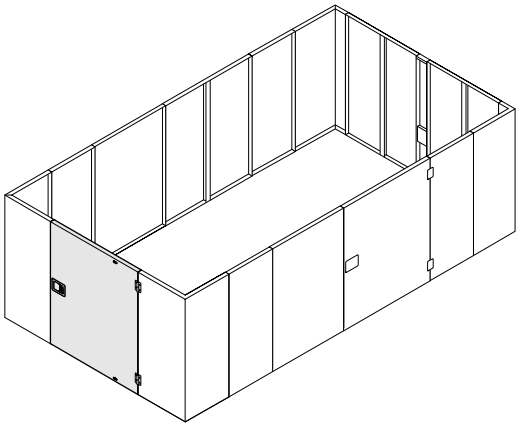


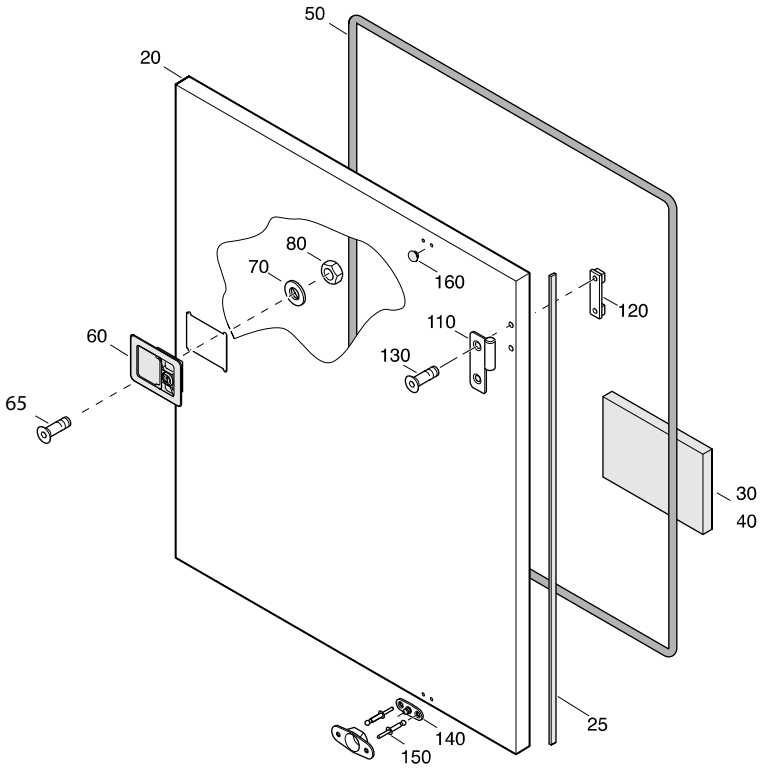

REF	PART NUMBER	DESIGNATION	QTY
-	1092 0664 80	DOOR ASSY	
•20	1092 0664 00	DOOR	1
•25	1619 6858 00	SEAL	AR
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•50	1619 2665 00	SEAL	AR
•60	1092 0668 00	HANDLE	1
•65	0160 0996 11	CROSS REC SCREW	4
•70	0301 2315 00	PLAIN WASHER	4
•80	0291 1106 00	LOCKNUT	4
•110	1604 3431 00	HINGE	2
•120	1615 5684 00	BRACKET	2
•130	0216 1324 03	HEX SOCK. SCREW	4
•140	1619 1663 00	DOOR HOOK	1
•150	0129 3270 17	BLIND RIVET	2
•160	0686 9252 87	PLUG	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

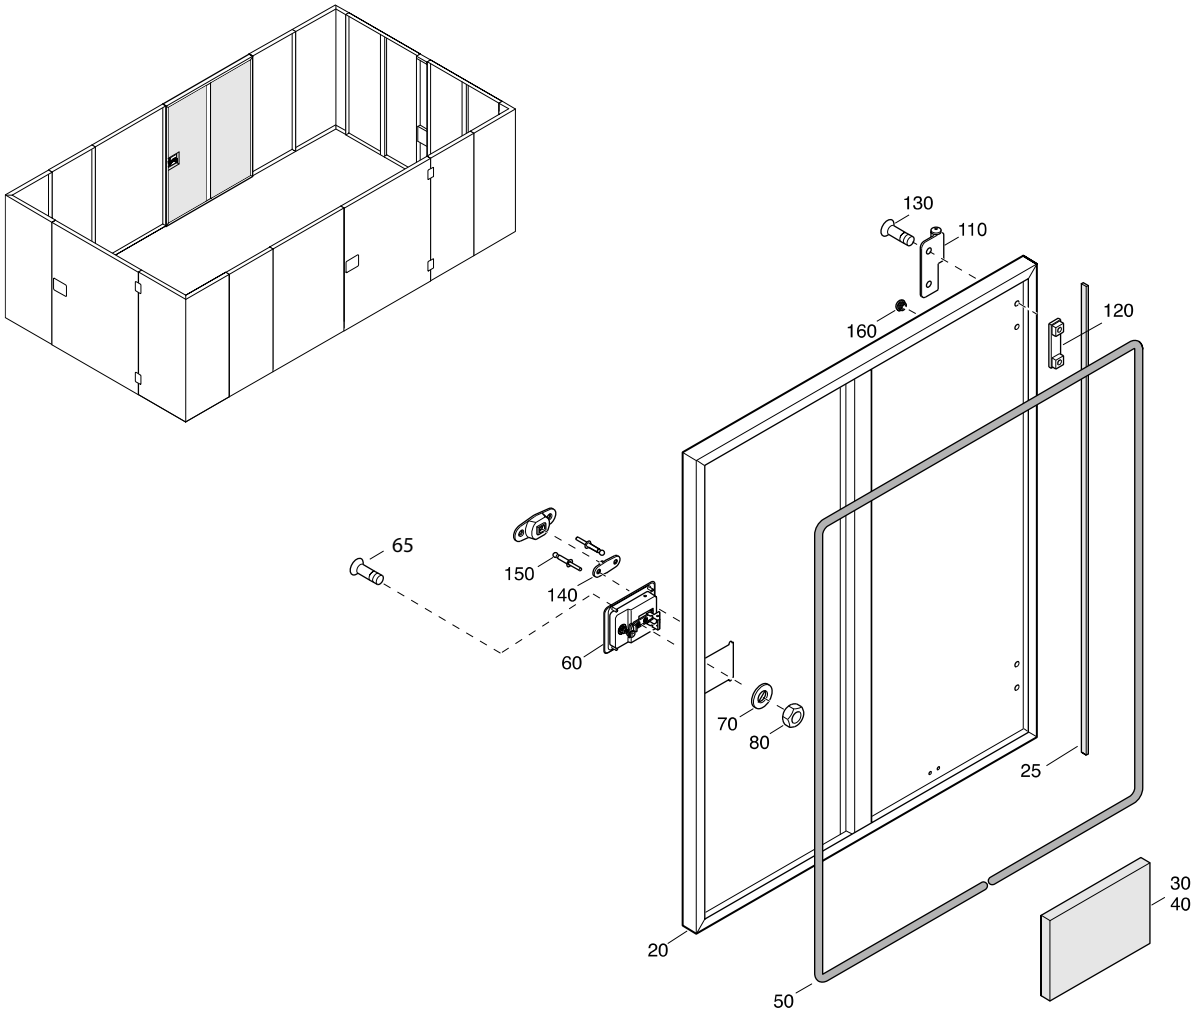


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0664 81	DOOR ASSY	
•20	1092 0664 00	DOOR	1
•25	1619 6858 00	SEAL	AR
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•50	1619 2665 00	SEAL	AR
•60	1092 0668 00	HANDLE	1
•65	0160 0996 11	CROSS REC SCREW	4
•70	0301 2315 00	PLAIN WASHER	4
•80	0291 1106 00	LOCKNUT	4
•110	1604 3431 00	HINGE	2
•120	1615 5684 00	BRACKET	2
•130	0216 1324 03	HEX SOCK. SCREW	4
•140	1619 1663 00	DOOR HOOK	1
•150	0129 3270 17	BLIND RIVET	2
•160	0686 9252 87	PLUG	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

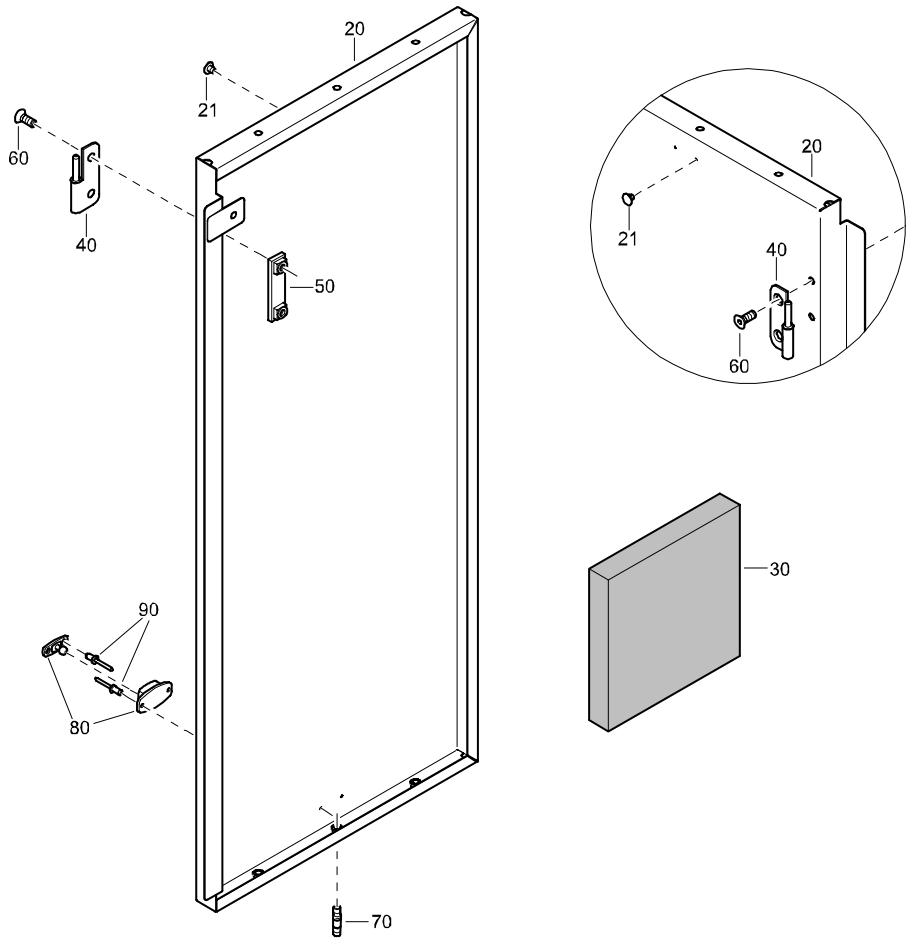


REF	PART NUMBER	DESIGNATION	QTY
-	1604 2460 82	PANEL ASSY (From page 50)	
•20	1604 2460 01	PANEL	1
•21	0686 9252 87	PLUG	2
•30	-	SILENCING FOAM	1
•40	1604 3428 00	HINGE	2
•50	1615 5684 00	BRACKET	2
•60	0216 1324 03	HEX SOCK. SCREW	4
•70	0246 1956 35	STUD	2
•80	1619 1663 00	DOOR HOOK	1
•90	0129 3270 17	BLIND RIVET	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY

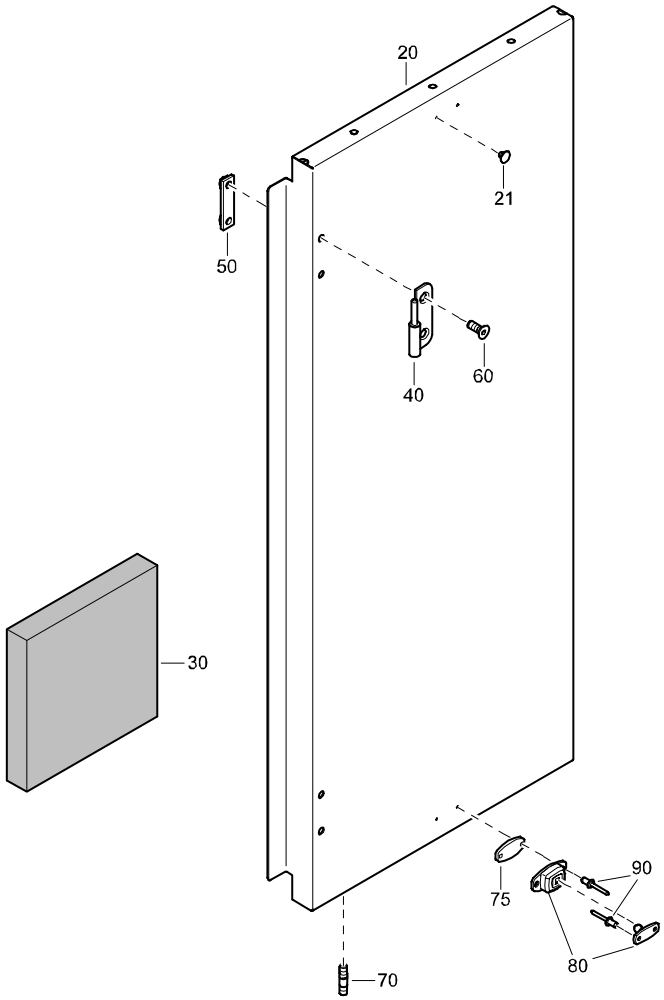

REF	PART NUMBER	DESIGNATION	QTY
-	1604 2460 84	PANEL ASSY (From page 50)	
•20	1604 2460 01	PANEL	1
•21	0686 9252 87	PLUG	2
•30	-	SILENCING FOAM	1
•40	1604 3430 00	HINGE	2
•50	1615 5684 00	BRACKET	2
•60	0216 1324 03	HEX SOCK. SCREW	4
•70	0246 1956 35	STUD	2
•75	1604 4390 01	SPACER	1
•80	1619 1663 00	DOOR HOOK	1
•90	0129 3117 00	BLIND RIVET	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY

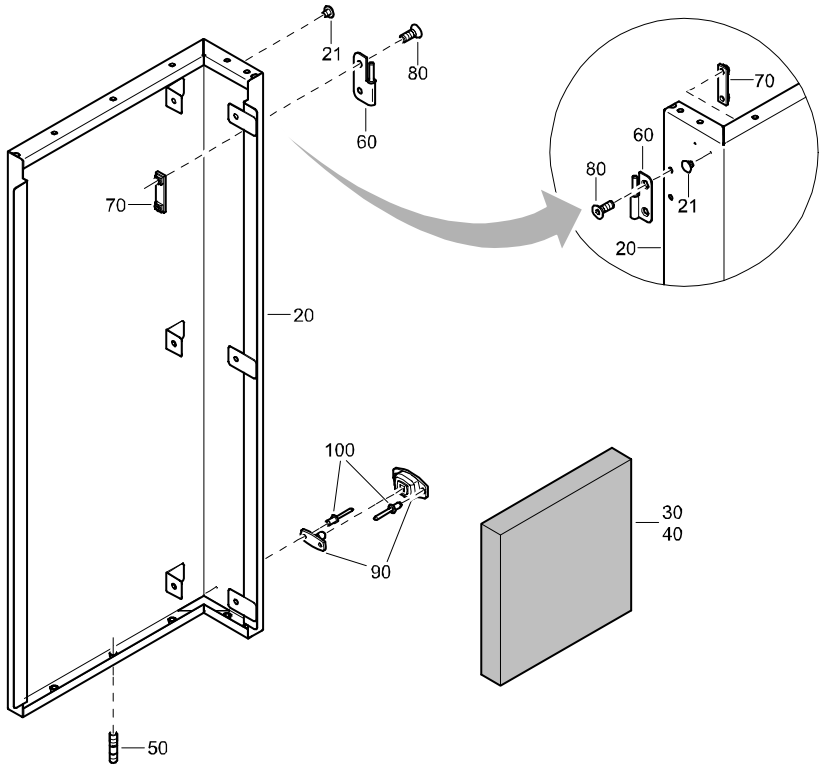


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0575 80	CORNER ASSY (From page 50)	
•20	1092 0575 00	PANEL	1
•21	0686 9252 87	PLUG	2
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•50	0246 1956 35	STUD	4
•60	1604 3430 00	HINGE	2
•70	1615 5684 00	BRACKET	2
•80	0216 1324 03	HEX SOCK. SCREW	4
•90	1619 1663 00	DOOR HOOK	1
•100	0129 3270 17	BLIND RIVET	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY


STANDARD

CORNER ASSEMBLY

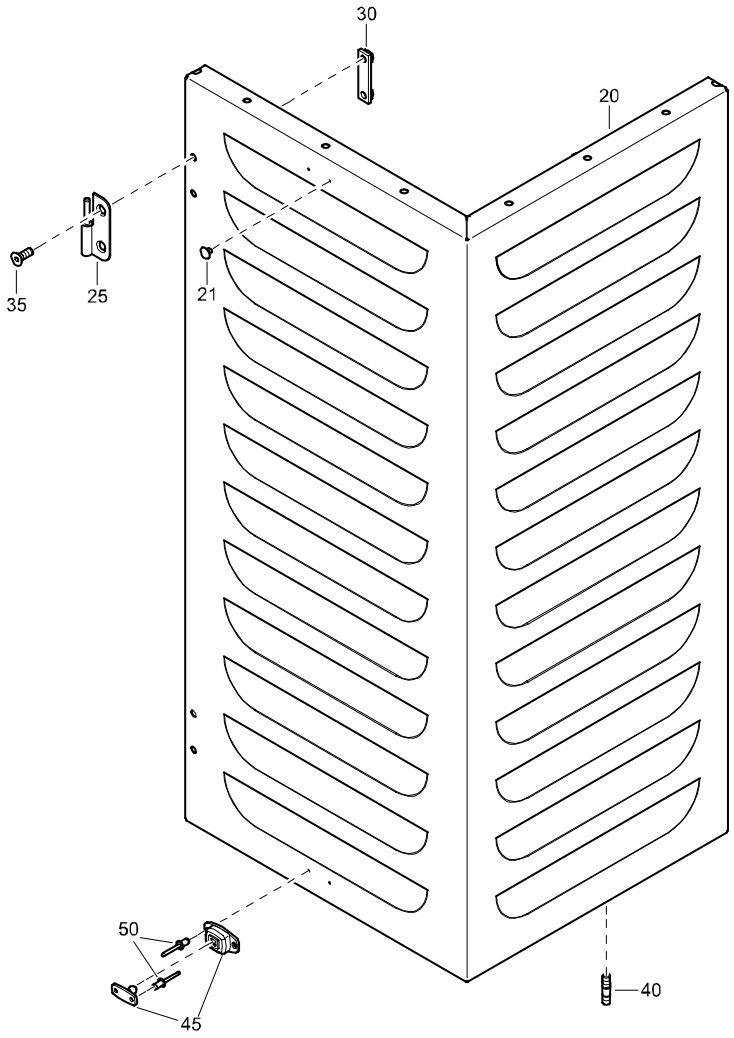

REF	PART NUMBER	DESIGNATION	QTY
-	1604 2468 80	CORNER ASSY (From page 70)	
•20	1604 2468 00	PANEL	1
•21	0686 9252 87	PLUG	2
•25	1604 3430 00	HINGE	2
•30	1615 5684 00	BRACKET	2
•35	0216 1324 03	HEX SOCK. SCREW	4
•40	0246 1956 35	STUD	4
•45	1619 1663 00	DOOR HOOK	1
•50	0129 3270 17	BLIND RIVET	2


REF	PART NUMBER	DESIGNATION	QTY

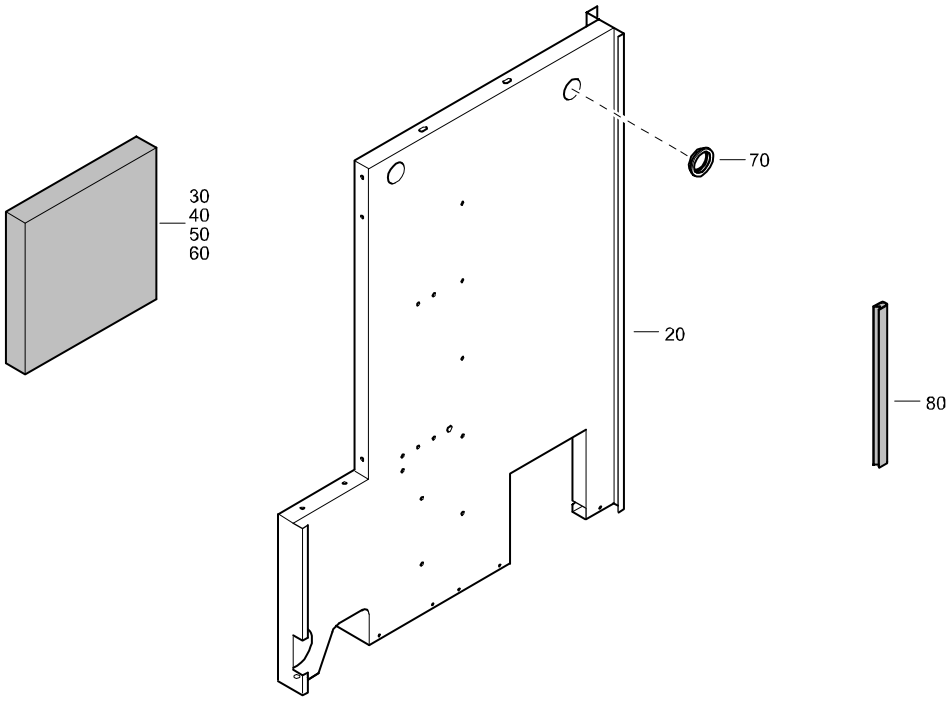


REF	PART NUMBER	DESIGNATION	QTY
-	1604 2472 84	PANEL ASSEMBLY (From page 53)	
•20	1604 2472 03	PANEL	1
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•50	-	SILENCING FOAM	1
•60	-	SILENCING FOAM	1
•70	1604 0383 00	SEAL (OIL SEPARATOR)	2
•80	1503 1056 00	SEAL	AR


REF	PART NUMBER	DESIGNATION	QTY


-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm

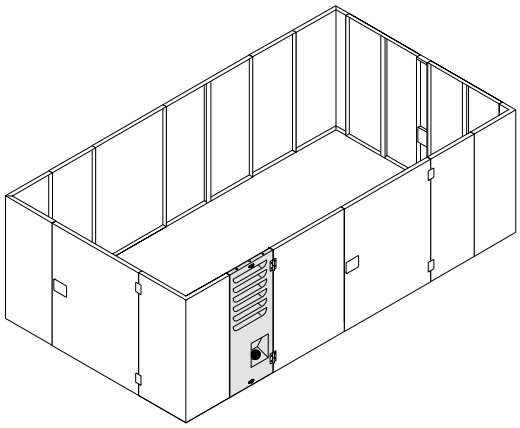

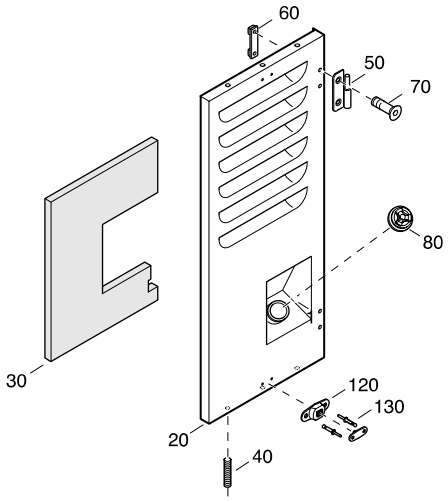

REF	PART NUMBER	DESIGNATION	QTY
-	1092 0694 80	PANEL ASSY (From page 50)	
•20	1092 0694 00	PANEL	1
•21	0686 9252 87	PLUG	2
•30	-	SILENCING FOAM	1
•40	0246 1956 35	STUD	2
•50	1604 3428 00	HINGE	2
•60	1615 5684 00	BRACKET	2
•70	0216 1324 03	HEX SOCK. SCREW	4
•80	1092 0697 00	COVER	1
•120	1619 1663 00	DOOR HOOK	1
•130	0129 3270 17	BLIND RIVET	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

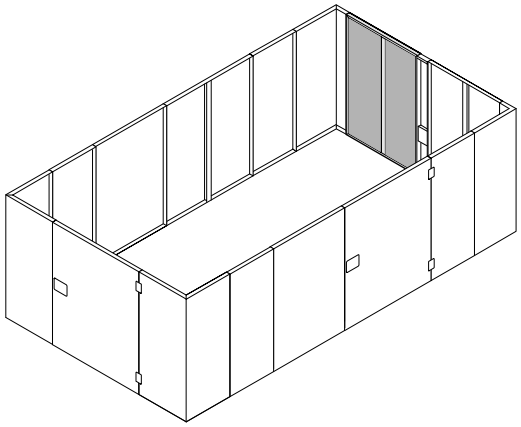


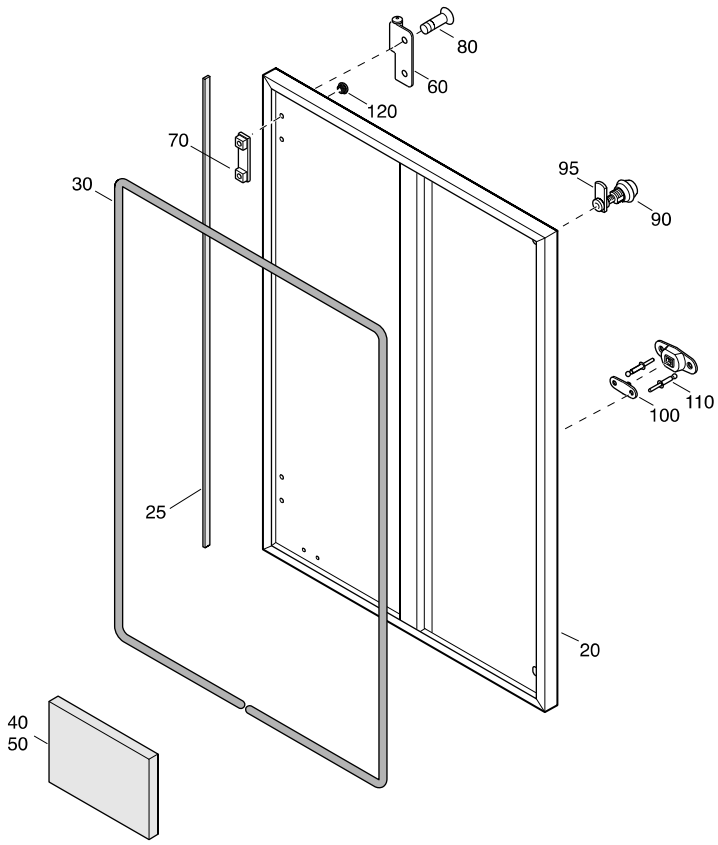


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0583 26	DOOR ASSY (From page 50)	
•20	1604 2487 02	DOOR	1
•25	1619 6858 00	SEAL	AR
•30	1619 2665 00	SEAL	AR
•40	-	SILENCING FOAM	1
•50	-	SILENCING FOAM	1
•60	1604 3431 00	HINGE	2
•70	1615 5684 00	BRACKET	2
•80	0216 1324 03	HEX SOCK. SCREW	4
•90	1092 0612 00	LOCK	2
•95	1092 0613 00	LATCH	2
•100	1619 1663 00	DOOR HOOK	1
•110	0129 3270 17	BLIND RIVET	2
•120	0686 9252 87	PLUG	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

STANDARD

DOOR ASSEMBLY

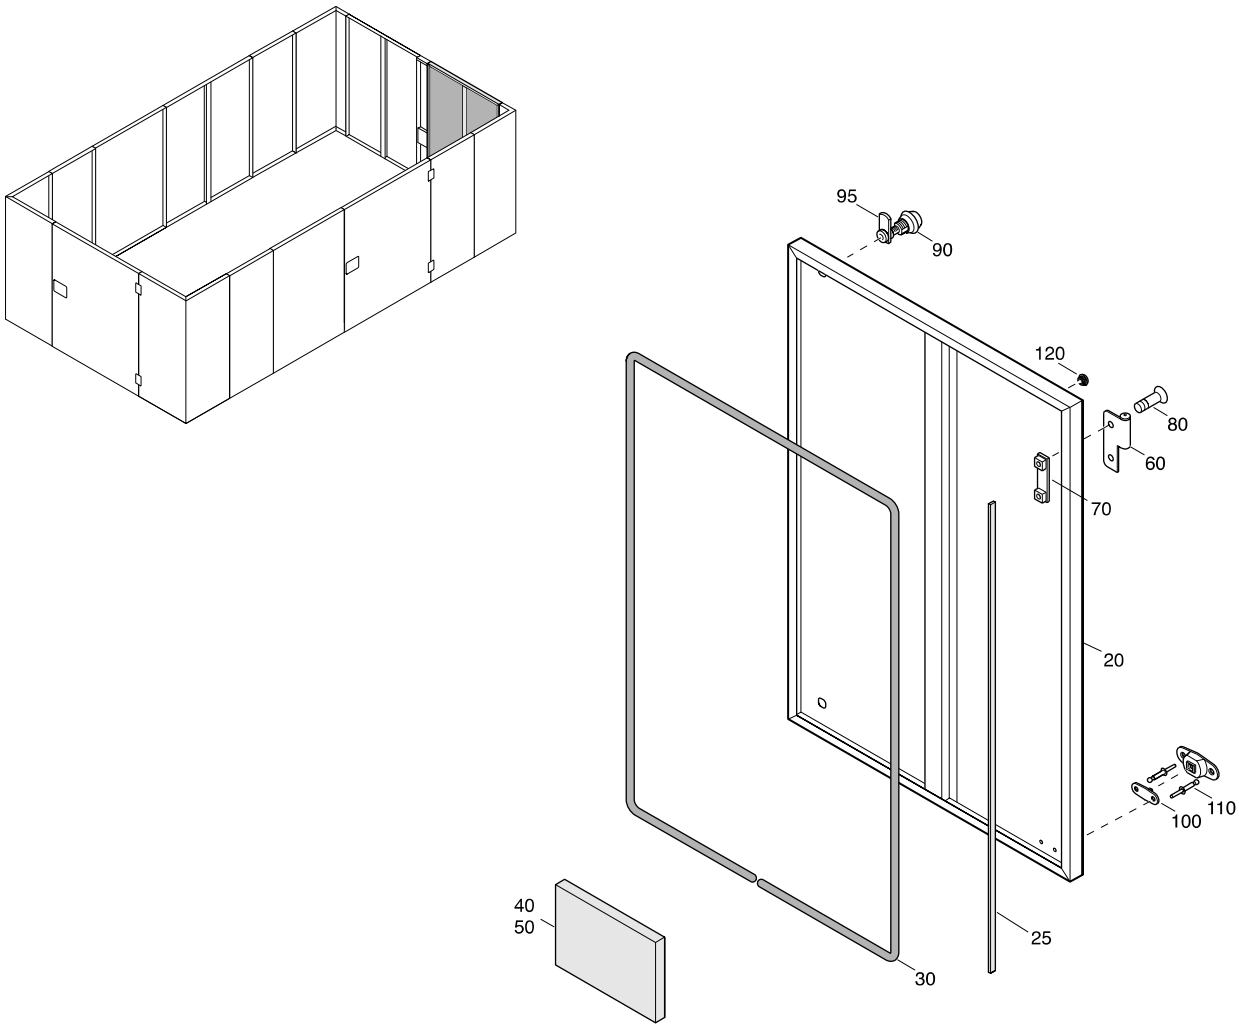


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0583 25	DOOR ASSY (From page 50)	
•20	1604 2487 02	DOOR	1
•25	1619 6858 00	SEAL	AR
•30	1619 2665 00	SEAL	AR
•40	-	SILENCING FOAM	1
•50	-	SILENCING FOAM	1
•60	1604 3429 00	HINGE	2
•70	1615 5684 00	BRACKET	2
•80	0216 1324 03	HEX SOCK. SCREW	4
•90	1092 0612 00	LOCK	2
•95	1092 0613 00	LATCH	2
•100	1619 1663 00	DOOR HOOK	1
•110	0129 3270 17	BLIND RIVET	2
•120	0686 9252 87	PLUG	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

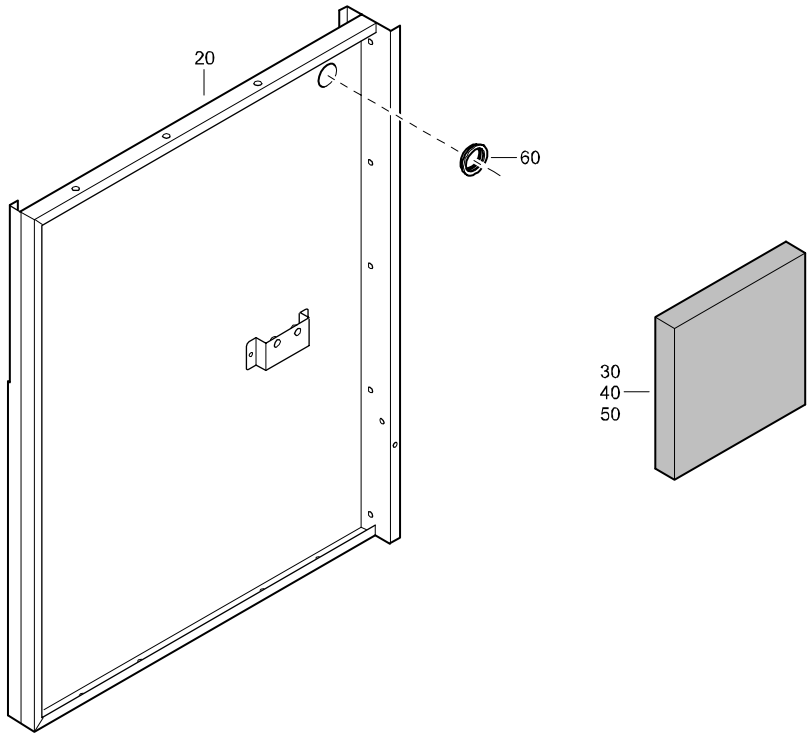

REF	PART NUMBER	DESIGNATION	QTY
-	1604 2477 82	PANEL ASSEMBLY (From page 70)	
•20	1604 2477 02	CORNER PANEL	1
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•50	-	SILENCING FOAM	1
•60	1604 0383 00	SEAL (OIL SEPARATOR)	1


REF	PART NUMBER	DESIGNATION	QTY

-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm

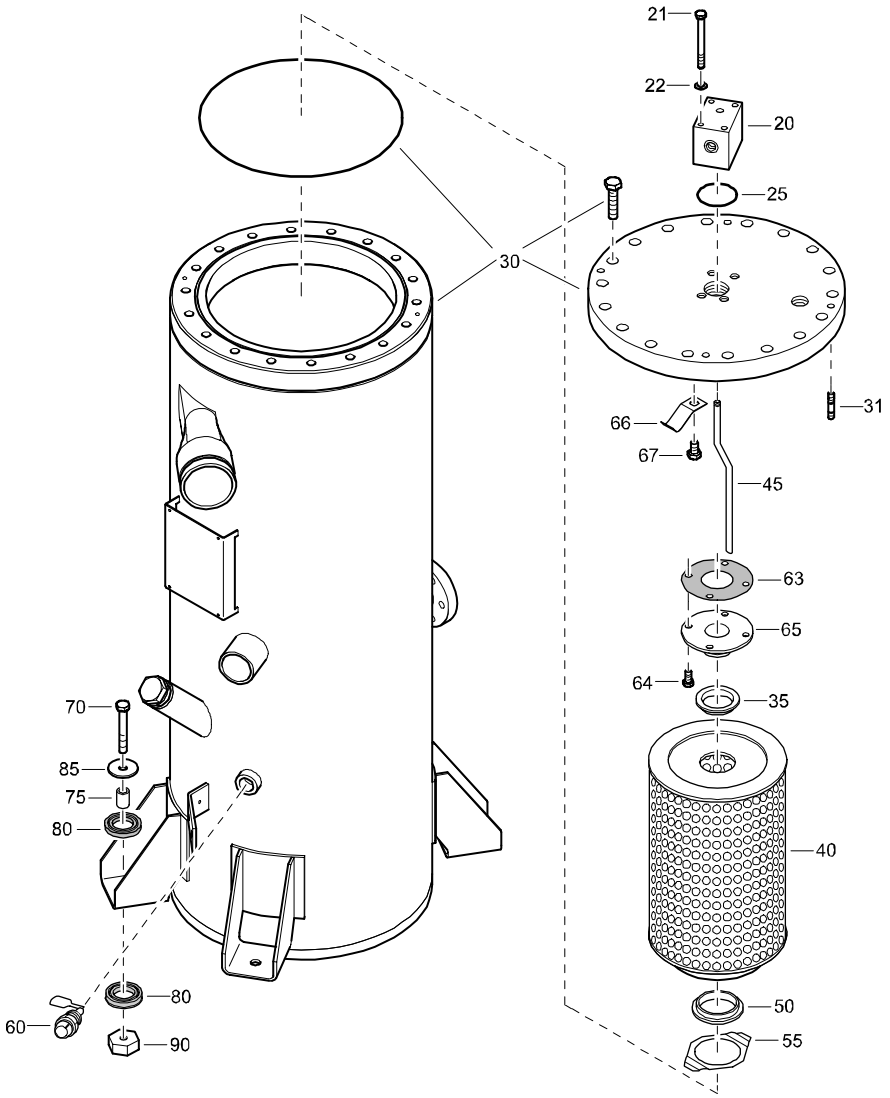


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0583 06	OILSEPARATOR ASSEMBLY (From page 74) SQL	
•20	1092 0394 98	ADAPTER	1
•21	0147 1336 03	HEX. HEAD SCREW	4
•22	0301 2335 00	PLAIN WASHER	4
•25	0663 3134 00	O-RING	1
•30	1092 0696 80	PRESS. VESSEL ASSY SQL (For details see page 111)	1
•31	0246 1956 29	STUD	2
•35	1604 0383 00	SEAL (OIL SEPARATOR) (Part of service kit, see page 29)	1
•40	1604 1328 02	OILSEP.ELEMENT (Part of service kit, see page 29)	1
•45	1604 2535 03	TUBE	1
•50	1604 1329 01	SEAL (OILSEPARATOR) (Part of service kit, see page 29)	1
•55	1604 1330 01	RETAINER	1
•60	1616 5108 00	LEVEL GAUGE	1
•63	1604 5746 00	GASKET	1
•64	0147 1322 03	HEX. HEAD SCREW	4
•65	1092 0394 98	ADAPTER	1
•66	1604 5745 00	RETAINER	1

REF	PART NUMBER	DESIGNATION	QTY
•67	0147 1320 03	HEX. HEAD SCREW	1
•70	0147 1371 12	HEX. HEAD SCREW	4
•75	0324 1000 27	DISTANCE SLEEVE	4
•80	1604 2725 00	BUFFER	8
•85	1604 2726 00	WASHER	4
•90	1604 2727 00	WASHER	4

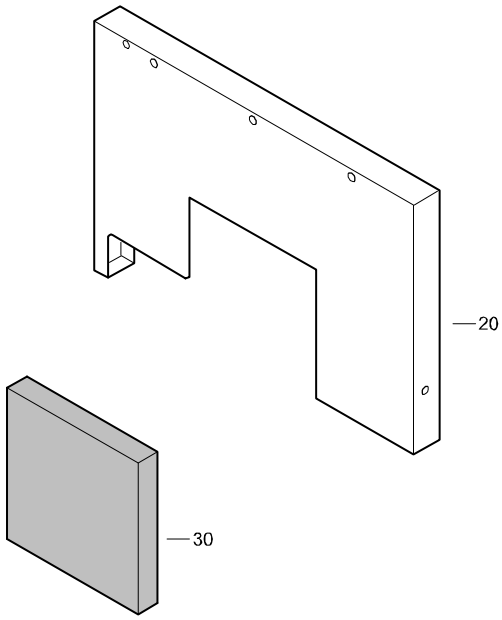

REF	PART NUMBER	DESIGNATION	QTY
-	1604 2542 81	PANEL ASSY (From page 70)	1
•20	1604 2542 01	PLATE	1
•30	-	SILENCING FOAM	1
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	


REF	PART NUMBER	DESIGNATION	QTY

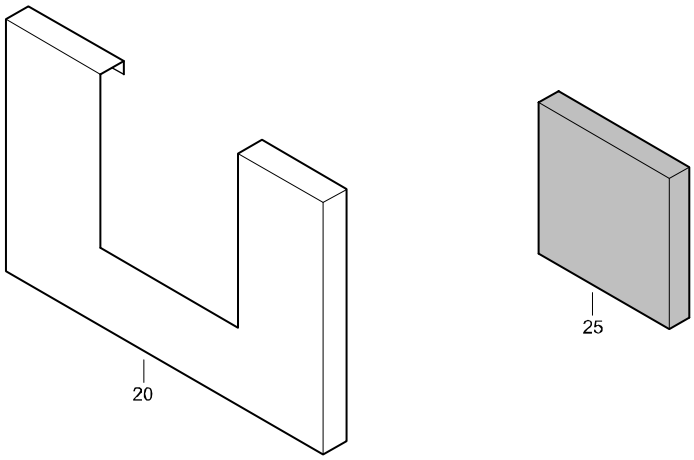

REF	PART NUMBER	DESIGNATION	QTY
-	1604 2543 83	PANEL ASSEMBLY (From page 53)	
•20	1604 2543 03	PANEL	1
•25	-	SILENCING FOAM	1

REF	PART NUMBER	DESIGNATION	QTY

-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm

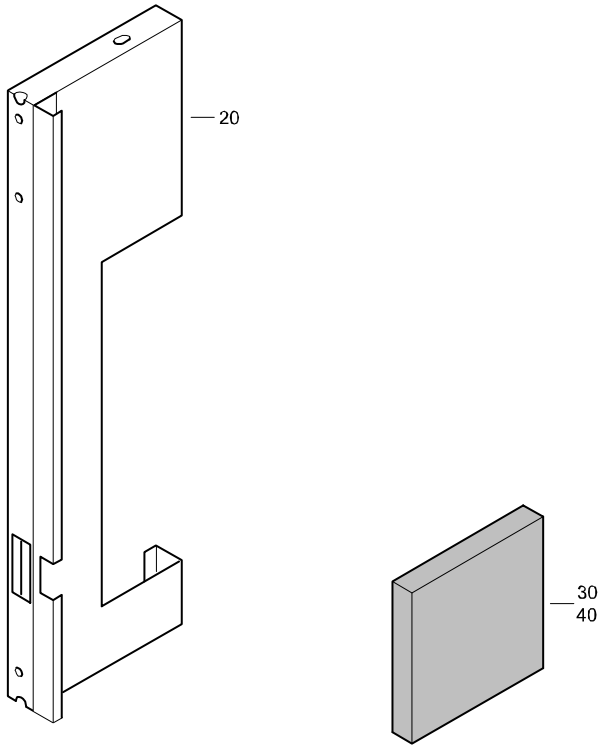


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0612 71	PANEL ASSEMBLY (From page 52)	
•20	1092 0423 13	PANEL	1
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1

REF	PART NUMBER	DESIGNATION	QTY

-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm

STANDARD


PLATE ASSEMBLY

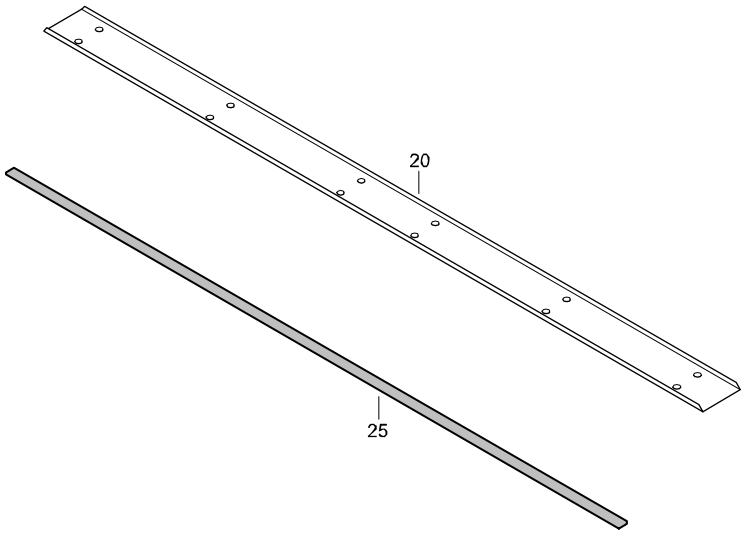

REF	PART NUMBER	DESIGNATION		QTY
-	1604 3726 80	PLATE ASSY	(From page 54)	
•20	1604 3726 00	PLATE		1
•25	1604 1275 00	SEAL		AR


REF	PART NUMBER	DESIGNATION	QTY

ROOF ASSEMBLY FRONT

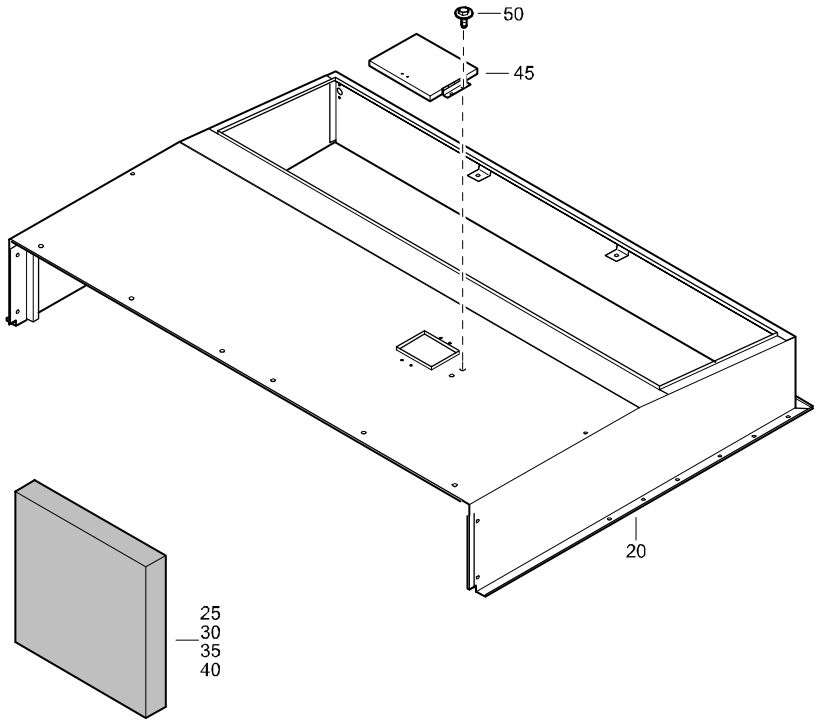

REF	PART NUMBER	DESIGNATION	QTY
-	1604 4250 81	ROOF ASSY FRONT (From page 73)	
•20	1604 4250 01	ROOF	1
•25	-	SILENCING FOAM	1
•30	-	SILENCING FOAM	1
•35	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•45	1604 2518 81	COVER ASSY	1
		(For details see page 107)	
•50	1604 3423 00	SCRAPER BOLT	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY

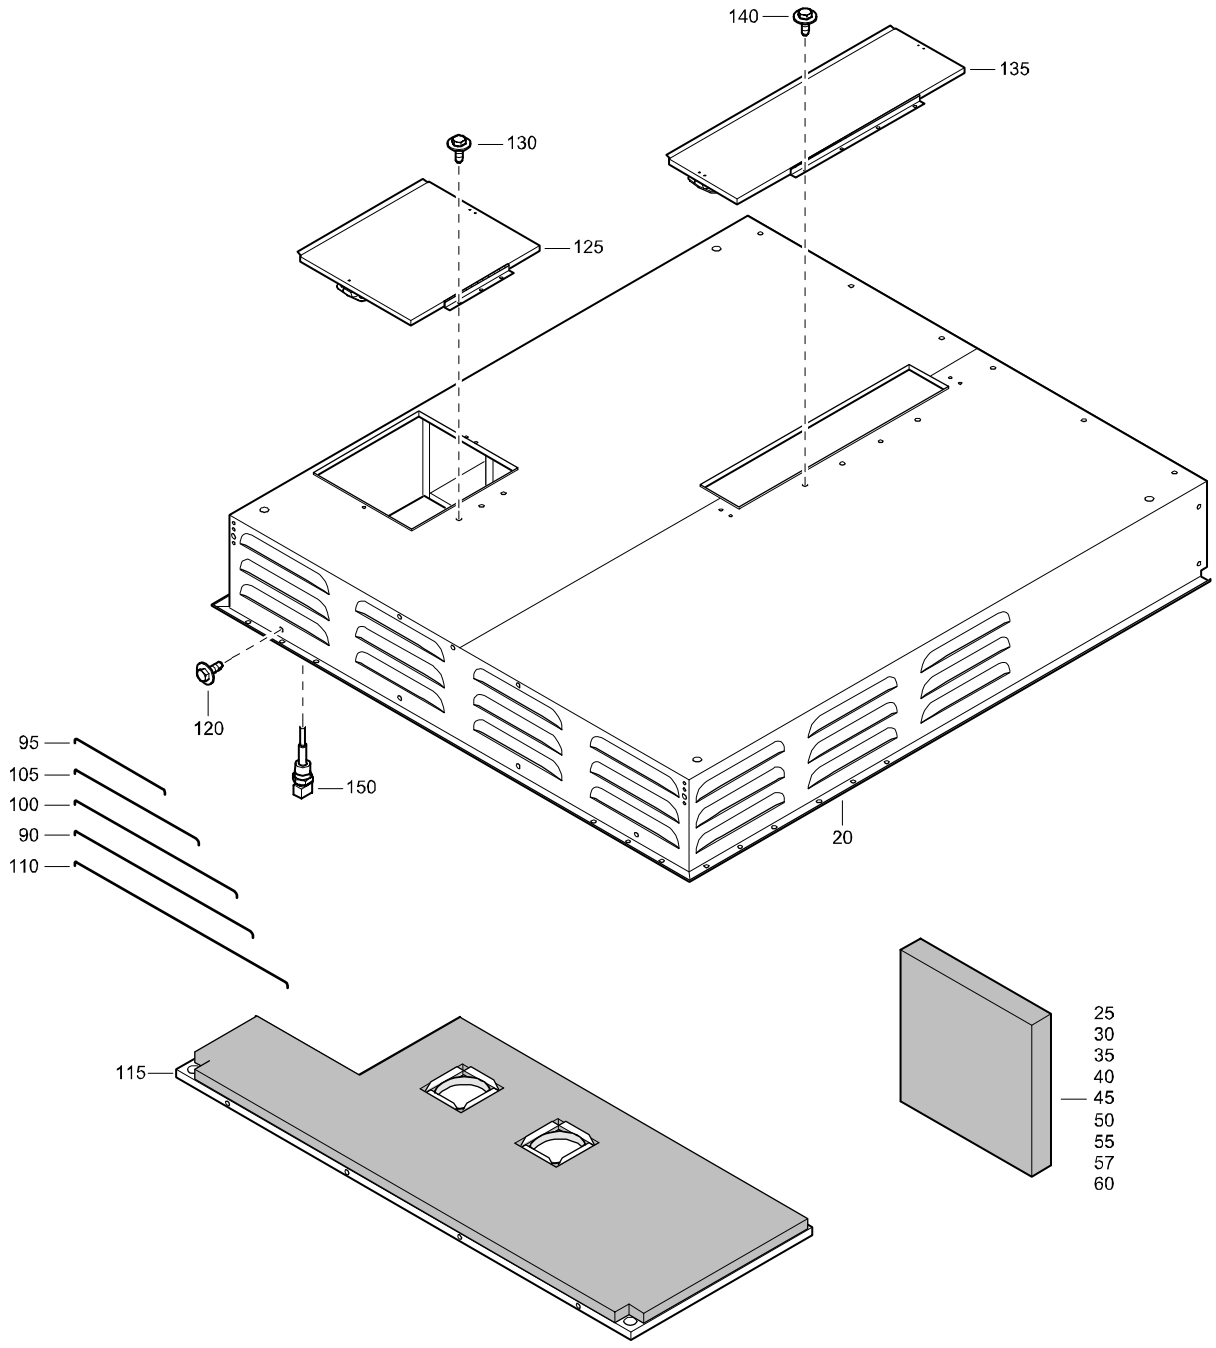
140
135
130
125
120
150
95
105
100
90
110
20
115
25
30
35
40
45
50
55
57
60


STANDARD

ROOF ASSEMBLY REAR ROW

REF	PART NUMBER	DESIGNATION	QTY
-	1092 0583 67	ROOF ASSEMBLY (From page 73)	
•20	1092 0322 00	ROOF	1
•25	-	SILENCING FOAM	1
•30	-	SILENCING FOAM	1
•35	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•45	-	SILENCING FOAM	1
•50	-	SILENCING FOAM	1
•55	-	SILENCING FOAM	4
•57	-	SILENCING FOAM	2
•60	-	SILENCING FOAM	2
•90	1604 3413 00	RETAINER	9
•95	1604 3417 00	RETAINER	6
•100	1604 3416 00	RETAINER	4
•105	1604 3414 00	RETAINER	2
•110	1604 3415 00	RETAINER	4
•115	1604 2498 81	ROOF ASSY	1
		(For details see page 104)	
•120	1604 3423 00	SCRAPER BOLT	8
•125	1092 0378 80	DOOR ASSY	1
		(For details see page 106)	
•130	1615 5664 00	HEX. HEAD SCREW	3
•135	1604 2513 82	DOOR ASSY	1
		(For details see page 105)	
•140	1615 5664 00	HEX. HEAD SCREW	4
•150	1089 0574 49	TEMP.SENSOR	1


REF	PART NUMBER	DESIGNATION	QTY

-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm

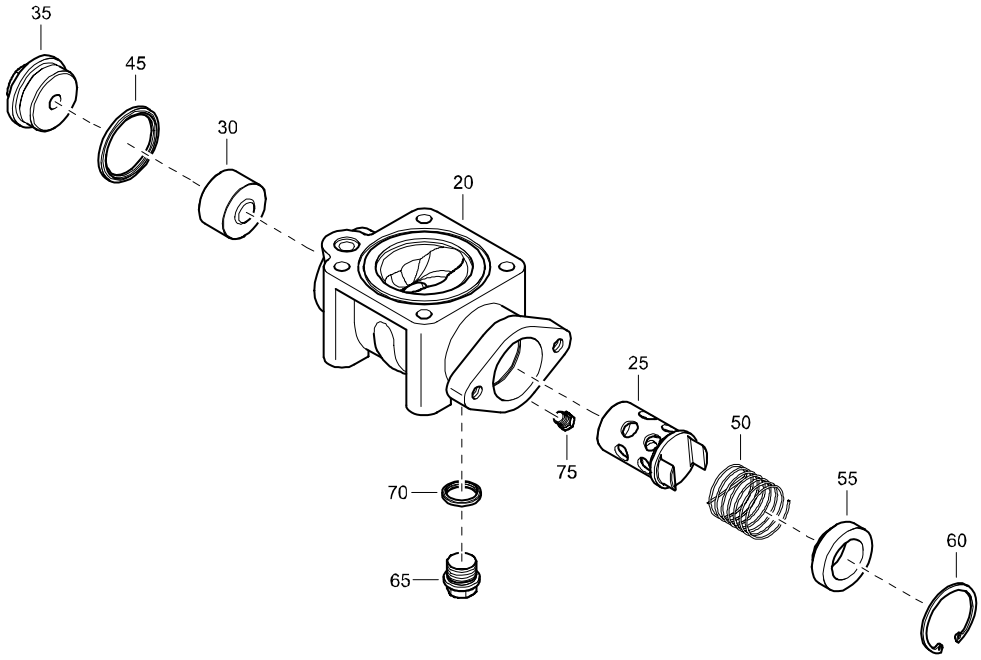


REF	PART NUMBER	DESIGNATION	QTY
-	1604 6109 80	HOUSING (From page 38)	
•20	-	HOUSING (Not available separately)	1
•25	-	VALVE OILSTOP (Part of service kit, see page 30)	1
•30	2255 2813 00	PISTON	1
•35	2253 3565 00	REDUCER	1
•45	-	SEALING WASHER (Part of service kit, see page 30)	1
•50	-	COMPR.SPRING (Part of service kit, see page 30)	1
•55	2252 6269 00	SPRING GUIDE	1
•60	0335 2145 00	CIRCLIP	1
•65	0686 3716 02	HEXAGON PLUG	1
•70	0661 1033 00	SEALING WASHER	1
•75	0686 3115 20	PLUG	1


REF	PART NUMBER	DESIGNATION	QTY

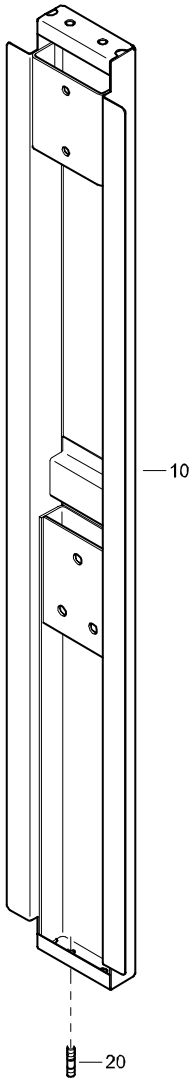

REF	PART NUMBER	DESIGNATION		QTY
-	1604 3716 81	PANEL ASSY	(From page 50)	1
•10	1604 3716 01	PANEL		1
•20	0246 1956 35	STUD		1


REF	PART NUMBER	DESIGNATION	QTY

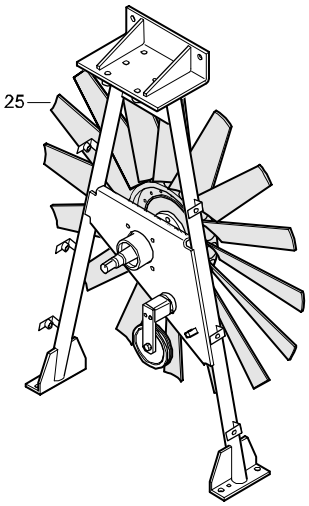

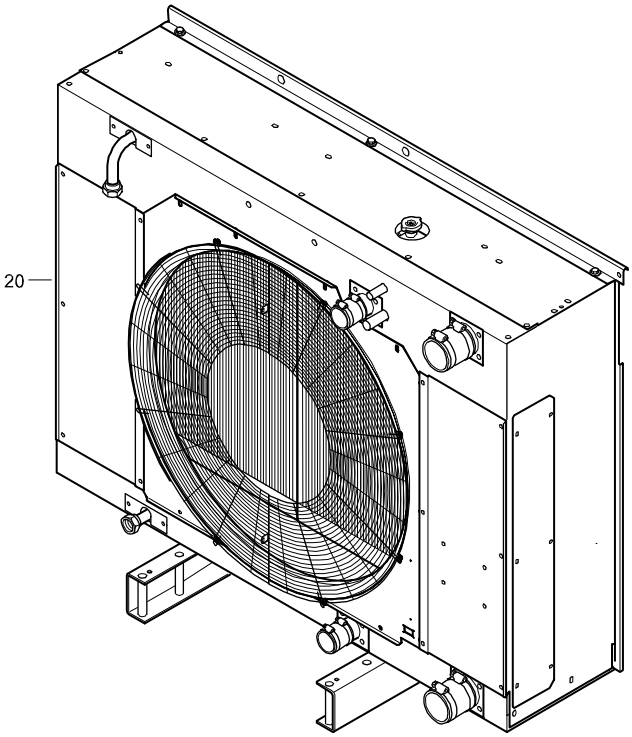


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0610 91	COOLER & FANDRIVE ASSY (From page 43)	
•20	1092 0610 88	COOLER ASSY C13 (For details see page 108)	1
•25	1092 0610 89	FANDRIVE ASSY C13 (For details see page 112)	1

REF	PART NUMBER	DESIGNATION	QTY

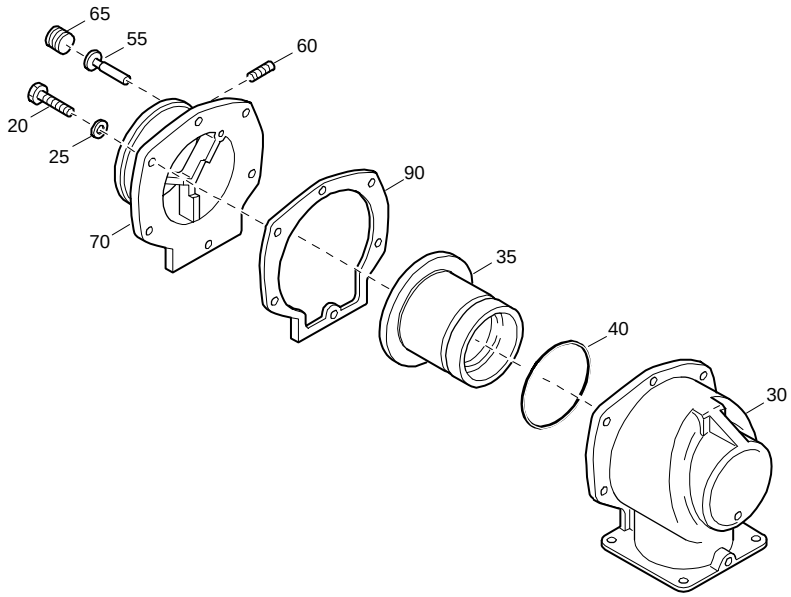

REF	PART NUMBER	DESIGNATION	QTY
-	2252 5502 92	UNLOADER ASSEMBLY (From page 38)	
•20	0147 1327 03	HEX. HEAD SCREW	6
•25	0301 2335 00	PLAIN WASHER	6
•30	-	UNLOADER HOUS. (Not available separately)	1
•35	2252 5503 02	VALVE	1
•40	-	SEALRING (Part of service kit, see page 25)	1
•55	2252 5508 00	VALVE	1
•60	0686 2606 00	CORE PLUG	1
•65	1613 2913 00	PLUG	1
•70	-	CONNECTION (Not available separately)	1
•90	-	GASKET (Part of service kit, see page 25)	1


REF	PART NUMBER	DESIGNATION	QTY

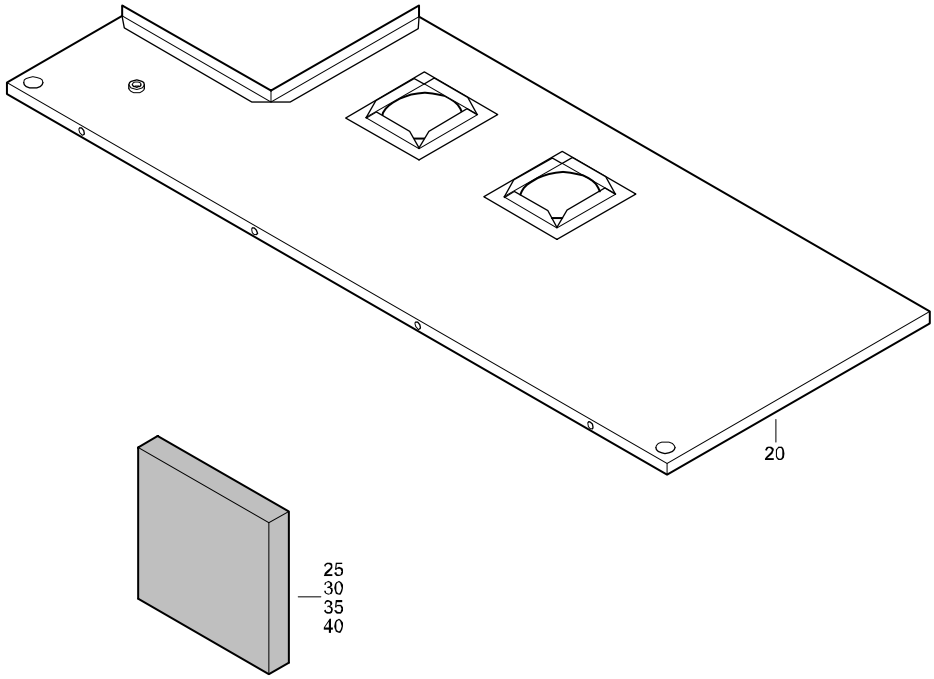

REF	PART NUMBER	DESIGNATION	QTY
	1604 2498 81	ROOF ASSY (From page 99)	1
•20	1604 2498 01	ROOF (INNER RIGHT)	1
•25	-	SILENCING FOAM	1
•30	-	SILENCING FOAM	1
•35	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	


REF	PART NUMBER	DESIGNATION	QTY

DOOR ASSEMBLY

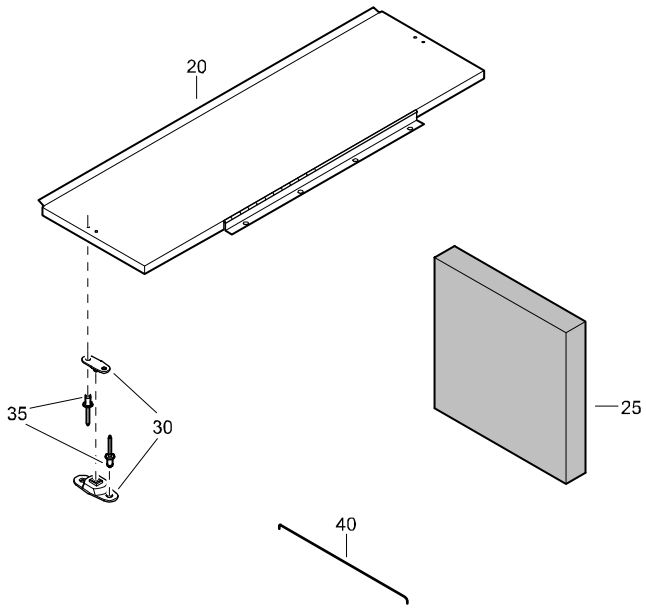


REF	PART NUMBER	DESIGNATION	QTY
-	1604 2513 82	DOOR ASSY (From page 99)	
•20	1604 2513 02	DOOR	1
•25	-	SILENCING FOAM	1
•30	1619 1663 00	DOOR HOOK	2
•35	0129 3270 17	BLIND RIVET	8
•40	1604 3413 00	RETAINER	1
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY

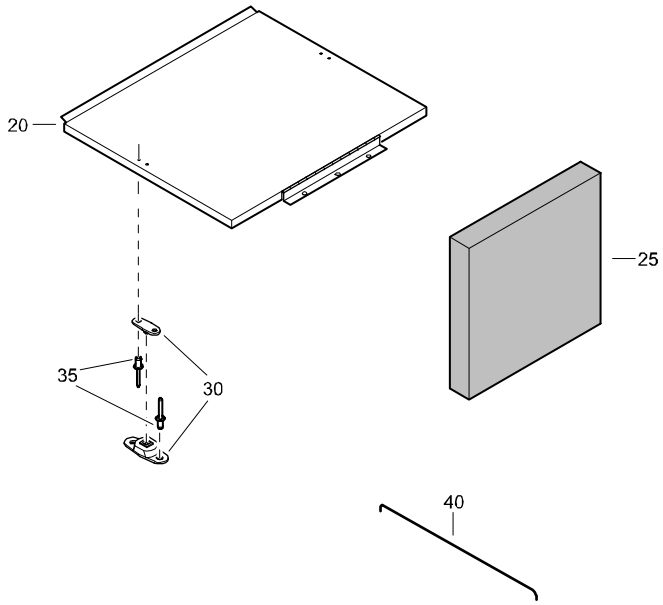


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0378 80	DOOR ASSY (From page 99)	
•20	1092 0378 00	DOOR	1
•25	-	SILENCING FOAM	1
•30	1619 1663 00	DOOR HOOK	2
•35	0129 3270 17	BLIND RIVET	8
•40	1604 3414 00	RETAINER	1
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY

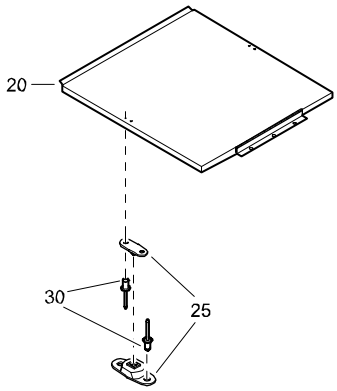

REF	PART NUMBER	DESIGNATION		QTY
-	1604 2518 81	COVER ASSY	(From page 97)	1
•20	1604 2518 01	COVER		1
•25	1619 1663 00	DOOR HOOK		2
•30	0129 3270 17	BLIND RIVET		8

REF	PART NUMBER	DESIGNATION	QTY

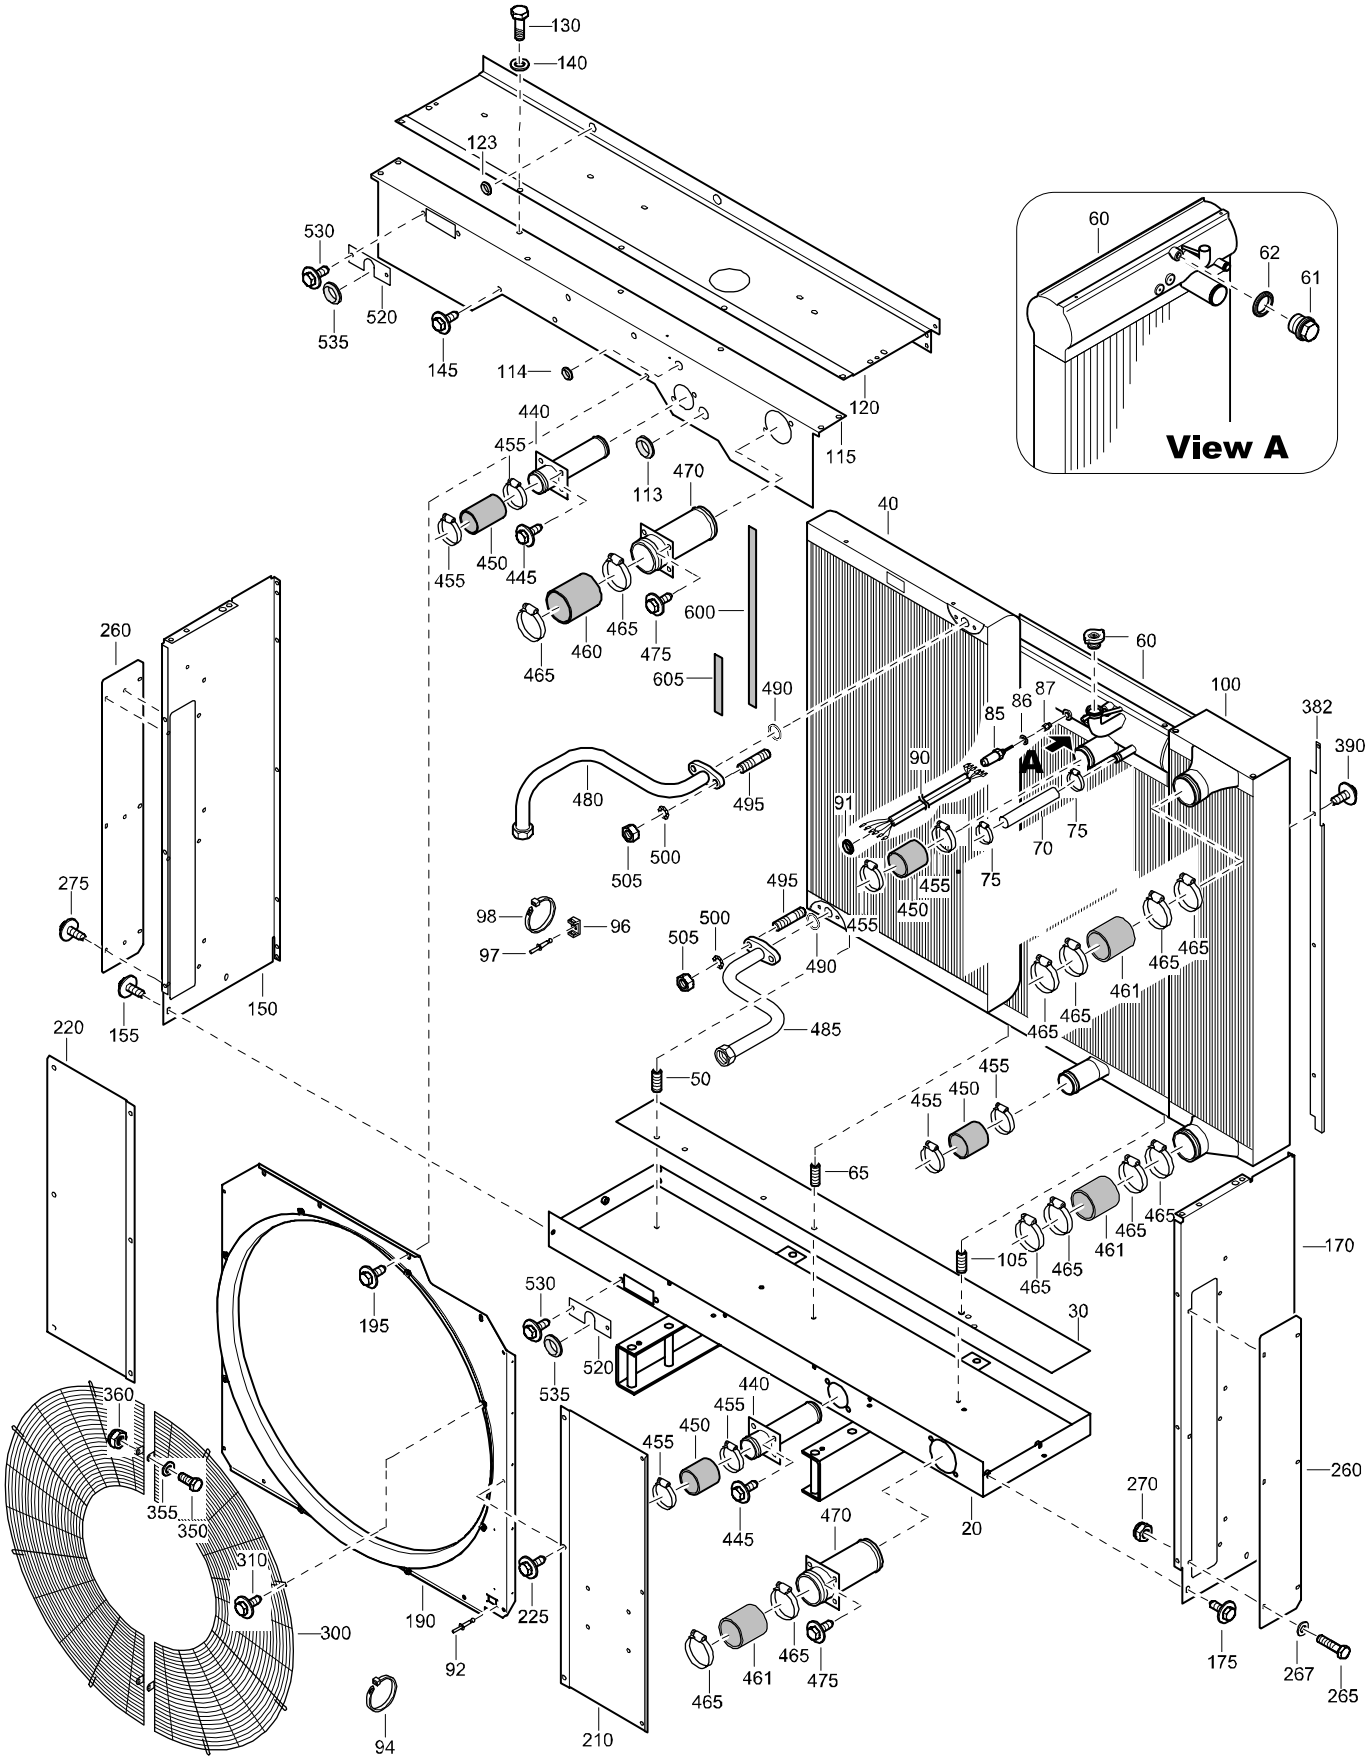

View A
130
140
123
530
520
535
145
114
120
115
440
455
113
470
455
450
445
460
465
475
600
605
40
60
260
490
480
495
500
505
85
86
87
100
382
390
90
91
70
75
275
98
96
97
150
155
220
50
65
105
170
30
195
360
355
350
310
300
190
92
225
94
210
20
270
175
267
265

STANDARD

COOLER ASSEMBLY

REF	PART NUMBER	DESIGNATION	QTY
-	1092 0610 88	COOLER ASSEMBLY (From page 102)	
•20	1604 3734 02	SUPPORT	1
•30	1604 3701 01	PAD	1
•40	1092 0348 37	OILCOOLER	1
•50	0196 1362 00	SET SCREW	2
•60	1092 0348 38	RADIATOR	1
•61	0686 3716 02	HEXAGON PLUG	1
•62	0661 1033 00	SEALING WASHER	1
•65	0196 1362 00	SET SCREW	2
•70	1092 0642 05	RUBBER TUBE	AR
•75	0347 6110 00	HOSE CLAMP	2
•85	1089 0659 53	LEVEL SWITCH	2
•86	0661 1023 00	SEALING WASHER	2
•87	1615 9329 00	NIPPLE	2
•90	1604 2812 02	WIRING	1
•91	1088 0801 28	GROMMET	1
•92	0129 3115 00	BLIND RIVET	4
•94	1088 1301 02	CABLE STRIP	5
•96	0348 0110 03	ANCHOR PLATE	5
•97	0129 3115 00	BLIND RIVET	5
•98	1088 1301 02	CABLE STRIP	5
•100	1092 0348 36	INTERCOOLER	1
•105	0196 1362 00	SET SCREW	2
•113	1604 2496 00	GROMMET	1
•114	1088 0801 33	GROMMET	1
•115	1604 3736 01	BEAM	1
•120	1604 3703 03	BEAM	1
•123	1088 0801 33	GROMMET	1
•130	0147 1362 03	HEX. HEAD SCREW	6
•140	0301 2344 00	PLAIN WASHER	6
•145	1615 5664 00	HEX. HEAD SCREW	3
•150	1604 3624 00	PLATE	1
•155	1615 5664 00	HEX. HEAD SCREW	9
•170	1604 3623 00	PLATE	1
•175	1615 5664 00	HEX. HEAD SCREW	9
•190	1604 3631 00	FAN COWL	1
•195	1615 5664 00	HEX. HEAD SCREW	8
•210	1604 3636 00	PLATE	1
•220	1604 3630 00	PLATE	1
•225	1615 5664 00	HEX. HEAD SCREW	12
•260	1604 3748 00	COVER	2
•265	0147 1326 03	HEX. HEAD SCREW	6
•267	0301 2335 00	PLAIN WASHER	6
•270	0291 1110 00	LOCKNUT	6
•275	1615 5664 00	HEX. HEAD SCREW	6
•300	1604 2643 00	FAN GUARD	2
•310	1615 5664 00	HEX. HEAD SCREW	8
•350	0147 1323 03	HEX. HEAD SCREW	2
•355	0301 2335 00	PLAIN WASHER	2
•360	0291 1110 00	LOCKNUT	2
•382	1604 3705 00	PLATE	1
•390	1615 5664 00	HEX. HEAD SCREW	4
•440	1604 2770 01	PIPE	2
•445	1615 5664 00	HEX. HEAD SCREW	4
•450	2252 6291 01	HOSE	4
•455	0347 6100 21	HOSE CLAMP	8
•460	1604 2786 02	HOSE	2
•461	1604 2785 00	HOSE	2
•465	0347 6100 23	HOSE CLAMP	12
•470	1604 2769 01	PIPE	2
•475	1615 5664 00	HEX. HEAD SCREW	4
•480	1604 2586 01	PIPE	1
•485	1604 2464 01	PIPE	1


REF	PART NUMBER	DESIGNATION	QTY
•490	0663 3131 00	O-RING	2
•495	0246 1956 42	STUD	4
•500	0333 3232 00	LOCK WASHER	4
•505	0266 2111 00	HEXAGON NUT	4
•520	1604 2771 01	PLATE	2
•530	1615 5664 00	HEX. HEAD SCREW	4
•535	1604 2496 00	GROMMET	2
•600	1619 5562 00	SEAL	AR
•605	1619 5562 00	SEAL	AR

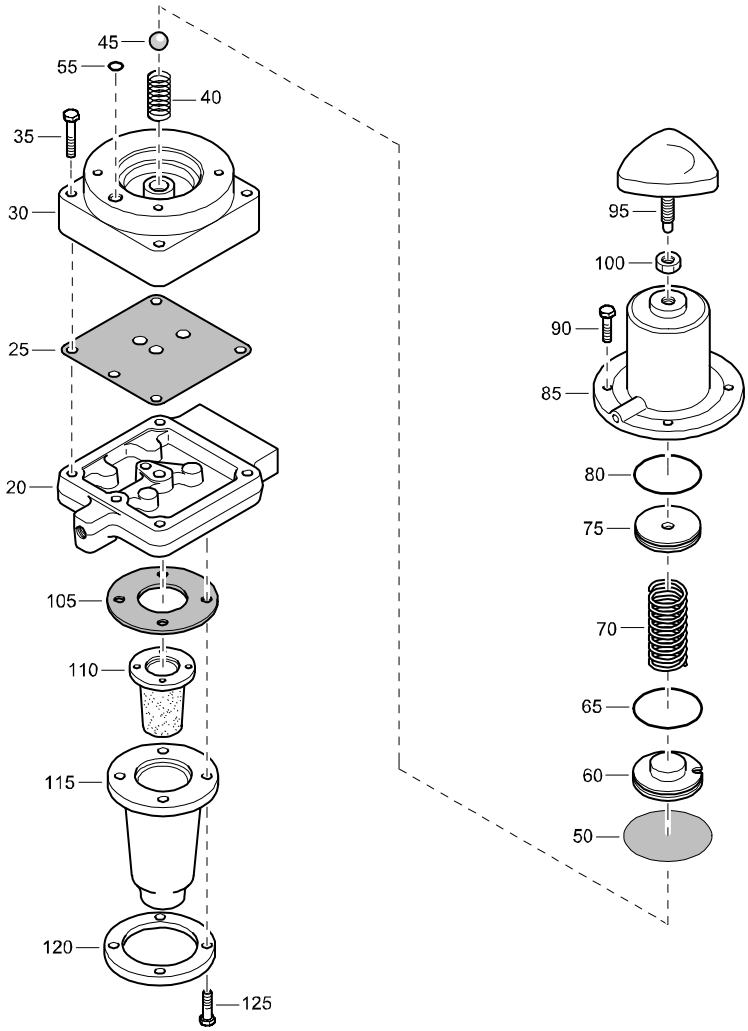


REF	PART NUMBER	DESIGNATION	QTY
-	2252 0495 96	REGULATING VALVE (From page 74)	
•20	2252 0495 00	BASE PLATE	1
•25	-	GASKET	1
		(Part of service kit, see page 26)	
•30	-	SEAT ASS'Y	1
		(Not available separately)	
•35	0147 1250 03	HEX. HEAD SCREW	4
•40	-	SPRING	1
		(Part of service kit, see page 26)	
•45	-	BEARING BALL	1
		(Part of service kit, see page 26)	
•50	-	MEMBRANE	1
		(Part of service kit, see page 26)	
•55	-	O-RING	1
		(Part of service kit, see page 26)	
•60	2252 4058 00	SPRING GUIDE	1
•65	-	O-RING	1
		(Part of service kit, see page 26)	
•70	2255 0284 00	COMPR.SPRING	1
•75	2252 4059 00	SPRING SEAT	1
•80	-	O-RING	1
		(Part of service kit, see page 26)	
•85	2252 4056 81	SPRING COVER	1

REF	PART NUMBER	DESIGNATION	QTY
•90	0147 1247 03	HEX. HEAD SCREW	4
•95	1604 4289 00	SCREW	1
•100	0268 4138 22	HEXAGON NUT	1
•105	-	GASKET	1
		(Part of service kit, see page 26)	
•110	1012 0356 00	FILTER	1
•115	-	FILTER HOUSING	1
		(Not available separately)	
•120	2254 3391 00	RING	1
•125	0147 1248 03	HEX. HEAD SCREW	4

PRESSURE VESSEL ASSEMBLY
SQL

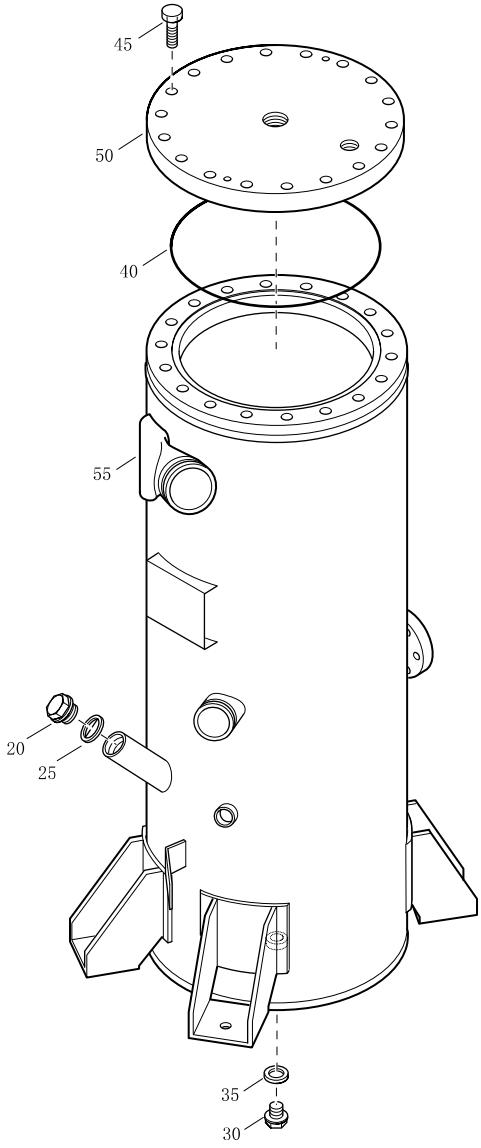


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0696 80	PRESS. VESSEL ASSY	1
•20	2250 2528 00	PLUG SCREW	1
•25	0653 1227 00	FLAT GASKET	1
•30	0686 3716 02	HEXAGON PLUG	1
•35	0661 1033 00	SEALING WASHER	1
•40	0663 2103 24	O-RING	1
•45	0147 1481 03	HEX. HEAD SCREW	18
•50	1092 0695 00	COVER	1
•55	1092 0696 00	VESSEL ASME	1

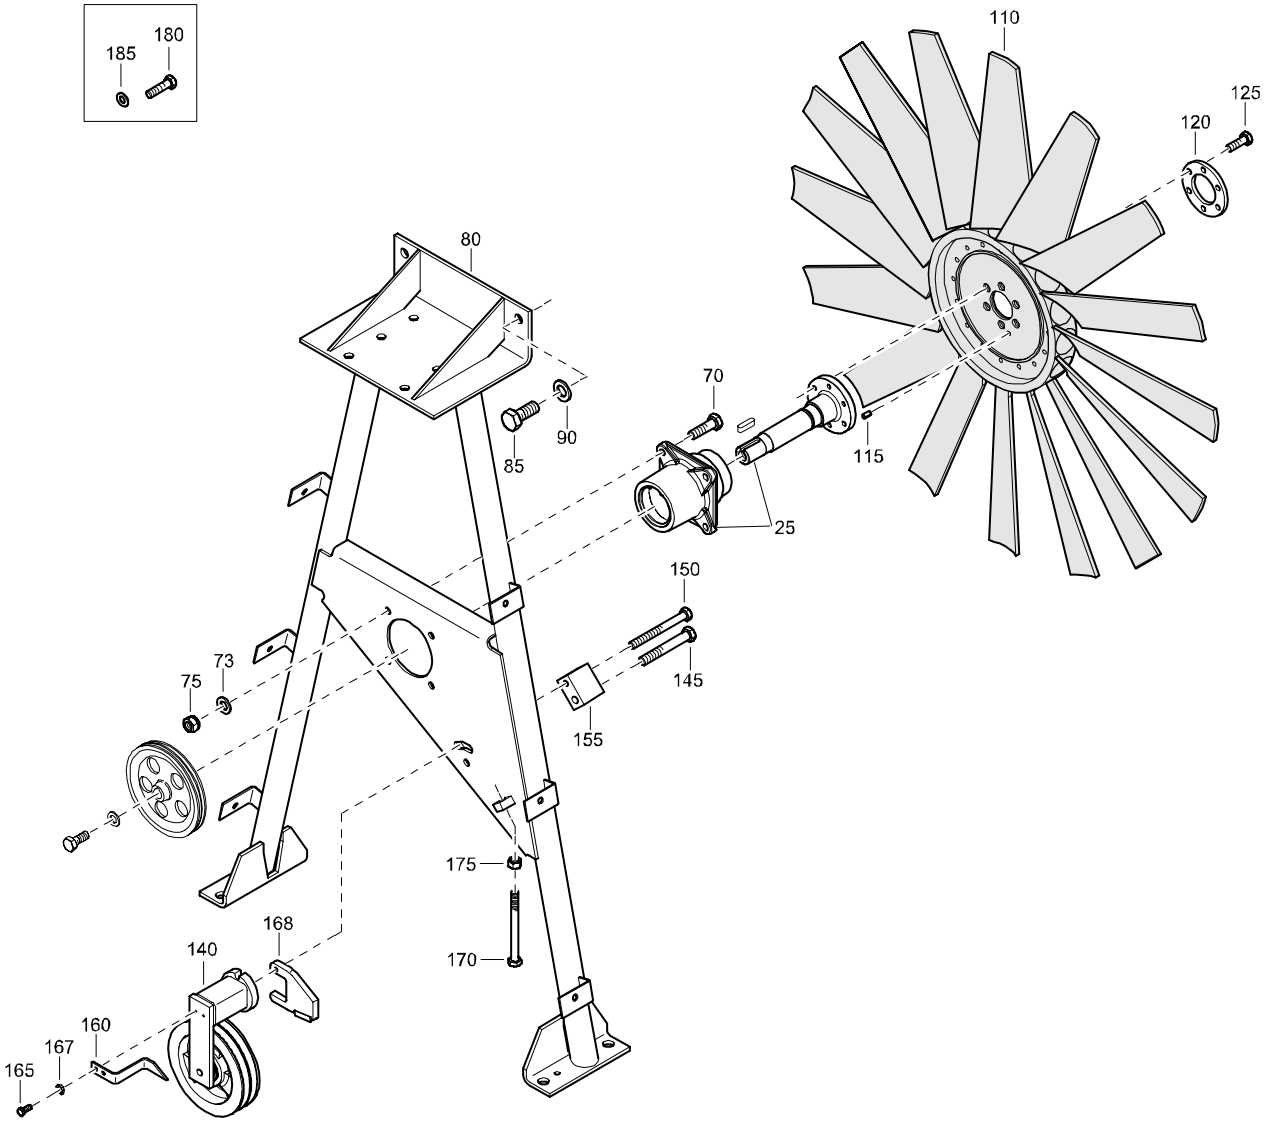

REF	PART NUMBER	DESIGNATION	QTY
-	1092 0610 89	FAN DRIVE ASSEMBLY (From page 102)	
•25	1092 0631 42	FAN SHAFT ASSY (For details see page 113)	1
•70	0147 1403 03	HEX. HEAD SCREW	4
•73	0301 2358 00	PLAIN WASHER	4
•75	0291 1112 00	LOCKNUT	4
•80	1604 2490 01	SUPPORT	1
•85	0147 1477 03	HEX. HEAD SCREW	2
•90	0301 2378 00	PLAIN WASHER	2
•110	1604 7495 00	FAN	1
•115	0108 1320 00	SPRING PIN	1
•120	1615 5439 00	CLAMP RING	1
•125	0147 1363 15	HEX. HEAD SCREW	6
•140	1615 6034 80	TENSION PULLEY ASSY (For details see page 114)	1
•145	0147 1412 03	HEX. HEAD SCREW	1
•150	0147 1377 03	HEX. HEAD SCREW	1
•155	1604 2665 00	SPACER	1
•160	1615 6048 00	POINTER	1
•165	0147 1244 03	HEX. HEAD SCREW	2
•167	0333 3220 00	LOCK WASHER	2
•168	1615 5540 00	LEVER	1
•170	0147 1379 12	HEX. HEAD SCREW	1
•175	0266 2111 00	HEXAGON NUT	1

REF	PART NUMBER	DESIGNATION	QTY
•180	0147 1326 03	HEX. HEAD SCREW	2
•185	0301 2335 00	PLAIN WASHER	2

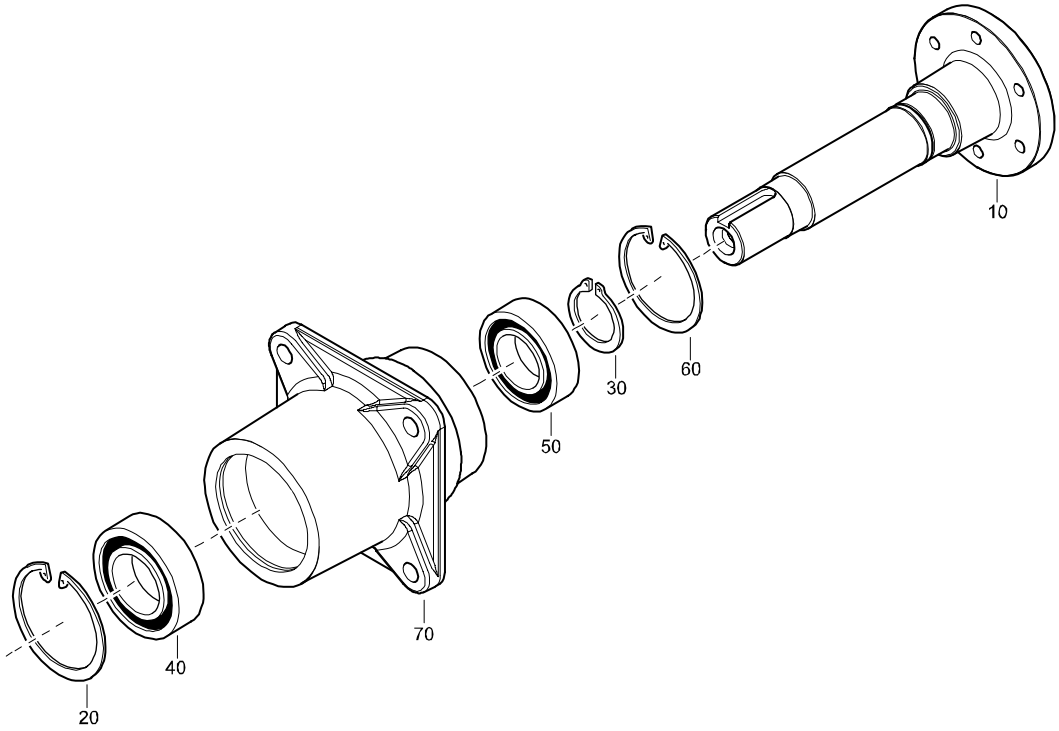


REF	PART NUMBER	DESIGNATION		QTY
-	1092 0631 42	FAN SHAFT ASSY	(From page 112)	1
•10	1092 0661 00	FAN SHAFT		1
•20	0335 2160 00	CIRCLIP		1
•30	0335 1140 00	CIRCLIP		1
•40	0502 2240 00	BALL BEARING		1
•50	0502 2235 00	BALL BEARING		1
•60	0335 2157 00	CIRCLIP		1
•70	1615 5436 01	HOUSING		1

REF	PART NUMBER	DESIGNATION	QTY


STANDARD

TENSION PULLEY ASSEMBLY

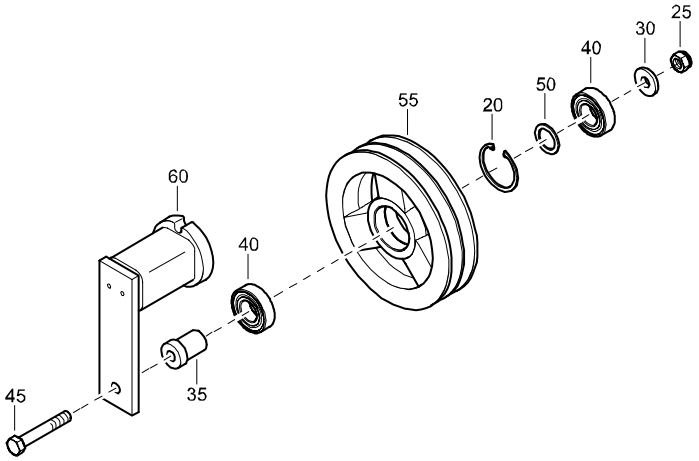


REF	PART NUMBER	DESIGNATION	QTY
-	1615 6034 80	TENSION PULLEY ASSY(From page 112)	
•20	0335 2146 00	CIRCLIP	1
•25	0291 1112 00	LOCKNUT	1
•30	1615 5447 00	WASHER	1
•35	1615 6036 00	SPACER	1
•40	0502 1100 12	BALL BEARING	2
•45	0147 1410 03	HEX. HEAD SCREW	1
•50	1615 5446 01	SPACER	1
•55	1615 6034 00	TENSION PULLEY	1
•60	1615 5443 00	TENSIONER	1

REF	PART NUMBER	DESIGNATION	QTY

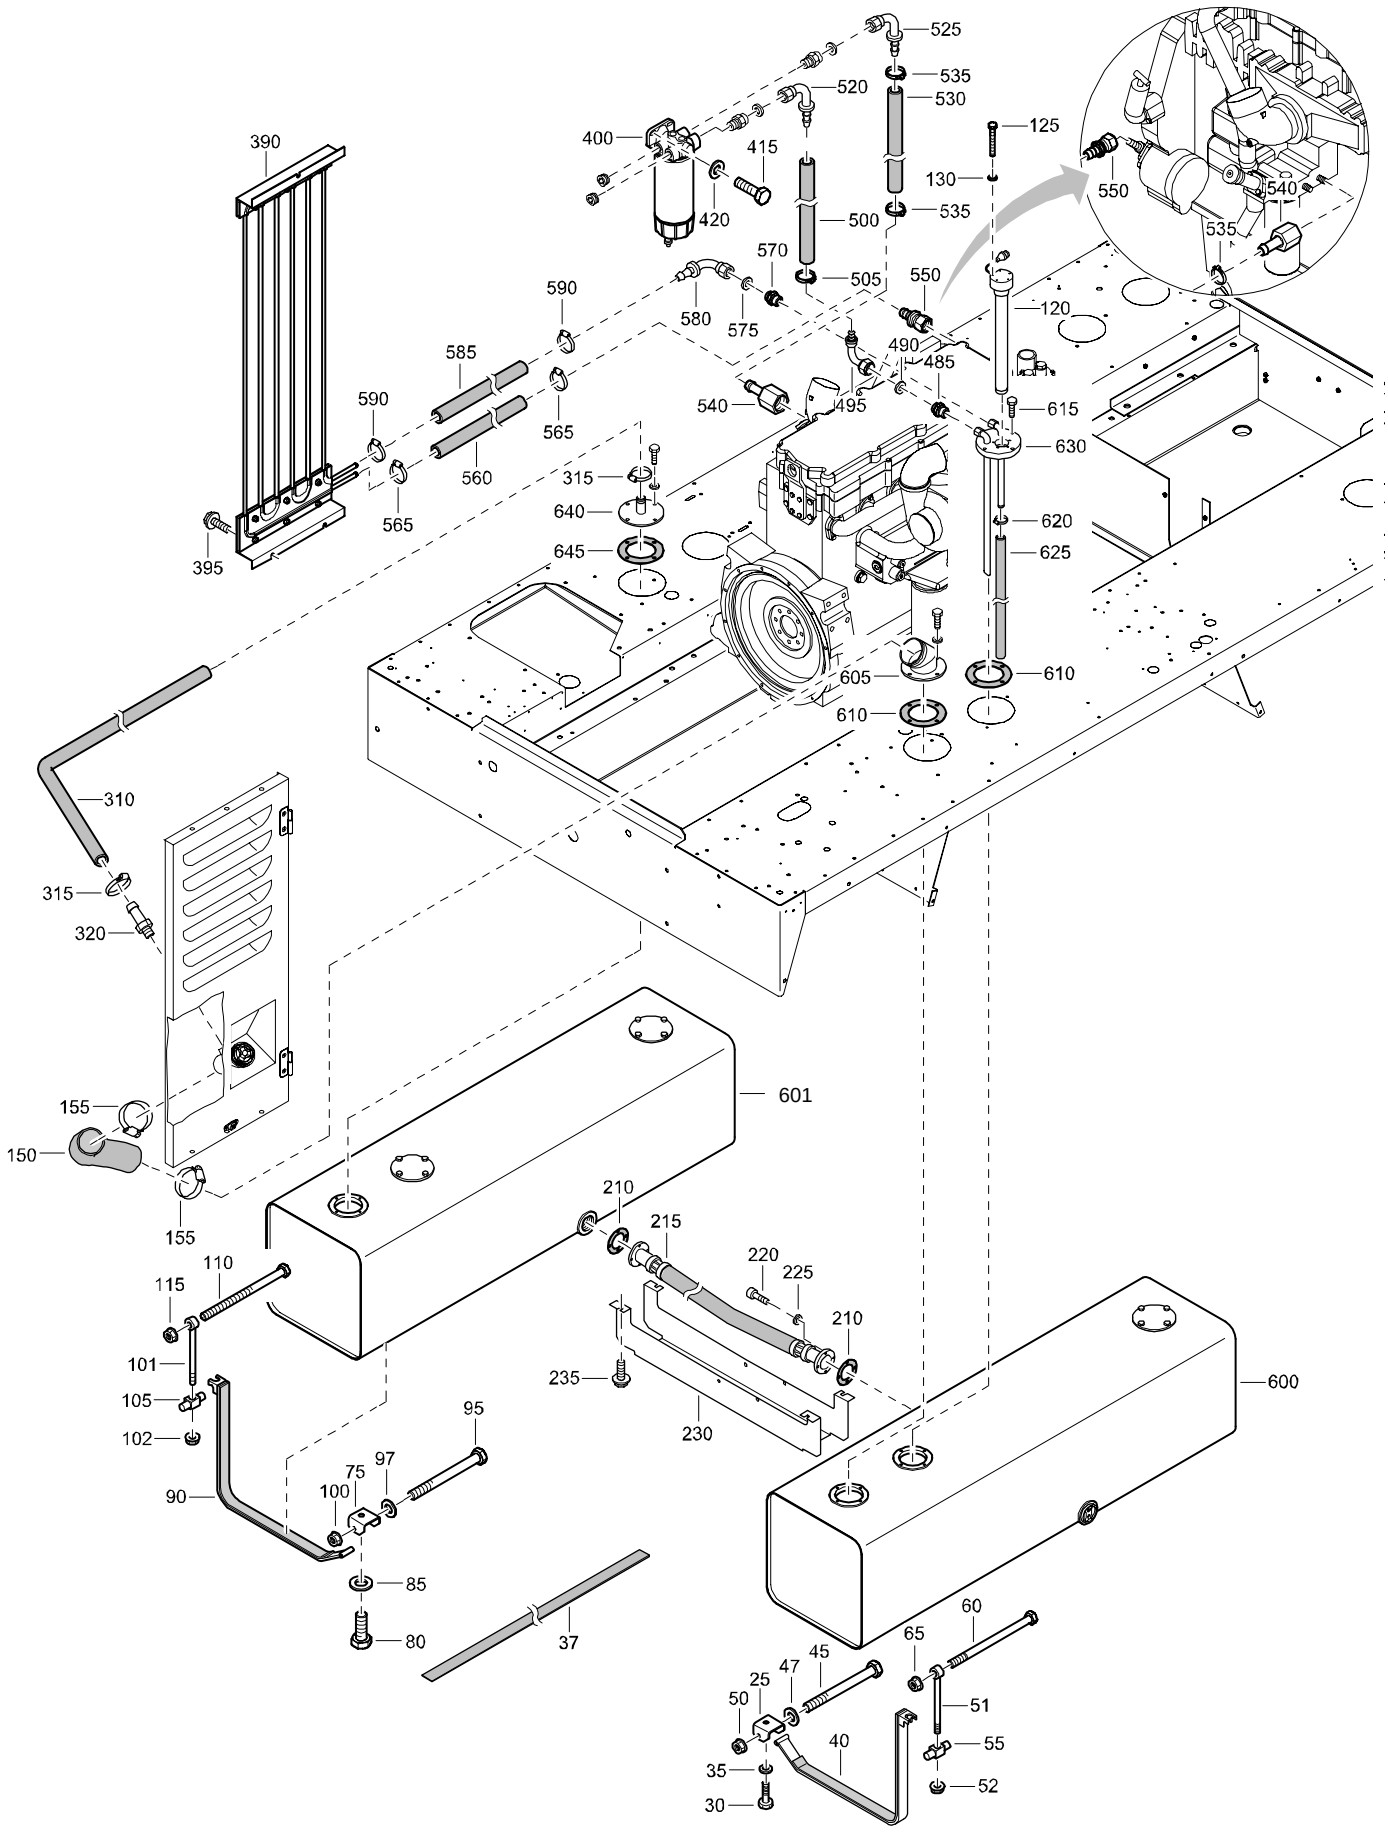
525
535
520
530
125
400
415
130
550
540
535
420
500
535
570
505
550
120
590
580
575
490
585
485
590
540
495
615
565
560
630
315
640
620
565
645
625
395
605
610
610
310
315
320
601
155
150
155
210
215
110
220
225
115
210
101
235
600
105
230
102
95
90
97
75
100
85
80
37
60
65
45
47
25
50
51
40
55
35
52
30

REF	PART NUMBER	DESIGNATION	QTY
25	1604 2492 02	SUPPORT	3
30	0147 1401 03	HEX. HEAD SCREW	3
35	0301 2358 00	PLAIN WASHER	3
37	1604 1275 00	SEAL	AR
40	1604 2473 00	SUPPORT	3
45	0147 1377 03	HEX. HEAD SCREW	3
47	0301 2344 00	PLAIN WASHER	6
50	0291 1111 00	LOCKNUT	3
51	0226 9920 14	LINK SCREW	3
52	0291 1111 00	LOCKNUT	3
55	1604 2471 00	RETAINER	3
60	0147 1343 03	HEX. HEAD SCREW	3
65	0291 1110 00	LOCKNUT	3
75	1604 2492 02	SUPPORT	3
80	0147 1401 03	HEX. HEAD SCREW	3
85	0301 2358 00	PLAIN WASHER	3
90	1604 2473 00	SUPPORT	3
95	0147 1377 03	HEX. HEAD SCREW	3
97	0301 2344 00	PLAIN WASHER	6
100	0291 1111 00	LOCKNUT	3
101	0226 9920 14	LINK SCREW	3
102	0291 1111 00	LOCKNUT	3
105	1604 2471 00	RETAINER	3
110	0147 1343 03	HEX. HEAD SCREW	3
115	0291 1110 00	LOCKNUT	3
120	1089 0659 03	LEVEL SENSOR	1
125	0147 1212 03	HEX. HEAD SCREW	5
130	0301 2318 00	PLAIN WASHER	5
150	1092 0658 00	HOSE	1
155	0347 6100 22	HOSE CLAMP	2
210	1604 2582 00	GASKET	2
215	1092 0648 00	HOSE ASSEMBLY	1
220	0211 1249 03	HEX SOCK. SCREW	8
225	0301 2321 00	PLAIN WASHER	8
230	1604 2511 05	PROTECTION	1
235	1615 5664 00	HEX. HEAD SCREW	4
310	0099 9910 47	PLASTIC TUBE	AR
315	0347 6108 00	HOSE CLAMP	2
320	9000 0246 00	HOSE NIPPLE	1
390	1604 2742 00	FUEL COOLER	1
395	1615 5664 00	HEX. HEAD SCREW	3
400	1604 4236 00	FUELFILTER	1
415	0147 1363 03	HEX. HEAD SCREW	2
420	0301 2344 00	PLAIN WASHER	2
485	1079 5840 21	BUSHING	1
490	0653 1128 00	FLAT GASKET	1
495	0571 0020 43	HOSE NIPPLE	1
500	1092 0642 02	FUEL HOSE	AR
505	0347 6105 00	HOSE CLAMP	2
520	0571 0020 40	HOSE NIPPLE	1
525	0571 0020 40	HOSE NIPPLE	1
530	1092 0642 02	FUEL HOSE	AR
535	0347 6105 00	HOSE CLAMP	2
540	1604 4368 00	HOSE NIPPLE	1
550	1604 4237 00	HOSE NIPPLE	1
560	1092 0642 01	FUEL HOSE	AR
565	0347 6103 00	HOSE CLAMP	2
570	1079 5840 28	HEXAGON NIPPLE	1
575	0653 1100 00	FLAT GASKET	1
580	1604 2799 00	ELBOW	1
585	1092 0642 01	FUEL HOSE	AR
590	0347 6103 00	HOSE CLAMP	2
600	1092 0602 86	FUELTANK ASSY RIGHT	1
		(For details see page 135)	
601	1092 0602 87	FUELTANK ASSY LEFT	1
		(For details see page 136)	
605	1604 2781 01	CONNECTION	1
610	1604 2780 02	GASKET	2
615	0147 1250 03	HEX. HEAD SCREW	4
620	0347 6108 00	HOSE CLAMP	1
625	1092 0642 01	HOSE	AR
630	1604 4399 01	MANIFOLD	1
640	1092 0402 00	CONNECTION	1
645	1604 2780 02	GASKET	1

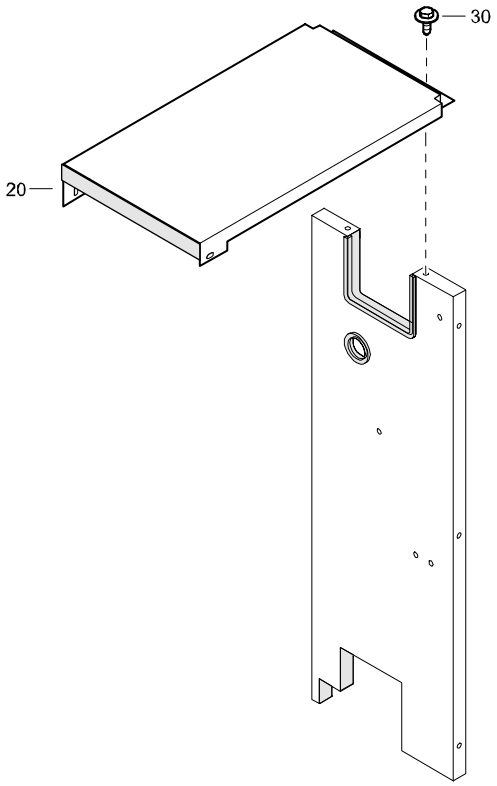


REF	PART NUMBER	DESIGNATION	QTY
20	1604 5153 80	PLATE ASSY	1
		(For details see page 130)	
30	1615 5664 00	SCRAPER BOLT	2

REF	PART NUMBER	DESIGNATION	QTY

STANDARD

DRAINPLATE

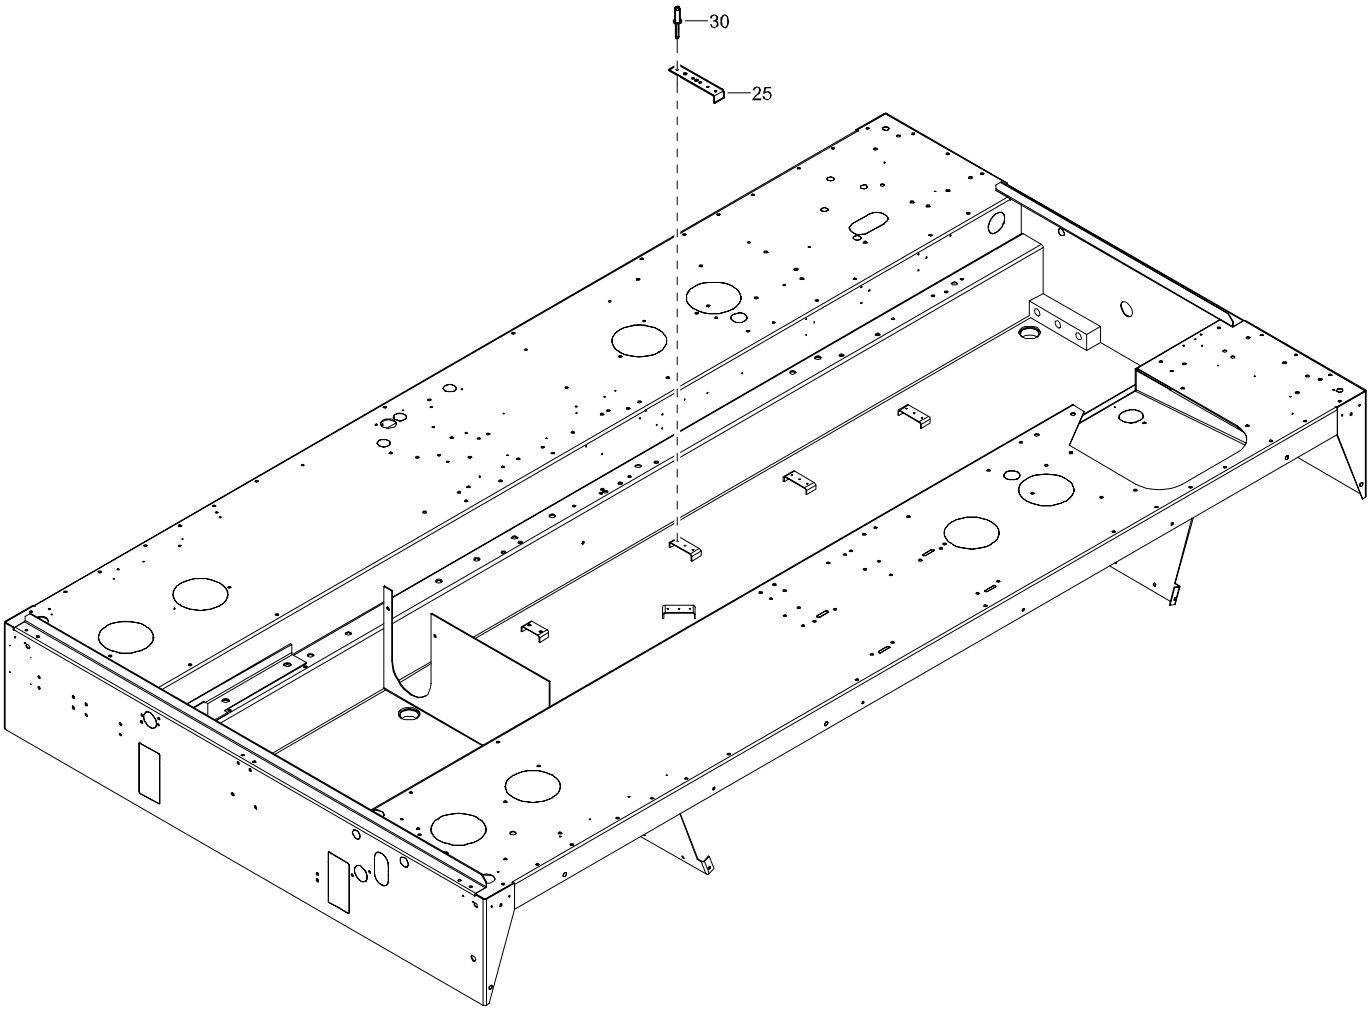


REF	PART NUMBER	DESIGNATION	QTY
25	1604 4817 01	PLATE	2
30	0129 3110 00	BLIND RIVET	4

REF	PART NUMBER	DESIGNATION	QTY

OPTIONS

PREHEATER

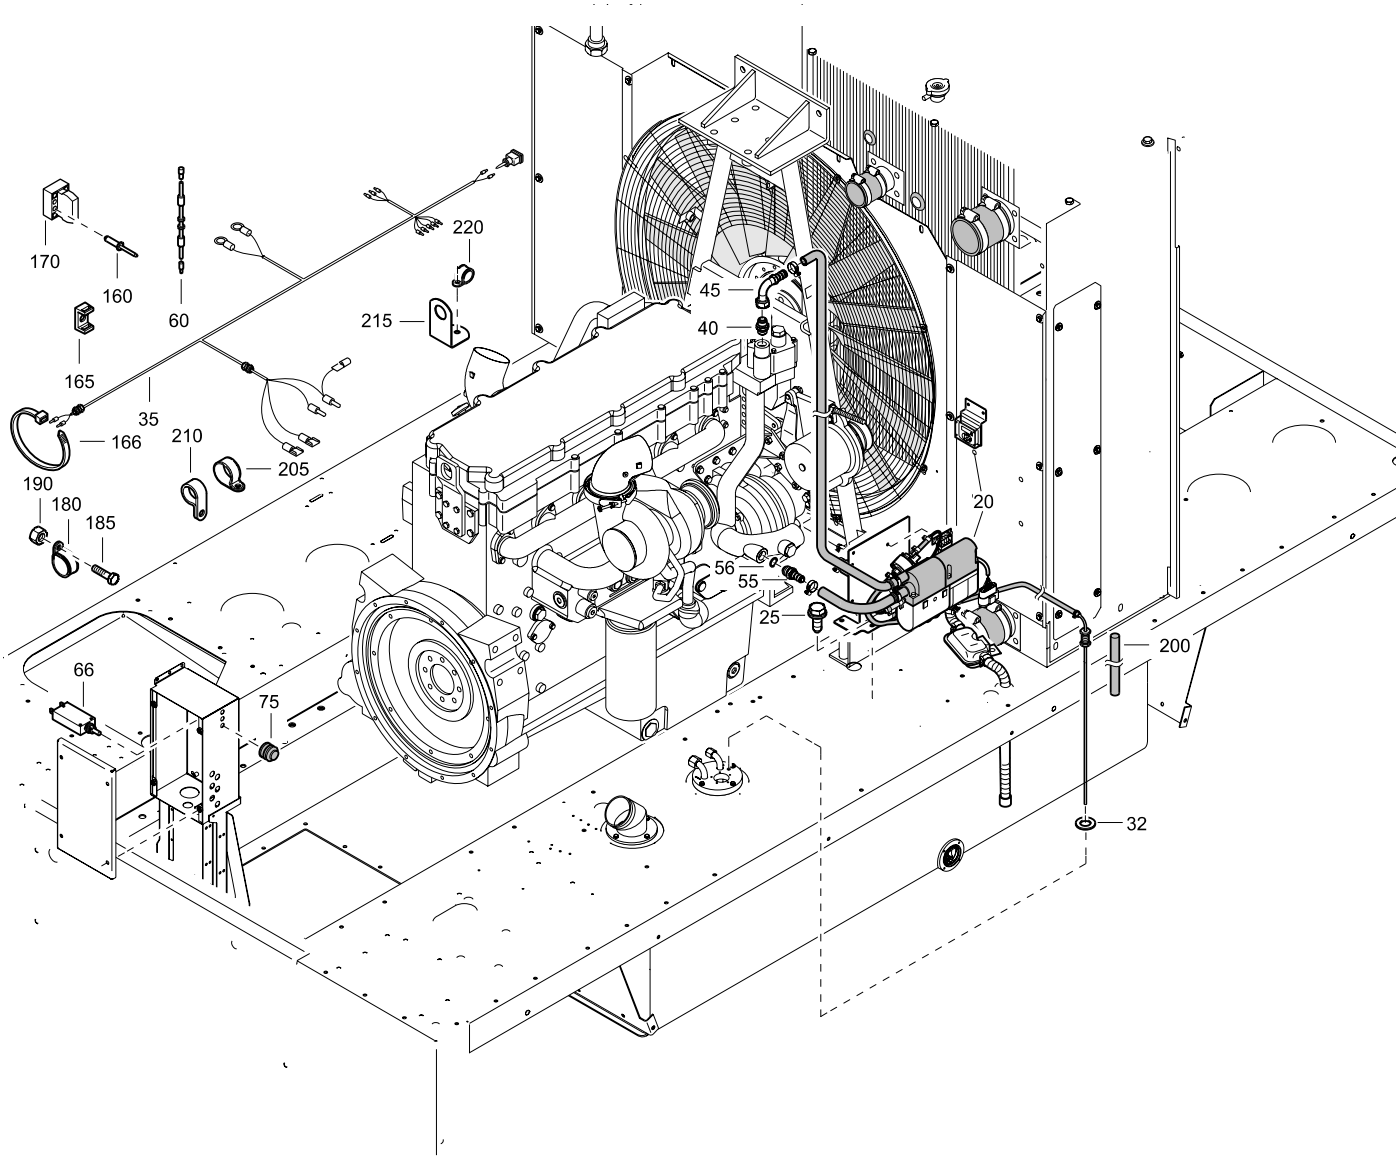


REF	PART NUMBER	DESIGNATION	QTY
20	1604 4690 05	KIT	1
		(For details see drawing 1604 4690 05)	
25	1619 2766 00	HEX. HEAD SCREW	4
32	0653 1046 00	FLAT GASKET	1
35	1604 4691 05	WIRING	1
40	3176 6301 00	STRAIGHT NIPPLE	1
45	0571 0020 55	HOSE NIPPLE	1
55	0571 0020 54	HOSE NIPPLE	1
56	0663 2127 00	O-RING	1
60	1604 7580 00	RESISTOR	1
66	1089 9206 12	CIRCUIT BREAKER	1
75	1089 9206 59	PROTECTION CAP	1
160	0129 3110 00	BLIND RIVET	5
165	0348 0110 03	ANCHOR PLATE	3
166	0348 0101 05	CABLE TIE	5
170	1089 9422 90	CONTACT BLOCK	1
180	1613 0801 08	PIPE CLAMP	2
185	0147 1247 03	HEX. HEAD SCREW	4
190	0266 2110 00	HEXAGON NUT	3
200	0070 6002 05	PLASTIC TUBE	AR

REF	PART NUMBER	DESIGNATION	QTY
205	0346 1000 19	PIPE CLAMP	1
210	1613 0801 03	PIPE CLAMP	1
215	1613 0807 00	SUPPORT	2
220	1613 0801 07	PIPE CLAMP	2

OPTIONS

ADDITIONAL FUELFILTER

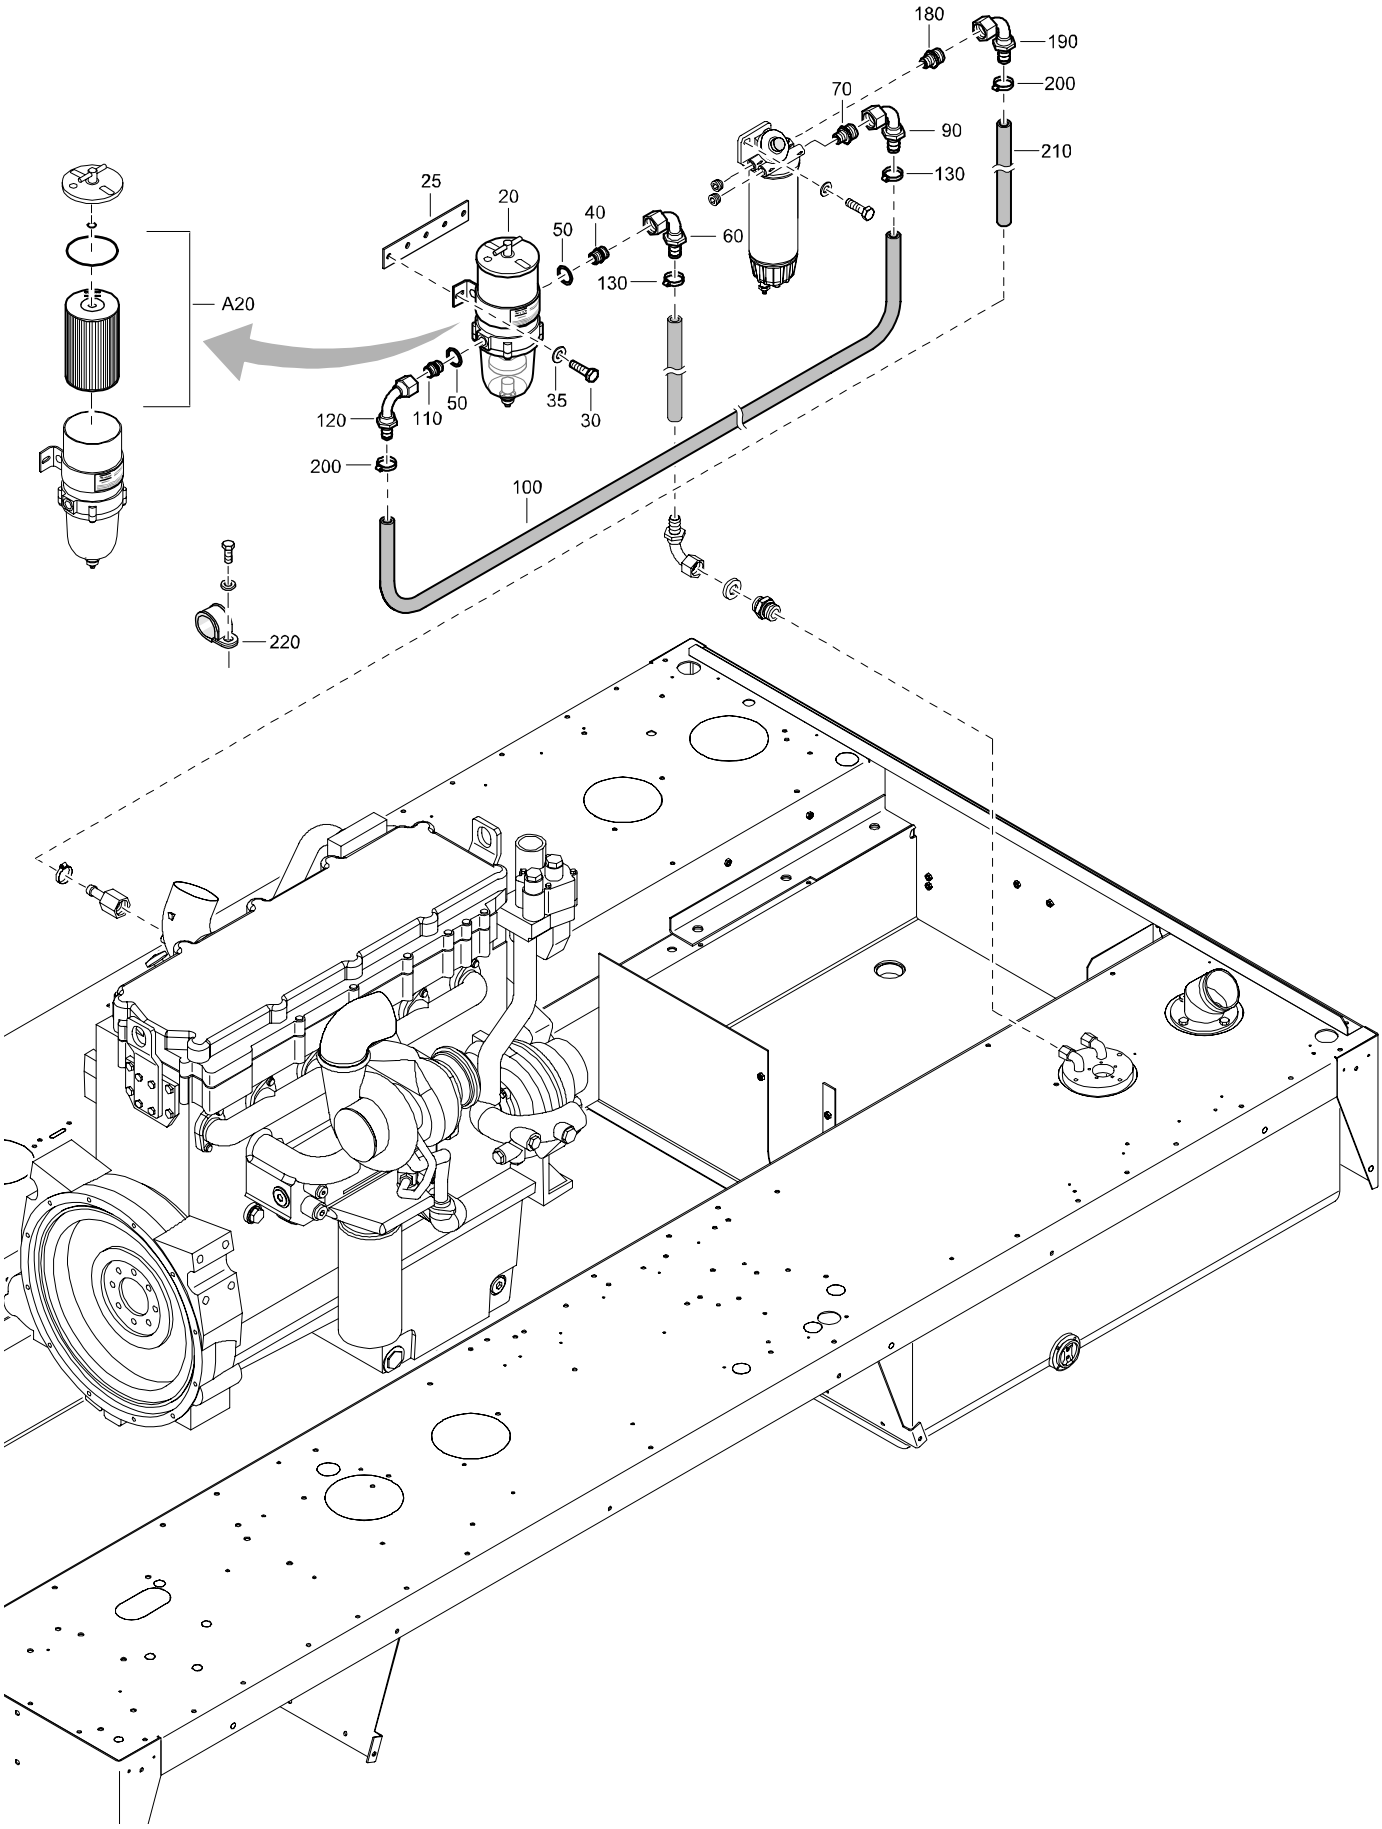

OPTIONS


ADDITIONAL FUELFILTER

REF	PART NUMBER	DESIGNATION	QTY
20	1604 5491 00	FUELFILTER	1
•A20	2914 8307 00	FUELFILTER ELEMENT	1
25	1604 5474 00	BRACKET	1
30	0147 1363 03	HEX. HEAD SCREW	3
35	0301 2344 00	PLAIN WASHER	3
40	0582 0000 56	BODY	1
50	0653 1128 00	FLAT GASKET	2
60	0571 0020 43	HOSE NIPPLE	1
70	0582 0000 58	BODY	1
90	0571 0020 43	HOSE NIPPLE	1
100	1092 0642 02	FUEL HOSE	AR
110	0582 0000 56	BODY	1
120	0571 0020 43	HOSE NIPPLE	1
130	0347 6105 00	HOSE CLAMP	2
180	0582 0000 58	BODY	1
190	0571 0020 43	HOSE NIPPLE	1
200	0347 6105 00	HOSE CLAMP	2
210	1092 0642 02	FUEL HOSE	AR
220	1613 0801 03	PIPE CLAMP	2

REF	PART NUMBER	DESIGNATION	QTY


OPTIONS

SPARK ARRESTOR

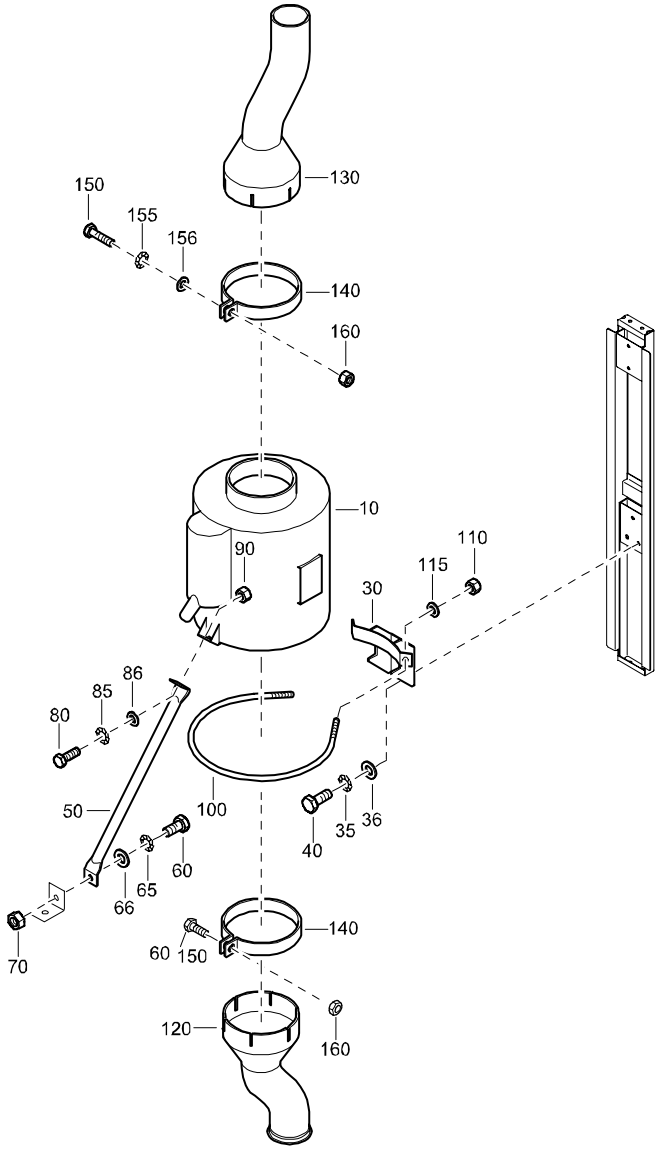

REF	PART NUMBER	DESIGNATION	QTY
10	1604 3713 00	SPARK ARRESTOR	1
30	1604 3718 00	BRACKET	1
35	0333 3232 00	LOCK WASHER	3
36	0301 2344 00	PLAIN WASHER	3
40	0147 1360 03	HEX. HEAD SCREW	3
50	1604 3721 00	STAY	1
60	0147 1360 03	HEX. HEAD SCREW	1
65	0333 3232 00	LOCK WASHER	1
66	0301 2344 00	PLAIN WASHER	1
70	0266 2111 00	HEXAGON NUT	1
80	0147 1323 03	HEX. HEAD SCREW	1
85	0333 3227 00	LOCK WASHER	1
86	0301 2335 00	PLAIN WASHER	1
90	0266 2110 00	HEXAGON NUT	1
100	1604 3719 00	CLAMP	1
110	0266 2110 00	HEXAGON NUT	2
115	0301 2335 00	PLAIN WASHER	2
120	1604 3714 00	EXHAUST PIPE	1
130	1604 3715 00	EXHAUST PIPE	1
140	0347 6200 24	HOSE CLAMP	2

REF	PART NUMBER	DESIGNATION	QTY
150	0147 1326 03	HEX. HEAD SCREW	2
155	0333 3227 00	LOCK WASHER	1
156	0301 2335 00	PLAIN WASHER	1
160	0266 2110 00	HEXAGON NUT	2

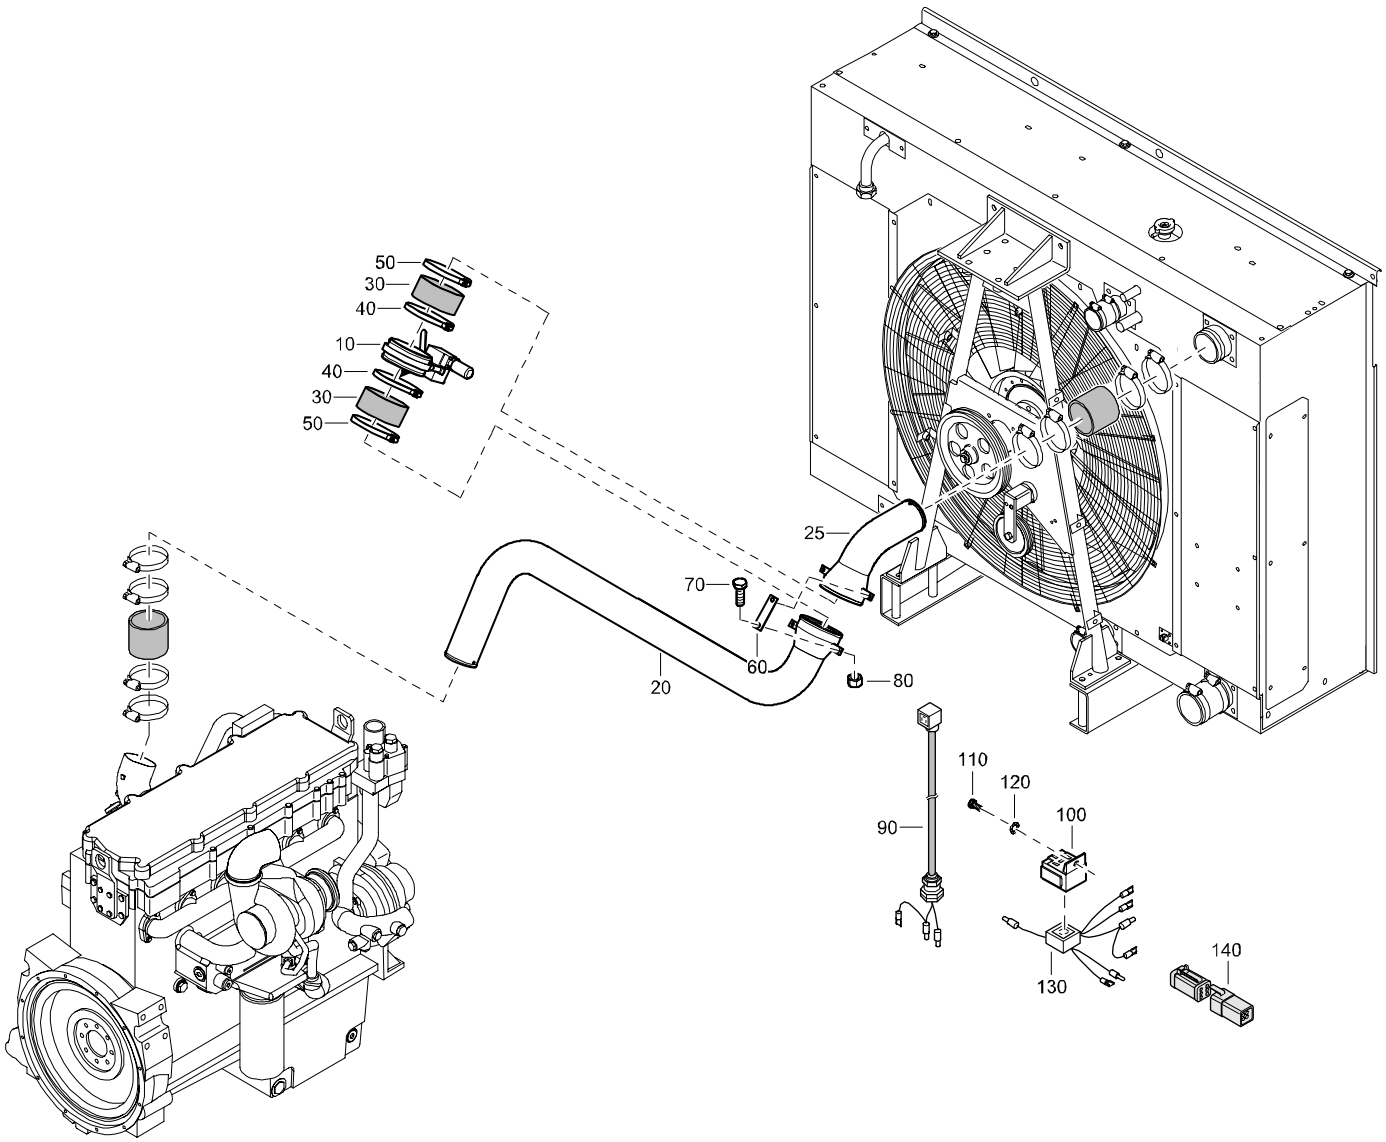


REF	PART NUMBER	DESIGNATION	QTY
10	1604 3555 00	VALVE	1
20	1604 7773 00	PIPE	1
25	1604 7772 00	PIPE	1
30	1604 3560 00	HOSE	2
40	0347 6120 00	HOSE CLAMP	2
50	0347 6100 26	HOSE CLAMP	2
60	1604 3557 00	BRACKET	2
70	0147 1323 03	HEX. HEAD SCREW	4
80	0266 2110 00	HEXAGON NUT	4
90	1604 3709 01	CABLE	1
100	1089 0341 02	RELAY	1
110	0147 1204 03	HEX. HEAD SCREW	1
120	0333 3150 00	LOCK WASHER	1
130	1604 3672 01	RELAY	1
140	1604 3742 00	CONNECTION	1

REF	PART NUMBER	DESIGNATION	QTY

OPTIONS


NO UNDERCARRIAGE

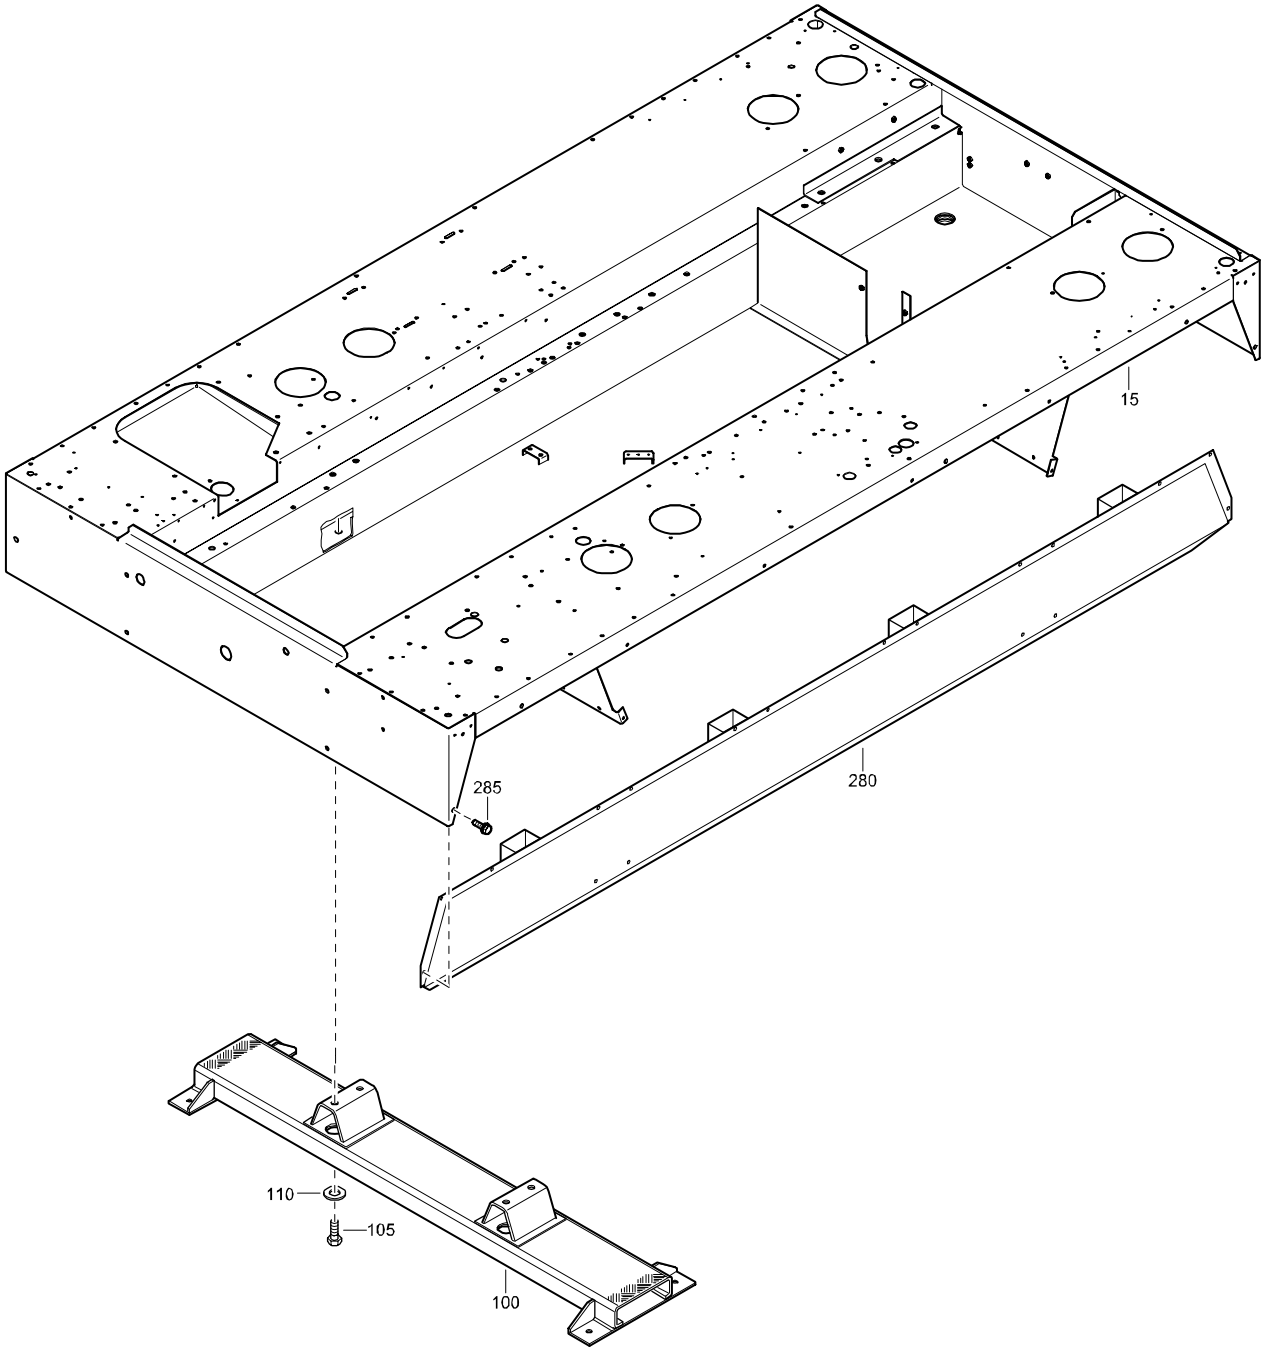

REF	PART NUMBER	DESIGNATION	QTY
15	1092 0600 02	FRAME	1
100	1092 0593 00	SUPPORT	2
105	0147 1958 96	HEX. HEAD SCREW	8
110	0301 2378 00	PLAIN WASHER	8
280	1604 3455 04	PROTECTION	2
285	1615 5664 00	HEX. HEAD SCREW	8

REF	PART NUMBER	DESIGNATION	QTY

FORKLIFT SLOTS ROW

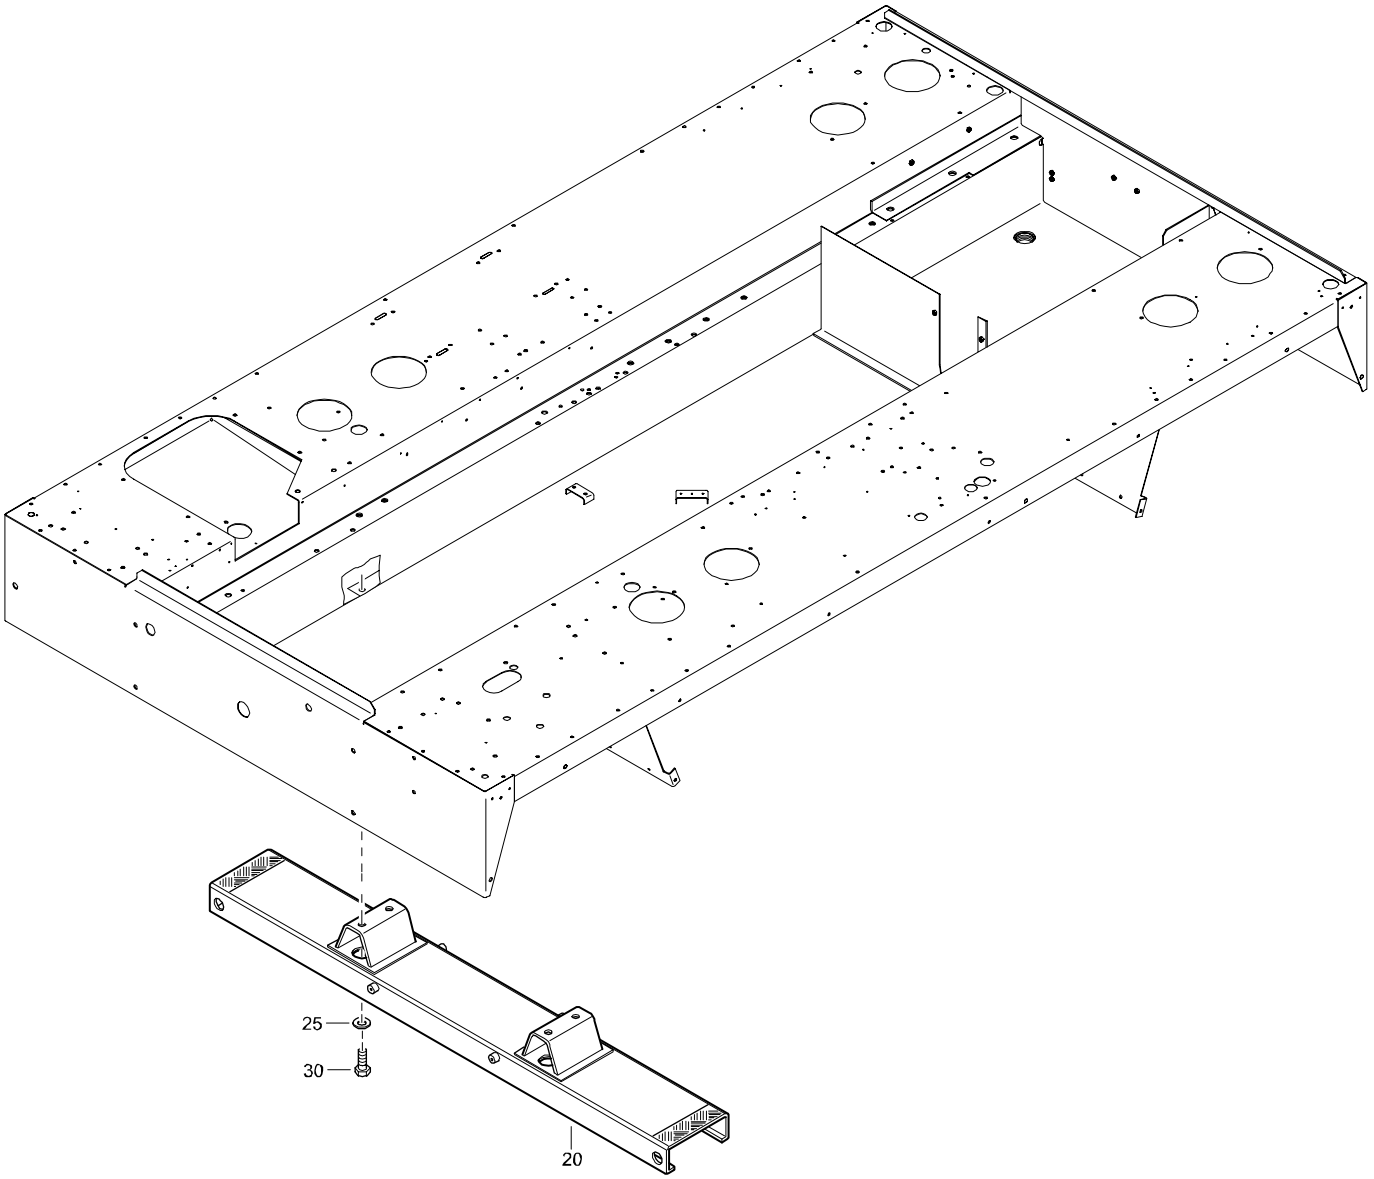


REF	PART NUMBER	DESIGNATION	QTY
20	1604 2808 05	SUPPORT	2
25	0301 2378 00	PLAIN WASHER	8
30	0147 1958 96	HEX. HEAD SCREW	8

REF	PART NUMBER	DESIGNATION	QTY

OPTIONS


AFTERCOOLER
WITH WATERSEPARATOR - BYPASS

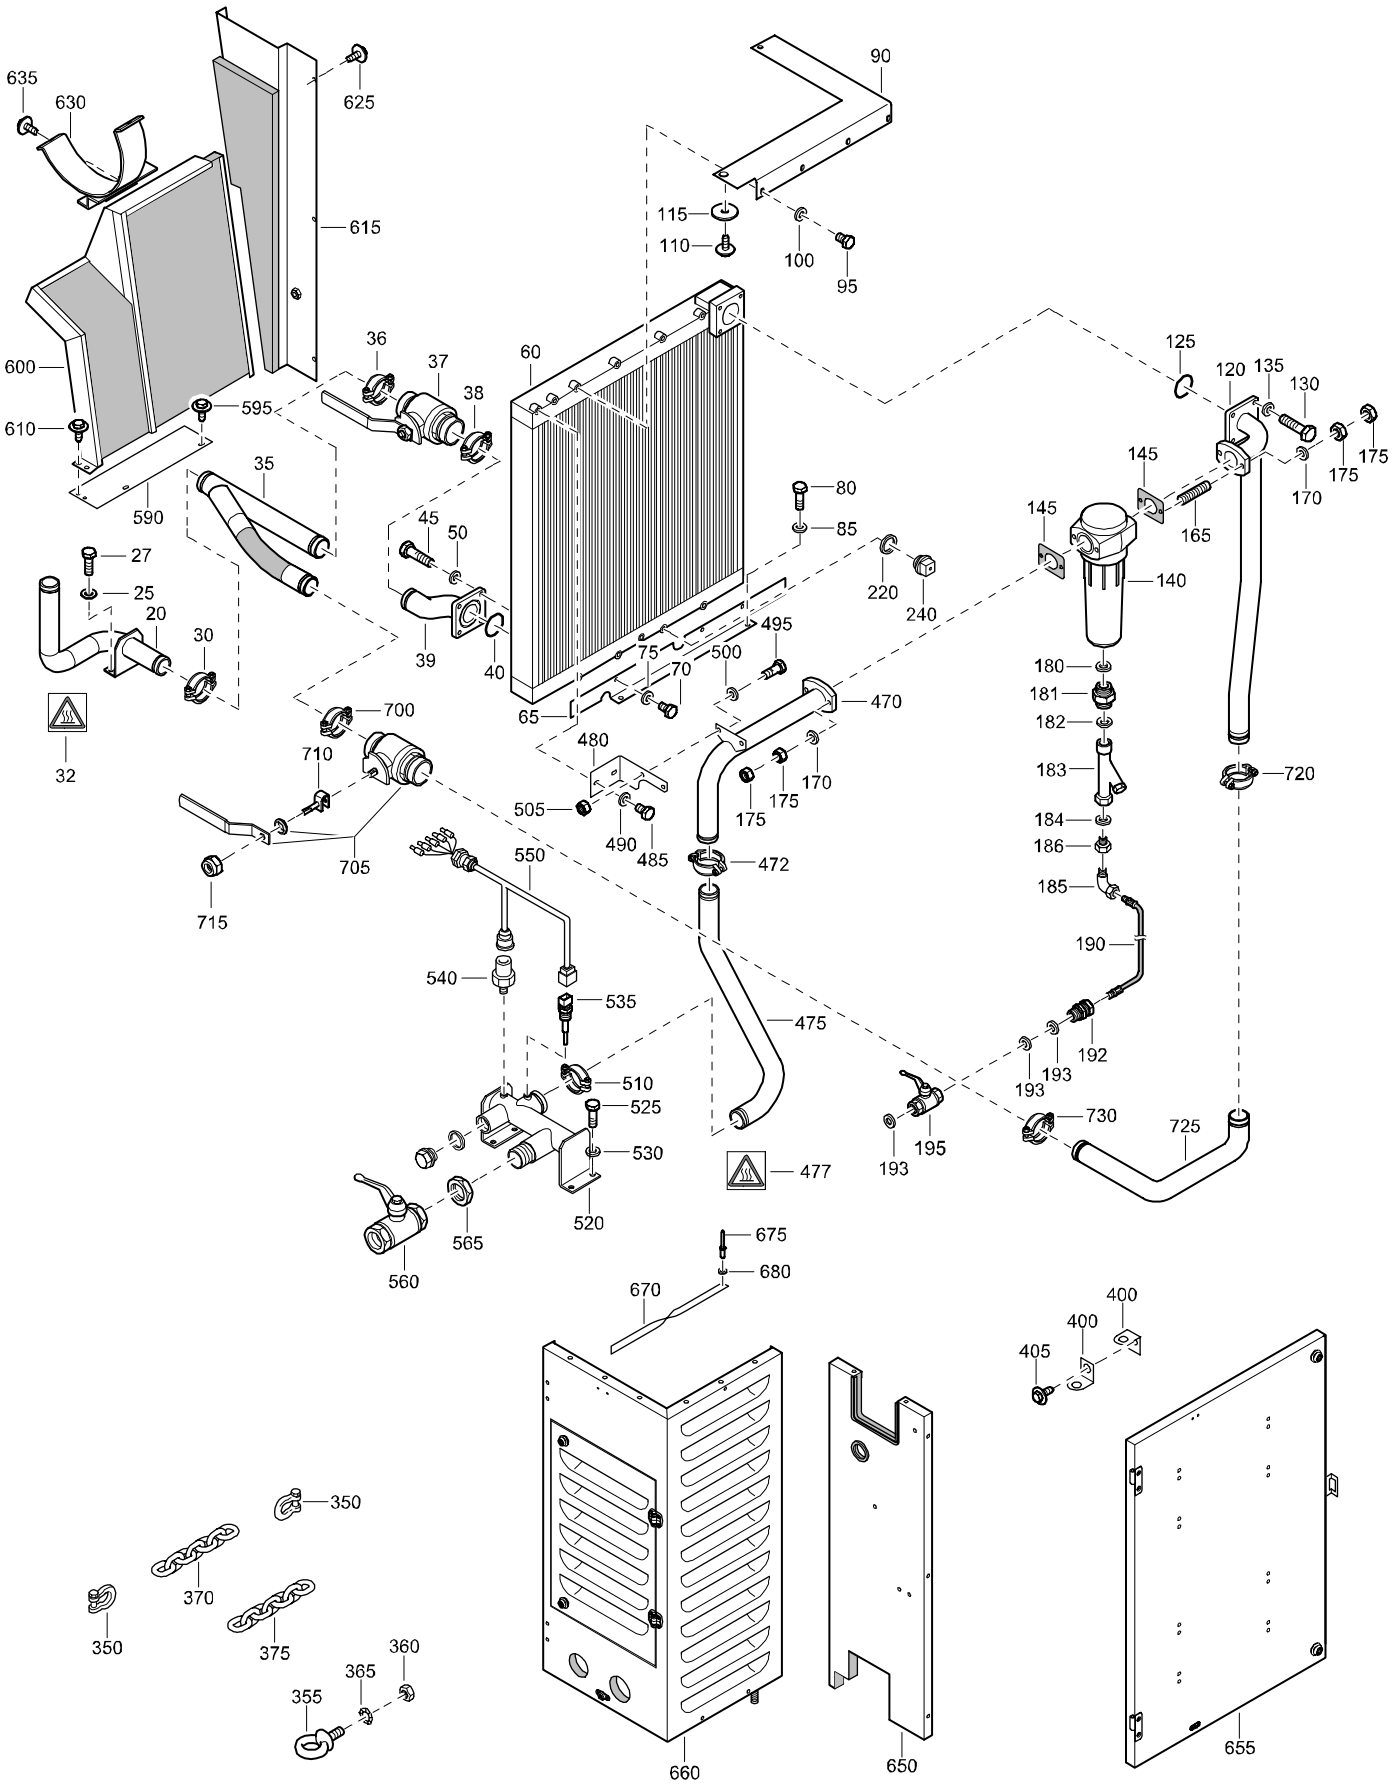

OPTIONS

AFTERCOOLER
WITH WATERSEPARATOR - BYPASS

REF	PART NUMBER	DESIGNATION	QTY
20	1604 4738 00	PIPE	1
25	0301 2344 00	PLAIN WASHER	2
27	0147 1362 03	HEX. HEAD SCREW	2
30	0634 1000 59	PIPE COUPLING	1
32	1079 9902 55	LABEL	1
35	1604 4739 02	HOSE ASSEMBLY	1
36	0634 1000 84	PIPE COUPLING	1
37	1604 2126 01	BALL VALVE	1
38	0634 1000 84	PIPE COUPLING	1
39	1604 7417 00	PIPE	1
40	0663 7141 00	O-RING	1
45	0147 1403 03	HEX. HEAD SCREW	4
50	0301 2358 00	PLAIN WASHER	4
60	1604 3372 00	AFTERCOOLER HP	1
65	1604 3366 00	SUPPORT	1
70	0147 1359 03	HEX. HEAD SCREW	4
75	0301 2358 00	PLAIN WASHER	4
80	0147 1362 03	HEX. HEAD SCREW	3
85	0301 2344 00	PLAIN WASHER	3
90	1604 3365 04	SUPPORT	1
95	0147 1359 03	HEX. HEAD SCREW	4
100	0301 2344 00	PLAIN WASHER	4
110	1615 5664 00	HEX. HEAD SCREW	2
115	0300 0274 91	PLAIN WASHER	1
120	1604 4741 00	PIPE	1
125	0663 7141 00	O-RING	1
130	0147 1403 03	HEX. HEAD SCREW	4
135	0301 2358 00	PLAIN WASHER	4
140	1615 8005 00	WATERSEPARATOR	1
145	1604 1591 02	GASKET	2
165	0248 9980 52	THREADED ROD	2
170	0301 2358 00	PLAIN WASHER	4
175	0266 2112 00	HEXAGON NUT	8
180	0653 1124 00	FLAT GASKET	1
181	0603 4200 38	HEXAGON NIPPLE	1
182	0653 1124 00	FLAT GASKET	1
183	0803 5010 10	STRAINER	1
184	0653 1124 00	FLAT GASKET	1
185	0581 1200 27	ELBOW PIPE COUPLING	1
186	1604 6697 00	RESTRICTOR	1
190	0575 0011 11	HOSE ASSEMBLY	1
192	0581 0000 53	STRAIGHT PIPE COUPLING	1
193	0653 1124 00	FLAT GASKET	3
195	1619 6153 04	BALL VALVE G1/2	"1
220	0661 1049 00	SEALING WASHER	1
240	1612 0685 82	BLEEDER VALVE	1
350	0372 4100 08	BOW SHACKLE	2
355	0371 1100 21	LIFTING EYE	1
360	0266 2111 00	HEXAGON NUT	1
365	0333 3232 00	LOCK WASHER	1
370	3163 1853 00	CHAIN	1
375	3163 1853 00	CHAIN	1
400	1613 0807 00	SUPPORT	2
405	1615 5664 00	HEX. HEAD SCREW	1
470	1604 3379 01	PIPE	1
472	0634 1000 59	PIPE COUPLING	1
475	1604 5112 00	PIPE	1
477	1079 9902 55	LABEL	1
480	1604 3364 02	SUPPORT	1
485	0147 1359 03	HEX. HEAD SCREW	2
490	0301 2344 00	PLAIN WASHER	2
495	0147 1362 03	HEX. HEAD SCREW	2
500	0301 2344 00	PLAIN WASHER	2
505	0266 2111 00	HEXAGON NUT	2
510	0634 1000 59	PIPE COUPLING	1
520	1604 3361 01	MANIFOLD	1
525	0147 1362 03	HEX. HEAD SCREW	4
530	0301 2344 00	PLAIN WASHER	4
535	1089 0574 49	TEMP.SENSOR	1
540	1089 9579 55	PRESSURE SENSOR	1
550	1604 3449 00	WIRE HARNESS	1
560	0852 0010 28	BALL VALVE	1
565	0623 2100 09	BACKNUT	1
590	1604 4760 00	SUPPORT	1
595	1615 5664 00	HEX. HEAD SCREW	2
600	1604 3550 83	PANEL ASSY	1
		(For details see page 134)	
610	1615 5664 00	HEX. HEAD SCREW	2
615	1604 3551 81	PANEL ASSY	1
		(For details see page 133)	
625	1615 5664 00	HEX. HEAD SCREW	7
630	1604 3552 02	SUPPORT	1
635	1615 5664 00	HEX. HEAD SCREW	2
650	1604 2689 83	PANEL ASSY	1
		(For details see page 132)	
655	1092 0663 80	DOOR ASSY	1
		(For details see page 79)	
660	1604 2678 81	CORNER ASSY	1
		(For details see page 131)	
670	1616 4615 00	NYLON BAND	1
675	0129 3101 00	BLIND RIVET	3
680	0301 2318 00	PLAIN WASHER	3
700	0634 1000 84	PIPE COUPLING	1
705	1604 2126 01	BALL VALVE	1
710	1604 4736 01	LEVER	1
715	0291 1113 00	LOCKNUT	1
720	0634 1000 84	PIPE COUPLING	1
725	1604 4740 00	PIPE	1
730	0634 1000 84	PIPE COUPLING	1

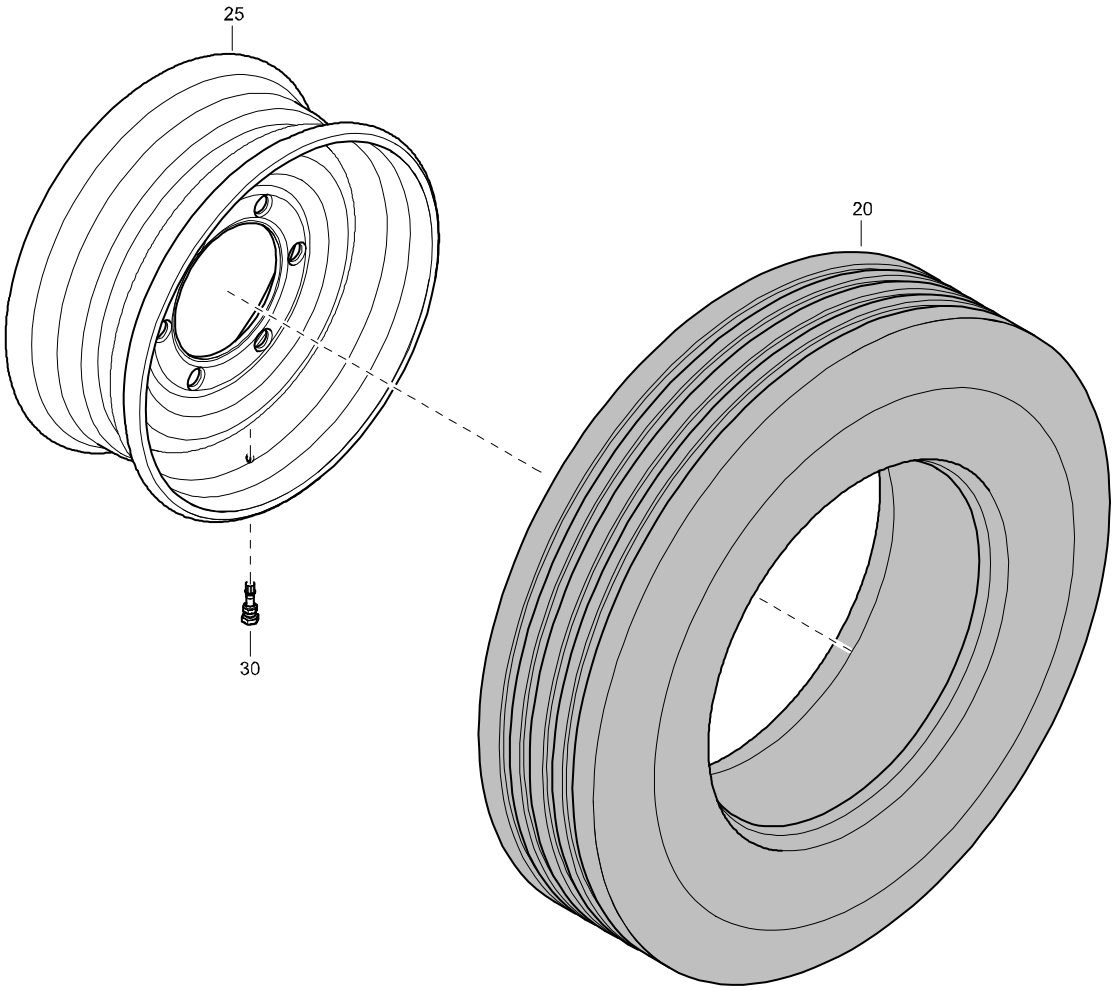


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0574 06	TYRE ASSY (From page 137)	
•20	0538 0400 19	TYRE	1
•25	1092 0499 02	RIM (17.5 X 6.00)	1
•30	1615 6322 00	VENTIL	1

REF	PART NUMBER	DESIGNATION	QTY


OPTIONS

CORNER ASSEMBLY

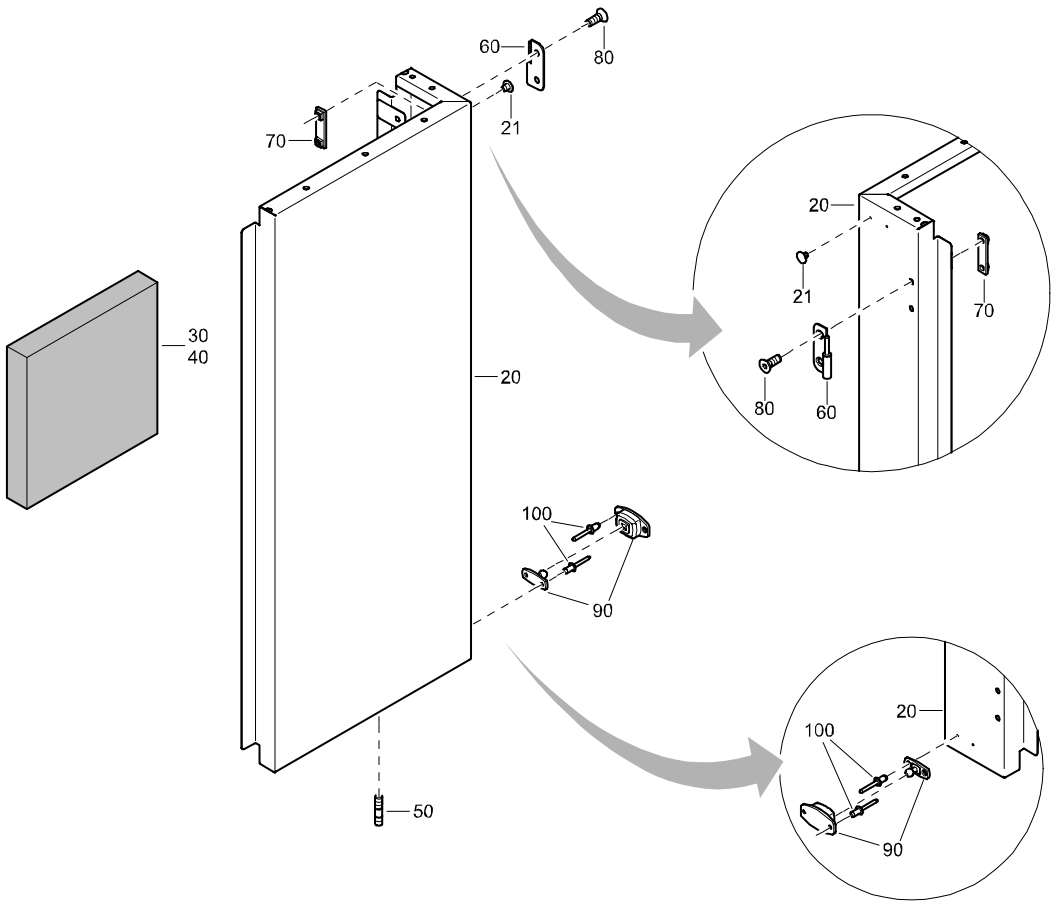

REF	PART NUMBER	DESIGNATION	QTY
-	1092 0631 90	CORNER ASSY (From page 50)	
•20	1092 0575 00	PANEL	1
•21	0686 9252 87	PLUG	2
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
•50	0246 1956 35	STUD	4
•60	1604 3428 00	HINGE	2
•70	1615 5684 00	BRACKET	2
•80	0216 1324 03	HEX SOCK. SCREW	4
•90	1619 1663 00	DOOR HOOK	1
•100	0129 3270 17	BLIND RIVET	2
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY

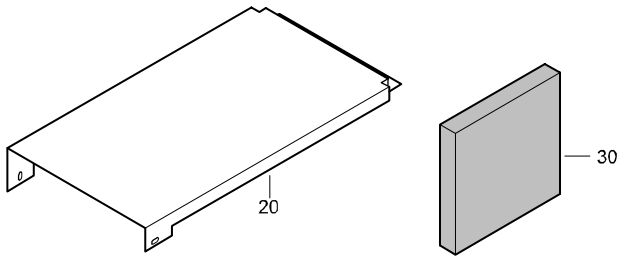


REF	PART NUMBER	DESIGNATION	QTY
-	1604 5153 80	PLATE ASSY (From page 117)	
•20	1604 5153 00	PLATE	1
•30	-	SILENCING FOAM	1
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY


OPTIONS

CORNER ASSEMBLY

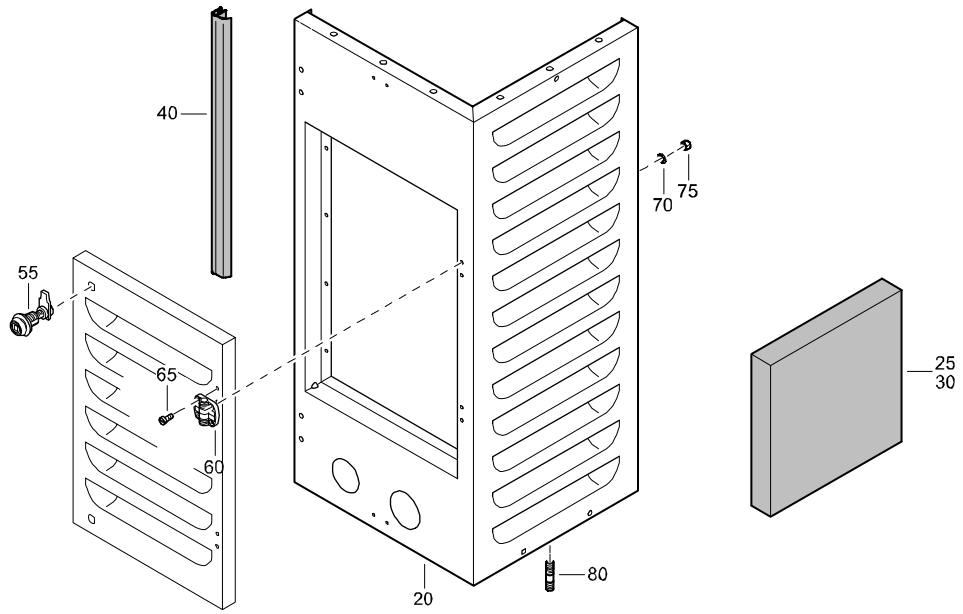


REF	PART NUMBER	DESIGNATION	QTY
-	1604 2678 81	CORNER ASSY (From page 126)	
•20	1604 2678 01	CORNER PANEL	1
•25	-	SILENCING FOAM	1
•30	-	SILENCING FOAM	1
•40	1619 2665 00	SEAL	AR
•55	1604 2519 00	LOCK	2
•60	1604 2172 00	HINGE	2
•65	0160 6060 00	SLOTTED SCREW	8
•70	0333 3215 00	LOCK WASHER	8
•75	0266 2107 00	HEXAGON NUT	8
•80	0246 1956 35	STUD	4
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY

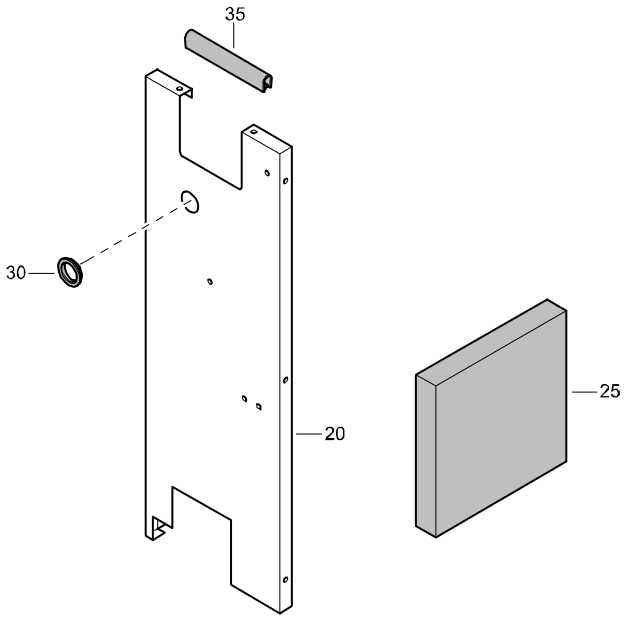


REF	PART NUMBER	DESIGNATION	QTY
-	1604 2689 83	PANEL ASSY (From page 126)	
•20	1604 2689 03	PANEL	1
•25	1604 3435 02	FOAM	1
•30	1604 0383 00	SEAL (OIL SEPARATOR)	1
•35	1503 1056 00	SEAL	AR

REF	PART NUMBER	DESIGNATION	QTY

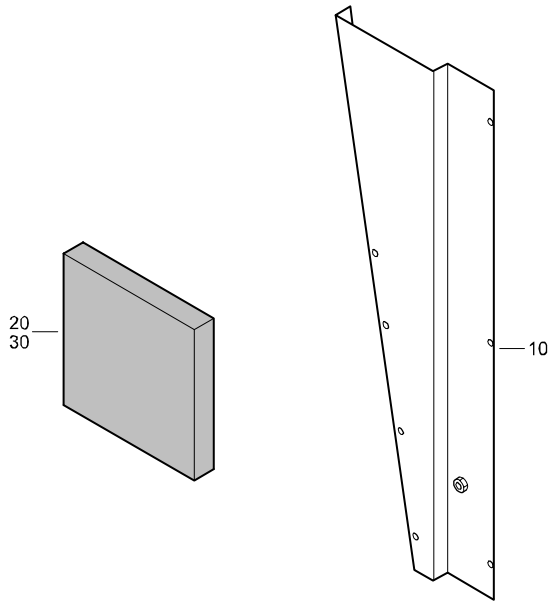


REF	PART NUMBER	DESIGNATION	QTY
-	1604 3551 81	PANEL ASSY (From page 126)	
•10	1604 3551 01	PANEL	1
•20	-	SILENCING FOAM	1
•30	-	SILENCING FOAM	1
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY

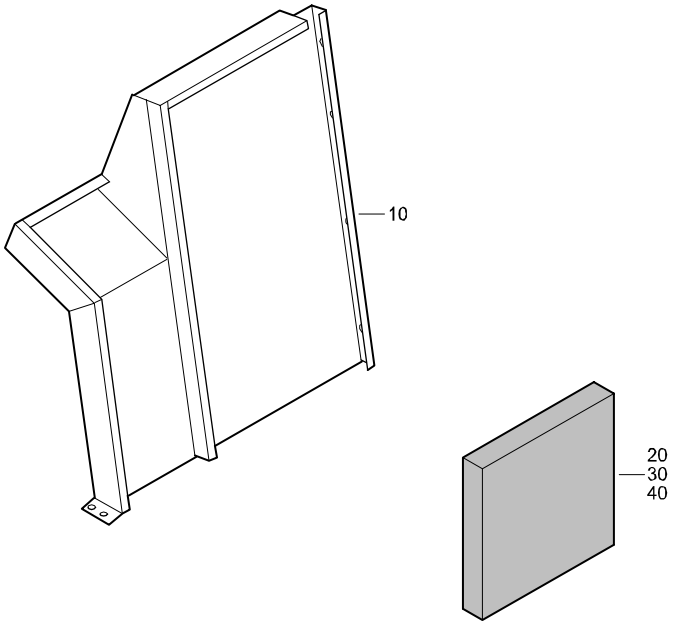


REF	PART NUMBER	DESIGNATION	QTY
-	1604 3550 83	PANEL ASSY (From page 126)	
•10	1604 3550 03	PANEL	1
•20	-	SILENCING FOAM	1
•30	-	SILENCING FOAM	1
•40	-	SILENCING FOAM	1
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm	
-	1079 0001 91	SILENCING FOAM 2000 mm x 1500 mm x 40 mm	
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm	

REF	PART NUMBER	DESIGNATION	QTY

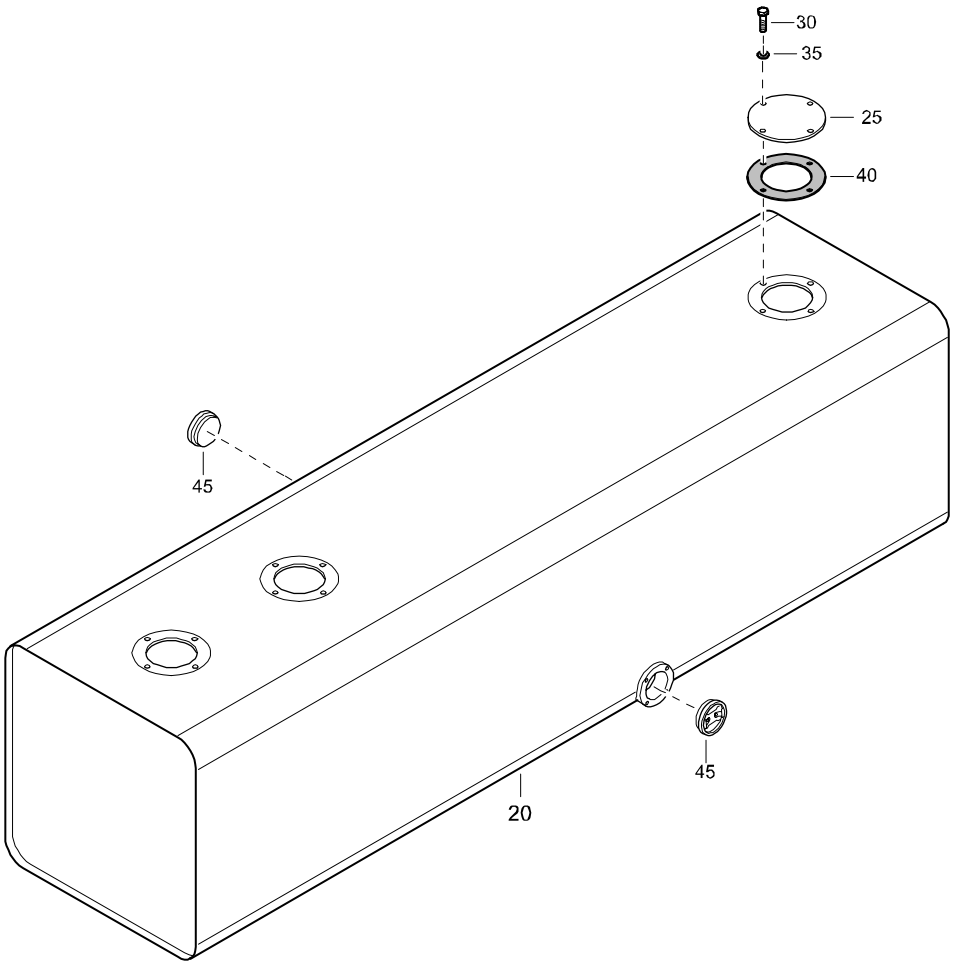


REF	PART NUMBER	DESIGNATION	QTY
-	1092 0602 86	FUELTANK ASSEMBLY (From page 115)	
•20	1092 0602 06	FUELTANK	1
•25	1604 2783 01	FLANGE	3
•30	0147 1247 03	HEX. HEAD SCREW	12
•35	0301 2321 00	PLAIN WASHER	12
•40	1604 2780 02	GASKET	3
•45	1613 2655 00	PLUG	2

REF	PART NUMBER	DESIGNATION	QTY

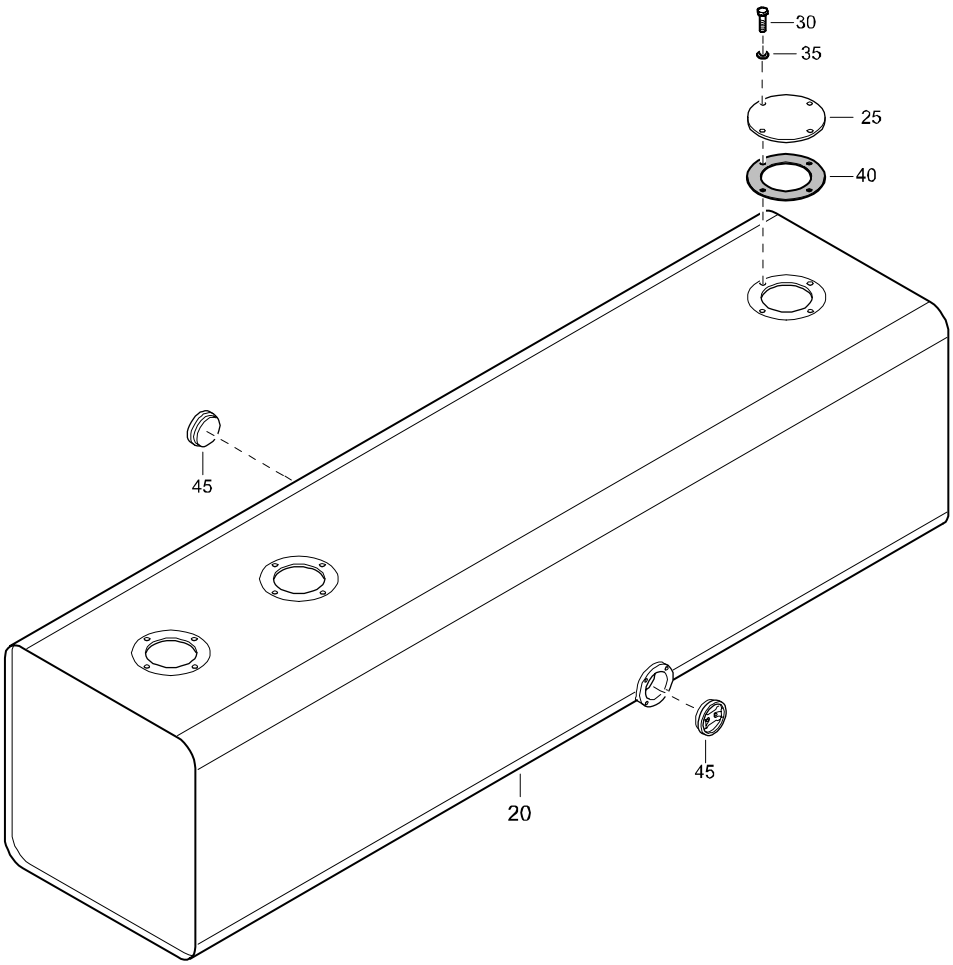

REF	PART NUMBER	DESIGNATION	QTY
-	1092 0602 87	FUELTANK ASSEMBLY (From page 115)	
•20	1092 0602 07	FUELTANK	1
•25	1604 2783 01	FLANGE	3
•30	0147 1247 03	HEX. HEAD SCREW	12
•35	0301 2321 00	PLAIN WASHER	12
•40	1604 2780 02	GASKET	3
•45	1613 2655 00	PLUG	2

REF	PART NUMBER	DESIGNATION	QTY

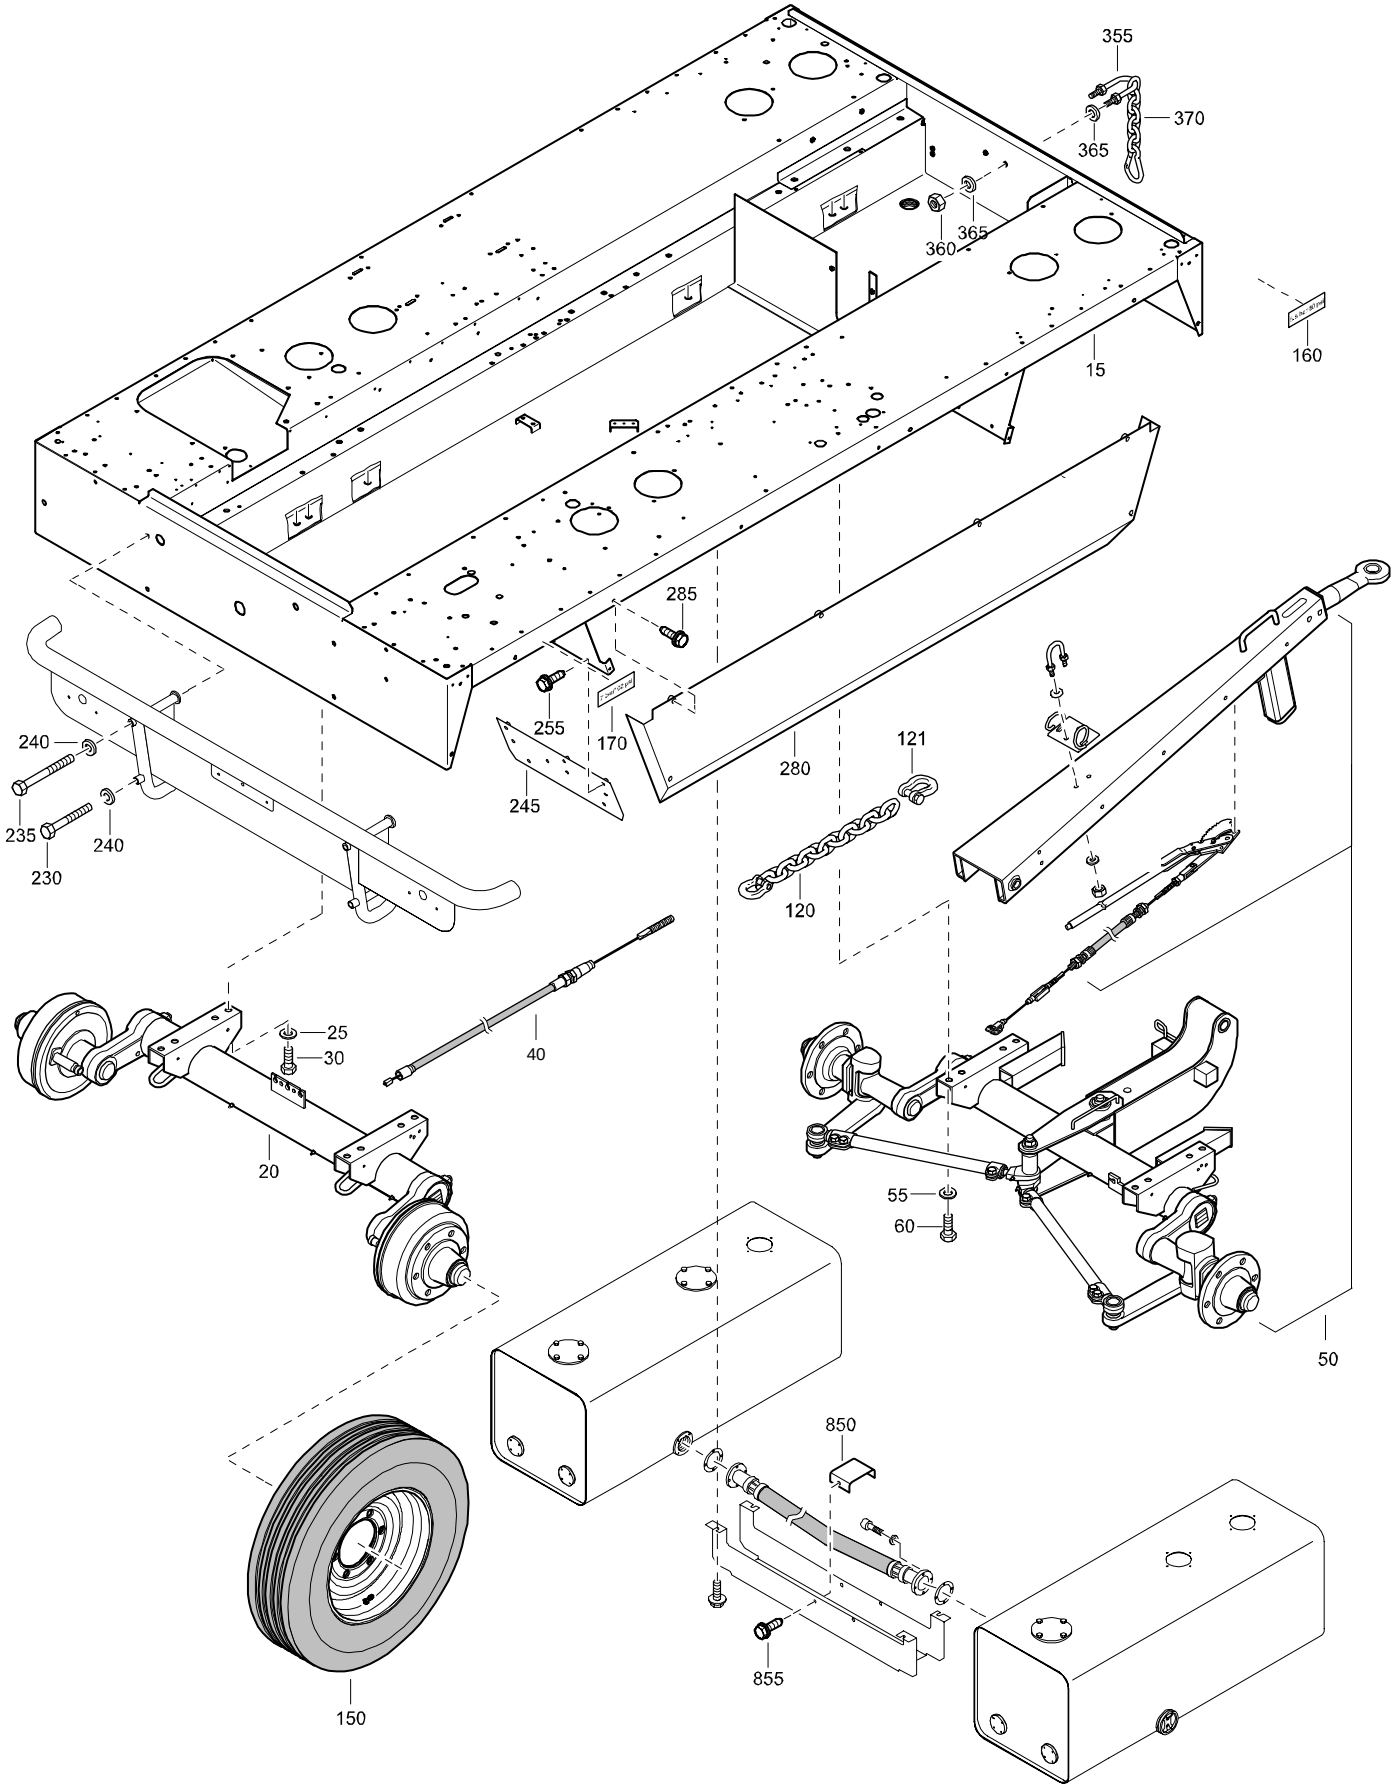
355
370
365
360
365
15
160
285
255
170
245
280
240
235
240
230
121
120
25
30
40
20
55
60
50
850
855
150

OPTIONS


WAGON
ROW

REF	PART NUMBER	DESIGNATION	QTY
15	1092 0600 02	FRAME	1
20	1092 0572 02	AXLE (REAR NO ABS)	1
25	0301 2378 00	PLAIN WASHER	8
30	0147 1958 96	HEX. HEAD SCREW	8
40	1092 0550 15	BRAKE CABLE	2
50	1092 0572 02	AXLE (FRONT NO ABS) & TOWBAR	1
55	0301 2378 00	PLAIN WASHER	8
60	0147 1958 96	HEX. HEAD SCREW	8
120	1615 7620 00	CHAIN (TOWBAR)	1
121	1615 7776 00	COUPLING LINK	1
150	1092 0574 06	TYRE ASS'Y	4
		(see page 128)	
170	1079 9922 06	INFORMATION LABEL	4
230	0147 1465 03	HEX. HEAD SCREW	2
235	0147 1962 18	HEX. HEAD SCREW	2
240	0301 2358 00	PLAIN WASHER	4
245	1604 4346 02	MUDGUARD	4
255	1615 5664 00	HEX. HEAD SCREW	12
280	1604 2805 02	PROTECTION	2
285	1615 5664 00	HEX. HEAD SCREW	8
355	1079 3463 07	U-BOLT	1
360	0266 2110 00	HEXAGON NUT	2
365	0301 2335 00	PLAIN WASHER	4
370	1615 6219 02	CHAIN	1
850	1604 4338 00	PROTECTION	1
855	1615 5664 00	HEX. HEAD SCREW	2

REF	PART NUMBER	DESIGNATION	QTY

OPTION


REAR AXLE

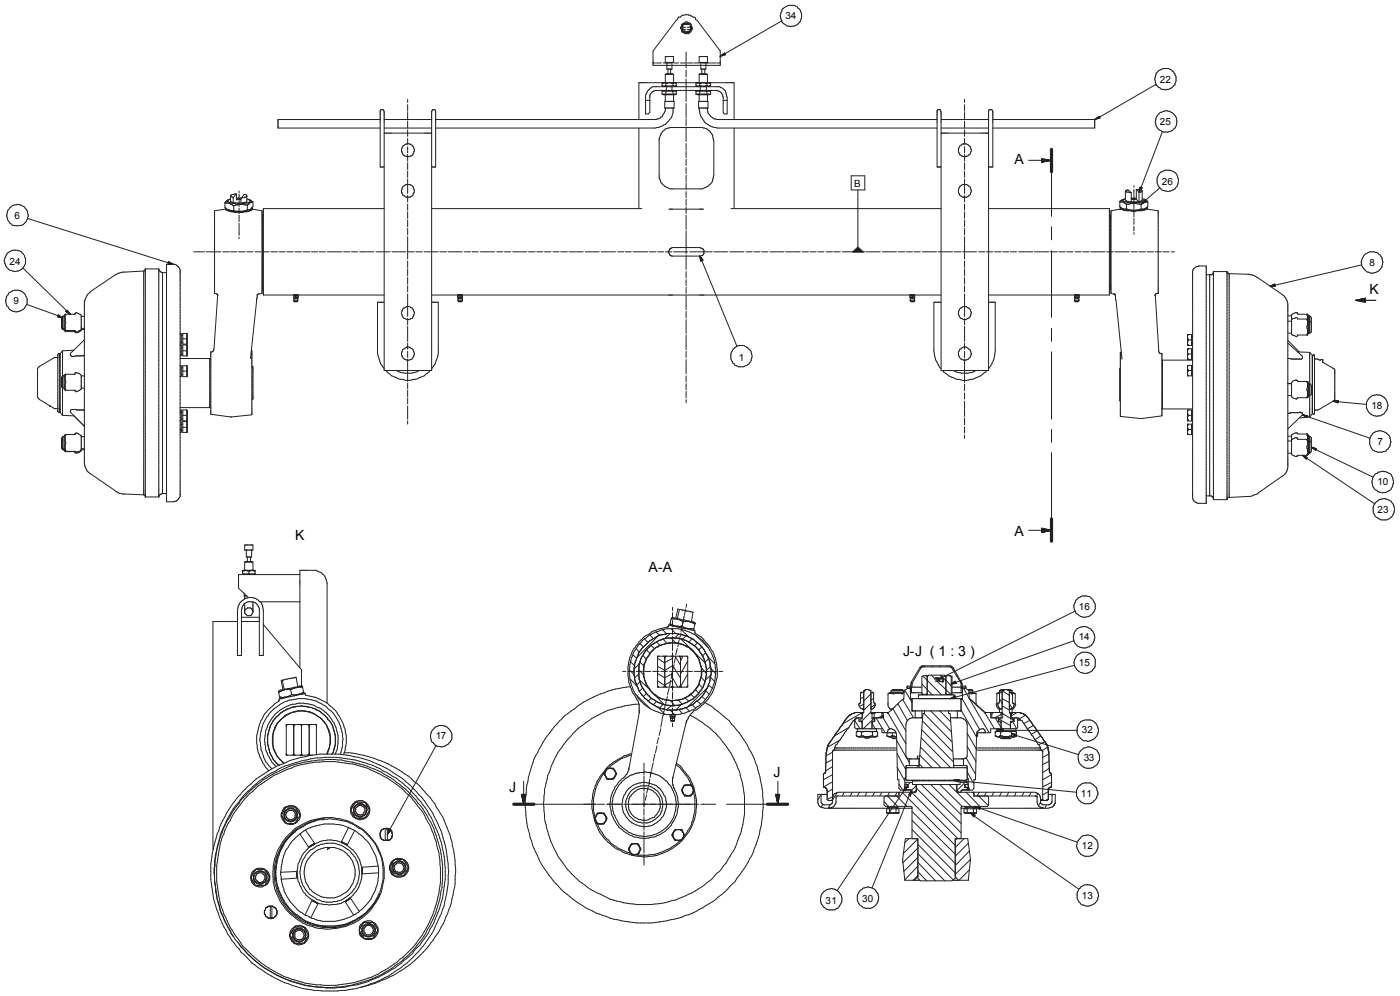


Parts List						
Pos	Qty	Partnumber	R/S	Name	Material	Comments
1	1	1092 057247		torsion bar		
6	1	1092 0572 16		brake		
7	2	1092 0572 11		hub	QT450-10	
8	2	1092 0572 15		brake hub	HT250	
9	6	1092 0572 24		wheel bolt	45	
10	6	1092 0572 10		wheel bolt	45	
11	2	1092 0572 33		bearing	GB/T 297-94	32210
12	12	0333 2230 00		washer		
13	12	0147 1361 03		screw		
14	2	1092 0572 13		nut	45	Q351C27
15	2	1092 0572 34		bearing	GB/T 297-94	32207
16	2	0111 1314 00		split cotter pin		
17	4	0162 1567 30		screw		
18	2	1092 0572 12		cap	plate 1-Q235A	
22	2	1092055026		brake cable		
23	6	0299 1000 07		wheel nut		
24	6	1092 0572 23		wheel nut	45	
25	2	1092 057219		set screw	45	
26	2	0261 1099 35		nut		
30	2	1092 0572 26		ring support	QT450-10	
31	2	1092 0572 27		ring	HT250	
32	12	0333 2145 00		washer		
33	12	0261 1099 32		nut		
34	1	1092 0550 11		connection	plate 3-Q235A	

OPTION

FRONT AXLE

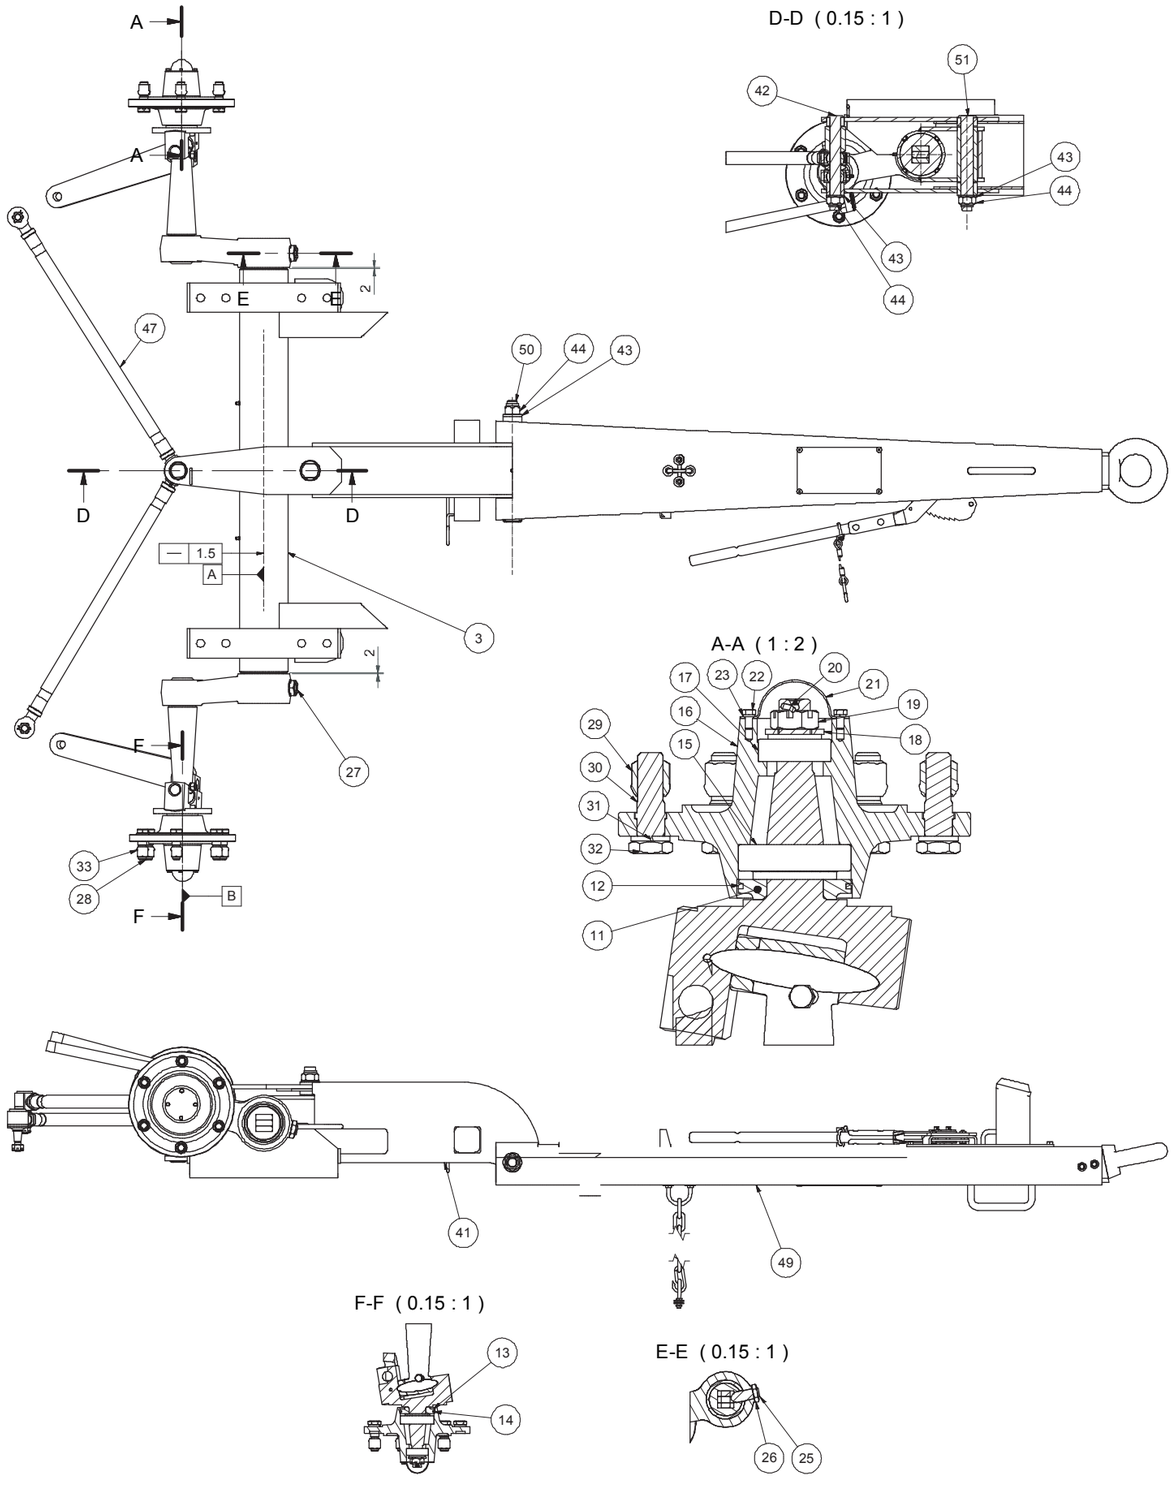


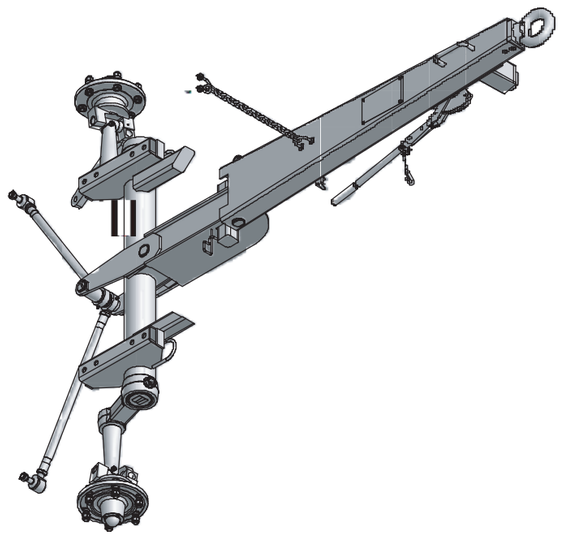

Parts List						
Pos	Qty	Partnumber	R/S	Name	Material	Comments
3	1	1092057249		torsion bar		
11	1	1092057311		ring bracket	HT250	
12	1	1092057312		ring	HT250	
13	1	1092057311		ring bracket	HT250	
14	1	1092057312		ring	HT250	
15	2	1092055024		bearing	GB/T297-94	32208
16	2	1092057325		hub	QT450-10	
17	2	1092055025		bearing	GB/T297-94	32205
18	2	1092057335		washer	45	
19	2	0281140002		nut		
20	2	0111131000		split cotter pin		
21	2	1092057334		cap	plate 1.5-Q235A	
22	8	0147120403		nut		
23	8	0333217417		spring washer		
25	1	1092057219		set screw	45	
26	2	0266114002		nut		
27	1	1092057219		set screw	45	
28	6	1092057210		wheel bolt	45	
29	6	1092057223		wheel nut	45	
30	6	1092057224		wheel bolt	45	
31	12	0333217439		washer		
32	12	0261109932		nut		
33	6	0299100007		wheel nut		
41	1	1092057358		turnning bar		
42	1	1092055016		turnning pin	45	
43	3	0301240500		washer		
44	3	0291112830		lock nut		
45	1	1092057348		washer	45	
46	1	1092057349		washer	45	
47	2	1092057354		turnning bar		
49	1	1092057359		towbar		
50	1	1092055017		pin	45	
51	1	1092055018		pin	45	


OPTION

PRESSURE REGULATOR

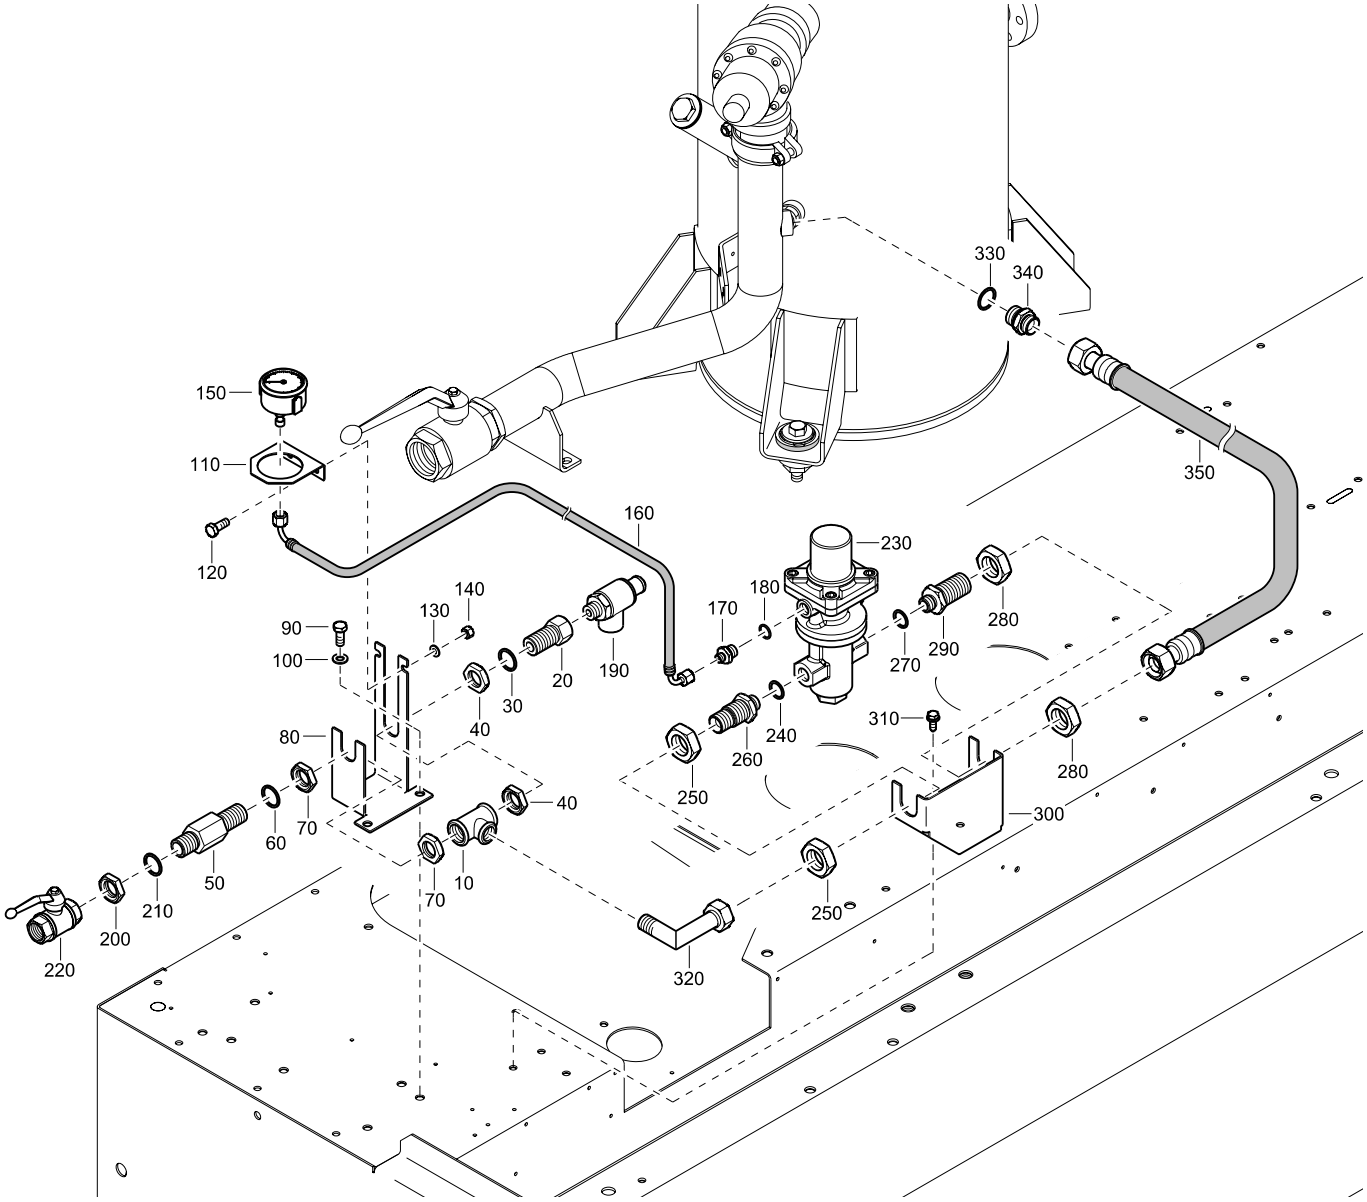

REF	PART NUMBER	DESIGNATION	QTY
20	1604 3538 00	PIPE JOINT	1
30	0653 1162 00	FLAT GASKET	1
40	0623 2105 03	BACKNUT	2
50	1604 3536 00	PIPE JOINT	1
60	0653 1162 00	FLAT GASKET	1
70	0623 2105 03	BACKNUT	2
80	1604 3537 00	SUPPORT	1
90	0147 1360 03	HEX. HEAD SCREW	2
100	0301 2344 00	PLAIN WASHER	2
110	2252 4045 00	SUPPORT	1
120	0147 1322 03	HEX. HEAD SCREW	2
130	0301 2335 00	PLAIN WASHER	2
140	0266 2110 00	HEXAGON NUT	2
150	1310 0154 00	PRESSURE GAUGE	1
160	0574 8841 15	HOSE ASSEMBLY	1
170	1079 5840 07	HEXAGON NIPPLE	1
180	0653 1100 00	FLAT GASKET	1
190	0832 1001 16	SAFETY VALVE	1
200	0623 2105 03	BACKNUT	1
210	0653 1162 00	FLAT GASKET	1

REF	PART NUMBER	DESIGNATION	QTY
220	1619 6153 05	BALL VALVE	1
230	1615 6688 02	PRESSURE REDUCER	1
240	0653 1124 00	FLAT GASKET	1
250	0261 1099 29	HEXAGON NUT	2
260	1604 3540 01	BUSHING	1
270	0653 1124 00	FLAT GASKET	1
280	0261 1099 29	HEXAGON NUT	2
290	1604 3535 00	PIPE	1
300	1604 3541 00	SUPPORT	1
310	1619 2766 00	HEX. HEAD SCREW	2
320	1604 3539 00	CONNECTION PIPE	1
330	0653 1162 00	FLAT GASKET	1
340	1619 5509 00	NIPPLE	1
350	0575 0056 16	HOSE ASSEMBLY	1

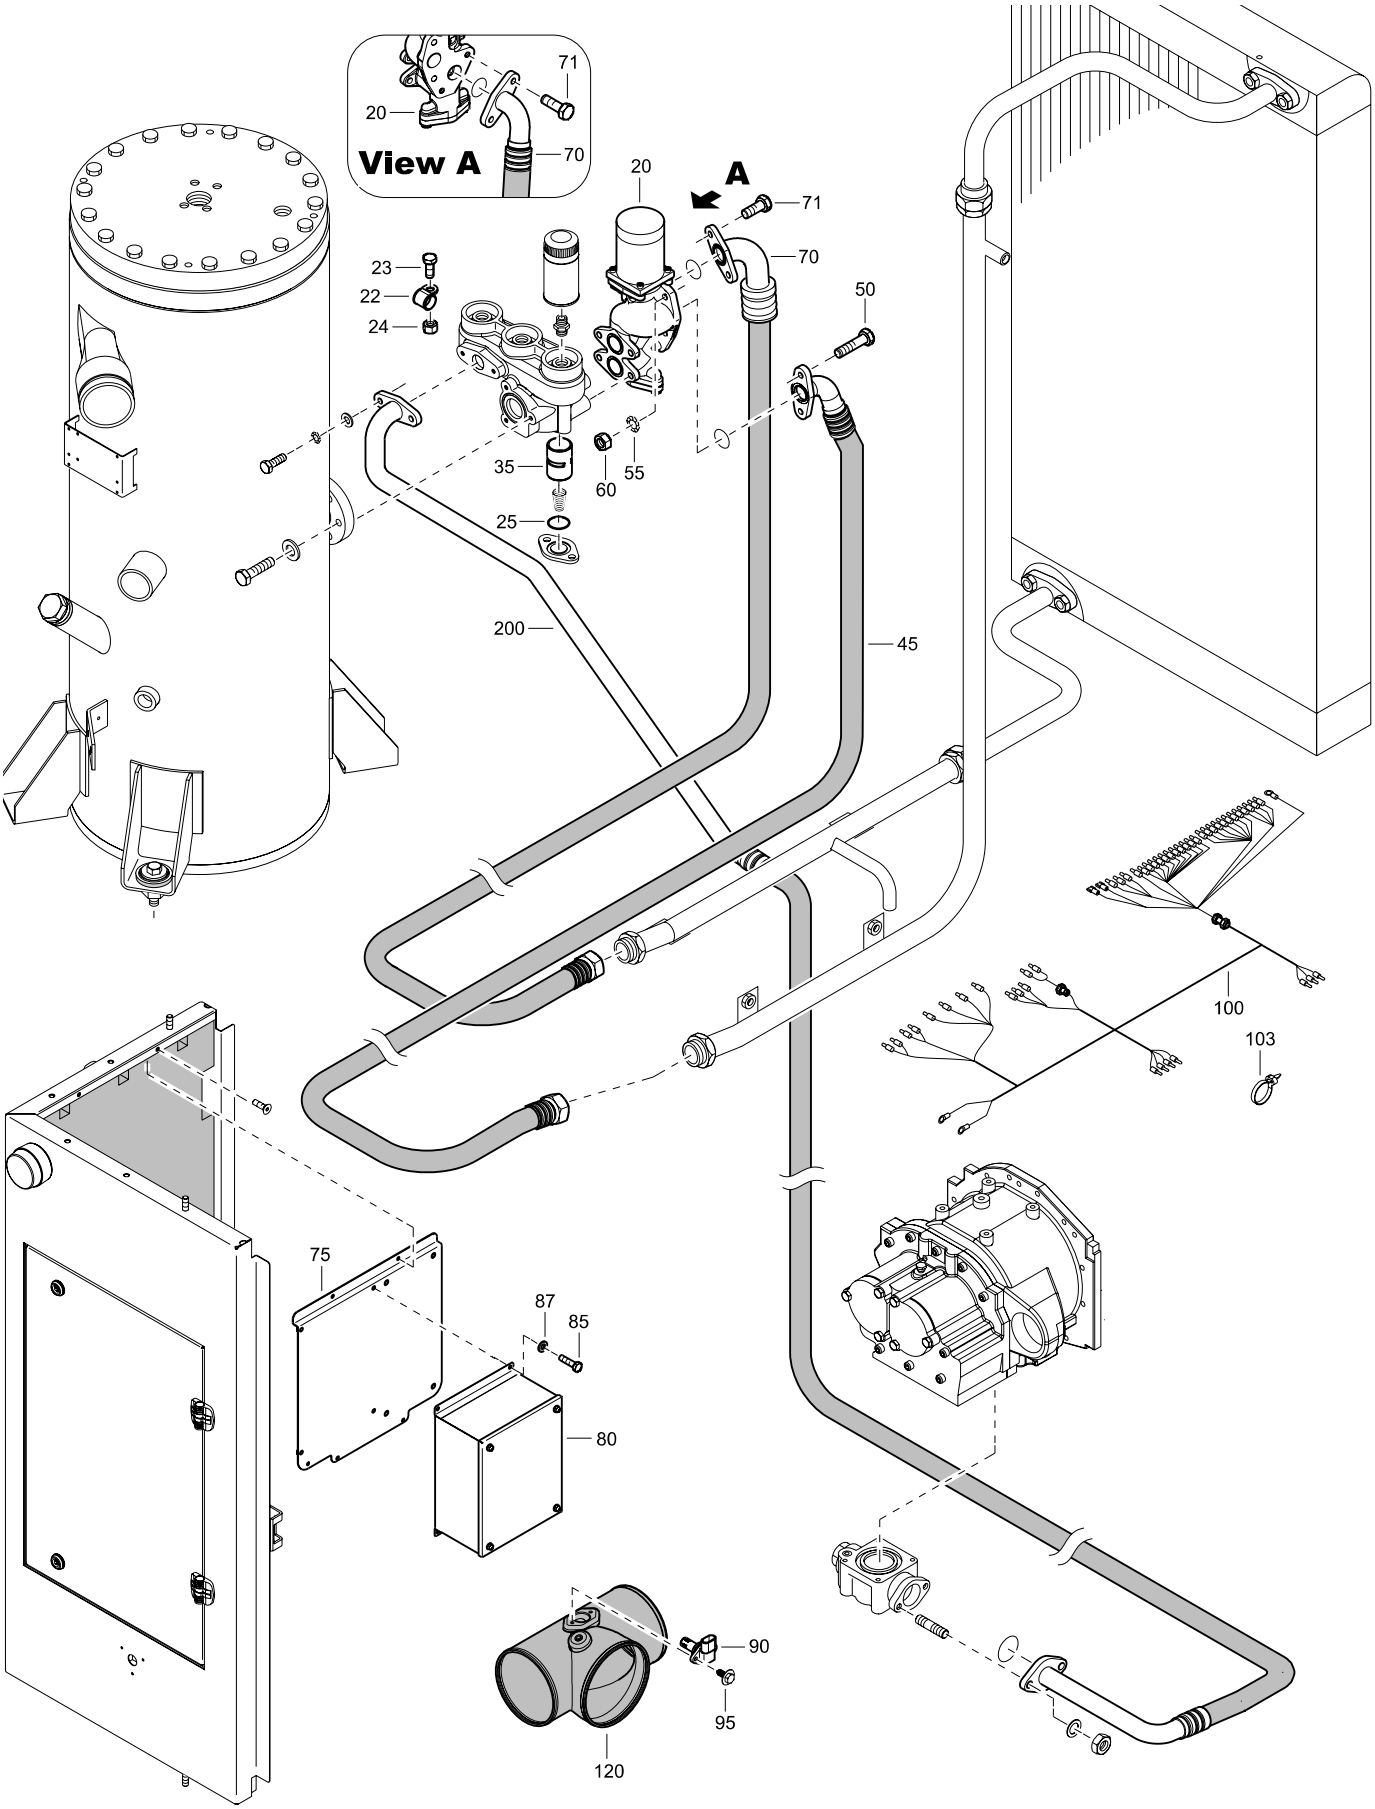

View A
A
71
20
70
23
22
24
50
35
60
55
25
200
45
100
103
75
87
85
80
90
95
120

OPTION

OILTRONIX

REF	PART NUMBER	DESIGNATION	QTY
20	1604 7307 80	VALVE ASSEMBLY	1
		(For details see drawing 1604 7307 80)	
22	0346 1000 22	PIPE CLAMP	1
23	0147 1322 03	HEX. HEAD SCREW	1
24	0266 2110 00	HEXAGON NUT	1
25	0663 3131 00	O-RING	2
35	1619 7560 00	THERMOST.VALVE	1
45	1604 8241 00	HOSE ASSEMBLY	1
50	0147 1365 03	HEX. HEAD SCREW	2
55	0333 3132 00	LOCK WASHER	2
60	0266 2111 00	HEXAGON NUT	2
70	1604 8242 00	HOSE ASSEMBLY	1
71	0147 1362 03	HEX. HEAD SCREW	2
75	1604 8402 00	SUPPORT	1
80	1604 0295 80	CUBICLE ASSEMBLY	1
		(For details see drawing 1604 0295 80)	
85	0147 1247 03	HEX. HEAD SCREW	8
87	0301 2321 00	PLAIN WASHER	8
90	1089 0705 01	COMBO SENSOR	1
95	1619 2765 00	SCREW	2
100	1604 7858 02	WIRING	1
103	0348 0101 05	CABLE TIE	20
120	1604 2758 03	AIRDUCT	1
200	1604 2458 04	HOSE ASSEMBLY	1

REF	PART NUMBER	DESIGNATION	QTY

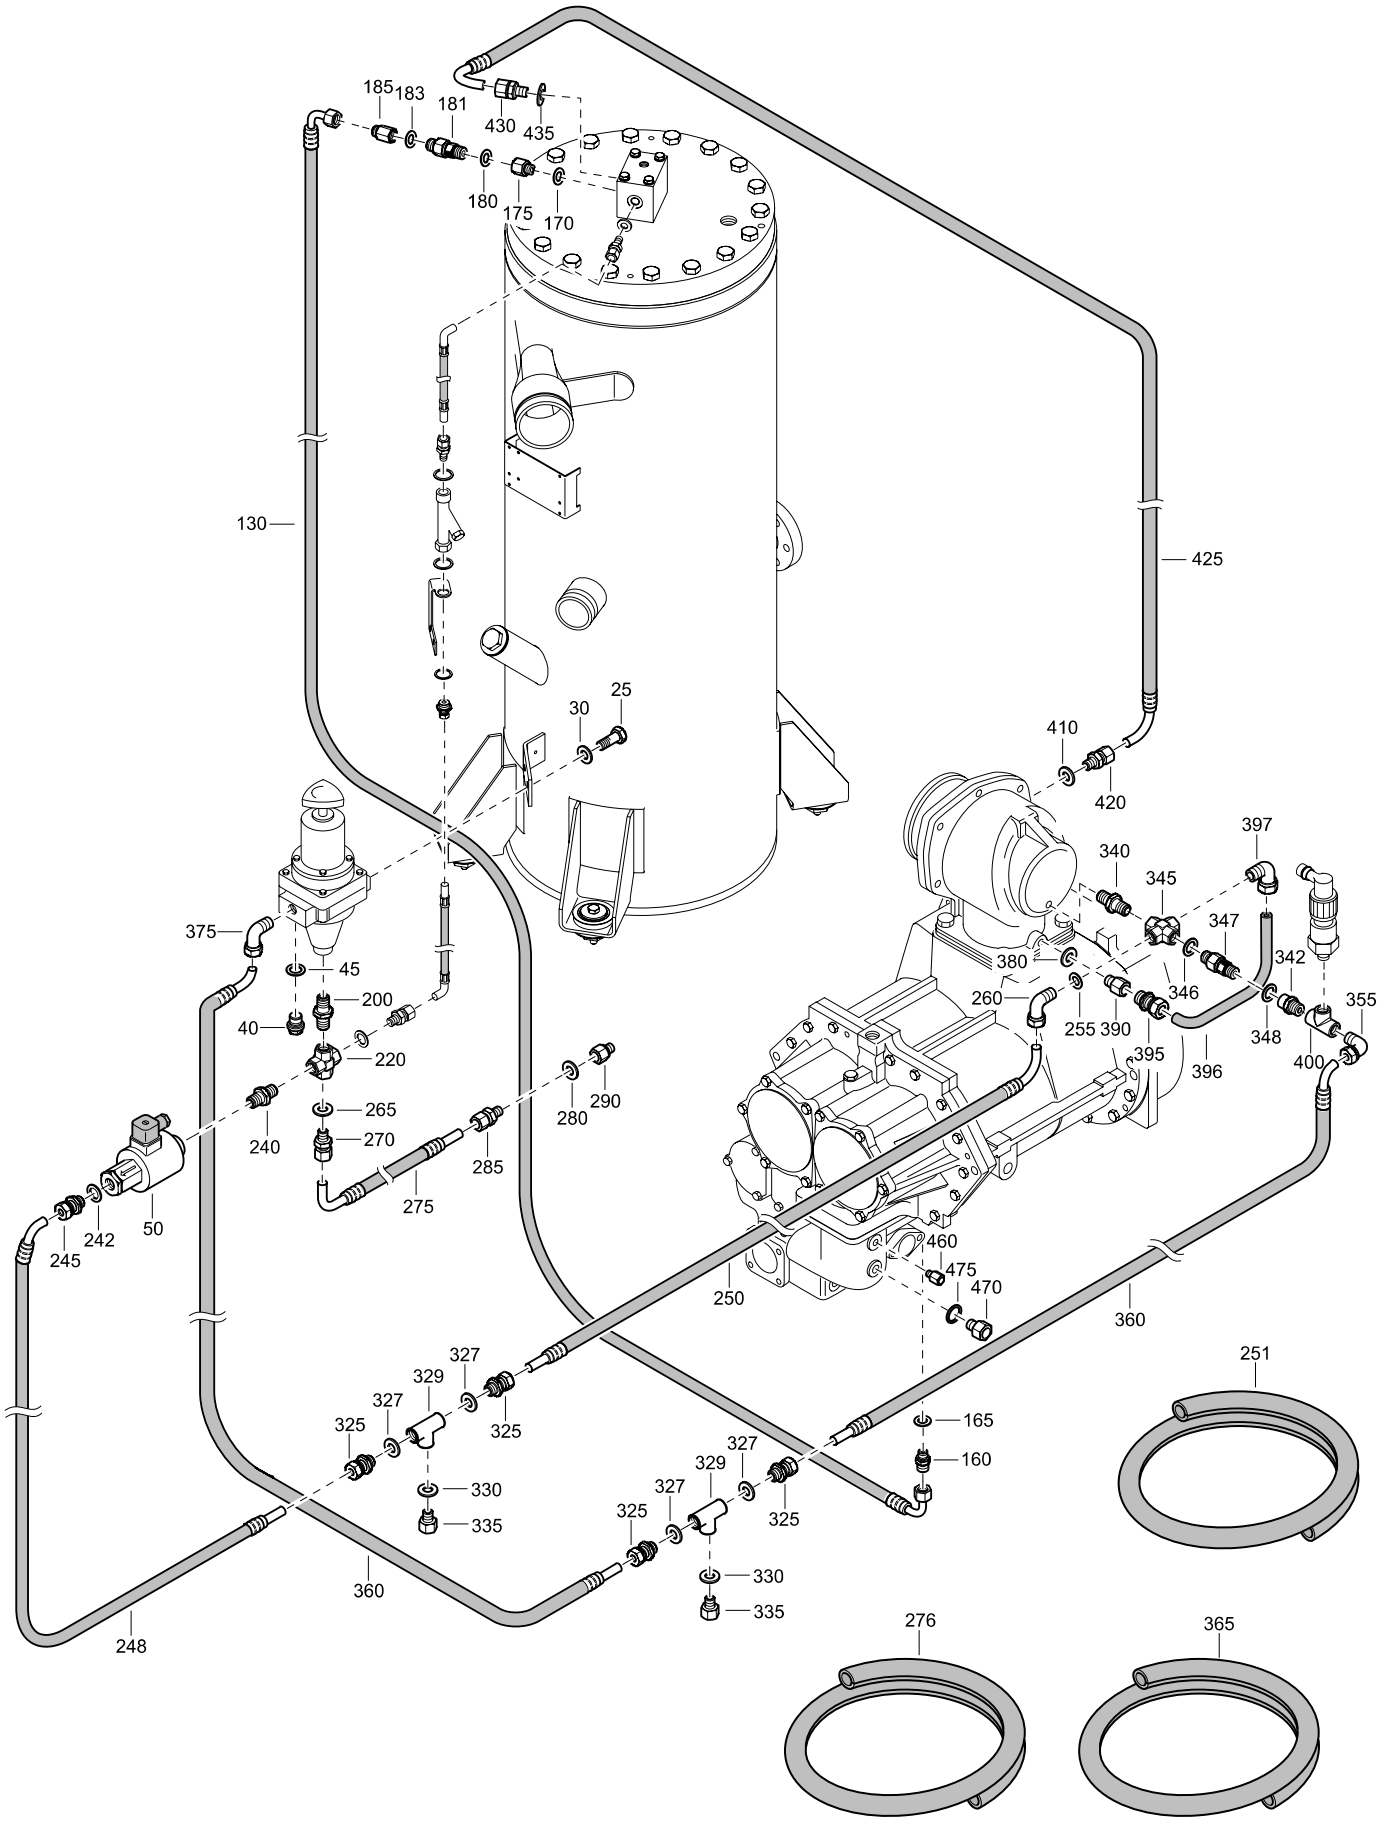
185
183
181
430
435
180
175
170
130
425
25
30
410
420
397
340
345
347
342
380
260
346
348
355
255
390
395
396
400
375
45
200
40
220
265
270
240
280
290
285
275
50
242
245
460
475
470
250
360
251
327
329
325
330
335
165
160
276
365
248

REF	PART NUMBER	DESIGNATION	QTY
25	0147 1362 03	HEX. HEAD SCREW	2
30	0301 2344 00	PLAIN WASHER	2
40	0686 3716 01	HEXAGON PLUG	1
45	0653 1062 00	FLAT GASKET	1
50	1089 0451 10	SOLENOID VALVE	1
130	0575 0791 57	HOSE ASSEMBLY	1
160	1079 5840 01	HEXAGON NIPPLE	1
165	0653 1046 00	FLAT GASKET	1
170	0653 1062 00	FLAT GASKET	1
175	1615 9643 00	REDUCER FOR SCAVENGE PIPE	1
180	0653 1062 00	FLAT GASKET	1
181	0823 0000 19	NON-RETURN VALVE	1
183	0653 1062 00	FLAT GASKET	1
185	0571 0035 14	HEXAGON NIPPLE	1
200	0603 4102 03	HEXAGON NIPPLE	1
220	0560 4401 61	CROSS	1
240	0603 4102 03	HEXAGON NIPPLE	1
242	0653 1062 00	FLAT GASKET	1
245	0581 0028 01	STRAIGHT PIPE COUPLING	1
248	0575 0102 38	HOSE ASSEMBLY	1
250	0575 0112 35	HOSE ASSEMBLY	1
251	0395 1010 57	INSULATING HOSE	1
255	0653 1062 00	FLAT GASKET	1
260	0581 1228 04	PIPE COUPLING TYPE 2.1	1
265	0653 1062 00	FLAT GASKET	1
270	0581 0028 01	STRAIGHT PIPE COUPLING	1
275	0575 0102 11	HOSE ASSEMBLY	1
276	0395 1010 47	INSULATING HOSE H15-A	1
280	0653 1062 00	FLAT GASKET	1
285	0581 0028 01	STRAIGHT PIPE COUPLING	1
290	1615 9643 00	REDUCER FOR SCAVENGE PIPE	1
325	0581 0028 01	STRAIGHT PIPE COUPLING	4
327	0653 1062 00	FLAT GASKET	4
329	0564 0000 24	TEE	2
330	0653 1062 00	FLAT GASKET	2
335	1615 9643 00	REDUCER FOR SCAVENGE PIPE	2
340	0603 4102 03	HEXAGON NIPPLE	1
342	0605 8350 69	BUSHING	1
345	0560 4401 61	CROSS	1
346	0653 1062 00	FLAT GASKET	1
347	0823 0000 19	NON-RETURN VALVE	1
348	0653 1062 00	FLAT GASKET	1
355	0581 1228 04	PIPE COUPLING TYPE 2.1	1
360	0575 0112 35	HOSE ASSEMBLY	2
365	0395 1010 57	INSULATING HOSE	1
375	0581 1228 04	PIPE COUPLING TYPE 2.1	1
380	0653 1046 00	FLAT GASKET	1
390	1604 5758 01	ADAPTER	1
395	0581 0000 67	STRAIGHT PIPE COUPLING	1
396	0070 6002 10	PLASTIC TUBE	AR
397	0581 1200 30	ELBOW PIPE COUPLING	1
400	1503 2566 02	TEE	1
410	0653 1124 00	FLAT GASKET	1
420	1079 5840 35	NIPPLE	1
425	0575 0403 55	HOSE ASSEMBLLY	1
430	1079 5840 02	HEXAGON NIPPLE	1
435	0653 1124 00	FLAT GASKET	1
460	1604 2739 00	NIPPLE	1
470	3176 2446 00	BUSHING	2
475	0653 1100 00	FLAT GASKET	2

REF	PART NUMBER	DESIGNATION	QTY

Atlas Copco

www.atlascopco.com

Printed in Cha 01/2007 1092 - 0524 10